

Symmetry and the Form of Nonlinear Behavioral Models

A tutorial for microwave engineers

N. B. Tuffillaro*

Tutorial, revised 1 October 2026

Companion to the paper “Time invariance, circle symmetry, and the completeness of the Cardiff behavioral model” [1] and to the MATLAB toolkit of Appendix B [2].

Abstract

Behavioral models of nonlinear microwave devices — the Cardiff model, X-parameters, the higher-order describing functions of the mechanical-systems literature — all share a functional form that is usually presented as a modeling choice. This tutorial shows that the form follows from a single physical statement, that nothing physical depends on where the clock is started. It develops the consequences of that statement assuming phasors and harmonic balance but no group theory, and uses them to give the Cardiff model’s three exponents physical interpretations. The magnitude exponent m turns out to be the order of the device’s load-side nonlinearity; the phase exponent n is set by the drive-side harmonic; and the conjugate index r obeys $r_{\max} = \lfloor K/2 \rfloor$, where K is the degree of the load-side nonlinearity. The familiar restriction $r \leq 1$ is therefore a statement about the device, exact whenever $K \leq 3$, and it can be tested on a bench. The final sections show that a tailored A-pull measurement displays this decomposition directly: each spectral cluster’s half-width is the order of the nonlinearity that produced it. The tutorial is pedagogical: the material overlaps largely with a companion paper [1], which states and proves the theorems in full; this tutorial starts at a more elementary level and is meant as a gentler introduction to the results treated in more detail there.

Contents

1	What this tutorial is for	2
2	A symmetry argument you already use	3
3	The symmetry behind behavioral models	4
3.1	Where you start the clock	4
3.2	This set of transformations is a circle group	5
3.3	More circles: reference planes and extra tones	5
4	What survives the rotation: invariants	6
4.1	The question	6
4.2	The answer for a circle	6
4.3	Why that is the complete list	6
4.4	An aside: counting the invariants	7

*Aqualytics, Corvallis, Oregon. nick@aqualytics.eco

5	What the output must do: equivariance	8
5.1	The output is not invariant	8
5.2	Factoring an equivariant	8
5.3	Gauge fixing, and why three communities wrote the same factor	9
6	Writing the exponents as monomials	9
6.1	Two ways to write the same term	9
6.2	What $r \leq 1$ keeps and what it discards	10
7	Where $r \leq 1$ comes from	11
7.1	Setting up	11
7.2	The theorem	11
7.3	What Theorem 1 says	11
7.4	Numerical check	12
8	What each exponent means	12
9	The loaded device: the decay in r	13
10	Seeing the decomposition in a measurement	14
10.1	Why an ordinary load-pull sweep does not show this	14
10.2	The method: modulate, then look at the spectrum	14
10.3	The cluster width has a physical interpretation	15
10.4	What the published data shows	15
10.5	What the same table says about the terms that are missing	16
10.6	The experiment that would settle it	16
10.7	A simulated run-through	17
10.8	Stage two: a compact transistor model in a circuit simulator	18
11	What to take to the bench	20
12	Glossary	21
13	Scope	21
A	The same result with no group theory	22
B	Companion MATLAB routines	22

1 What this tutorial is for

There is a standard way to present a behavioral model. You write down a functional form, you say it is motivated by physical reasoning or by experience, you fit it, and you report how well it fits. The Cardiff model [3, 4] is usually presented this way, and so are X-parameters [5]. The form looks like a sensible choice among many.

This tutorial argues that the form is determined by one physical statement. Once it is accepted that nothing physical depends on where the clock is started, the functional form of every behavioral model on a harmonic grid is determined up to a set of arbitrary smooth coefficient functions. What is usually called the model *structure* is a theorem; what is usually called the model *parameters* is all that remains free.

Three consequences follow:

- (1) **The form is complete.** For a two-port in single-tone periodic steady state, no time-invariant response lies outside it — with or without memory. If a CW fit leaves a large residual, what is missing is not a term of the same kind: it is another tone, another port, harmonic injection, or a measurement that is not in steady state.
- (2) **The exponents have physical interpretations.** The Cardiff indices m , n and r are not only labels attached to basis functions. Written as monomials they are counters: m counts how many times the load-side wave entered, n counts the harmonic the drive side supplied, and r counts conjugate pairs.
- (3) **The restriction $r \leq 1$ can be interpreted as a property of the device.** It is exact when the device's load-side nonlinearity is at most cubic, and it has a measurable signature.

Prerequisites. You need phasors, harmonic balance and the binomial theorem. You do not need group theory — every term is defined where it is first used, and the glossary in Section 12 collects them with engineering interpretations. The mathematics used here is classical. Section 7 contains the one result specific to the Cardiff model, and its proof is two lines. The material overlaps largely with the companion paper [1], which states and proves the theorems in full; this tutorial starts at a more elementary level and is meant as a gentler introduction to the results treated in more detail there. Memory, which this tutorial leaves aside, is the subject of a second companion paper [6].

Route through the paper. Sections 2–5 build the symmetry argument, starting from one you already use. Sections 6–8 apply it to the Cardiff exponents. Section 9 deals with the loaded device, where Theorem 1 no longer applies and a decay rule takes its place. Section 10 connects the results to a published measurement. A reader who wants only the result can read Section 7 and Appendix A, which is the same argument with the group theory removed.

2 A symmetry argument you already use

Consider a memoryless nonlinearity with odd symmetry,

$$i = F(v), \quad F(-v) = -F(v), \quad (1)$$

and drive it with a single tone $v(t) = V \cos \omega_0 t$. The output contains only odd harmonics, and the reason is a symmetry argument of four lines. Shift time by half a period, $t \rightarrow t + T/2$. The drive changes sign, $v \rightarrow -v$. By odd symmetry the response also changes sign, $i \rightarrow -i$. But the k -th harmonic of the response picks up a factor $e^{jk\omega_0 T/2} = e^{jk\pi} = (-1)^k$ under that same shift. So every harmonic must satisfy $(-1)^k I_k = -I_k$, which forces $I_k = 0$ for even k .

Notice what that argument did *not* do. It did not expand F , it did not assume a polynomial, it did not evaluate an integral, and it did not depend on the form of F . It ruled out half the possible answers using only a symmetry. That is the entire method of this tutorial; the rest is a bigger symmetry group.

Naming the pieces. Three ingredients recur and are named here once.

- A **group** of transformations that leave the physics unchanged. Here it is the two-element set {do nothing, shift by $T/2$ }. “Group” means only that the transformations compose, there is a do-nothing element, and every transformation can be undone — which is true of anything you would call a symmetry. This particular group is called $\mathbb{Z}_2$.

- An **action**: a rule saying how each signal transforms. Here the drive picks up a factor -1 and harmonic k picks up $(-1)^k$. Different quantities transform differently under the same symmetry, and keeping track of that is most of the work.
- A conclusion about which terms can **survive**. A quantity unchanged by every group element is called **invariant**; one that transforms in a prescribed way is called **equivariant**. Even harmonics are neither, so they vanish.

A second example, from microwave practice. Drive a mixer with two tones at ω_1 and ω_2 . The output appears only at frequencies $m\omega_1 + n\omega_2$ with m, n integers — never at, say, $\omega_1/2$ or $\sqrt{2}\omega_1$.¹ The reason is the same. You may shift the phase of each input independently, and each output component must track those two shifts coherently; only integer combinations can. The symmetry group this time is two independent circles of phase, a *two-torus*, and the integers m and n are exactly the bookkeeping of how a given output component responds to them.

That structure returns in Sections 6–8, where the Cardiff exponents are its m and n .

Engineering translation

A symmetry is a statement that some experimental choice was arbitrary — the origin of time, the position of a reference plane, the absolute phase of a generator. Anything you can measure must be independent of that choice. That independence is a constraint, and constraints eliminate candidate model terms before any fitting.

3 The symmetry behind behavioral models

3.1 Where you start the clock

Consider a device in periodic steady state at fundamental ω_0 . Every port voltage, current and traveling wave is described by a set of harmonic phasors: $A_{p,k}$ for the incident wave at port p , harmonic k , and so on. The time-domain waveform is

$$a_p(t) = \operatorname{Re} \sum_{k \geq 0} A_{p,k} e^{jk\omega_0 t}. \quad (2)$$

Now ask what happens if the clock had been started at time τ instead of at 0. A later time $t = t' + \tau$ is read by the shifted clock as t' . The waveform is physically identical — the same experiment, the same device — but the phasors that describe the same waveform in terms of t' are multiplied by phase factors that depend on the harmonic index:

$$A_{p,k} \longmapsto A_{p,k} e^{jk\omega_0 \tau}. \quad (3)$$

Each harmonic rotates, and the k -th harmonic rotates k times as fast as the fundamental. Write $\theta = \omega_0 \tau$; since a shift of one full period leaves every phasor unchanged, θ is an angle on a circle, $\theta \in [0, 2\pi)$.

Equation (3) is the whole physical input to Sections 4 and 5; Section 7 adds one more hypothesis.

¹Unless the symmetry breaks. A parametric divider produces $\omega_1/2$ precisely by *spontaneously* breaking this phase symmetry: the half-frequency output has two equally good phases and the circuit picks one. Period doubling in nonlinear dynamics is the same phenomenon. So the argument is not that subharmonics are impossible; it is that they are a broken-symmetry state, and the symmetric steady state assumed throughout this tutorial excludes them.

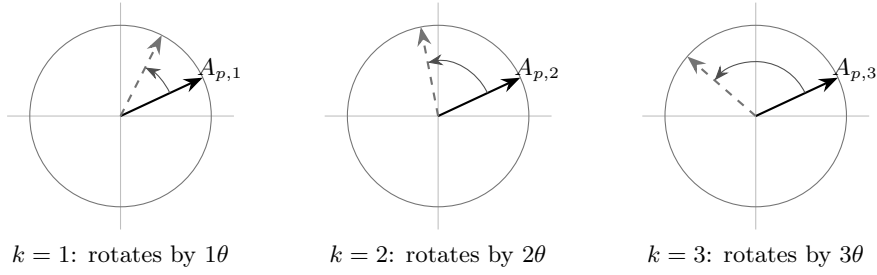


Figure 1: Starting the clock at time τ rotates the k -th harmonic phasor by $k\theta$, $\theta = \omega_0\tau$. All harmonics rotate together, but at rates set by their harmonic index. The integer k is called the *weight* of that harmonic.

3.2 This set of transformations is a circle group

The transformations (3), one for each θ , compose by adding angles: doing θ_1 then θ_2 is the same as doing $\theta_1 + \theta_2$. Doing $\theta = 0$ does nothing, and $-\theta$ undoes θ . So they form a group, and as a set that group *is* a circle. It has several names, all for the same object:

$$U(1) = SO(2) = S^1 = \{e^{j\theta}\}.$$

In electrical engineering it appears, unnamed, as the unit circle in the complex plane, the set of pure phase shifts, the phase axis of a polar plot.

It differs from the $\mathbb{Z}_2$ of Section 2 in one important way. It has a *continuous* parameter, and composition is a smooth function of that parameter. A group with that property is called a **Lie group**. The word carries no extra content here; it is what lets one use calculus on the group, and it is the hypothesis in the theorems quoted later. $U(1)$ is the simplest compact Lie group.

The assignment “harmonic k transforms with the factor $e^{jk\theta}$ ” is called a **representation** of the group, and the integer k is called the **weight** of that quantity.² Figure 1 is a picture of the weights 1, 2, 3.

Engineering translation

$U(1)$ is the phase knob on a signal generator, taken as a mathematical object. The statement “harmonic k has weight k ” is the statement that turning one phase knob on the fundamental rotates the k -th harmonic k times as fast, which is what an oscilloscope shows when a delay line is changed.

3.3 More circles: reference planes and extra tones

Time origin is not the only arbitrary choice. Moving the reference plane at port p along a dispersionless line shifts the phase of every wave at that port — incident and reflected in opposite senses, and harmonic k by k times the fundamental’s shift — and the description of the device must transform covariantly under that shift. That is one more circle per port. If the device is driven by several incommensurate tones, each carries its own phase origin, another circle each. The full group acting on the description of a P -port device on one harmonic grid is therefore a product of circles,

$$T^{P+1} = \underbrace{U(1)}_{\text{time origin}} \times \underbrace{U(1) \times \cdots \times U(1)}_{\text{one per port reference plane}},$$

²A physicist would call the weight the *charge* of the quantity under the $U(1)$ symmetry, by analogy with electric charge, which is the weight under the phase rotations of electromagnetism. In that vocabulary the rule of Section 4, that a product is invariant when its total weight is zero, is charge conservation: only neutral combinations are observable; and the choice of carrier in Section 5 is a choice of gauge. The engineering content is unchanged by the names.

a *torus*. This is Kurokawa’s observation about power-wave reference planes [7], restated. The rest of this tutorial uses only the first circle, one tone together with its harmonics, because the Cardiff model at fixed drive concerns one harmonic grid; the same argument applies to the torus, and the mixer example of Section 2 is the two-torus case. The two-torus case exists in measurement practice: the M²S parameters of Gibiino *et al.* [8] drive two incommensurate tones, index the response by the integer pair (m, n) , and have coefficients that depend on the two magnitudes alone, in the authors’ words because “no phase dependency is involved due to time-invariance.”

4 What survives the rotation: invariants

4.1 The question

A device response is a function of the incident waves. Suppose it is a function of the magnitudes and phases of $A_{1,1}$ and $A_{2,1}$ (drive-side and load-side fundamental incident waves). The symmetry says that if both are rotated — $A_{1,1} \rightarrow A_{1,1}e^{j\theta}$, $A_{2,1} \rightarrow A_{2,1}e^{j\theta}$, since both are weight-one — nothing physical can change. Which functions of $A_{1,1}$ and $A_{2,1}$ have that property?

Functions unchanged by every group element are called **invariants**. Finding them is a finite computation.

4.2 The answer for a circle

Two kinds of quantity survive (i.e. are invariant).

Magnitudes. $|A_{1,1}|$ and $|A_{2,1}|$ are invariant: rotation does not change length. Figure 2 shows the orbit. As θ runs over the circle, a phasor traces a circle of constant radius; that circle is called the **orbit** of the phasor, and the radius is the invariant that labels which orbit you are on.

Weight-balanced products. Individual phases do not survive, but differences do. Consider

$$A_{2,1}\bar{A}_{1,1} \mapsto A_{2,1}e^{j\theta}\bar{A}_{1,1}e^{-j\theta} = A_{2,1}\bar{A}_{1,1}.$$

The two phase factors cancel because the weights cancel: +1 from $A_{2,1}$, −1 from the conjugate of $A_{1,1}$. In general a monomial $\prod A_{p,k}^\alpha \bar{A}_{p,k}^\beta$ is invariant precisely when its total weight $\sum k(\alpha - \beta)$ is zero. That is a single linear condition on the exponents.

Dividing out the magnitudes leaves the object the Cardiff literature calls the relative phase:

$$Q \equiv \frac{A_{2,1}/|A_{2,1}|}{A_{1,1}/|A_{1,1}|} = e^{j(\phi_{2,1}-\phi_{1,1})}, \quad \phi_{p,k} \equiv \angle A_{p,k}. \quad (4)$$

4.3 Why that is the complete list

It is not obvious that magnitudes and relative phases exhaust the possibilities — perhaps some other function of the phases is invariant without being built from differences. Classical invariant theory says no. For a compact group (and a circle is compact), the invariants are generated by finitely many basic ones, a result usually attributed to Hilbert and Weyl. Any invariant *polynomial* is a polynomial in the generators.

There is also a constructive way to see the result, one that engineers already use. Take any function of the phasors and average it over the phase angle θ , from 0 to 2π . What survives the average is invariant by construction, and every invariant is its own average, so this “phase averaging” is a projection onto the invariants. In invariant theory it is called the Reynolds

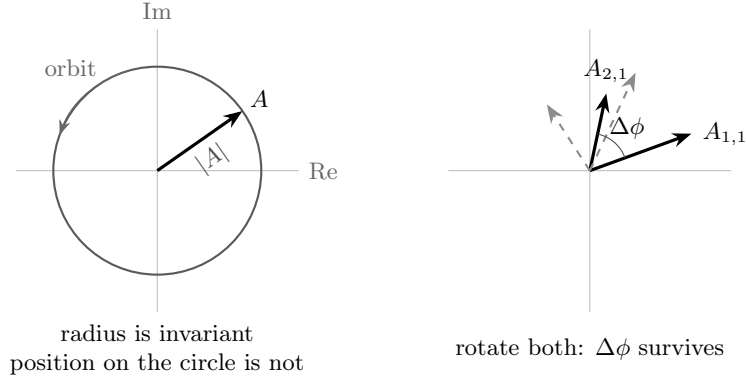


Figure 2: Left: the orbit of a phasor under the circle group, and the invariant that labels it. Right: absolute phases are not invariant, but the difference between two weight-one phasors is. These two facts generate every invariant there is.

operator; for a circle it is integration over one period of the drive phase. That the group is *compact* — a circle has finite length — is what makes the average well defined, and it is the hypothesis on which everything in this section rests. Finite groups (average over the elements), circles and tori (average over the angles) all qualify; the non-compact groups of, say, Lorentz boosts do not, and require different methods.

For devices that is not enough, because measured device responses are smooth but not polynomial. The extension is a theorem of Schwarz [9]: for a compact Lie group, every smooth invariant function is a smooth function of the same finite set of generators. Nothing is lost in passing from polynomial to smooth functions. This is the step that turns a statement about polynomial fits into a statement about devices.

Engineering translation

“Generated by” means: write your model in terms of $|A_{1,1}|$, $|A_{2,1}|$ and Q , and you are not leaving anything out. Not approximately — exactly, and for smooth responses, not just polynomial ones. Any term you might add on physical grounds is already a function of these three.

One detail explains a feature of the Cardiff model that otherwise looks like a convention. The relative phase Q is a ratio, and it is undefined when the load wave vanishes. A response that is smooth *at* $|A_{2,1}| = 0$ cannot therefore depend on Q^n alone; it must carry enough powers of $|A_{2,1}|$ to cancel the singularity. The term $|A_{2,1}|^m Q^n$ is a polynomial in $A_{2,1}$ and $\bar{A}_{2,1}$ — hence smooth at the origin — exactly when $m \geq |n|$ and $m - |n|$ is even, that is, when $m = |n| + 2r$ for some integer $r \geq 0$. That is the Cardiff index relation: it is the smoothness condition at zero load wave rather than a convention.

A notation trap

In the Cardiff literature $\angle A$ does not denote the angle of A — it denotes the *unit phasor* $e^{j\angle A}$. So the factor written $(\angle A_{2,1} / \angle A_{1,1})^n$ means $e^{jn(\phi_{2,1} - \phi_{1,1})} = Q^n$, not a ratio of two real angles raised to a power. The notation is stated here before the model form is quoted.

4.4 An aside: counting the invariants

If you want to know how many independent terms exist at each degree — useful when budgeting parameters — there is a generating function for it, the Molien series. For a circle acting with weights $w_1, \dots, w_N$ (and on the conjugates with $-w_i$), the number of invariants of degree d is

the coefficient extracted from

$$M(t) = [\lambda^0] \prod_i \frac{1}{(1 - t\lambda^{w_i})(1 - t\lambda^{-w_i})},$$

and replacing λ^0 by λ^h counts the weight- h equivariants instead. For two weight-one variables and their conjugates the answer is $(1 + t^2)/(1 - t^2)^3$, and the shape of that fraction is itself informative. The denominator says there are three algebraically independent invariants of degree two — $|A_{1,1}|^2$, $|A_{2,1}|^2$ and $\text{Re}(A_{2,1}\bar{A}_{1,1})$ — in which one may form arbitrary polynomials; the numerator says there is one more, $\text{Im}(A_{2,1}\bar{A}_{1,1})$, which appears at most linearly, because its square is already a polynomial in the other three. Every invariant is uniquely $p + q \text{Im}(A_{2,1}\bar{A}_{1,1})$ with p, q polynomials in the first three. That is the general pattern (the Hironaka decomposition into primary and secondary invariants), and a short account of it is a set of lectures on invariant theory for physicists [10], whose Sections 2.3–2.8 are entirely field-independent. The finiteness theorem behind all of this is in Weyl’s own 1936 lectures [11]. The accompanying MATLAB toolkit computes the series (`xp_molien`, `xp_series`); Appendix B lists the routines. No later result depends on this subsection.

5 What the output must do: equivariance

5.1 The output is not invariant

The device *response* is not an invariant. $B_{p,h}$ is itself a harmonic- h phasor, so under a shift of the time origin it must rotate at weight h :

$$B_{p,h} \mapsto B_{p,h} e^{jh\theta}. \quad (5)$$

A map that transforms this way — inputs rotate, output rotates by a prescribed weight — is called **equivariant**. Invariance is the special case $h = 0$.

5.2 Factoring an equivariant

Once the invariants are known, the equivariants follow. Pick any convenient quantity of weight h ; call it the *carrier*. Divide the output by it. The quotient has weight zero, so it is an invariant, so by Section 4 it is a smooth function of the generators. Multiply back:

equivariant of weight h = (carrier of weight h) $\times$ (arbitrary invariant function).

 (6)

The natural carrier is the drive-side phase itself,

$$P \equiv e^{j\phi_{1,1}} = \frac{A_{1,1}}{|A_{1,1}|}, \quad (7)$$

which has weight one, so P^h has weight h . Substituting gives

$$B_{p,h} = P^h \sum_n f_{p,h,n}(|A_{1,1}|, |A_{2,1}|) Q^n, \quad Q = \frac{\angle A_{2,1}}{\angle A_{1,1}}, \quad (8)$$

with the $f_{p,h,n}$ *arbitrary smooth functions* of two real variables. (The hypothesis is that the response depends smoothly on $A_{1,1}$ and $A_{2,1}$ away from zero; the Cardiff form with $m = |n| + 2r$ then follows from smoothness at $A_{2,1} = 0$, as in Section 4.)

Equation (8) is the general solution, not an approximation, a truncation or a modeling assumption. Every time-invariant two-port response in single-tone periodic steady state has this form, and the index n is canonical rather than chosen: the sum over n is the Fourier series in the relative phase, so n is a weight, a property of the group, not of the modeler.

Note what was *not* assumed: memorylessness. A device with thermal or trapping memory, held in CW steady state, still obeys (8), because the only physical hypothesis was that the response is unchanged when the clock is re-zeroed. What memory changes is the behavior under modulation, where the coefficient functions acquire a dependence on the envelope history that no CW measurement can detect. That is the same conclusion the X-parameter literature reaches [5]: CW X-parameters are complete for CW, and memory is a separate, dynamic extension. The dynamic gain model of Verspecht *et al.* [12] imposes the same structure at the envelope level: an operator invariant under rotation of the carrier phase, multiplied by the envelope, with memory terms that vanish on a constant envelope. The memoryless hypothesis is used later, in Section 7, because a polynomial degree in the load-side voltage is a property of a static map. This is the form already written down in the 2010 Cardiff paper [4], where the coefficients are described as functions of $|a_{1,1}|$ and $|a_{2,1}|$; what the symmetry argument adds is that the form is provably exhaustive.

5.3 Gauge fixing, and why three communities wrote the same factor

Choosing P as the carrier is a convention. You could equally carry the weight on $A_{2,1}$'s phase, or on a fixed external reference. Different choices give different coefficient functions f describing the same physical device — the components change, the object does not. Physicists call this a choice of *gauge*; microwave engineers make the same choice every time they pick a reference plane, and the calculation of how S -parameters transform when a reference plane is moved is the same bookkeeping.

The factor P^h in (8) is the phase normalization P^k of X-parameters [5], the “virtual harmonics generator” of the higher-order sinusoidal describing function literature [13], and the phase-vector construction of the Cardiff model: P^h is the gauge chosen in all three literatures.

Engineering translation

Fixing the gauge is normalizing out the absolute phase, which is what you do anyway before comparing two measurements. The mathematical content is that after you normalize, what is left — the coefficient functions $f_{p,h,n}$ — is device data, independent of the phase reference.

6 Writing the exponents as monomials

6.1 Two ways to write the same term

Expanding the coefficient functions in (8) in powers of $|A_{2,1}|$ gives the traveling-wave form of the Cardiff model at fixed drive, fundamental load-pull only [4, 14]:

$$B_{p,h} = (\angle A_{1,1})^h \sum_r \sum_n K_{p,h,m,n} |A_{2,1}|^m \left(\frac{\angle A_{2,1}}{\angle A_{1,1}} \right)^n, \quad m = |n| + 2r. \quad (9)$$

The key step of the analysis is a change of variables. Write $A \equiv A_{2,1}$ and express a single term as a monomial in A and its conjugate:

$$|A|^m (\angle A)^n = A^a \bar{A}^b, \quad a - b = n, \quad a + b = m. \quad (10)$$

Solving, $a = (m + n)/2$ and $b = (m - n)/2$. Now impose the Cardiff relation $m = |n| + 2r$:

$$\boxed{\min(a, b) = r.} \quad (11)$$

The identity is exact, not asymptotic. *The index r counts the conjugate pairs in the term.* A term with $r = 0$ is a pure power of A or of $\bar{A}$; a term with $r = 1$ carries one factor of $|A|^2 = A\bar{A}$ alongside; and so on. The familiar restriction $r \leq 1$ retains exactly the monomials with $\min(a, b) \leq 1$. Table 1 lists the low-order terms in both notations.

Table 1: The same terms in both notations, for $b_{2,1}$ -type responses. The right-hand columns are the ones that will acquire physical meaning in Section 8.

monomial	Cardiff term	m	n	r	interpretation
1	constant	0	0	0	no load-side dependence
A	$ A (\angle A)$	1	1	0	linear in the load wave
$\bar{A}$	$ A (\angle A)^{-1}$	1	-1	0	linear, conjugate
A^2	$ A ^2(\angle A)^2$	2	2	0	second order
$A\bar{A} = A ^2$	$ A ^2$	2	0	1	second order, one pair
A^3	$ A ^3(\angle A)^3$	3	3	0	third order
$A^2\bar{A}$	$ A ^3(\angle A)$	3	1	1	third order, one pair
$A^2\bar{A}^2$	$ A ^4$	4	0	2	<i>excluded by $r \leq 1$</i>

6.2 What $r \leq 1$ keeps and what it discards

Figure 3 plots the monomials on the (a, b) lattice. Lines of constant n run diagonally, lines of constant m run anti-diagonally, and $r = \min(a, b)$ is the distance from the nearer axis. The restriction $r \leq 1$ retains only the first two rows and the first two columns of the lattice, an L-shaped region along the axes, and excludes the whole interior $a \geq 2, b \geq 2$.

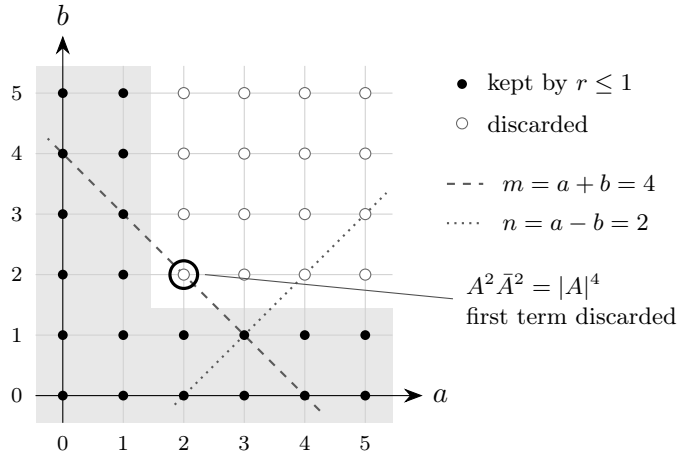


Figure 3: Monomials $A^a \bar{A}^b$ on the exponent lattice. The shaded L-shaped region is $\min(a, b) \leq 1$, the Cardiff restriction $r \leq 1$: it contains every monomial through total degree 3, and $A^2 \bar{A}^2 = |A|^4$, the $|A|^4$ contribution to the $n = 0$ coefficient, is the first monomial it excludes.

Counting is now simple. Through total degree 3 the L-shaped region contains every monomial, so the restriction excludes nothing. Beyond that the number of monomials retained by $r \leq 1$ grows linearly, $4D - 2$, while the number of all monomials of degree at most D grows quadratically, $(D + 1)(D + 2)/2$:

degree D	full dimension	kept by $r \leq 1$	missing	fraction retained
3	10	10	0	1.000
4	15	14	1	0.933
5	21	18	3	0.857
9	55	34	21	0.618
12	91	46	45	0.505

The restriction therefore removes many coefficients at high order and almost none at low order, which raises the question of when the excluded terms are identically zero.

7 Where $r \leq 1$ comes from

7.1 Setting up

Let the device be memoryless, with its dependence on the load-side voltage a polynomial of degree K , and let the drive-side nonlinearity contribute harmonics of index ℓ . The memoryless hypothesis is used only here, because a polynomial degree in $v_2(t)$ is a property of a static map. Let the load-side voltage be set by the incident wave (open loop; Section 9 removes this assumption), so that it is a fundamental tone,

$$v_2(t) = \operatorname{Re} \left(A e^{j\theta} \right), \quad \theta = \omega_0 t. \quad (12)$$

Raising it to the p -th power is an application of the binomial theorem:

$$v_2^p = 2^{-p} \sum_{q=0}^p \binom{p}{q} A^q \bar{A}^{p-q} e^{j(2q-p)\theta}. \quad (13)$$

Read off the structure: a term of degree p in the load-side voltage carries exactly p factors drawn from $\{A, \bar{A}\}$ — q of one and $p - q$ of the other — and it sits at harmonic offset $2q - p$.

Extracting the h -th harmonic from the response requires that the drive-side contribution ℓ and the load-side offset add up to h : $\ell + (2q - p) = h$. Solving alongside $a = q$, $b = p - q$:

$$a = \frac{p + h - \ell}{2}, \quad b = \frac{p - h + \ell}{2}, \quad \implies \quad \boxed{a + b = p, \quad a - b = h - \ell.} \quad (14)$$

The boxed identities are used in everything that follows. The first says the total number of load-side factors equals the order of the load-side nonlinearity that produced the term. The second says the imbalance between A 's and $\bar{A}$'s is set by the drive-side harmonic.

7.2 The theorem

Theorem 1 ($r_{\max} = \lfloor K/2 \rfloor$). *If a memoryless device's dependence on the load-side voltage is a polynomial of degree K , and the load-side voltage is set by the incident wave, every term in the response satisfies $\min(a, b) \leq \lfloor K/2 \rfloor$. Equivalently, in Cardiff indices,*

$$r_{\max} = \lfloor K/2 \rfloor.$$

Proof. $\min(a, b) \geq r$ requires both $a \geq r$ and $b \geq r$. Adding and using $a + b = p$ from (14) gives $p \geq 2r$. Since $p \leq K$ and r is an integer, $r \leq \lfloor K/2 \rfloor$. $\square$

The substance of the theorem is not the two-line proof but the identification $r = \min(a, b)$ of Section 6, which turns an index in a fitting formula into a count of conjugate pairs; once that identification is made, the bound follows.

7.3 What Theorem 1 says

- **The restriction $r \leq 1$ holds for every term if and only if $K \leq 3$.** A cubic load-side nonlinearity cannot produce a term with two conjugate pairs, because two pairs need four factors and a cubic supplies at most three. So the Cardiff restriction is not an approximation for a cubic device — it is exact. At fourth order it generically fails, and the first term to appear is $A^2 \bar{A}^2 = |A|^4$, the circled point in Figure 3.
- **The bound is attained, not merely respected.** A term with $\min(a, b) = r$ comes from $p = 2r$ whenever the drive side supplies $\ell = h$, which any nonlinearity with a linear term does at the fundamental. So $\lfloor K/2 \rfloor$ is the actual maximum, not a loose upper bound.

- **Separability is not assumed.** The argument uses only the degree in v_2 , so a general non-separable $F(v_1, v_2)$ with cross terms obeys the same bound. This has been checked numerically.
- **Where you center the expansion does not matter.** A-pull data is naturally expanded about the center of a circle rather than about $A = 0$. Substituting $A \mapsto A + c$ into $A^\alpha \bar{A}^\beta$ produces only terms with $a \leq \alpha$ and $b \leq \beta$, so $\min(a, b)$ cannot increase. The bound is centering-independent. One feature does change under recentering, and Section 10 will need it: a source term of load-side order p , which about $A = 0$ produces monomials with $a + b = p$ exactly, about $A = c$ produces monomials with $a + b \leq p$. So in a centered expansion the degree of a term is a *lower bound* on the order that fed it, while the highest degree present is still exactly K .

Example 1 (A cubic device, by hand). Take $K = 3$ and ask for the fundamental response, $h = 1$, with the drive side contributing $\ell = 1$. Then $a - b = 0$, so $a = b$, and $a + b = p \leq 3$ forces $p \in \{0, 2\}$ and $(a, b) \in \{(0, 0), (1, 1)\}$. The response at the fundamental contains a constant and a $|A|^2$ term and nothing else of this type: $r \leq 1$, as Theorem 1 states. Raise K to 4 and $p = 4$ becomes available, admitting $(2, 2) = |A|^4$ with $r = 2$.

7.4 Numerical check

The result was verified for $K = 2, \dots, 7$ by brute-force expansion, both for separable and non-separable F , using the companion MATLAB toolkit:

```
>> T = xp_rmax_rule(2:7); % expand, harmonic-select, tabulate min(a,b)
>> T = xp_device_demo(2:7); % same sweep framed as "what does r<=1 cost?"
```

Both report the observed $r_{\max}$ equal to $\lfloor K/2 \rfloor$ at every order tested. Appendix B lists the routines and what each one checks.

8 What each exponent means

The two identities (14) give each of the three Cardiff indices a physical meaning, stated as three corollaries.

Corollary 1 (The magnitude exponent is the nonlinearity order). $m = |n| + 2r = a + b = p$. *The magnitude exponent is the order of the load-side nonlinearity that produced the term.*

Corollary 2 (The phase exponent is set by the drive-side harmonic). $n = a - b = h - \ell$. *The phase exponent is set by which harmonic the drive-side nonlinearity supplied.*

Corollary 3 (Mixing order). $m + |n - h| = p + |\ell|$ *is the lowest total nonlinearity order able to produce the term: load-side order plus drive-side harmonic. This is the quantity tabulated as "mixing order" in the A-pull identification literature [15], and the identity can be checked row by row against Table 2 of [15].*

None of the three indices is merely a label in a fitting formula. The interpretations, collected:

index	equals	physical interpretation
m	$a + b = p$	order of the load-side nonlinearity
n	$a - b = h - \ell$	harmonic supplied by the drive side
r	$\min(a, b)$	number of conjugate pairs; bounded by $\lfloor K/2 \rfloor$
$m + n - h $	$p + \ell $	mixing order

Engineering translation

Before: “we truncate at $r \leq 1$ because it fits well and keeps the parameter count down.”
 After: “we truncate at $r \leq 1$ because the device’s load-side nonlinearity is cubic.” The second statement is one a measurement can check.

9 The loaded device: the decay in r

There is a caveat, and it is the part of most practical use.

Theorem 1 concerns the *intrinsic* nonlinearity — the device’s own polynomial dependence on its terminal voltage. In a real measurement the load-side voltage is not an independent variable. It satisfies a self-consistency condition, $v_{ds} = a_2 + b_2$, and b_2 on the right-hand side is the device’s own output. Solving that is finding a fixed point, and a fixed point of a quadratic map is not a polynomial — it is a power series with every order present. So strictly, a loaded device has no finite K , and $r_{\max}$ is infinite.

What survives is a decay of the coefficients in r . The following calculation can be repeated with `xp_loaded_demo` in the companion toolkit. Consider a device whose intrinsic dependence on the load-side voltage is *quadratic*, so that Theorem 1 gives $r_{\max} = 1$:

$$i_d(v_1, v_2) = 0.8 v_1 + 0.2 v_1^2 - 0.1 v_1^3 + 0.08 v_1 v_2 + 0.04 v_1^2 v_2 + 0.05 v_1 v_2^2 + 0.04 v_2^2,$$

in $Z_0 = 1$ units with the drive $v_1 = \cos \theta$ fixed. Inject only the fundamental at port 2, $a_2(t) = \text{Re}(Ae^{j\theta})$, and close the loop pointwise in time, $b_2 = a_2 - i_d(v_1, a_2 + b_2)$. Sample $B_{2,1}$ over the disc $|A| \leq \rho$, fit the monomials $A^a \bar{A}^b$ in units of ρ (so each coefficient is the size of that term at the edge of the measured region), and record the largest coefficient in each r -class relative to the constant term:

r	0	1	2	3	4	5
open loop, $\rho = 0.5$	1	8.6×10^{-3}	$\sim 10^{-14}$	$\sim 10^{-14}$	$\sim 10^{-14}$	$\sim 10^{-14}$
closed loop, $\rho = 0.5$	1	3.8×10^{-2}	1.1×10^{-3}	5.9×10^{-5}	4.2×10^{-6}	5.0×10^{-7}
closed loop, $\rho = 0.25$	1	9.4×10^{-3}	6.6×10^{-5}	9.1×10^{-7}	1.7×10^{-8}	3.9×10^{-10}

The open-loop row illustrates Theorem 1: $K = 2$, and everything beyond $r = 1$ is zero to machine precision. The closed-loop rows show the effect of the loop: every r is now present, and the coefficients fall by one to one-and-a-half decades per step. Comparing the two closed-loop rows shows the mechanism: halving the load-wave amplitude divides the later step ratios by about four. Each extra conjugate pair brings one more factor of $|A|^2$, multiplied by a loop-gain factor; so the per-step decay is roughly $(\text{loop gain} \times |A|)^2$, and it is set by the degree of mismatch, not by any property of the fit.

The practical consequence is a change in the *kind* of rule you are applying. For an intrinsic nonlinearity, $r_{\max}$ is set by a degree and Theorem 1 gives it exactly. For a loaded device, $r_{\max}$ is set by where the decay crosses the accuracy floor, and the decay rate is measurable from the fit itself.

The rule is: fit, plot coefficient magnitude against r on a log axis, and truncate where it meets the noise (Figure 4). The argument has the same form as the truncation of a Volterra series or an FIR tail: the order is set by the floor, not by a theorem. Theorem 1 adds the intrinsic behavior: it states what the device would produce without the loop, so a decay that stops at low r is evidence about the device rather than about the fit.

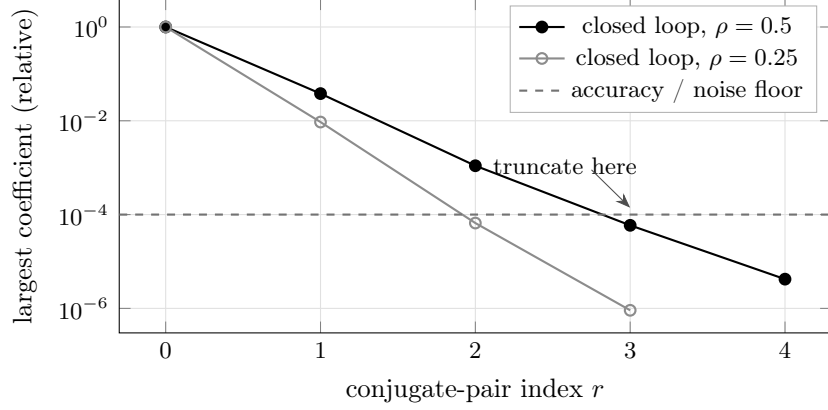


Figure 4: The stopping rule for a loaded device (data from `xp_loaded_demo`). Fit, plot the largest coefficient at each r on a log axis, and truncate where the decay meets the floor. The slope is set by load-wave amplitude and loop gain, and is itself device data.

10 Seeing the decomposition in a measurement

10.1 Why an ordinary load-pull sweep does not show this

In a conventional load-pull sweep every term in (9) contributes to every measured point. The coefficients are recovered by least squares, so the answer depends on the basis assumed, and a poorly conditioned fit can assign energy to the wrong exponent. You cannot see individual (m, n) terms; you can only see their sum.

10.2 The method: modulate, then look at the spectrum

The tailored A-pull method of Tasker and co-workers [15, 16] changes that. Instead of visiting load states in an arbitrary order, step the load-side wave around a *spiral* about a chosen center $a_{2,1}^c$:

$$a_{2,1}(I) = a_{2,1}^c + \frac{1}{2}\Delta a \left[1 + \cos\left(\frac{2\pi S_{am}I}{N}\right)\right] e^{j2\pi S_{pm}I/N}, \quad I = 0, \dots, N-1,$$

which is Eq. (1) of [15]: the deviation from the center is amplitude modulated at rate S_{am} (a raised cosine, so the magnitude sweeps from 0 to Δa) and phase modulated at rate S_{pm} , both as functions of the sequence index I . Then take an FFT over the sequence. The model of [15], its Eq. (7), is written in the deviation $A \equiv a_{2,1} - a_{2,1}^c$, which is the centered expansion of Section 7.

The separation works as follows. Consider a single term $A^a \bar{A}^b = |A|^m e^{jn\phi}$ in that centered variable and follow it around the spiral.

- The **phase** part contributes $e^{jn\phi}$, and ϕ advances linearly at rate S_{pm} . That is a single spectral line at $n S_{pm}$. The position of the line *is* the exponent n .
- The **magnitude** part contributes $|A|^m$, and $|A|$ is a raised cosine at rate S_{am} . Raising $[1 + \cos x]$ to the m -th power generates harmonics of x up to order m and no further — the same bookkeeping as (13), applied to the modulation instead of the carrier. So the line at $n S_{pm}$ acquires sidebands at $\pm s S_{am}$ for $s \leq m$.

The result is a *cluster* of lines at $r_j S_{am} + n S_{pm}$, $r_j = -m, \dots, m$ — Eq. (8) of [15] — centered at $n S_{pm}$ with half-width $m S_{am}$. Cluster center gives n ; cluster width gives m . The spectrum is a direct picture of the exponent decomposition of Section 6, measured rather than fitted. Figure 5 is the schematic. The rates are chosen so that clusters of neighboring n do not overlap: since a cluster at $n S_{pm}$ can be as wide as $K S_{am}$ on either side, Al-Rawachy *et al.* [15] require $S_{pm} > (2 \text{ Order} - 1) S_{am}$, their Eq. (9), where Order is the largest mixing order sought,

and take S_{am} and S_{pm} prime, so that no line of one cluster falls on a line of another; their values are $S_{am} = 3$ or 5 and $S_{pm} = 53$ or 89 .

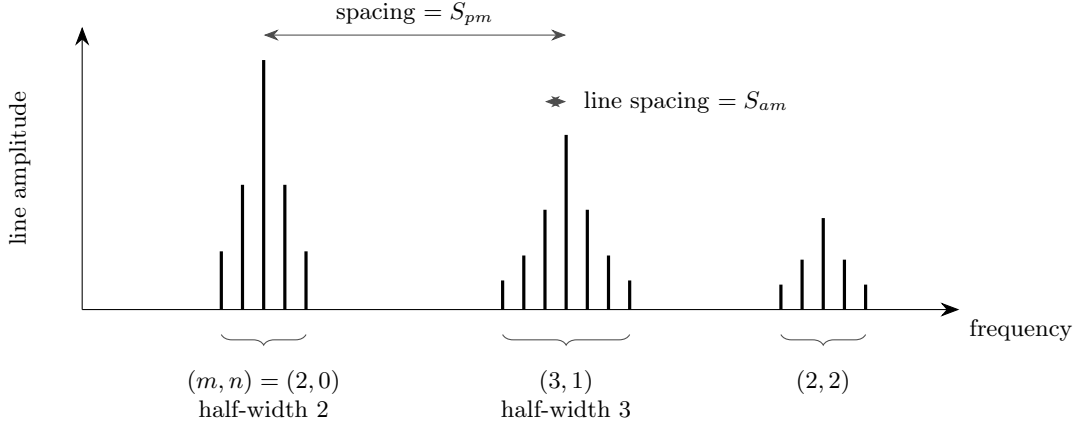


Figure 5: Schematic of a tailored A-pull spectrum. Each Cardiff term appears as a cluster: its center frequency encodes the phase exponent n , its half-width encodes the magnitude exponent m . By Corollary 1 and the centering remark of Section 7, the widest cluster present has half-width K — the spectrum gives the order of the load-side nonlinearity directly.

10.3 The cluster width has a physical interpretation

Corollary 1 said $m = p$ for an expansion about zero load wave, and the centering remark in Section 7 said that about any other center a source of order p feeds degrees $m \leq p$, with the top degree K still reached. Combining:

The half-width of a cluster is the lowest load-side order able to produce it, and the widest cluster in the spectrum has half-width equal to the order K of the load-side nonlinearity.

This statement converts a spectral feature into a device parameter with no fitting in between. The half-width of the widest resolvable cluster gives K , and Theorem 1 then gives $r_{\max} = \lfloor K/2 \rfloor$: a model-order decision made by measurement.

10.4 What the published data shows

Al-Rawachy *et al.* [15] applied the tailored A-pull identification to a GaN device at 2.45 GHz and list the extracted coefficients for $b_{2,1}$ in their Table 2. The first four columns of Table 2 below are theirs; the last two are what this tutorial adds.

Three points follow from the two computed columns.

- **Every pair has $r \leq 1$,** and the largest magnitude exponent is $m = 3$. No pair with $m \geq 4$ appears — in particular neither $(4, 0)$ nor $(5, 1)$, which are the two $r = 2$ pairs that [15] reports searching for and not finding.
- **Theorem 1 predicts exactly that.** By Corollary 1 a detected maximum $m = 3$ is a detected load-side order $K = 3$; Theorem 1 then gives $r_{\max} = \lfloor 3/2 \rfloor = 1$. The table agrees with this prediction row by row.
- **The mixing-order identity checks on every row.** The last column, computed from Corollary 3 with no reference to the data of [15], reproduces the tabulated mixing order in all nine rows. That is a useful arithmetic check on the interpretation of the indices, since the two columns were arrived at by different routes.

Table 2: The nine exponent pairs identified for $b_{2,1}$ on a GaN device at 2.45 GHz. Columns m , n , mixing order and $|K|$ are from Table 2 of [15] (the $S_{am} = 5$, $S_{pm} = 89$, $N = 1069$ column). The last two are computed here: $r = (m - |n|)/2$ from Section 6, and the mixing order predicted by Corollary 3 as $m + |n - h|$ with $h = 1$.

m	n	mixing order (theirs)	$ K(2, 1, m, n) $	$r = \frac{m- n }{2}$	$m + n - h $ (Cor. 3)
0	0	1	1.379	0	1
1	1	1	0.462	0	1
1	-1	3	0.075	0	3
2	0	3	0.050	1	3
2	2	3	0.039	0	3
2	-2	5	0.007	0	5
3	1	3	0.027	1	3
3	-1	5	0.015	1	5
3	3	5	0.008	0	5

10.5 What the same table says about the terms that are missing

Table 2 also gives the decay in r empirically. Comparing the $r = 1$ coefficient with the $r = 0$ coefficient at the same n :

$$n = 0 : \frac{0.050}{1.379} = 0.036, \quad n = 1 : \frac{0.027}{0.462} = 0.058, \quad n = -1 : \frac{0.015}{0.075} = 0.20.$$

Now extrapolate one step further at the $n = 0$ rate. The $(4, 0)$ term — the first $r = 2$ term, absent from the table — would sit at $0.050 \times 0.036 \approx 1.8 \times 10^{-3}$ *in the units of the table*. Referred to the $(0, 0)$ coefficient, which is 1.379, that is 1.3×10^{-3} , or

$$20 \log_{10}(1.3 \times 10^{-3}) \approx -58 \text{ dBc}.$$

(Equivalently: two steps of 0.036 is 0.036^2 , which is -58 dB. The intermediate 1.8×10^{-3} is an absolute coefficient, not a ratio, and must be referred to the $(0, 0)$ coefficient.)

The identification floor of [15] is a signal-to-spurious ratio near -40 dBc with a noise floor near -60 dBc. So the predicted term sits *below the spurious floor and above the noise floor*. The closed-loop calculation of Section 9 puts its $r = 2$ term at 1.1×10^{-3} relative to the constant, about -60 dBc, at a load-wave amplitude half the drive: an independent estimate that agrees with the extrapolation to within a factor of two.

Neither figure should be given much weight on its own. One is a single-step extrapolation; the other comes from a synthetic device whose number moves as the fourth power of the load-wave amplitude and would be -84 dBc at a quarter of the drive. But they agree at comparable mismatch, and together they suggest an interpretation of $r \leq 1$ different from the usual one: not that the device is intrinsically cubic on the load side, but that fourth-order content is generated through the load at a level below the spurious floor of the measurement and above its noise floor, where it cannot yet be detected.

10.6 The experiment that would settle it

This is the measurement to make. If the spurious floor can be pushed toward the -60 dBc noise floor — better phase-reference stability, more cycles, spurious-line cancellation — then:

- the $(4, 0)$ cluster should be the first new term to appear, at roughly -58 dBc, with $(5, 1)$ the next $r = 2$ term behind it. The magnitude is an extrapolation and should be treated as one; the *ordering* is structural: any $r = 2$ term needs load-side order at least four, and $(4, 0)$ is

the only one that needs no more than four. The fourth-order $r = 1$ term $(4, 2)$, also absent from Table 2 of [15], may appear in between; the simulation below puts it there;

- if instead nothing appears down to -60 dBc, then $r \leq 1$ is confirmed for that device by direct measurement rather than by convention, and the effective K is ≤ 3 at that drive and mismatch.

Either outcome is informative, and the measurement can be made with the apparatus described in Section III of [15].

10.7 A simulated run-through

Everything in this section can be simulated on a synthetic device before any bench time is spent, and the companion routine `xp_apull_demo` does that. The device is a Curtice-type transistor in $Z_0 = 1$ units, $i_d = g G(v_1) F_K(v_2)$ with $G(v_1) = \tanh(1.5(0.2 + v_1))$ on the drive side and F_K the degree- K Taylor polynomial of $\tanh(1 + v_2)$ on the load side, so that K is the intrinsic load-side order and Theorem 1 gives $r_{\max} = \lfloor K/2 \rfloor$. It is closed through the load exactly as in Section 9. The stimulus is Eq. (1) of [15] with the published numbers, $S_{am} = 5$, $S_{pm} = 89$, six cycles, $N = 1069$ points, load-wave amplitude up to half the drive; the response $b_{2,1}$ is Fourier transformed over the sequence index, and a pair (m, n) is called detected when its outermost line $n S_{pm} \pm m S_{am}$ stands 3 dB above a chosen floor.

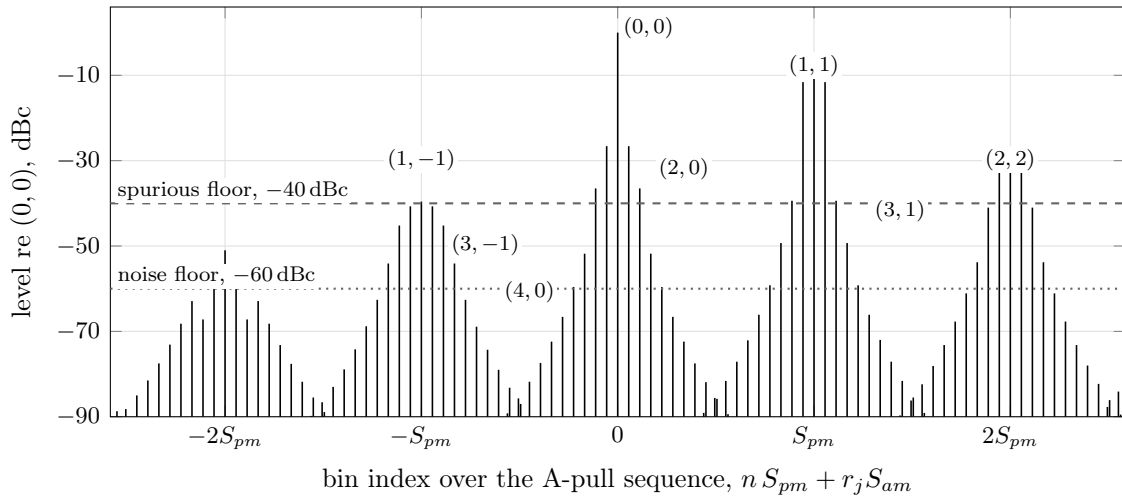


Figure 6: Simulated tailored A-pull spectrum for the cubic ($K = 3$) device closed through its load, $|k| \leq 230$ shown. Each cluster is centered at $n S_{pm}$ and its half-width in units of $S_{am} = 5$ is m : the $(2, 0)$ cluster spans ± 10 bins about zero, the $(3, 1)$ cluster ± 15 about 89. The two floors of [15] are drawn in. The $(4, 0)$ line at ± 20 bins, -59.6 dBc, is the first fourth-order content and sits at the noise floor.

Figure 6 is the spectrum; compare Fig. 6 of [15], which shows the same cluster geometry, produced by the same mechanism. Now sweep the identification floor and record what is detected:

floor	newly detected pairs	interpretation
-40 dBc	$(0, 0)$, $(1, 1)$, $(2, 0)$	
-50 dBc	$+(1, -1)$, $(2, 2)$	
-60 dBc	$+(3, 1)$, $(3, -1)$	seven pairs, all $r \leq 1$, $\max m = 3$: $K_{\text{eff}} = 3$, $r_{\max} = 1$
-70 dBc	$+(3, 3)$, $(4, 0)$, $(4, 2)$, $(5, 1)$, $(2, -2)$	$(4, 0)$ first, at -59.6 dBc; then $(4, 2)$ at -61.1 dBc; then $(5, 1)$ at -66.1 dBc

At a -60 dBc floor the synthetic device gives the same result as the measured one: seven of the nine pairs in Table 2, every one with $r \leq 1$, largest magnitude exponent three, and so the inference $K_{\text{eff}} = 3$, $r_{\text{max}} = 1$. Lower the floor by another ten decibels and the fourth-order content appears in the predicted order — $(4, 0)$ leading, then the $r = 1$ term $(4, 2)$, then $(5, 1)$. The polynomial device puts $(4, 0)$ at -59.6 dBc, on the noise floor; the extrapolation from the measured coefficients put it at -58 dBc. The agreement in level is partly fortuitous, since the level of the polynomial device moves with load-wave amplitude and loop gain, but the structure is not: the same run with the loop opened gives $(4, 0)$ at -300 dBc for $K = 3$ (a numerical zero, as Theorem 1 requires) and at -109 dBc for $K = 4$. In this device, essentially all of the fourth-order content at the fundamental is generated through the load, which is the interpretation of $r \leq 1$ that Section 10 proposed.

The routine takes K , the open/closed switch, the floor and the stimulus parameters as arguments, so the experiment of the previous subsection can be simulated for any polynomial device before it is run on a real one.

10.8 Stage two: a compact transistor model in a circuit simulator

The polynomial device of the previous subsection has the right structure but is not a realistic transistor. The same experiment was therefore repeated on a physics-based compact model in an open-source circuit simulator: the ASM-HEMT GaN HEMT model (version 101.4.0 of the model described in [17]; Verilog-A), compiled with OpenVAF and run in ngspice 44 through its OSDI interface. The default parameter set describes a 0.8 mm device with $V_{\text{off}} = -2$ V; it was biased at $V_{gs} = -1.5$ V (class AB, ≈ 170 mA) with about 20 V on the drain, driven at 2.45 GHz from a 50Ω source, and loaded by a 50Ω environment. Self-heating and trapping were switched off so that the device is memoryless, as Theorem 1 assumes, and reaches its CW steady state within a few periods. A-pull is simple in simulation, as Al-Rawachy *et al.* note: a Thevenin source $2\sqrt{Z_0} \text{Re}(A_2 e^{j\omega t})$ behind Z_0 at the drain sets the incident wave a_2 exactly, whatever the device does. The maximum-power load was found by a scan, the spiral of Eq. (1) was wound about it with $S_{am} = 5$, $S_{pm} = 89$, six cycles and $N = 1069$ points, and its radius was chosen to enclose roughly the 3 dB output-power contour, the criterion of [15]. Each point is a short transient (eight periods, the last four analyzed) at a fixed step of 1024 per period; the whole run takes about twenty minutes on two cores. The scripts, the netlist and both datasets are in the `spice/` folder of the companion toolkit [2], and `xp_apull_asmhemt` reads the data into MATLAB and hands it to `xp_apull_read`, the analysis half of `xp_apull_demo`.

Figure 7 is the spectrum at the softer drive, and Table 3 collects the outermost-line levels at both drives, arranged by n so that the decay in r can be read along each row.

Table 3: ASM-HEMT: outermost-line level of each (m, n) cluster in dBc relative to $(0, 0)$, at two drive levels. Along a row m increases by two, i.e. r by one. The numerical floor (largest off-cluster bin) is -80 dBc for the softer drive and -107 dBc for the harder.

n	drive 0.8 V (1–2 dB compressed)				drive 1.2 V (3–4 dB compressed)			
	$m = n $	$ n +2$	$ n +4$	$ n +6$	$m = n $	$ n +2$	$ n +4$	$ n +6$
0	0.0	−44.1	−71.8	−85.7	0.0	−51.8	−97.6	−130
+1	−22.6	−68.2	−88.4	−107	−27.2	−81.1	−116	−141
−1	−32.0	−82.6	−92.1	−112	−30.8	−71.8	−113	−139
+2	−50.8	−75.5	−87.8	−98.0	−57.2	−100	−131	−145
−2	−75.4	−74.9	−87.0	−97.8	−56.8	−91.3	−131	−148
±3	−74	−87	−101		−80	−110	−141	

Four points can be made about the ASM-HEMT spectra.

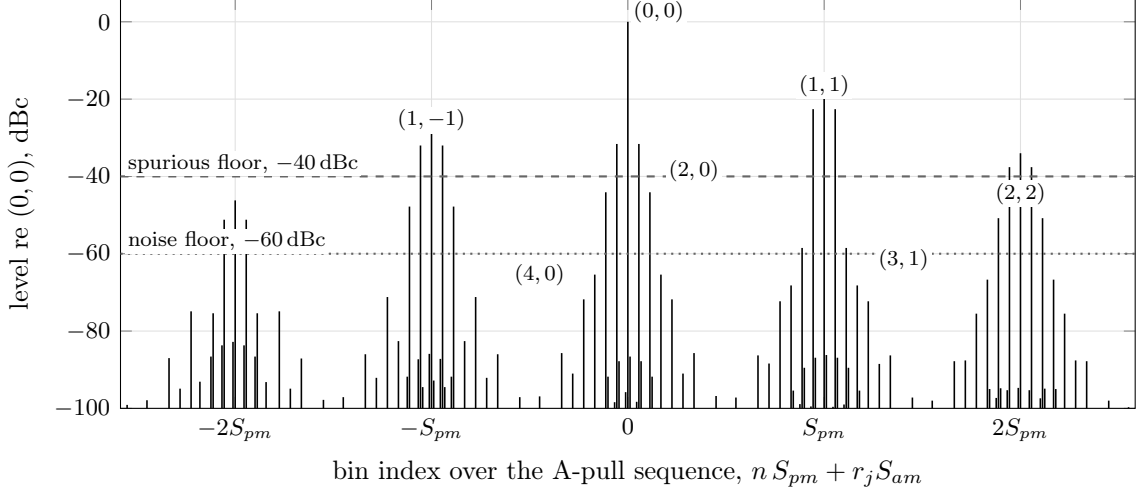


Figure 7: Tailored A-pull spectrum of the ASM-HEMT GaN model in ngspice, $b_{2,1}$ at the softer of the two drives (about 1–2 dB into compression), $|k| \leq 230$ shown, with the two floors of [15] drawn in. Bins that belong to no cluster are below -80 dBc, so everything visible is device response. Compare Figures 6 and 5.

- **The spectrum is a Cardiff decomposition.** Every line that rises above the numerical floor sits on a cluster position $n S_{pm} + r_j S_{am}$; the off-cluster bins are empty to -80 dBc and -107 dBc respectively. That is the completeness statement of Section 5, seen in a circuit simulator with a physics-based model rather than in a polynomial device.
- **At the floors of [15] this device gives $K_{\text{eff}} = 2$, $r_{\text{max}} = 1$.** With a -60 dBc floor five pairs are detected at either drive — $(0, 0)$, $(1, \pm 1)$, $(2, 0)$, $(2, \pm 2)$ — all with $r \leq 1$ and none beyond $m = 2$. The default ASM-HEMT has a weaker load-side nonlinearity than the device in [15], whose $m = 3$ terms lie near -35 to -45 dBc; here they are at -68 dBc and below.
- **$(4, 0)$ is the strongest $r = 2$ term at both drives**, as Section 10 argued it should be: -71.8 dBc against -88 dBc for the next one at the softer drive, -97.6 dBc against -113 dBc at the harder. It is also the strongest $m \geq 4$ line at the softer drive, while at the harder drive the $r = 1$ term $(4, -2)$ slightly exceeds it — the interleaving that Section 10.7 also found. The ordering claim holds for r ; for m it is a tendency.
- **The decay in r is not geometric, and the first step is the steepest.** Along $n = 0$ the steps are -44 , -28 , -14 dB at the softer drive and -52 , -46 , -33 dB at the harder. A one-step extrapolation from the first ratio, which is what Section 10 did with the measured coefficients, would put $(4, 0)$ at -88 dBc and -104 dBc; the model puts it at -72 dBc and -98 dBc. So that extrapolation underestimates the level, by 16 dB in one case and 6 dB in the other. For the measured device this means the -58 dBc estimate is more likely pessimistic than optimistic: the term may sit closer to the spurious floor than the extrapolation says, which makes the experiment easier, not harder.

One incident during this run is worth recording because it illustrates the diagnostic. A sign error in the phase reference of the phasor extraction imposed a run-to-run phase jitter of a few milliradians on every point. The effect on the spectrum was a flat floor of lines at -55 to -70 dBc, on cluster positions and off them alike, under which every $m \geq 3$ term was buried: the spurious floor of a phase-referenced measurement. The diagnostic that caught it is the one `xp_apull_read` now reports first: the level of the bins that belong to no cluster. Those bins must be empty. If they are not, the data has a floor of its own, and nothing below it should be read as device response.

Finally, the DC drain current $i_{2,0}$ was read off in the same way. Its clusters at n and $-n$ have identical levels, $(1, \pm 1)$ at -29.0 dBc, $(2, \pm 2)$ at -62.2 dBc, which is the statement that a weight-zero equivariant of a real quantity has conjugate-symmetric coefficients — a small check that the bookkeeping of Section 5 is being applied to the right object.

11 What to take to the bench

A checklist for the reader who wants only the recommendations.

1. **Convert your Cardiff exponents to (a, b) .** $a = (m + n)/2$, $b = (m - n)/2$. Then $r = \min(a, b)$, and the rest of this list applies.
2. **Interpret m as an order, not a label.** The largest m you can resolve is the order of the device's load-side nonlinearity at that drive and mismatch.
3. **Treat $r \leq 1$ as a hypothesis about the device.** It is exact if $K \leq 3$. If $r = 2$ terms are needed to fit the data, the device has fourth-order load-side content.
4. **Plot coefficients against r on a log axis.** For a loaded device the truncation point is where that line meets your floor, and the slope is device data worth reporting.
5. **If you have A-pull apparatus, measure the cluster widths.** The cluster widths give K by inspection of the spectrum rather than by a fit. Simulate the floor sweep with `xp_apull_demo` first.
6. **Do not attribute a persistent CW residual to a missing term of the same kind.** The representation (8) is complete for time-invariant, single-tone, steady-state operation. Such a residual means another tone, another port, harmonic injection, or a measurement that is not in steady state; memory shows up under modulation, not as a missing CW term.

12 Glossary

term	what it means	where it appeared here
group	transformations that compose, undo, and include doing nothing	time shifts; sign flips; reference-plane moves
Lie group	a group with continuous parameters, smoothly composed	$U(1)$, the circle of phase shifts
$U(1)$, S^1 , $SO(2)$	three names for the unit circle	the phase knob
torus T^N	several independent circles	one phase origin per port or per tone
action	the rule saying how each quantity transforms	$A_{p,k} \mapsto A_{p,k} e^{jk\theta}$
representation	the collected actions on all the variables	the assignment of weights to harmonics
weight	how fast a quantity rotates (a physicist's charge)	the harmonic index k
orbit	the set swept out by one quantity under the group	a circle of constant $ A $
invariant	unchanged by every group element	$ A_{1,1} $, $ A_{2,1} $, relative phase Q
equivariant	transforms with a prescribed weight	the response $B_{p,h}$, weight h
generators	the finite list everything else is built from	two magnitudes and one relative phase
gauge fixing	choosing a convention that cancels out	the carrier $P = e^{j\phi_{1,1}}$

13 Scope

The mathematics used here is classical. The invariant and equivariant structure of a circle action is textbook material; the standard reference is Golubitsky, Stewart and Schaeffer [18, Ch. XII and XVI]. Schwarz's theorem [9] is the smooth extension. The completeness statement is a translation of the form already written in the 2010 Cardiff paper [4].

What is offered here is the translation itself, the identification $r = \min(a, b)$, the bound it implies, the interpretation of the A-pull spectrum that follows, and two simulations of the proposed measurement, one on a polynomial device and one on a compact transistor model.

The scope is narrow and should be stated plainly: fundamental load-pull under single-tone (CW) excitation, periodic steady state, and — for Theorem 1 — a memoryless load-side nonlinearity. The multi-harmonic form of the Cardiff model, with one phase exponent per harmonic, is written out by Tasker and Benedikt [19] and in Bell's thesis [20]; the multi-harmonic and multi-port cases require the same argument with a torus in place of the circle and more indices to track. Memory lies outside this tutorial; it is the subject of the companion paper [6], which shows that the long-term memory of a device at a large-signal operating point is the motion on a slow invariant manifold whose dimension is the number of slow Floquet exponents, and that the dynamic X-parameter kernel identified from step changes of the drive amplitude is the reduced dynamics on that manifold.

A The same result with no group theory

For a reader who wants only the bound, the argument follows with the group-theoretic vocabulary removed.

A device whose load-side nonlinearity is a polynomial of degree K produces, at most, terms in which the load-side wave appears K times. Each appearance is either A or $\bar{A}$. Write a term as $A^a \bar{A}^b$; then $a + b \leq K$.

The Cardiff model writes the same term as $|A|^m (\angle A)^n$ with $m = |n| + 2r$. Matching the two gives $m = a + b$, $n = a - b$ and $r = \min(a, b)$.

A term with r conjugate pairs needs at least $2r$ factors, so $2r \leq a + b \leq K$, hence

$$r \leq \lfloor K/2 \rfloor.$$

For $K = 3$ this gives $r \leq 1$: the familiar restriction, exactly. For $K = 4$ it gives $r \leq 2$, and the newly available term is $A^2 \bar{A}^2 = |A|^4$.

B Companion MATLAB routines

The routines listed below, the two ngspice ASM-HEMT datasets of Section 10.8, and the scripts that produced them are archived as a versioned toolkit with a DOI [2]. The MATLAB side needs base MATLAB only, no toolboxes; `xp_selftest` checks every routine against values computed independently and should be run first. The `matlab/` and `spice/` folders of the archive must be kept side by side, since `xp_apull_asmhemt` locates the datasets relative to its own location.

routine	what it does
xp_monomials	lists monomials $A^a \bar{A}^b$ of given total degree and weight; the lattice of Figure 3
xp_cardiff_count	counts what $r \leq 1$ keeps and discards at each degree; the table in Section 6
xp_rmax_rule	expands a degree- K device, selects harmonics, tabulates the observed $\max \min(a, b)$ against $\lfloor K/2 \rfloor$
xp_device_demo	the same sweep framed as the cost of the restriction
xp_molien, xp_series	Molien series for a weighted circle action: how many invariants and equivariants at each degree
xp_design, xp_completeness	build the design matrix of weight- h monomials at sample points and compare its numerical rank with the Molien dimension: completeness shown as a rank rather than quoted as a theorem
xp_radial_demo	in one load variable, measures the residual left by the $r \leq 1$ truncation as the degree grows: what the restriction costs
xp_loaded_demo	closes the load loop on a quadratic device and reports the largest coefficient in each r -class; the tables and Figure 4 of Section 9
xp_apull_demo	tailored A-pull identification on a synthetic Curtice-type device: spiral stimulus, FFT over the sequence, exponent pairs read off the clusters, floor sweep; Figure 6 and the table of Section 10.7
xp_apull_read	the analysis half of the above, for any measured or simulated response sequence; reports the off-cluster floor first
xp_apull_asmhemt	loads the ngspice ASM-HEMT datasets in <code>spice/</code> and reads them; Figure 7 and Table 3
xp_selftest	runs every check above against values computed independently

```

>> xp_selftest % every routine against known values
>> T = xp_rmax_rule(2:7); % Section 7
>> T = xp_cardiff_count([3 4 5 9 12]); % Section 6
>> xp_loaded_demo(0.5, false); % open loop: r_max = 1 for K = 2
>> xp_loaded_demo(0.5); % closed loop: geometric decay in r
>> xp_apull_demo(3, true, -60); % Section 10.7: seven pairs, all r <= 1
>> xp_apull_demo(3, true, -70); % ... and (4,0) appears
>> xp_apull_asmhemt(-60); % Section 10.8: the ASM-HEMT data

```

References

- [1] N. B. Tufflaro, “Time invariance, circle symmetry, and the completeness of the Cardiff behavioral model,” arXiv:2609.35828 [eess.SP], 2026.
- [2] N. B. Tufflaro, “xpar-toolkit: companion MATLAB and ngspice tools for ‘Symmetry and the Form of Nonlinear Behavioral Models’,” version 1.0.0, Zenodo, 2026, doi:10.5281/zenodo.22816760.
- [3] H. Qi, J. Benedikt, and P. J. Tasker, “Nonlinear data utilization: From direct data lookup to behavioral modeling,” *IEEE Trans. Microw. Theory Techn.*, vol. 57, no. 6, pp. 1425–1432, 2009.

- [4] S. Woodington, R. Saini, D. Williams, J. Lees, J. Benedikt, and P. J. Tasker, “Behavioral model analysis of active harmonic load-pull measurements,” *IEEE MTT-S Int. Microwave Symp. Dig.*, 2010, pp. 1688–1691. *The traveling-wave Cardiff form, and the observation that the device responds only to magnitudes and relative phase.*
- [5] D. E. Root, J. Verspecht, J. Horn, and M. Marcu, *X-Parameters*. Cambridge University Press, 2013. *Where the phase-normalization factor P^k appears; Section 5 identifies it as an equivariant carrier.*
- [6] N. B. Tuffiaro, “Memory in behavioral models as motion on a slow invariant manifold,” arXiv:2609.38771 [eess.SP], 2026.
- [7] K. Kurokawa, “Power waves and the scattering matrix,” *IEEE Trans. Microw. Theory Techn.*, vol. 13, no. 2, pp. 194–202, 1965. *Reference-plane phase conventions; the extra circles of Section 3.*
- [8] G. P. Gibiino, A. M. Angelotti, A. Santarelli, F. Filicori, and P. A. Traverso, “M²S parameters: A multi-tone multi-harmonic measurement approach for the characterization of nonlinear networks,” in *Proc. IEEE Int. Instrum. Meas. Technol. Conf. (I2MTC)*, 2020, pp. 1–6. *Two incommensurate tones; the two-torus case of Section 3 in measurement practice.*
- [9] G. W. Schwarz, “Smooth functions invariant under the action of a compact Lie group,” *Topology*, vol. 14, pp. 63–68, 1975. *The step from polynomial to smooth; why the completeness claim applies to real devices.*
- [10] R. de Mello Koch, M. Kim, A. L. Mahu, and A. Rudra, “A pedagogical introduction to invariant theory and finite- N holography,” arXiv:2608.22952, 2026. *Hilbert series, Molien–Weyl and the primary/secondary decomposition, explained to people who know vector spaces; Sections 2.3–2.8.*
- [11] H. Weyl, *Elementary Theory of Invariants*, lecture notes, Institute for Advanced Study, Princeton, 1935–36 (notes by H. Weyl and L. M. Blumenthal). *The finiteness theorems in Weyl’s own lectures, three years before The Classical Groups.*
- [12] J. Verspecht, S. Kusano, and A. Stav, “The dynamic gain model,” in *Proc. 100th ARFTG Microw. Meas. Conf.*, 2023, pp. 1–4.
- [13] P. W. J. M. Nuij, O. H. Bosgra, and M. Steinbuch, “Higher-order sinusoidal input describing functions for the analysis of non-linear systems with harmonic responses,” *Mech. Syst. Signal Process.*, vol. 20, no. 8, pp. 1883–1904, 2006. *The same construction under the name “virtual harmonics generator”.*
- [14] E. M. Azad, J. J. Bell, R. Quaglia, J. J. Moreno Rubio, and P. J. Tasker, “New formulation of Cardiff behavioral model including DC bias voltage dependence,” *IEEE Microw. Wireless Compon. Lett.*, vol. 32, no. 6, pp. 607–610, 2022.
- [15] A. Al-Rawachy, A. Baddeley, A. Eblabla, D. Gecan, A. Sheikh, A. Bogusz, R. Quaglia, and P. J. Tasker, “Automated Cardiff model complexity identification and parameters extraction from measured tailored A-pull data,” *IEEE J. Microwaves*, vol. 5, no. 5, pp. 1150–1161, 2025. *The measurement discussed in Section 10.*
- [16] P. J. Tasker, “Robust extraction of Cardiff model parameters from appropriately tailored measured load-pull data,” *Proc. IEEE BiCMOS Compound Semicond. Integr. Circuits Technol. Symp.*, 2020, pp. 1–5.

- [17] S. Khandelwal, S. Ghosh, S. A. Ahsan, A. Dasgupta, and Y. S. Chauhan, “ASM-HEMT 101.0.0: Advanced SPICE model for HEMTs — technical manual,” IIT Kanpur and Macquarie Univ., 2018. *The compact model used in Section 10.8.*
- [18] M. Golubitsky, I. Stewart, and D. G. Schaeffer, *Singularities and Groups in Bifurcation Theory*, Vol. II. Springer, 1988. *Chapter XII is the standard treatment; the weighted circle and torus cases appear there as worked exercises.*
- [19] P. J. Tasker and J. Benedikt, “Waveform inspired models and the harmonic balance emulator,” *IEEE Microw. Mag.*, vol. 12, no. 2, pp. 38–54, 2011.
- [20] J. J. W. Bell, “Input harmonic and mixing behavioural model analysis,” Ph.D. thesis, Cardiff Univ., Cardiff, U.K., 2014. *The multi-harmonic Cardiff formulation, one phase exponent per harmonic.*