

L_1 guidance logic extension for small UAVs: handling high winds and small loiter radii

Thomas Stastny

thomas.stastny@mavt.ethz.ch

Autonomous Systems Lab, ETH Zürich

Zürich, Switzerland

Mar. 31, 2018

I. Introduction

L_1 guidance logic¹ is one of the most widely used path following controllers for small fixed-wing unmanned aerial vehicles (UAVs), primarily due to its simplicity (low-cost implementation on embedded on-board processors, e.g. micro-controllers) and ability to track both circles and lines, which make up the vast majority of a typical fixed-wing vehicle's flight plan. In,² the logic was extended to allow explicit setting of the L_1 period and damping, from which an adaptive the L_1 length and gain can be calculated, keeping dynamic similarity in the path convergence properties, independent of the velocity. Two primary drawbacks remain, specific to small, slow flying fixed-wing UAVs:

1. As elaborated in,¹ circle following convergence requires that the L_1 length be less than or equal to the circle radius R , i.e. $L_1 \leq R$. This condition may often be violated when the ground speed of the aircraft is high, or the circle radius is small.
2. L_1 logic breaks down when wind speeds exceed the vehicle's airspeed, another common predicament for small, slow-flying UAVs.

Though many other guidance formulations exist which may partially address one or both of the listed issues, line-of-sight -based or otherwise, this brief limits its scope to presenting simple extensions to the extensively field tested L_1 guidance formulations commonly used in open source autopilot platforms today (e.g. *PX4*^a and *ArduPilot*^b), allowing legacy operators to keep existing controller tunings and still take advantage of the added performance and safety features. First, an adaptive recalculation of the L_1 ratio is introduced in the event that the L_1 length violates the circle tracking convergence criteria. Second, borrowing some concepts from,³ a bearing feasibility parameter is introduced which continuously transitions L_1 commands from the *tracking* objective to a *safety* objective, i.e. attempting to *mitigate* run-away in over-wind scenarios. Finally, an airspeed reference command increment is introduced which is non-zero according to the wind speed ratio (i.e. wind speed over airspeed) and the bearing feasibility, effectively *preventing* run-away. Focus will be kept to the circle following objective (or loiter), though the same principles may similarly be applied to waypoint or line tracking.

II. Fundamentals

A similar formulation to the L_{2+} algorithm² will form the basis of the extensions in this document. Figure 1 shows the algorithm geometry and notation used throughout the following sections.

The original L_1 acceleration command, with ground speed as input, is formulated as:

$$a_{\text{ref}} = k_L \frac{v_G^2}{L_1} \sin \eta \quad (1)$$

^adev.px4.io

^bardupilot.org

Typical fixed-wing implementations of the algorithm convert the acceleration reference to a roll angle reference ϕ_{ref} , via a coordinated turn assumption, and subsequently saturate the reference:

$$\phi_{\text{ref}} = \text{constrain} \left(\tan^{-1} \left(\frac{a_{\text{ref}}}{g} \right), -\phi_{\text{lim}}, \phi_{\text{lim}} \right) \quad (8)$$

where g is the acceleration of gravity.

Two implementation details related to the bounds of the algorithm should also be considered:

- Ensure the L_1 vector reaches the path for γ calculation – make a perpendicular approach to the path when far away: **if** $L_1 < |e_t|$, **then** $L_1 = |e_t|$ (only apply post- calculation of the L_1 ratio)
- Prevent singularities when aircraft is in center of loiter: e.g. **if** $\|\mathbf{cp}\| < \epsilon$, **then** $\mathbf{cp} = (\epsilon, 0)^T$. Any direction may be chosen, or alternatively, one could command zero the acceleration command or hold the previous acceleration command until outside some small radius, ϵ , of the circle center.

III. Handling small loiter radii

Circle following convergence requires that $L_1 \leq R$.¹ Using this relationship, a straight forward adaptation to the L_1 ratio may be used whenever this condition is violated (effectively decreasing the operator-defined L_1 period). I.e. the ratio and distance may be recalculated as $q_L = R/v_G$ and $L_1 = R$, respectively. Potentially recalculating the L_1 ratio requires the following additional check on ground speed: $v_G = \max(v_G, v_{G_{\min}})$ (avoid singularities). Note, as mentioned previously, that any adjustment of the L_1 distance for calculation of γ should be applied after recalculation of the L_1 ratio.

IV. Handling high winds

IV.A. Bearing feasibility awareness

In the case that the wind speed exceeds the UAV's airspeed, feasibility of flying a given L_1 bearing depends on the wind direction. As described in,³ an exact binary boundary on the *bearing feasibility* can be formulated as:

$$\begin{aligned} \beta \sin \lambda \geq 1 \cap |\lambda| \geq \frac{\pi}{2} & \quad (\text{infeasible}) \\ \text{else} & \quad (\text{feasible}) \end{aligned} \quad (9)$$

where the wind ratio $\beta = w/v_A$ is the fraction of wind speed $w = \|\mathbf{w}\|$ over airspeed $v_A = \|\mathbf{v}_A\| = \|\mathbf{v}_G - \mathbf{w}\|$ and λ is the angle between the wind \mathbf{w} and look-ahead \mathbf{l}_1 vectors, $\in [-\pi, \pi]$.

$$\lambda = \text{atan2}(\mathbf{w} \times \mathbf{l}_1, \mathbf{w} \cdot \mathbf{l}_1) \quad (10)$$


where $\mathbf{l}_1 = L_1 (\cos \chi_L, \sin \chi_L)^T$.

The relationship in (9) physically describes a “feasibility cone”, asymptotically decreasing to zero angular opening as the wind ratio increases above unity, see Fig. 2a. When the \mathbf{l}_1 vector lies within this cone the bearing is feasible, and contrarily when outside, infeasible.


As outlined in,³ two separate tracking objectives can then be intuited: 1) an *ideal* tracking objective, where we are able to track the prescribed bearing and 2) a *safety* objective, where we instead tend towards reducing run-away by turning against the wind and simultaneously leveling the aircraft as $t \rightarrow \infty$, where t is time. As binary steps in tracking objectives will cause oscillations in guidance commands when the vehicle remains on or near the feasibility boundary (common when the wind is approaching the airspeed and small gusts, wind shear, or turbulence is present), it is further desirable to transition continuously through these two states. In,³ the following transitioning function (equivalently, continuous feasibility function) was proposed:

$$\sigma_{\text{feas}} = \frac{\sqrt{1 - (\beta \sin \lambda)^2}}{\cos \lambda} \quad (11)$$

where $\beta < 1$ (wind speed is less than airspeed) and $\lambda = 0$ rad (bearing is aligned with wind direction) result in *feasible* output $\sigma_{\text{feas}} = 1$, states beyond the feasibility boundary result in *infeasible* output $\sigma_{\text{feas}} = 0$, and a continuous function $\sigma_{\text{feas}} \in [0, 1]$ in between, see Fig. 2b (left).

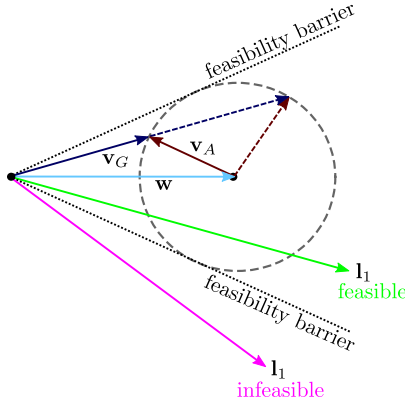

(a) Feasibility “cone” (wind speed greater than airspeed).

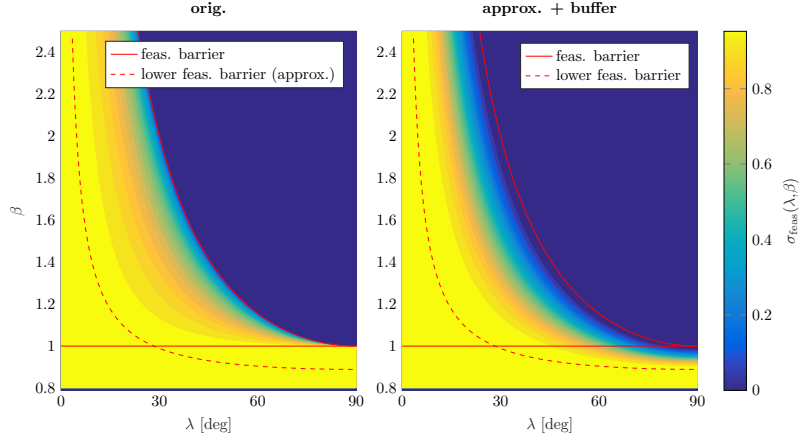

(b) Feasibility function: original formulation from³ (left), new approximation with extended buffer zone (right).

Figure 2: Bearing feasibility.

Some practical issues exist, however, with the function as defined in (11); namely, the transition is continuous but not smooth at the feasibility boundary, which can lead to jagged reference commands, and further, numerical stability issues exist as $\lambda \rightarrow \frac{\pi}{2} \cap \beta \rightarrow 1$. To address these issues, a small buffer zone below the $\beta = 1$ line may be designed, considering some buffer airspeed $v_{A_{\text{buf}}}$.

$$\beta_{\text{buf}} = v_{A_{\text{buf}}} / v_A \quad (12)$$

The buffer’s magnitude may be set to a reasonable guess at the wind estimate or airspeed uncertainty, or, as outlined in more detail in the following section, set depending on the airspeed reference tracking dynamics (e.g. a conservative buffer in which the airspeed reference may be properly tracked by the end of the transition). Additionally, an approximation of the feasibility function in (11) can be made incorporating the buffer zone, as well as maintaining continuity and smoothness in the transition, see eq. (13) and Fig. 2b (right).

$$\sigma_{\text{feas}} = \begin{cases} 0 & (\beta \sin \lambda_{\text{ctsr}} \geq 1) \cup (\beta \geq 1 \cap \lambda_{\text{ctsr}} \geq \frac{\pi}{2}) \\ \cos \left(\frac{\pi}{2} \text{constrain} \left(\frac{\beta - \beta_-}{\beta_+ - \beta_-}, 0, 1 \right) \right)^2 & (\lambda_{\text{ctsr}} > \lambda_{\text{co}}) \cap (\beta > 1 - \beta_{\text{buf}}) \\ 1 & \text{else} \end{cases} \quad (13)$$

where $\lambda_{\text{ctsr}} = \text{constrain}(|\lambda|, 0, \frac{\pi}{2})$ and

$$\begin{aligned} \beta_+ &= 1 / \sin \lambda_{\text{ctsr}} \\ \beta_- &= (1 / \sin \lambda_{\text{ctsr}} - 1) \beta_{\text{buf}} + 1 - \beta_{\text{buf}} \end{aligned} \quad (14)$$

λ_{co} corresponds to a finite cut-off β_{co} , to prevent singularities, where $\lambda_{\text{co}} = \sin^{-1} \beta_{\text{co}}^{-1}$. This cut-off is set based on the maximum over-wind expected within a mission (e.g. for most small fixed-wing aircraft, β_{co} should not exceed 2).

With a new feasibility function defined, it’s application to the L_1 algorithm can be elaborated; specifically, it is desired that 1) when the bearing is feasible, L_1 operates as usual, 2) when the bearing is infeasible, L_1 transitions to the *safety* objective, and 3) in between these states, the reference commands maintain continuity and avoid oscillations. The safety objective can be achieved by replacing the ground speed vector \mathbf{v}_G with the airspeed vector \mathbf{v}_A in eq. (7). Continuity may be obtained utilizing the feasibility function σ_{feas} in (13) as follows:

$$\mathbf{v}_{\text{nav}} = \sigma_{\text{feas}} \mathbf{v}_G + (1 - \sigma_{\text{feas}}) \mathbf{v}_A \quad (15)$$

subsequently calculating the error angle

$$\eta = \text{constrain} \left(\text{wrap_pi}(\chi_{\text{nav}} - \chi), -\frac{\pi}{2}, \frac{\pi}{2} \right) \quad (16)$$

where $\chi_{\text{nav}} = \text{atan2}(v_{\text{nav}_e}, v_{\text{nav}_n})$, and computing the final acceleration reference

$$a_{\text{ref}} = k_L \frac{v_{\text{nav}}}{q_L} \sin \eta \quad (17)$$

The resulting behavior of the aircraft will *mitigate* run-away scenarios; i.e., in over-wind scenarios, minimize the run-away as much as possible at a single commanded airspeed. However, maximum airspeed allowing, it is also possible to *prevent* run-away from the track completely via *airspeed reference compensation*. The next section details a simple approach towards this end.

IV.B. Airspeed reference compensation

Though nominal airspeed references are often desired for energy efficiency, in critical conditions, e.g. very high winds, airspeed reference increases may be allowed either while short-term gusts or wind shear persists, or until an emergency landing may be executed. The most straight forward approach would be to match whatever wind speed overshoot (w.r.t. the airspeed) with airspeed reference commands. However, as previously detailed, the wind magnitude does not alone dictate the bearing feasibility; more so, the relation between wind direction and desired bearing. Utilizing the bearing feasibility function (eq. (13)) defined in the prior sections, the vehicle may more appropriately command airspeed increments. With a nominal and maximum airspeed reference defined, $v_{A_{\text{nom}}}$ and $v_{A_{\text{max}}}$, respectively, a wind speed and bearing feasibility dependent airspeed reference increment may be calculated.

$$\Delta v_{A_w} = \text{constrain}(w - v_{A_{\text{nom}}}, 0, \Delta v_{A_{\text{max}}})(1 - \sigma_{\text{feas}}) \quad (18)$$

where $\Delta v_{A_{\text{max}}} = v_{A_{\text{max}}} - v_{A_{\text{nom}}}$ is the maximum allowed airspeed reference increment. The airspeed reference then computed as

$$v_{A_{\text{ref}}} = v_{A_{\text{nom}}} + \Delta v_{A_w} \quad (19)$$

Note the buffer zone is essential here, as the resultant equilibrium point of this algorithm approaches $\beta = 1$ and $\lambda = \frac{\pi}{2}$, i.e. zero ground speed, and facing into the wind.

V. Example simulations

The following simulations demonstrate the outlined L_1 extensions within this brief. All simulations were executed in MATLAB with a simplified 2D model of a small UAV, with first order airspeed and roll angle dynamics, as follows:

$$\begin{pmatrix} \dot{n} \\ \dot{e} \\ \dot{v}_A \\ \dot{\xi} \\ \dot{\phi} \end{pmatrix} = \begin{pmatrix} v_A \cos \xi + w_n \\ v_A \sin \xi + w_e \\ (v_{A_{\text{ref}}} - v_A) / \tau_v \\ g \tan \phi / v_A \\ (\phi_{\text{ref}} - \phi) / \tau_\phi \end{pmatrix} \quad (20)$$

where heading $\xi = \text{atan2}(v_{A_e}, v_{A_n})$ and the time constants $\tau_v = 1\text{s}$ and $\tau_\phi = 0.5\text{s}$ are representative of a small, slow speed radio-controlled UAV, running standard low-level attitude stabilization (PID) and e.g. TECS (Total Energy Control System) for airspeed/altitude control. Wind dynamics are detailed in each respective simulation.

Guidance parameters for all simulations are held constant, values listed in Table 1.

Table 1: Guidance parameters used in simulations.

Param	Value	Param	Value
P_L	25 m	$v_{A_{\text{nom}}}$	9 m s ⁻¹
ζ_L	0.707	$v_{A_{\text{max}}}$	12 m s ⁻¹
ϕ_{lim}	35°	$v_{A_{\text{buf}}}$	1 m s ⁻¹

V.A. Handling small loiter radii

Figures 3 and 4 show the effect of implementing the adaptive L_1 ratio vs. the original formulation. Note an additional sanity check, **if** $L_1 > e_t + 2R$, **then** $L_1 = e_t + 2R$, is required when no q_L adaptation is enabled. A small (relative to the flight speed) $R = 15$ m radius loiter is followed in no wind by the adaptive formulation, by effectively reducing the L_1 period, while the non-adaptive formulation does not converge to the path.

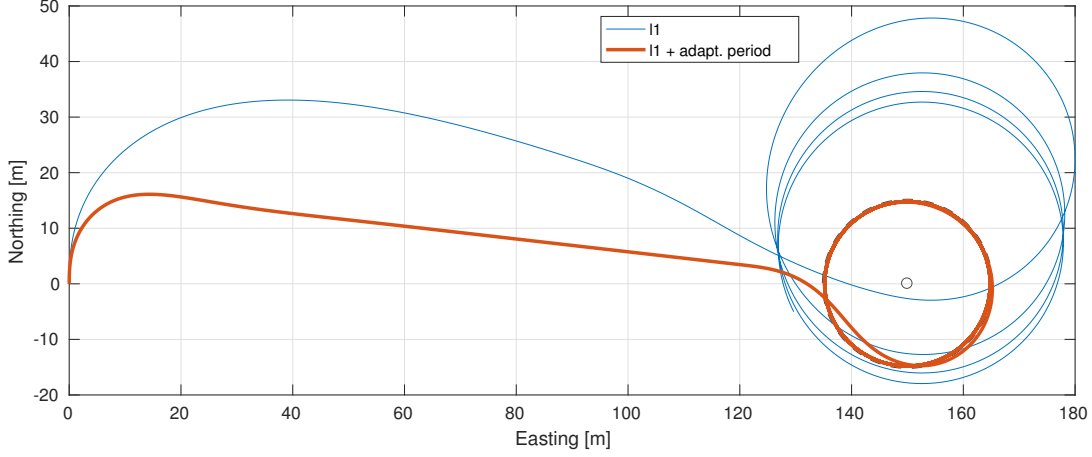


Figure 3: Following a loiter circle with a small (w.r.t. the flight speed) radius of 15 m. Adapting the L_1 ratio accordingly allows path convergence.

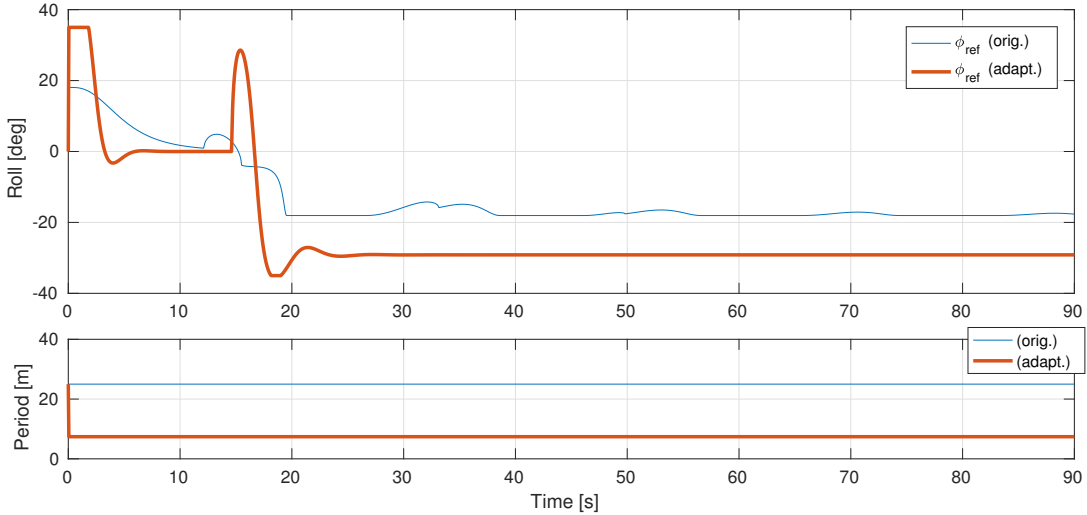


Figure 4: Roll references and the L_1 period while following a small loiter.

Figures 5 and 6 show the effect of the adaptive L_1 ratio further in moderate (3 ms^{-1}) eastward wind. As the ratio is proportional to ground speed, the effective period will rise and fall corresponding to the orientation to the wind, maintaining closer loiter tracking than in the non-adapted case.

V.B. Handling high winds

In figures 7 and 8, the bearing feasibility function is introduced for the purposes of both run-away *mitigation* and *prevention* with a constant eastward wind of 12 ms^{-1} (3 ms^{-1} over the commanded airspeed). In the original case, the L_1 logic is not able to account for the “backwards” flight motion with respect to the ground, as it only considers the ground velocity vector, leading to run-away with large roll reference bang-bang oscillations, due to the unstable operating point it converges to. Note in practice, aside from

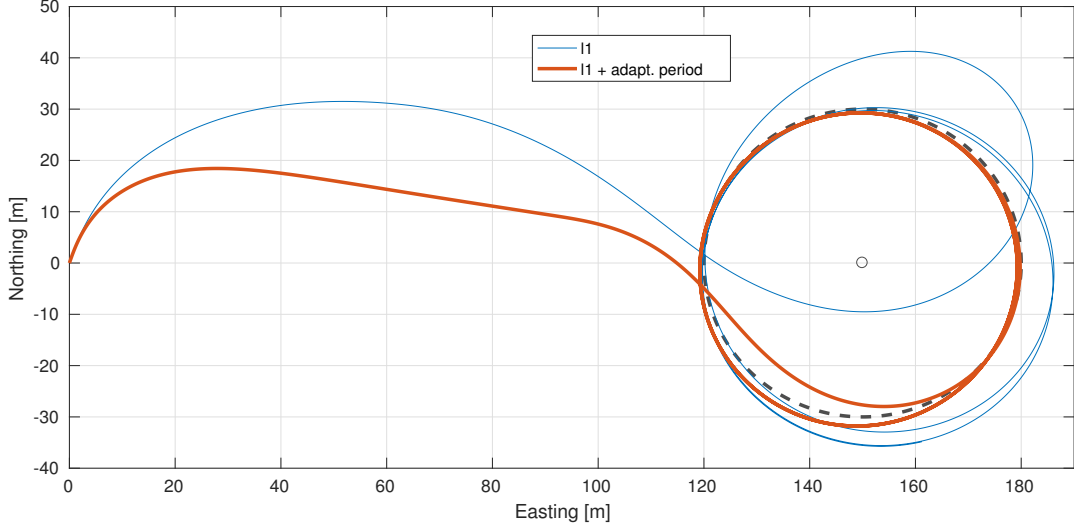


Figure 5: Loitering in in 3 m s^{-1} eastward wind. The L_1 ratio adapts to keep closer to the track.

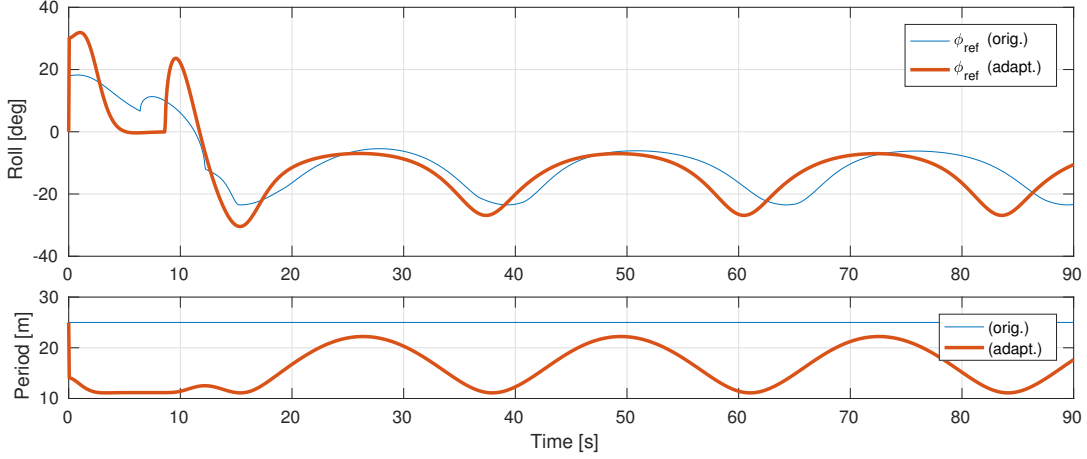


Figure 6: Roll references and the effective L_1 period while following a loiter in 3 m s^{-1} eastward wind.

the obviously undesirable command oscillations, these bang-bang controls combined with any other small perturbations (gusts or couple motions from the longitudinal/direction axes) will often lead to “turn-around” trajectories, which can be disconcerting to operators viewing the flight from the ground.

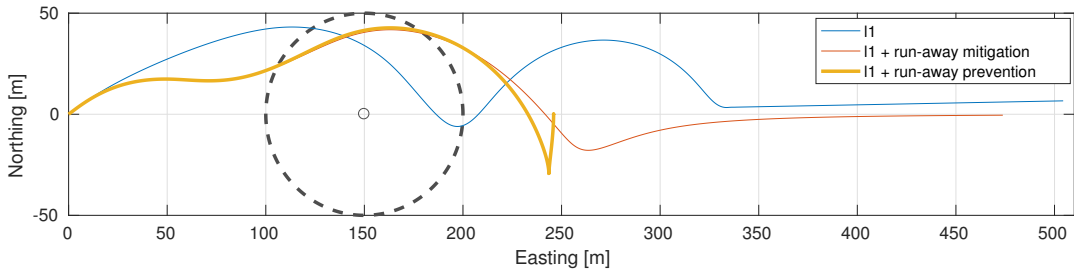


Figure 7: Run-away *mitigation* and *prevention* in a constant over-wind.

With run-away *mitigation* active, the bearing feasibility function schedules continuous control action towards tracking the loiter when feasible, and turn against the wind (safety) when infeasible, resulting in

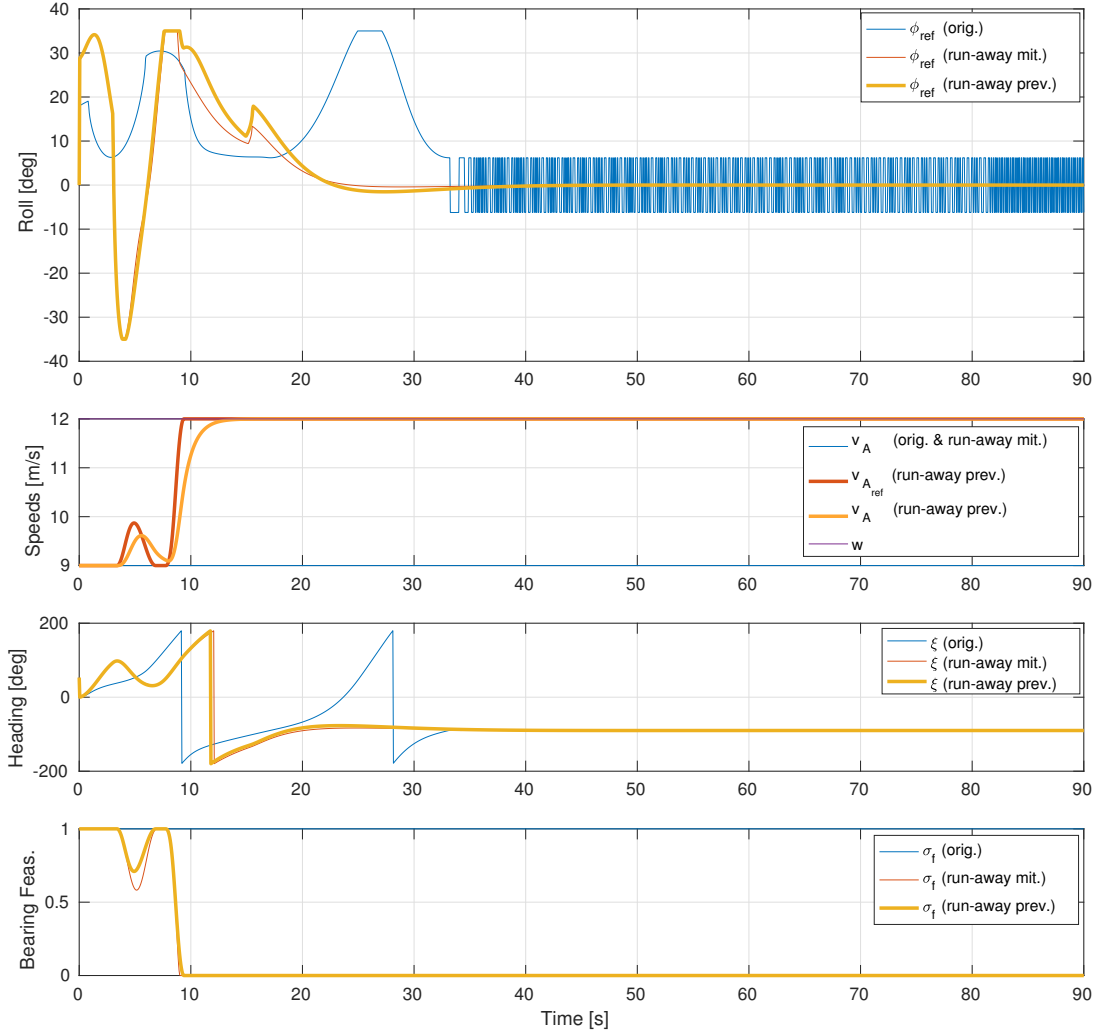


Figure 8: Aircraft states and controls for loitering in a constant over-wind.

the slowest run-away velocity configuration with a stable reference command. Once run-away *prevention* is active, the airspeed reference is allowed to incrementally increase with the feasibility parameter to match the wind speed in the infeasible case, and remain at nominal when tracking is feasible. This results in a zero ground speed terminal configuration, facing against the wind.

In figures 9 and 10, a 2 m s^{-1} amplitude, 30 s period sinusoidal eastward wind gust is introduced varying about a constant eastward wind of 10 m s^{-1} . Similar bang-bang reference roll oscillations are seen in the infeasible bearing cases for the original formulation, while both the run-away mitigation and prevention results similarly maintain continuous and safe control commands. The airspeed reference can be seen to follow the wind speed as it increases above the nominally command reference threshold and the bearing becomes infeasible.

References

- ¹S. Park, J. Deyst and J. P. How, “Performance and Lyapunov stability of a nonlinear path following guidance method,” *Journal of Guidance, Control, and Dynamics*, Vol. 30, No. 6, 2007, pp. 1718–1728.
- ²Curry, R., Lizarraga, M., Mairs, B., and Elkaim, G. H., “L2+, an improved line of sight guidance law for UAVs,” *2013 American Control Conference*, June 2013, pp. 1–6.
- ³Furieri, L., Stastny, T., Marconi, L., Siegwart, R., and Gilitschenski, I., “Gone with the wind: Nonlinear guidance for small fixed-wing aircraft in arbitrarily strong windfields,” *2017 American Control Conference (ACC)*, May 2017, pp. 4254–4261.

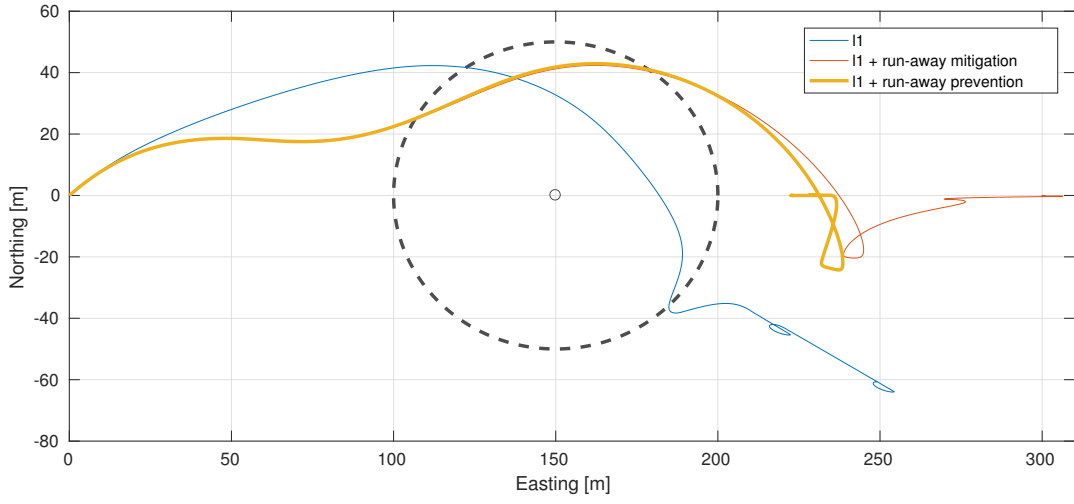


Figure 9: Run-away *mitigation* and *prevention* in a constant over-wind with sinusoidal gusting.

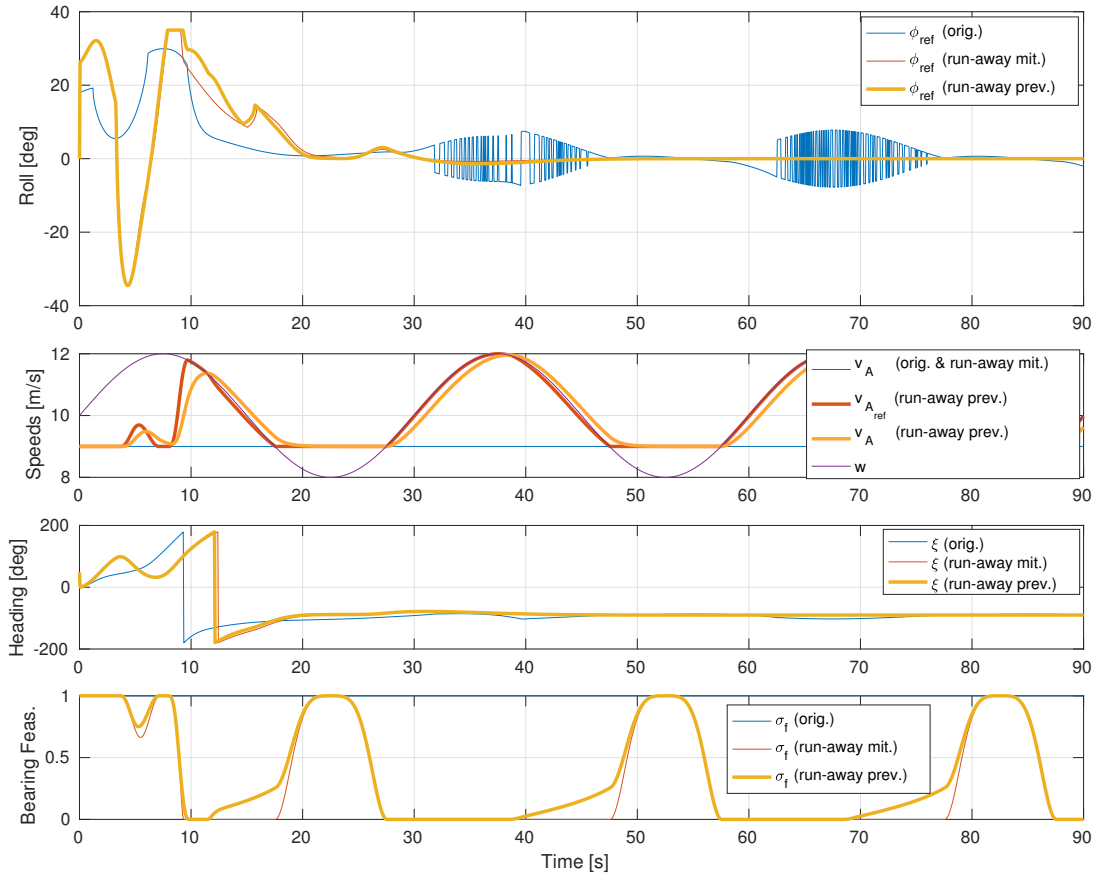


Figure 10: Aircraft states and controls for loitering in a constant over-wind with sinusoidal gusting.