

The Energy of an Arbitrary Electrical Circuit, Classical and Quantum

Matteo Mariantoni*

*Institute for Quantum Computing, University of Waterloo,
200 University Avenue West, Waterloo, Ontario N2L 3G1, Canada and
Department of Physics and Astronomy, University of Waterloo,
200 University Avenue West, Waterloo, Ontario N2L 3G1, Canada*

(Dated: March 17, 2022)

In this Note, I show an algorithmic method to find the energy and, thus, the Hamiltonian of an arbitrary electrical circuit based on the so-called incidence matrix and the circuit's total power. This method does not require to find any Lagrangian; instead, it is based on the concept of generalized linear momenta for the kinetic and co-kinetic energy of a circuit. The method can account for superconducting loops by a simple extension of Faraday-Henry-Neumann's law. Auxiliary (i.e., parasitic) circuit elements are required to deal with circuits with an incomplete set of generalized velocities resulting in an incomplete set of canonical coordinates. This method can be readily automatized to obtain the Hamiltonian of arbitrarily complicated circuits. I also show how to quantize the circuit associated with a resonator capacitively coupled with a qubit.

I. INTRODUCTION

The problem of finding the energy of an arbitrary electrical circuit has been addressed by many authors in the past century. The first article I am aware of is by D.A. Wells in 1938 [1]; this article treats linear circuits. Over the next several decades, a large body of work culminated with the theory of nonlinear circuits by B.M. Maschke *et al.* in Ref. [2]. More recently, the development of quantum computers based on superconducting circuits has renewed the interest in this topic; the works by Burkard *et al.* in Ref. [3] and by U. Vool and M.H. Devoret in Ref. [4] explore similar approaches, although the former follows a very rigorous method and the latter a more practical one. Other works include the quantum network theory by Yurke and Denker [5] as well as the Foster representation method of Russer and Russer [6].

The aim of this Note is to describe the simplest method an electrical engineer would follow to obtain the energy and, then, the Hamiltonian of any circuit. This approach requires only a basic knowledge of circuit theory as in chapter one of Ref. [7], as well as a very limited knowledge of classical mechanics as in chapter five of Refs. [8, 9]. I have been using the method presented here for more than a decade in summer schools and for my own research: I want to share it here because I find it the most practical approach among all those mentioned above.

In order to explain my method, I will describe three examples: First, a parallel circuit with an inductor L , a capacitor C , and a Josephson tunnel junction J , or LCJ circuit (and the two limiting cases of a simple LC resonator and the circuit of a transmon quantum bit (qubit) [10]); second, a DC superconducting quantum interference device (SQUID) with DC current bias; third, two LC parallel resonators coupled by means of a third LC resonator (i.e., the "Vool-Devoret circuit")

revisited). Each of these examples allows me to introduce the main concepts of the method: The derivation of the incidence matrix from the circuit's digraph, followed by finding the circuit's total power and, by time integration, the instantaneous energy of the circuit; the definition of generalized linear momenta for the kinetic and *co-kinetic* (to be introduced below) energy of the circuit, allowing to obtain the Hamiltonian; the extension of Faraday-Henry-Neumann's law (simply Faraday's law in the English-speaking literature) to include superconducting loops; the concept of *auxiliary* circuit elements to complete an incomplete set of generalized velocities resulting in an incomplete set of canonical coordinates, i.e., to generate a complete set of independent degrees of freedom (DOF).

Additionally, I show the procedure to quantize the circuit associated with a resonator coupled with a qubit. This is an important example as it leads to the Jaynes-Cummings Hamiltonian, which is one of the foundations of circuit quantum electrodynamics and superconducting quantum computing.

In this Note, we indicate a potential difference (or voltage drop, or simply voltage) as v ; a current as i (without a dot, not to get confused with time derivatives); a flux as ϕ ; a charge as q .

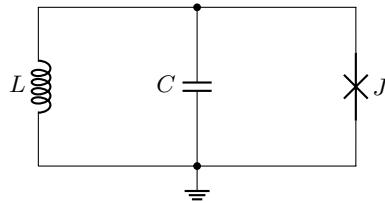


FIG. 1. An LCJ circuit.

* Corresponding author: matteo.mariantoni@uwaterloo.ca

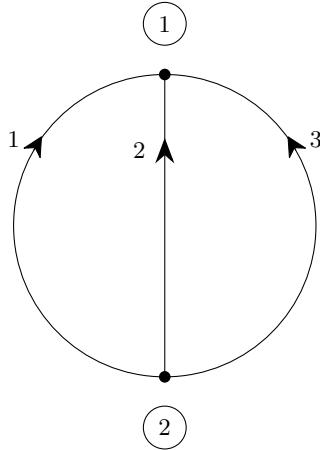


FIG. 2. Digraph of an *LCJ* circuit.

II. *LCJ* PARALLEL CIRCUIT

Figure 1 shows an *LCJ* circuit. The constitutive relation for the capacitor is

$$i = C \frac{d}{dt} v = C \dot{v} , \quad (1)$$

and for the inductor

$$v = L \frac{d}{dt} i = L \dot{i} . \quad (2)$$

The physics of the Josephson tunnel junction is well explained, e.g., in Ref. [11] and its constitutive relation is given by

$$i(\phi) = I_{c0} \sin(k_J \phi) = I_{c0} \sin(\varphi) , \quad (3)$$

where I_{c0} is the junction's critical current, $k_J = 2\pi/\Phi_0$ is the non-normalized Josephson constant, and φ is called the gauge-invariant phase difference across the junction; $\Phi_0 = h/(2e)$ is the superconducting magnetic flux quantum (h is Planck's constant and e the electron charge).

From Faraday-Henry-Neumann's law, the voltage across the junction is given by

$$v = \dot{\phi} = \frac{\dot{\varphi}}{k_J} . \quad (4)$$

Equation (4) is often referred to as the “second Josephson equation,” whereas Eq. (3) is called the first Josephson equation. I prefer to call Eq. (4) simply Faraday-Henry-Neumann's law because it is nothing more than that [12]. I call Eq. (3) simply the Josephson equation.

Figure 2 illustrates the simple digraph associated with the physical circuit in Fig. 1 [7]. The digraph is comprised of two nodes, ① and ②, as well as three oriented branches, 1, 2, and 3; we set ② → datum, i.e., to a reference node experimentally realized by earthing or grounding the circuit. The sign convention for the oriented branches is that any branch entering a node is

given the value -1 and any branch exiting a node the value 1 ; if a branch does not enter or exit a node, it is given the value 0 .

The branch currents (as well as charges), the branch voltages (as well as fluxes), and the node-to-datum voltage are represented by the vectors

$$\left\{ \begin{array}{l} \vec{i} = \begin{bmatrix} i_1 \\ i_2 \\ i_3 \end{bmatrix} \\ \vec{q} = \begin{bmatrix} q_1 \\ q_2 \\ q_3 \end{bmatrix} \end{array} \right. \quad (5a)$$

$$\left\{ \begin{array}{l} \vec{v} = \begin{bmatrix} v_1 \\ v_2 \\ v_3 \end{bmatrix} \\ \vec{\phi} = \begin{bmatrix} \phi_1 \\ \phi_2 \\ \phi_3 \end{bmatrix} \end{array} \right. \quad (5b)$$

$$\vec{e} = [e_1] . \quad (5c)$$

Following the sign convention for the digraph outlined above, the incidence matrix for this digraph reads

$$\mathbf{A}_a = \begin{array}{c} \textcircled{1} \\ \textcircled{2} \end{array} \rightarrow \left(\begin{array}{ccc} \textcolor{blue}{1} & \textcolor{blue}{2} & \textcolor{blue}{3} \\ -1 & -1 & -1 \\ 1 & 1 & 1 \end{array} \right) . \quad (6)$$

The reduced incidence matrix \mathbf{A} is obtained by striking out the row in \mathbf{A}_a associated with the datum, resulting in

$$\mathbf{A} = [-1 \ -1 \ -1] . \quad (7)$$

Kirchhoff's current law (KCL) reads

$$\mathbf{A} \vec{i} = 0 , \quad (8)$$

from which we obtain the constraint for the currents,

$$i_2 = -i_1 - i_3 . \quad (9)$$

Kirchhoff's voltage law (KVL) reads

$$\vec{v} = \mathbf{A}^T \vec{e} , \quad (10)$$

where \mathbf{A}^T is the transpose of \mathbf{A} , from which we obtain the constraint for the voltages,

$$v_1 = v_2 = v_3 = v \quad (11)$$

(parallel circuit).

By means of Eq. (4), the constraints given by Eq. (11) can be written as the system

$$\left\{ \begin{array}{l} \frac{d}{dt} (\phi - \phi_2) = 0 \end{array} \right. \quad (12a)$$

$$\left\{ \begin{array}{l} \frac{d}{dt} (\phi - \phi_3) = 0 . \end{array} \right. \quad (12b)$$

From Eqs. (12a) and (12b) it follows that

$$\left\{ \begin{array}{l} \phi = \phi_2 + \tilde{\phi} \end{array} \right. \quad (13a)$$

$$\left\{ \begin{array}{l} \phi = \phi_3 + \tilde{\phi} , \end{array} \right. \quad (13b)$$

where $\tilde{\phi}$ and $\tilde{\tilde{\phi}}$ are constant flux offsets. These offsets may result in DC currents in the equations of motion for the circuit (as shown below). In particular, from Eq. (13b) we find

$$\iota_3 = \phi - \tilde{\phi} . \quad (14)$$

In the coordinates given by Eqs. (5a) and (5b), the branch equations can be written as

$$\left\{ \begin{array}{l} \iota_1 = \dot{q}_1 = C\dot{v}_1 \\ \iota_2 = \dot{\phi}_2 = L\dot{i}_2 = -L(\dot{i}_1 + \dot{i}_3) = -L(\dot{q}_1 + \dot{q}_3) \end{array} \right. \quad (15a)$$

$$\left\{ \begin{array}{l} \iota_3 = \dot{q}_3 = I_{c0} \sin(k_J\phi_3) . \end{array} \right. \quad (15b)$$

$$\left\{ \begin{array}{l} \iota_3 = \dot{q}_3 = I_{c0} \sin(k_J\phi_3) . \end{array} \right. \quad (15c)$$

Accounting for the constraints given by Eqs. (9), (11), and (14) as well as for the branch Eqs. (15a), (15b), and (15c), the circuit's total power is

$$\begin{aligned} \mathcal{P}_{LCJ} &= v_1\iota_1 + v_2\iota_2 + v_3\iota_3 \\ &= vC\dot{v} + L(\dot{i}_1 + \dot{i}_3)(\iota_1 + \iota_3) \\ &\quad + vI_{c0} \sin[k_J(\phi - \tilde{\phi})] . \end{aligned} \quad (16)$$

The instantaneous energy of the circuit is then obtained by time integration from the initial time $\tau = 0$ to a generic time $\tau = t$. Expressing all coordinates in terms of fluxes and charges and with the usual trick for a continuous function f that $\alpha f \dot{f} = d(\alpha f^2/2)/dt$ (with $\alpha \in \mathbb{R}$),

the total instantaneous energy is

$$\begin{aligned} \mathcal{E}_{LCJ}(t) &= \int_{\tau=0}^{\tau=t} d\tau \frac{d}{d\tau} \left[\frac{1}{2}C\dot{\phi}^2(\tau) \right] \\ &\quad + \frac{d}{d\tau} \left\{ \frac{1}{2}L[\dot{q}_1(\tau) + \dot{q}_3(\tau)]^2 \right\} \\ &\quad + \int_{\tau=0}^{\tau=t} d\tau \dot{\phi}(\tau) I_{c0} \sin\{k_J[\phi(\tau) - \tilde{\phi}]\} \\ &= \frac{1}{2}C\dot{\phi}^2(t) + \frac{1}{2}L[\dot{q}_1^2(t) + 2\dot{q}_1(t)\dot{q}_3(t) + \dot{q}_3^2(t)] \\ &\quad - \frac{1}{2}C\dot{\phi}^2(0) - \frac{1}{2}L[\dot{q}_1^2(0) + 2\dot{q}_1(0)\dot{q}_3(0) + \dot{q}_3^2(0)] \\ &\quad - \frac{I_{c0}}{k_J} \cos\{k_J[\phi(t) - \tilde{\phi}]\} \\ &\quad + \frac{I_{c0}}{k_J} \cos\{k_J[\phi(0) - \tilde{\phi}]\} \\ &= \frac{1}{2}C\dot{\phi}^2(t) + \frac{1}{2}L[\dot{q}_1^2(t) + 2\dot{q}_1(t)\dot{q}_3(t) + \dot{q}_3^2(t)] \\ &\quad - E_{J0} \cos\{k_J[\phi(t) - \tilde{\phi}]\} \\ &\quad - K_{LCJ} , \end{aligned} \quad (17)$$

where

$$E_{J0} = \frac{I_{c0}}{k_J} = \frac{I_{c0}\Phi_0}{2\pi} \quad (18)$$

is called the Josephson energy and

$$\begin{aligned} K_{LCJ} &= \frac{1}{2}C\dot{\phi}^2(0) - \frac{1}{2}L[\dot{q}_1^2(0) + 2\dot{q}_1(0)\dot{q}_3(0) + \dot{q}_3^2(0)] \\ &\quad + \frac{I_{c0}}{k_J} \cos\{k_J[\phi(0) - \tilde{\phi}]\} \end{aligned} \quad (19)$$

is a constant of integration.

Setting $K_{LCJ} = 0$, defining $\dot{\iota}_1 = \dot{q}$, using Eq. (15c) with ϕ_3 given by Eq. (14), and keeping all variables as implicit time-dependent functions, Eq. (17) reads

$$\begin{aligned} \mathcal{E}_{LCJ} &= \frac{1}{2}C\dot{\phi}^2 + \frac{1}{2}L \left\{ \dot{q}^2 + 2\dot{q}I_{c0} \sin[k_J(\phi - \tilde{\phi})] + I_{c0}^2 \sin^2[k_J(\phi - \tilde{\phi})] \right\} - E_{J0} \cos[k_J(\phi - \tilde{\phi})] \\ &= \frac{1}{2}C\dot{\phi}^2 + \frac{1}{2}L\dot{q}^2 + LI_{c0}\dot{q} \sin[k_J(\phi - \tilde{\phi})] + \frac{1}{2}LI_{c0}^2 \sin^2[k_J(\phi - \tilde{\phi})] - E_{J0} \cos[k_J(\phi - \tilde{\phi})] . \end{aligned} \quad (20)$$

The single DOF of this circuit is clearly associated with the voltage $v_1 = \dot{\phi}$ and the associated current $\iota_1 = \dot{q}$. In this case, the total energy obtained by direct integration of the power does not coincide with the circuit's Hamiltonian. In fact, the power integration results in a function $\mathcal{E}_{LCJ}(\dot{\phi}, \dot{q}, \phi)$, i.e., of mixed coordinates instead of a function of either the canonical coordinates

or

$$\left(q = \int d\tau \iota, \phi = \int d\tau v \right) \quad (22)$$

only.

In order to obtain the circuit's Hamiltonian, we need to express $\dot{\phi}$ and \dot{q} in terms of q and ϕ , respectively. If

$$(v = \dot{\phi}, \dot{v} = \dot{q}) \quad (21)$$

only terms such as

$$\left\{ \begin{array}{l} \mathcal{E}_C = \frac{1}{2} C \dot{\phi}^2 \end{array} \right. \quad (23a)$$

$$\left\{ \begin{array}{l} \mathcal{E}_L = \frac{1}{2} L \dot{q}^2 \end{array} \right. , \quad (23b)$$

were present, we could simply use the definitions of capacitance and inductance,

$$\left\{ \begin{array}{l} C = \frac{q}{\dot{\phi}} \end{array} \right. \quad (24a)$$

$$\left\{ \begin{array}{l} L = \frac{\phi}{\dot{q}} \end{array} \right. , \quad (24b)$$

respectively, and write

$$\left\{ \begin{array}{l} \mathcal{E}_C = \frac{\dot{q}^2}{2C} \end{array} \right. \quad (25a)$$

$$\left\{ \begin{array}{l} \mathcal{E}_L = \frac{\dot{\phi}^2}{2L} \end{array} \right. . \quad (25b)$$

However, the presence of the term

$$LI_{c0}\dot{q} \sin[k_J(\phi - \tilde{\phi})] \quad (26)$$

complicates the procedure. In the following section, we outline a general method to find the Hamiltonian of a circuit from the total energy obtained by integrating the circuit's power. Then, we specialize that method to find the Hamiltonian associated with the total energy of Eq. (20).

III. THE KINETIC AND CO-KINETIC ENERGY TRANSFORMATION

Suppose that \mathcal{P} is the total power of a given circuit. We define ξ^k as the generalized coordinates of the circuit (in fact, our argument would apply to any generic system, including mechanical systems) and $\dot{\xi}^k$ as the corresponding generalized velocities ($k \in \mathbb{N}$); we additionally define p_k as the conjugate momenta associated with ξ^k and \dot{p}_k the first time derivatives of the conjugate momenta [13]. By integrating the total power of any arbitrary circuit we obtain

$$\int_{\tau=0}^{\tau=t} d\tau \mathcal{P}(\tau) = \mathcal{E}_{\text{tot}}[\xi^k(t), \dot{\xi}^k(t); p_k(t), \dot{p}_k(t); t] . \quad (27)$$

In Eq. (27), the functional dependence from, e.g., a subset of the generalized coordinates ξ^k , $\{\xi^\ell\}$, or a subset of the conjugate momenta p_k , $\{p_m\}$, can be an arbitrary function (e.g., of trigonometric type; i.e., not a simple polynomial), $\mathcal{E}_{\text{tot}}(\xi^{k \neq \ell}, f(\xi^\ell), \dot{\xi}^k; p_{k \neq m}, f(p_m), \dot{p}_k; t)$; the remaining variables, including the time derivatives, are instead characterized by a polynomial functional dependence.

Notably, in Eq. (27) the sets $\{\xi^k, \dot{\xi}^k\}$ and $\{p_k, \dot{p}_k\}$ represent two distinguished sets of generalized coordinates and their corresponding time derivatives, while, at the same time, the variables p_k are also the conjugate momenta of the generalized coordinates ξ^k . Therefore, $\{\xi^k, p_k\}$ is a set of canonical coordinates.

Due to the homogeneity of time [14], Eq. (27) does not explicitly depend on the time t , i.e.,

$$\mathcal{E}_{\text{tot}} = \mathcal{E}_{\text{tot}}(\xi^k, \dot{\xi}^k; p_k, \dot{p}_k) , \quad (28)$$

where the time dependence of all the variables in parenthesis is not explicitly shown to simplify the notation. Equation (28) is not the system's Hamiltonian, which must be only a function either of the set of canonical coordinates $\{\xi^k; p_k\}$ or of the set of canonical coordinates $\{\dot{\xi}^k \stackrel{\text{def}}{=} \Xi^k; \dot{p}_k \stackrel{\text{def}}{=} P_k\}$, but not a combination of both sets. We additionally note that Eq. (28) could be confused for the system's Routhian [14], but it is not.

For example, the circuit studied in Sec. II is characterized by a total energy in the form of Eq. (28). For any total energy of this type, the *kinetic-energy terms* are all those containing time derivatives of first and second order such as those reported in Table I.

In typical applications, mixed terms such as $\dot{\xi}^\ell \dot{p}_m$ are absent from Eq. (28). This is true even for relatively complicated systems comprising Josephson tunnel junctions [see, e.g., Eq. (20)] or, as we will show in Sec. V, for systems with multiple DOF. Qualitatively, this makes sense because a Josephson tunnel junction is characterized by a current that does not depend on the time derivative of any generalized coordinate and purely inductive or capacitive elements (even when coupled) always simplify so that their energy only contains either $\dot{\xi}^\ell$ - or \dot{p}_ℓ -terms.

In general, all the terms originating from a quadratic form are kinetic-energy terms. In Eq. (20), the term

$$\frac{1}{2} LI_{c0}^2 \sin^2[k_J(\phi - \tilde{\phi})] , \quad (29)$$

which stems from a quadratic form is also a kinetic-energy term, although it does not comprise any time-derivative of the generalized coordinates or of their conjugate momenta (this term can easily, but erroneously be confused for a potential energy term!).

Once all the kinetic-energy terms are identified, the remaining terms in any total energy expressed as in Eq. (28) are *potential-energy terms* (see Appendix A). It is worth pointing out already at this stage that, when analyzing any circuit, it is not necessary to identify the

TABLE I. First- and second-order time derivatives participating in a general kinetic-energy term ($\ell, m \in \mathbb{N}$).

$\dot{\xi}^\ell$	\dot{p}_ℓ	$\dot{\xi}^\ell \dot{\xi}^m$	$\dot{\xi}^\ell \dot{p}_m$	$\dot{p}_\ell \dot{p}_m$	$(\dot{\xi}^\ell)^2$	$(\dot{p}_\ell)^2$
------------------	----------------	------------------------------	----------------------------	--------------------------	----------------------	--------------------

potential-energy terms and distinguish them from the kinetic-energy terms. The general method we outline in the following works regardless of any classification of the energy terms in Eq. (28).

It is rare to encounter circuits where the kinetic-energy terms are comprised of complicated functions of $\dot{\xi}^k$ or \dot{p}_k , or both (at least, I never encountered such a case); typically, the kinetic-energy terms are *second-order polynomial functions* and, sometimes, even simple *homogeneous polynomials of degree two*. Circuits characterized by kinetic-energy terms with a non-polynomial functional dependence must be linearized by means of, e.g., a Taylor series expansion around a given operation (bias) point.

In Eq. (20), for example, the set of generalized velocities $\{\dot{\xi}^k\}$ is characterized by one element only $\dot{\xi}^1 = \dot{\phi}$. The kinetic energy associated with this generalized velocity is

$$T(\dot{\phi}) = \frac{1}{2} C \dot{\phi}^2 ; \quad (30)$$

the set of generalized velocities $\{\dot{p}_k\}$, instead, is characterized by a 2-tuple $(\dot{p}_1 = \dot{q}_1 = \dot{q}, \dot{p}_3 = \dot{q}_3 = I_{c0} \sin[k_J(\phi - \tilde{\phi})])$. The corresponding kinetic energy is thus

$$\begin{aligned} T^*(\dot{q}_1, \dot{q}_3) &= \frac{1}{2} L(\dot{q}_1^2 + 2\dot{q}_1\dot{q}_3 + \dot{q}_3^2) \\ &= \frac{1}{2} L\dot{q}^2 + L I_{c0} \dot{q} \sin[k_J(\phi - \tilde{\phi})] \\ &\quad + \frac{1}{2} L I_{c0}^2 \sin^2[k_J(\phi - \tilde{\phi})] , \end{aligned} \quad (31)$$

where we define T^* as the co-kinetic energy of the system.

In general, any term of the form

$$\begin{aligned} T(\vec{\xi}, \vec{\dot{\xi}}) &= \sum_{\ell, m=1}^{N_\xi} \frac{1}{2} A_{\ell, m}(\vec{\xi}, \vec{p}) \dot{\xi}^\ell \dot{\xi}^m \\ &\quad + \sum_{\ell=1}^{N_\xi} B_\ell(\vec{\xi}, \vec{p}) \dot{\xi}^\ell + C(\vec{\xi}, \vec{p}) \end{aligned} \quad (32)$$

or

$$\begin{aligned} T^*(\vec{p}, \vec{\dot{p}}) &= \sum_{\ell, m=1}^{N_\xi} \frac{1}{2} D_{\ell, m}(\vec{\xi}, \vec{p}) \dot{p}_\ell \dot{p}_m \\ &\quad + \sum_{\ell=1}^{N_\xi} E_\ell(\vec{\xi}, \vec{p}) \dot{p}_\ell + F(\vec{\xi}, \vec{p}) \end{aligned} \quad (33)$$

is a kinetic energy term. In this two equations, $\vec{\xi} = (\xi^1, \xi^2, \dots, \xi^k, \dots, \xi^{N_\xi})$ and $\vec{\dot{\xi}} = (\dot{\xi}^1, \dot{\xi}^2, \dots, \dot{\xi}^k, \dots, \dot{\xi}^{N_\xi})$ are two vectors (N_ξ -tuples) the components of which are all the N_ξ generalized coordinates and generalized velocities, respectively. Similarly, $\vec{p} = (p_1, p_2, \dots, p_k, \dots, p_{N_\xi})$ and $\vec{\dot{p}} = (\dot{p}_1, \dot{p}_2, \dots, \dot{p}_k, \dots, \dot{p}_{N_\xi})$ are two vectors the components of which are all the N_ξ conjugate momenta (here interpreted as second set of generalized coordinates) and their first time derivatives (here interpreted as a second set of generalized velocities). Clearly, since the components of \vec{p} are the conjugate momenta of the components of $\vec{\xi}$, these two vectors must have the same dimension N_ξ (similarly for their derivatives). The coefficients $A_{\ell, m}(\vec{\xi}, \vec{p})$, $B_\ell(\vec{\xi}, \vec{p})$, and $C(\vec{\xi}, \vec{p})$ as well as $D_{\ell, m}(\vec{\xi}, \vec{p})$, $E_\ell(\vec{\xi}, \vec{p})$, and $F(\vec{\xi}, \vec{p})$ are functions of the generalized coordinate vectors $\vec{\xi}$ and \vec{p} , but not of their time derivatives [all first time derivatives are supposed to be quadratic terms, i.e., the terms multiplying $A_{\ell, m}(\vec{\xi}, \vec{p})$ and $D_{\ell, m}(\vec{\xi}, \vec{p})$ or linear terms, i.e., the terms multiplying $B_\ell(\vec{\xi}, \vec{p})$ and $E_\ell(\vec{\xi}, \vec{p})$ in Eqs. (32) and (33), respectively].

As already noted, the kinetic energy $T^*(\vec{p}, \vec{\dot{p}})$ is a function of \vec{p} , which is the conjugate momentum vector associated with the generalized coordinate vector $\vec{\xi}$. For this reason, we call $T^*(\vec{p}, \vec{\dot{p}})$ the *co-kinetic* energy associated with the *kinetic* energy $T(\vec{\xi}, \vec{\dot{\xi}})$. In absence of any term $\propto \dot{\xi}^\ell \dot{p}_m$ the total kinetic energy of a general system is given by the sum of Eqs. (32) and (33), i.e., of the kinetic and co-kinetic energies,

$$T_{\text{tot}}(\vec{\xi}, \vec{\dot{\xi}}; \vec{p}, \vec{\dot{p}}) = T(\vec{\xi}, \vec{\dot{\xi}}) + T^*(\vec{p}, \vec{\dot{p}}) . \quad (34)$$

Depending on the context, we use either the vector notation $\vec{\xi}, \vec{\dot{\xi}}, \vec{p}$, and $\vec{\dot{p}}$ or the equivalent index notation either as sets of indexed variables $\{\xi^k\}, \{\dot{\xi}^k\}, \dots, \{\xi^k, \dot{\xi}^k\}, \{p_k, \dot{p}_k\}, \dots, \{\xi^k, p_k\}$ or simply as indexed variables $\xi^k, \dot{\xi}^k, p_k$, and \dot{p}_k .

The coefficients $A_{\ell, m}(\vec{\xi}, \vec{p})$, $B_\ell(\vec{\xi}, \vec{p})$, and $C(\vec{\xi}, \vec{p})$ associated with the kinetic energy $T(\vec{\xi}, \vec{\dot{\xi}})$ can be derived by analogy with the kinetic energy of a mechanical system described by the generalized coordinate vector $\vec{\xi}$ [8]

$$\begin{aligned}
T(\vec{\xi}, \vec{\dot{\xi}}) &= \sum_{n=1}^N \frac{1}{2} M_n \vec{v}_n \bullet \vec{v}_n = \sum_{n=1}^N \frac{1}{2} M_n \left[\sum_{\ell=1}^{N_\xi} \frac{\partial P_n(\xi^\ell; t)}{\partial \xi^\ell} \dot{\xi}^\ell + \frac{\partial P_n(t)}{\partial t} \right] \cdot \left[\sum_{m=1}^{N_\xi} \frac{\partial P_n(\xi^m; t)}{\partial \xi^m} \dot{\xi}^m + \frac{\partial P_n(t)}{\partial t} \right] \\
&= \sum_{\ell, m=1}^{N_\xi} \frac{1}{2} A_{\ell, m}(\vec{\xi}, \vec{p}) \dot{\xi}^\ell \dot{\xi}^m + \sum_{\ell=1}^{N_\xi} B_\ell(\vec{\xi}, \vec{p}) \dot{\xi}^\ell + C(\vec{\xi}, \vec{p}) ,
\end{aligned} \tag{35}$$

where M_n is the inertial mass of the n -th particle of a system of $N \in \mathbb{N}$ point-like particles, each with vector velocity \vec{v}_n ; the position in the three-dimensional Euclidean space of a particle is given by the generic position point P_n , which is a function of the N_ξ generalized coordinates ξ^k (which, e.g., can be Cartesian coordinates) and time t , $P_n(\xi^k; t)$. With $\ell, m = 1, 2, \dots, N_\xi$, the coefficients $A_{\ell, m}(\vec{\xi}, \vec{p})$, $B_\ell(\vec{\xi}, \vec{p})$, and $C(\vec{\xi}, \vec{p})$ in this mechanical analog are given by

$$\left\{ \begin{aligned} A_{\ell, m}(\vec{\xi}, \vec{p}) &= \sum_{n=1}^N M_n \frac{\partial P_n}{\partial \xi^\ell} \frac{\partial P_n}{\partial \xi^m} \end{aligned} \right. \tag{36a}$$

$$\left\{ \begin{aligned} B_\ell(\vec{\xi}, \vec{p}) &= \sum_{n=1}^N M_n \frac{\partial P_n}{\partial \xi^\ell} \frac{\partial P_n}{\partial t} \end{aligned} \right. \tag{36b}$$

$$\left\{ \begin{aligned} C(\vec{\xi}, \vec{p}) &= \frac{1}{2} \sum_{n=1}^N M_n \frac{\partial P_n}{\partial t} \frac{\partial P_n}{\partial t} . \end{aligned} \right. \tag{36c}$$

Following a similar mechanical analogy, a comparable set of equations can be derived for the coefficients $D_{\ell, m}(\vec{\xi}, \vec{p})$, $E_\ell(\vec{\xi}, \vec{p})$, and $F(\vec{\xi}, \vec{p})$ associated with the co-kinetic energy $T^*(\vec{p}, \vec{\dot{p}})$.

In the kinetic-energy expression of Eq. (35), the coefficients given by Eqs. (36a), (36b), and (36c) can depend on the generalized coordinates ξ^k and p_k [similarly, the coefficients $D_{\ell, m}(\vec{\xi}, \vec{p})$, $E_\ell(\vec{\xi}, \vec{p})$, and $F(\vec{\xi}, \vec{p})$ can also depend on the same two sets of generalized coordinates]. These coefficients can be arbitrary functions, e.g., trigonometric functions as in the example of Subsec. II; remarkably, this fact has minimal consequences when attempting to obtain the Hamiltonian of a circuit from its total energy. In particular, no linearization methods are required to deal with the coefficients $A_{\ell, m}(\vec{\xi}, \vec{p})$, $B_\ell(\vec{\xi}, \vec{p})$, and $C(\vec{\xi}, \vec{p})$ or $D_{\ell, m}(\vec{\xi}, \vec{p})$, $E_\ell(\vec{\xi}, \vec{p})$, and $F(\vec{\xi}, \vec{p})$. As expected, the kinetic-energy terms depend on the first time derivatives of the generalized coordinates, $\dot{\xi}^k$ or \dot{p}_k , only linearly and quadratically. As already mentioned, the analysis would require a linearization step in presence of (rare) higher-order polynomial or non-polynomial functions of the time derivatives of the generalized coordinates.

A useful property of the coefficients $A_{\ell, m}(\vec{\xi}, \vec{p})$ and $D_{\ell, m}(\vec{\xi}, \vec{p})$ is that

$$\left\{ \begin{aligned} A_{\ell, m}(\vec{\xi}, \vec{p}) &= A_{m, \ell}(\vec{\xi}, \vec{p}) \end{aligned} \right. \tag{37a}$$

$$\left\{ \begin{aligned} D_{\ell, m}(\vec{\xi}, \vec{p}) &= D_{m, \ell}(\vec{\xi}, \vec{p}) . \end{aligned} \right. \tag{37b}$$

This property can be readily proven from the definition of Eq. (36a) [or a similar definition for $D_{m, \ell}(\vec{\xi}, \vec{p})$], and the commutative property of the product of the partial derivatives of P_n in that definition.

In classical mechanics, the linear momentum magnitude for the n -th particle of a mechanical system comprised of N particles is

$$\begin{aligned} \frac{d}{dv_n} \left(\frac{1}{2} M_n v_n^2 \right) &= \frac{d}{d\vec{r}_n} \left(\frac{1}{2} M_n \vec{r}_n^2 \right) \\ &= M_n \vec{r}_n = M_n v_n = p_n , \end{aligned} \tag{38}$$

where r_n is the magnitude of a position vector \vec{r}_n (from an arbitrary origin) associated with P_n . Since the kinetic energy of a circuit can be cast into that of a mechanical system, as shown by Eq. (35), we can extend the concept of linear momentum magnitude given by Eq. (38) to that of generalized linear momentum p_k for $T(\xi^k, \dot{\xi}^k)$ and generalized linear momentum ξ^k for $T^*(p_k, \dot{p}_k)$. As a consequence,

$$\left\{ \begin{aligned} \frac{\partial}{\partial \xi^k} \mathcal{E}_{\text{tot}}(\xi^k, \dot{\xi}^k; p_k, \dot{p}_k) &= \frac{\partial}{\partial \xi^k} T(\xi^k, \dot{\xi}^k) = p_k \end{aligned} \right. \tag{39a}$$

$$\left\{ \begin{aligned} \frac{\partial}{\partial \dot{p}_k} \mathcal{E}_{\text{tot}}(\xi^k, \dot{\xi}^k; p_k, \dot{p}_k) &= \frac{\partial}{\partial \dot{p}_k} T^*(p_k, \dot{p}_k) = \xi^k . \end{aligned} \right. \tag{39b}$$

These expressions clearly show that it is not even necessary to actually identify the kinetic- and co-kinetic-energy terms in Eq. (28) to perform the derivatives with respect to $\dot{\xi}^k$ or \dot{p}_k ; the generalized linear momenta are simply obtained by deriving the general expression for \mathcal{E}_{tot} as found from circuit analysis.

In order to change from the two sets of generalized coordinates and velocities $\{\xi^k, \dot{\xi}^k\}$ and $\{p_k, \dot{p}_k\}$ in Eq. (28) to the set of canonical coordinates $\{\xi^k, p_k\}$ used in the Hamiltonian, it is necessary to solve the system of Eqs. (39a) and (39b). Using the general expression for the kinetic energy $T(\vec{\xi}, \vec{\dot{\xi}})$ given by Eq. (35) and an analogous expression for $T^*(\vec{p}, \vec{\dot{p}})$ and remembering Eqs. (37a) and (37b), it can be readily shown that

$$\left\{ \begin{aligned} \frac{\partial}{\partial \xi^k} T(\xi^k, \dot{\xi}^k) &= \sum_{\ell=1}^{N_\xi} A_{k, \ell} \dot{\xi}^\ell + B_k = p_k \end{aligned} \right. \tag{40a}$$

$$\left\{ \begin{aligned} \frac{\partial}{\partial \dot{p}_k} T^*(p_k, \dot{p}_k) &= \sum_{\ell=1}^{N_\xi} D_{k, \ell} \dot{p}_\ell + E_k = \xi^k . \end{aligned} \right. \tag{40b}$$

This system of two linear, non-homogeneous algebraic equations can be re-written by bringing the terms $B_k(\vec{\xi}, \vec{p})$ and $E_k(\vec{\xi}, \vec{p})$ to the right-hand side of Eqs. (40a) and (40b), respectively,

$$\left\{ \begin{array}{l} \sum_{\ell=1}^{N_\xi} A_{k,\ell}(\vec{\xi}, \vec{p}) \dot{\xi}^\ell = p_k - B_k(\vec{\xi}, \vec{p}) \\ \sum_{\ell=1}^{N_\xi} D_{k,\ell}(\vec{\xi}, \vec{p}) \dot{p}_k = \xi^k - E_k(\vec{\xi}, \vec{p}) \end{array} \right. . \quad (41a)$$

$$(41b)$$

As in the case of mechanical Newtonian systems,

$$\left\{ \begin{array}{l} \frac{\partial^2}{\partial \dot{\xi}^k \partial \xi^\ell} T = A_{k,\ell}(\vec{\xi}, \vec{p}) \\ \frac{\partial^2}{\partial \dot{p}_k \partial p_\ell} T^* = D_{k,\ell}(\vec{\xi}, \vec{p}) \end{array} \right. \quad (42a)$$

$$(42b)$$

are the elements of two definite positive matrices $\mathbf{A}(\vec{\xi}, \vec{p})$ and $\mathbf{D}(\vec{\xi}, \vec{p})$, respectively. Thus, both these matrices are characterized by a nonzero determinant,

$$\left\{ \begin{array}{l} \det \mathbf{A}(\vec{\xi}, \vec{p}) \neq \mathbf{0} \\ \det \mathbf{D}(\vec{\xi}, \vec{p}) \neq \mathbf{0} \end{array} \right. , \quad (43a)$$

$$(43b)$$

which is a necessary and sufficient condition for the system of Eqs. (41a) and (41b) to have a unique non-trivial

solution.

IV. THE HAMILTONIAN OF THE LCJ CIRCUIT, FINALLY

In order to find the Hamiltonian of the LCJ circuit studied in Sec. II, we first solve the system of Eqs. (39a) and (39b) for the total energy of Eq. (20). This reads

$$\left\{ \begin{array}{l} \frac{\partial}{\partial \dot{\phi}} \mathcal{E}_{LCJ} = C \dot{\phi} = \mathbf{q} \\ \frac{\partial}{\partial \dot{q}} \mathcal{E}_{LCJ} = L \dot{q} + L I_{c0} \sin[k_J(\phi - \tilde{\phi})] = \mathbf{p} \end{array} \right. . \quad (44a)$$

$$(44b)$$

This system is in the form of Eqs. (41a) and (41b), with $A(\phi; q) = C$, $B(\phi; q) = 0$, $D(\phi; q) = L$, and $E(\phi; q) = L I_{c0} \sin[k_J(\phi - \tilde{\phi})]$. By solving the system with respect to $\dot{\phi}$ and \dot{q} , we obtain

$$\left\{ \begin{array}{l} \dot{\phi} = \frac{q}{C} \\ \dot{q} = \frac{\phi - L I_{c0} \sin[k_J(\phi - \tilde{\phi})]}{L} \end{array} \right. . \quad (45a)$$

$$(45b)$$

We now substitute the results of Eqs. (45a) and (45b) into Eq. (20) and obtain the Hamiltonian

$$\begin{aligned} \mathcal{H}_{LCJ} &= \frac{q^2}{2C} \\ &+ \frac{1}{2} L \frac{\{\phi - L I_{c0} \sin[k_J(\phi - \tilde{\phi})]\}^2}{L^2} + L I_{c0} \frac{\phi - L I_{c0} \sin[k_J(\phi - \tilde{\phi})]}{L} \sin[k_J(\phi - \tilde{\phi})] + \frac{1}{2} L I_{c0}^2 \sin^2[k_J(\phi - \tilde{\phi})] \\ &- E_{J0} \cos[k_J(\phi - \tilde{\phi})] \\ &= \frac{q^2}{2C} + \frac{\phi^2}{2L} - E_{J0} \cos[k_J(\phi - \tilde{\phi})] . \end{aligned} \quad (46)$$

Although in this case the Hamiltonian is fairly simple and we could have guessed it without resorting to the method introduced here, the simplicity of this example helps to show the working principle of the method.

We can derive the equation of motion for this circuit using the usual Hamilton equations,

$$\left\{ \begin{array}{l} \frac{\partial}{\partial q} \mathcal{H}_{LCJ} = \frac{q}{C} = \dot{\phi} \\ \frac{\partial}{\partial \phi} \mathcal{H}_{LCJ} = \frac{\phi}{L} + I_{c0} \sin[k_J(\phi - \tilde{\phi})] = -\dot{q} \end{array} \right. . \quad (47a)$$

$$(47b)$$

Solving Eq. (47a) with respect to q , deriving the result with respect to time one time, and substituting this derivative into Eq. (47b), we obtain the single second-

order differential equation

$$C \ddot{\phi} + \frac{\phi}{L} + I_{c0} \sin[k_J(\phi - \tilde{\phi})] = 0 . \quad (48)$$

A similar result can be found directly from Eq. (9),

$$\begin{aligned} \iota_1 + \iota_2 + \iota_3 &= C \ddot{\phi}_1 + \frac{\phi_2}{L} + I_{c0} \sin(k_J \phi_3) \\ &= C \ddot{\phi} + \frac{\phi - \tilde{\phi}}{L} + I_{c0} \sin[k_J(\phi - \tilde{\phi})] \\ &= 0 . \end{aligned} \quad (49)$$

It is worth noting that following this direct approach results in the extra term $-\tilde{\phi}/L$, which corresponds to a DC current. Since there are no DC current sources attached

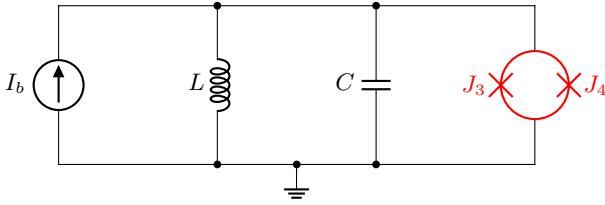


FIG. 3. LC circuit with DC current source and DC SQUID in parallel.

to the LCJ circuit considered here, this term has to be set to zero by assuming $\tilde{\phi} = 0$. This step is unnecessary when using our method, which gives an equation of motion already without any DC current source (note that the $\tilde{\phi}$ in the argument of the sine does not lead to any DC current, as it can be shown from a simple trigonometric identity).

A. LC Circuit with DC SQUID in Parallel

Consider the circuit of Fig. 3, first assuming the DC current source with current I_b to be an open circuit. The circuit elements highlighted in red indicate the parallel connection of two identical Josephson tunnel junctions J_3 and J_4 , each with a critical current I_{c0} (the generalization to the case of non-identical junctions is left to the reader as an exercise). This parallel connection is called

a DC SQUID. Maintaining the same notation as in the case of the LCJ circuit, we now have one more flux associated with J_4 , ϕ_4 .

In this case,

$$\left\{ \begin{array}{l} \frac{d}{dt}(\phi - \phi_3) = 0 \end{array} \right. \quad (50a)$$

$$\left\{ \begin{array}{l} \frac{d}{dt}(\phi_3 - \phi_4) = 0 \end{array} \right. . \quad (50b)$$

However, this time we need to extend the conditions of Eqs. (13a) and (13b) to account for the flux quantization of a superconducting loop [15]. It follows that

$$\left\{ \begin{array}{l} \phi - \phi_3 = \tilde{\phi} \end{array} \right. \quad (51a)$$

$$\left\{ \begin{array}{l} \phi_3 - \phi_4 = k\Phi_0 \end{array} \right. , \quad (51b)$$

with $k \in \mathbb{Z}$. The flux quantization condition of Eq. (51b) is a special case of the condition following from Faraday-Henry-Neumann's law.

From Eq. (51b), it also follows that

$$\left\{ \begin{array}{l} \frac{\phi_3 + \phi_4}{2} = \phi_3 - k\frac{\Phi_0}{2} \end{array} \right. \quad (52a)$$

$$\left\{ \begin{array}{l} \frac{\phi_3 - \phi_4}{2} = k\frac{\Phi_0}{2} \end{array} \right. . \quad (52b)$$

Using simple trigonometric identities as well as Eqs. (52a), (52b), and (51a), the energy of the DC SQUID is given by

$$\begin{aligned} \mathcal{E}_{\text{SQUID}}(t) &= \int_{\tau=0}^{\tau=t} d\tau \dot{\phi}(\tau) I_{c0} \{ \sin[k_J \phi_3(t)] + \sin[k_J \phi_4(t)] \} \\ &= \int_{\phi(0)}^{\phi(t)} d\phi 2I_{c0} \sin\left(k_J \frac{\phi_3 + \phi_4}{2}\right) \cdot \cos\left(k_J \frac{\phi_3 - \phi_4}{2}\right) \\ &= \int_{\phi(0)}^{\phi(t)} d\phi 2I_{c0} \sin\left[k_J \left(\phi_3 - k\frac{\Phi_0}{2}\right)\right] \cdot \cos\left(k_J k\frac{\Phi_0}{2}\right) \\ &= \int_{\varphi(0)/k_J}^{\varphi(t)/k_J} d\varphi 2\frac{I_{c0}}{k_J} \sin(\varphi_3 - k\pi) \cdot \cos(k\pi) \\ &= \int_{\varphi(0)/k_J}^{\varphi(t)/k_J} d\varphi 2\frac{I_{c0}}{k_J} \sin \varphi_3 \\ &= \int_{\phi(0)}^{\phi(t)} d\phi 2I_{c0} \sin[k_J(\phi - \tilde{\phi})] \\ &= -2E_{J0} \cos[k_J(\phi(t) - \tilde{\phi})] + K_{\text{SQUID}} , \end{aligned} \quad (53)$$

where K_{SQUID} is a constant of integration. From this result, it is clear that the pair of junctions in the SQUID can be treated as a single junction with twice the Josephson energy of each junction.

Flux tunability can be included by coupling a current

source to the DC SQUID by means of the mutual inductance between the SQUID loop and an external inductor in series with the source.

B. *LCJ* Circuit with Current Source

We now consider the circuit of Fig. 3 in presence of the DC current source I_b . Since we can represent the DC SQUID as an effective single Josephson junction, we simply assume that the source is connected in parallel with L , C , and a single J .

The energy generated by the DC source can easily be found from

$$\begin{aligned}\mathcal{E}_b(t) &= \int_{\tau=0}^{\tau=t} d\tau \dot{\phi}(\tau) I_b \\ &= I_b \int_{\phi(0)}^{\phi(t)} d\phi \\ &= I_b [\phi(t) - \phi(0)]\end{aligned}\quad (54)$$

and can readily be added to the other terms in Eq. (17), directly leading to the tilted-washboard potential (at least in the case $L \rightarrow +\infty$) [15].

C. Limiting Cases: *LC* Resonator and Transmon Qubit

From Eq. (46) it is straightforward to show that by choosing $I_{c0} = 0$, we obtain the Hamiltonian of a simple (linear) resonator, or harmonic oscillator,

$$\mathcal{H}_{LC} = \frac{q^2}{2C} + \frac{\phi^2}{2L} . \quad (55)$$

The same result is found by setting the Josephson tunnel junction in Fig. 1 to an open circuit.

Similarly, by setting $L \rightarrow +\infty$ (and for a suitable choice of the values of C and I_{c0}) in Eq. (46), we obtain the Hamiltonian of a transmon qubit

$$\mathcal{H}_q = \frac{q^2}{2C} - E_{J0} \cos[k_J(\phi - \tilde{\phi})] . \quad (56)$$

The same result is found by setting the inductor in Fig. 1 to an open circuit. This circuit behaves as a nonlinear resonator.

V. THE “VOOL-DEVORET CIRCUIT” REVISITED

Figure 4 shows the famous example in the review article by U. Vool and M.H. Devoret of Ref. [4]. This circuit is comprised of a set of three capacitors, $\{C_1, C_3, C_5\}$, and a set of three inductors, $\{L_2, L_4, L_6\}$.

Figure 5 illustrates the digraph associated with the physical circuit in Fig. 4. The digraph is comprised of three nodes, ① and ②, and ③, as well as six branches, 1, 2, 3, 4, 5, and 6; we set ③ → datum. The branches are indicated by the letter $b = 1, 2, \dots, 6$ and the nodes by the letter $n = 1, 2$, and 3 [not to be confused with the number of particles in the mechanical analogy of Eq. (35)].

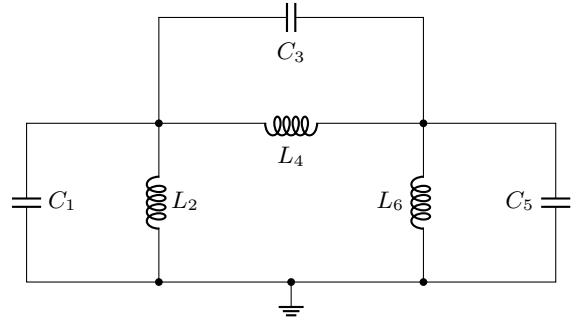


FIG. 4. The “Vool-Devoret Circuit.”

The branch currents (as well as charges), the branch voltages (as well as fluxes), and the node-to-datum voltages are represented by the vectors

$$\left\{ \begin{array}{l} \vec{i} = \begin{bmatrix} i_1 \\ i_2 \\ i_3 \\ i_4 \\ i_5 \\ i_6 \end{bmatrix} \\ \vec{q} = \begin{bmatrix} q_1 \\ q_2 \\ q_3 \\ q_4 \\ q_5 \\ q_6 \end{bmatrix} \end{array} \right. \quad (57a)$$

$$\left\{ \begin{array}{l} \vec{v} = \begin{bmatrix} v_1 \\ v_2 \\ v_3 \\ v_4 \\ v_5 \\ v_6 \end{bmatrix} \\ \vec{\phi} = \begin{bmatrix} \phi_1 \\ \phi_2 \\ \phi_3 \\ \phi_4 \\ \phi_5 \\ \phi_6 \end{bmatrix} \end{array} \right. \quad (57b)$$

$$\vec{e} = \begin{bmatrix} e_1 \\ e_2 \end{bmatrix} . \quad (57c)$$

The incidence matrix for this digraph reads

$$\mathbf{A}_a = \begin{array}{r} \textcircled{1} \rightarrow \\ \textcircled{2} \rightarrow \\ \textcircled{3} \rightarrow \end{array} \left(\begin{array}{cccccc} \textcolor{blue}{1} & \textcolor{blue}{2} & \textcolor{blue}{3} & \textcolor{blue}{4} & \textcolor{blue}{5} & \textcolor{blue}{6} \\ -1 & -1 & 1 & 1 & 0 & 0 \\ 0 & 0 & -1 & -1 & 1 & 1 \\ 1 & 1 & 0 & 0 & -1 & -1 \end{array} \right) . \quad (58)$$

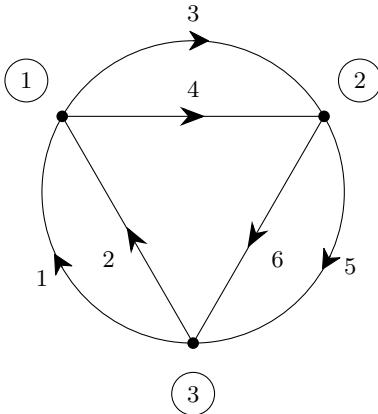


FIG. 5. Digraph of the “Vool-Devoret Circuit.”

The reduced incidence matrix \mathbf{A} is obtained by striking out the row in \mathbf{A}_a associated with the datum, resulting in

$$\mathbf{A} = \begin{bmatrix} -1 & -1 & 1 & 1 & 0 & 0 \\ 0 & 0 & -1 & -1 & 1 & 1 \end{bmatrix} . \quad (59)$$

From KCL, Eq. (8), we obtain the constraint for the currents,

$$\begin{cases} -i_1 - i_2 + i_3 + i_4 + 0 + 0 = 0 \\ 0 + 0 - i_3 - i_4 + i_5 + i_6 = 0 \end{cases} \quad (60a)$$

$$(60b)$$

From KVL, Eq. (10), we obtain the constraint for the

voltages,

$$\begin{cases} v_1 = -e_1 \\ v_2 = -e_1 \end{cases} \quad (61a)$$

$$(61b)$$

$$(61c)$$

$$(61d)$$

$$(61e)$$

$$(61f)$$

The constitutive relations for all the elements in the circuit are

$$\begin{cases} i_1 = C_1 \dot{v}_1 \\ v_2 = L_2 \dot{i}_2 \end{cases} \quad (62a)$$

$$(62b)$$

$$(62c)$$

$$(62d)$$

$$(62e)$$

$$(62f)$$

In matrix form, these relations read

$$\begin{bmatrix} C_1 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & C_3 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & C_5 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} \dot{v}_1 \\ \dot{v}_2 \\ \dot{v}_3 \\ \dot{v}_4 \\ \dot{v}_5 \\ \dot{v}_6 \end{bmatrix} + \begin{bmatrix} 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & -1 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & -1 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & -1 \end{bmatrix} \begin{bmatrix} v_1 \\ v_2 \\ v_3 \\ v_4 \\ v_5 \\ v_6 \end{bmatrix} \\ + \begin{bmatrix} 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & L_2 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & L_4 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & L_6 \end{bmatrix} \begin{bmatrix} \dot{i}_1 \\ \dot{i}_2 \\ \dot{i}_3 \\ \dot{i}_4 \\ \dot{i}_5 \\ \dot{i}_6 \end{bmatrix} + \begin{bmatrix} -1 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & -1 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & -1 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} i_1 \\ i_2 \\ i_3 \\ i_4 \\ i_5 \\ i_6 \end{bmatrix} \quad (63)$$

$$= (\mathbf{M}_0 D + \mathbf{M}_1) \vec{v} + (\mathbf{N}_0 D + \mathbf{N}_1) \vec{i} = \vec{0} , \quad (64)$$

where D is the differential operator d/dt and it is straightforward to find \mathbf{M}_0 , \mathbf{M}_1 , \mathbf{N}_0 , and \mathbf{N}_1 from the

one-to-one correspondence between Eqs. (63) and (64).

We can now combine together KCL, KVL, and the branch equations in matrix form to obtain

$$\begin{aligned}
& \begin{bmatrix} \mathbf{0} & \mathbf{0} & \mathbf{A} \\ -\mathbf{A}^T & \mathbf{1} & \mathbf{0} \\ \mathbf{0} & \mathbf{M}_0 D + \mathbf{M}_1 & \mathbf{N}_0 D + \mathbf{N}_1 \end{bmatrix} \begin{bmatrix} \vec{e} \\ \vec{v} \\ \vec{i} \end{bmatrix} \\
&= \begin{bmatrix} 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & -1 & -1 & 1 & 1 & 1 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & -1 & -1 & -1 & 1 & 1 \\ 1 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 1 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ -1 & 1 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ -1 & 1 & 0 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & -1 & 0 & 0 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & -1 & 0 & 0 & 0 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & C_1 D & 0 & 0 & 0 & 0 & 0 & -1 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & -1 & 0 & 0 & 0 & 0 & 0 & L_2 D & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & C_3 D & 0 & 0 & 0 & 0 & 0 & -1 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & -1 & 0 & 0 & 0 & 0 & 0 & L_4 D & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & C_5 D & 0 & 0 & 0 & 0 & 0 & -1 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 & -1 & 0 & 0 & 0 & 0 & 0 & L_6 D & 0 \end{bmatrix} \begin{bmatrix} e_1 \\ e_2 \\ v_1 \\ v_2 \\ v_3 \\ v_6 \\ v_5 \\ v_6 \\ i_1 \\ i_2 \\ i_3 \\ i_4 \\ i_5 \\ i_6 \end{bmatrix} = \vec{0} \quad (65)
\end{aligned}$$

We can now find the total power associated with the circuit,

$$\mathcal{P}_{VD} = \sum_{b=1}^6 v_b i_b . \quad (66)$$

Since we do not have any Josephson tunnel junction in the circuit considered at present, the circuit's total instantaneous energy is derived by integrating \mathcal{P}_{VD} over time and using the trick $\alpha f \dot{f} = d(\alpha f^2/2)/dt$,

$$\begin{aligned}
\mathcal{E}_{VD} &= \frac{1}{2} C_1 v_1^2 + \frac{1}{2} C_3 v_3^2 + \frac{1}{2} C_5 v_5^2 \\
&\quad + \frac{1}{2} L_2 i_2^2 + \frac{1}{2} L_4 i_4^2 + \frac{1}{2} L_6 i_6^2 . \quad (67)
\end{aligned}$$

By writing $v_3 = -v_1 - v_5$ from Eqs. (61a), (61c), and (61e), finding i_2 from Eq. (60a), expressing i_1 using

Eq. (62a), i_3 using Eq. (62c) and furthermore substituting \dot{v}_3 with the constraint of Eq. (61c) where e_1 and e_2 are written in terms of v_1 and v_5 from Eqs. (61a) and (61e), leaving i_4 as an independent coordinate, finding i_6 from Eq. (60b), and expressing i_5 using Eq. (62e), we obtain

$$\begin{aligned}
\mathcal{E}_{VD} &= \frac{1}{2} C_1 v_1^2 + \frac{1}{2} C_3 (-v_1 - v_5)^2 + \frac{1}{2} C_5 v_5^2 \\
&\quad + \frac{1}{2} L_2 [-C_1 \dot{v}_1 + C_3 (-\dot{v}_1 - \dot{v}_5) + i_4]^2 \\
&\quad + \frac{1}{2} L_4 i_4^2 \\
&\quad + \frac{1}{2} L_6 [C_3 (-\dot{v}_1 - \dot{v}_5) + i_4 - C_5 \dot{v}_5]^2 . \quad (68)
\end{aligned}$$

By performing simple algebraic calculations and substituting $\dot{v}_1 = i_1/C_1$ and $\dot{v}_5 = i_5/C_5$ from Eqs. (62a) and (62e), respectively, we finally find

$$\begin{aligned}
\mathcal{E}_{VD} &= \frac{1}{2} C_1 v_1^2 + \frac{1}{2} C_3 v_1^2 + C_3 v_1 v_5 + \frac{1}{2} C_3 v_5^2 + \frac{1}{2} C_5 v_5^2 \\
&\quad + \frac{1}{2} L_2 i_1^2 + L_2 \frac{C_3}{C_1} i_1^2 + L_2 \frac{C_3}{C_1} i_1 i_5 - L_2 i_1 i_4 + \frac{1}{2} L_2 \frac{C_3^2}{C_1^2} i_1^2 \\
&\quad + L_2 \frac{C_3^2}{C_1 C_5} i_1 i_5 + \frac{1}{2} L_2 \frac{C_3^2}{C_5^2} i_5^2 - L_2 \frac{C_3}{C_1} i_1 i_4 - L_2 \frac{C_3}{C_5} i_4 i_5 + \frac{1}{2} L_2 i_4^2 \\
&\quad + \frac{1}{2} L_4 i_4^2 \\
&\quad + \frac{1}{2} L_6 \frac{C_3^2}{C_1^2} i_1^2 + L_6 \frac{C_3^2}{C_1 C_5} i_1 i_5 + \frac{1}{2} L_6 \frac{C_3^2}{C_5^2} i_5^2 - L_6 \frac{C_3}{C_1} i_1 i_4 - L_6 \frac{C_3}{C_5} i_4 i_5 \\
&\quad + L_6 \frac{C_3}{C_1} i_1 i_5 + L_6 \frac{C_3}{C_5} i_5^2 + \frac{1}{2} L_6 i_4^2 - L_6 i_4 i_5 + \frac{1}{2} L_6 i_5^2 , \quad (69)
\end{aligned}$$

where the terms colored in blue correspond to the energy stored in the capacitive subnetwork of the circuit, or kinetic energy, and those colored in red to that stored in the inductive subnetwork embedded within the capacitive subnetwork, or co-kinetic energy. It is worth noting that in a circuit such as that in Fig. 4 the inductive subnetwork typically stems from a parasitic mutual inductance between two capacitively coupled circuits, where the mutual inductance can be cast into an equivalent T -network of three inductances (see, e.g., page 456 in Ref. [7]), which can finally be represented as the Π -network of inductances L_2 , L_4 , and L_6 .

By inspecting all terms in Eq. (69), it appears evident that we are in presence of an *incomplete vector of generalized velocities* (we remind that any $v = \dot{\phi}$ or any $\dot{v} = \dot{q}$ is a generalized velocity). In fact, we have

$$\left\{ \vec{\xi} = (\dot{\xi}^1 = \dot{\phi}_1 = v_1, \dot{\xi}^2 = \text{absent}, \dot{\xi}^3 = \dot{\phi}_5 = v_5) \right. \quad (70a)$$

$$\left. \vec{p} = (\dot{p}_1 = \dot{q}_1 = \dot{\imath}_1, \dot{p}_2 = \dot{q}_4 = \dot{\imath}_4, \dot{p}_3 = \dot{q}_5 = \dot{\imath}_5) \right. . \quad (70b)$$

As a consequence, if we were to use Eq. (69) when attempting to solve the system of Eqs. (39a) and (39b), we would obtain an incomplete set of canonical coordinates

$$\{\xi^1 = \phi_1, \xi^2 = \phi_4, \xi^3 = \phi_5; p_1 = q_1, \textcolor{red}{p_2 = \text{absent}}, p_3 = q_5\} . \quad (71)$$

In order to obtain a complete set of canonical coordinates, we must introduce an *auxiliary* circuit element in correspondence with the missing generalized velocity $\dot{\xi}^2 = v_4$. Since we are dealing with a missing voltage, the natural choice is to add an auxiliary capacitor with capacitance \tilde{C}_4 in series with L_4 (similarly, if we were missing a current, we would add an auxiliary inductor; whether an auxiliary element has to be added in series or parallel depends on the specific case). This may seem an artifact to make the method to work. However, as already pointed out but not explicitly explored in Ref. [4], every inductor is inevitably characterized by a parasitic capacitor and every capacitor by a parasitic inductor.

For example, consider a small-coil antenna used in AM radios. The coil mostly forms an inductor, but if we were not to account for the parasitic capacitor associated with it, we would miss a natural resonance of the antenna. This resonance can interfere with the operation of the antenna, which may become selective in the wrong region of the frequency spectrum (e.g., away from the carrier frequency of the radio station we intend to tune in with). This issue is typically solved by connecting the small-coil antenna with an *ad hoc* shunting capacitor (much larger or smaller than the parasitic capacitor,

depending whether the shunt capacitor is connected in parallel or series with the parasitic capacitor). Notably, this is what we do when we build a transmon qubit: We connect a Josephson tunnel junction, which is characterized by an intrinsic (“parasitic”) capacitor, in parallel with a much larger capacitor effectively behaving as the qubit capacitor!

Figure 6 shows the auxiliary circuit element \tilde{C}_4 needed in our example. The instantaneous energy associated with this element is

$$\mathcal{E}_{\text{aux}} = \frac{1}{2} \tilde{C}_4 \tilde{v}_4^2 , \quad (72)$$

where \tilde{v}_4 can easily be found from

$$-v_3 = v_4 + \tilde{v}_4 \quad (73)$$

(or, equivalently, by extending the digraph by including the branch associated with \tilde{C}_4 and proceeding with all the usual steps, KCL, KVL, etc.). As before, by writing $v_3 = -v_1 - v_5$ from Eqs. (61a), (61c), and (61e), we find

$$\tilde{v}_4 = v_1 - v_4 + v_5 \quad (74)$$

and, thus,

$$\begin{aligned} \mathcal{E}_{\text{aux}} = & \frac{1}{2} \tilde{C}_4 v_1^2 + \frac{1}{2} \tilde{C}_4 v_4^2 + \frac{1}{2} \tilde{C}_4 v_5^2 \\ & - \tilde{C}_4 v_1 v_4 + \tilde{C}_4 v_1 v_5 - \tilde{C}_4 v_4 v_5 . \end{aligned} \quad (75)$$

The complete expression for the total instantaneous energy of the entire circuit, including the auxiliary element, is therefore [written in terms of the generalized velocities of Eqs. (70a) and (70b) and with $\dot{\phi}_4 = v_4$]

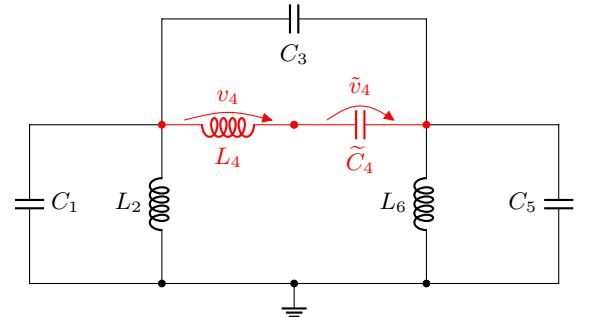


FIG. 6. The auxiliary circuit element for the “Vool-Devoret Circuit.”

$$\begin{aligned}
\mathcal{E}_{VD} = & \frac{1}{2} C_1 \dot{\phi}_1^2 + \frac{1}{2} C_3 \dot{\phi}_1^2 + C_3 \dot{\phi}_1 \dot{\phi}_5 + \frac{1}{2} C_3 \dot{\phi}_5^2 + \frac{1}{2} C_5 \dot{\phi}_5^2 \\
& + \frac{1}{2} \tilde{C}_4 \dot{\phi}_1^2 + \frac{1}{2} \tilde{C}_4 \dot{\phi}_4^2 + \frac{1}{2} \tilde{C}_4 \dot{\phi}_5^2 - \tilde{C}_4 \dot{\phi}_1 \dot{\phi}_4 + \tilde{C}_4 \dot{\phi}_1 \dot{\phi}_5 - \tilde{C}_4 \dot{\phi}_4 \dot{\phi}_5 \\
& + \frac{1}{2} L_2 \dot{q}_1^2 + L_2 \frac{C_3}{C_1} \dot{q}_1^2 + L_2 \frac{C_3}{C_5} \dot{q}_1 \dot{q}_5 - L_2 \dot{q}_1 \dot{q}_4 + \frac{1}{2} L_2 \frac{C_3^2}{C_1^2} \dot{q}_1^2 \\
& + L_2 \frac{C_3^2}{C_1 C_5} \dot{q}_1 \dot{q}_5 + \frac{1}{2} L_2 \frac{C_3^2}{C_5^2} \dot{q}_5^2 - L_2 \frac{C_3}{C_1} \dot{q}_1 \dot{q}_4 - L_2 \frac{C_3}{C_5} \dot{q}_4 \dot{q}_5 + \frac{1}{2} L_2 \dot{q}_4^2 \\
& + \frac{1}{2} L_4 \dot{q}_4^2 \\
& + \frac{1}{2} L_6 \frac{C_3^2}{C_1^2} \dot{q}_1^2 + L_6 \frac{C_3^2}{C_1 C_5} \dot{q}_1 \dot{q}_5 + \frac{1}{2} L_6 \frac{C_3^2}{C_5^2} \dot{q}_5^2 - L_6 \frac{C_3}{C_1} \dot{q}_1 \dot{q}_4 - L_6 \frac{C_3}{C_5} \dot{q}_4 \\
& + \dot{q}_5 + L_6 \frac{C_3}{C_1} \dot{q}_1 \dot{q}_5 + L_6 \frac{C_3}{C_5} \dot{q}_5^2 + \frac{1}{2} L_6 \dot{q}_4^2 - L_6 \dot{q}_4 \dot{q}_5 + \frac{1}{2} L_6 \dot{q}_5^2 . \tag{76}
\end{aligned}$$

This equation contains a complete vector of generalized velocities, both for the kinetic and for the co-kinetic en-

ergy,

$$\vec{\xi} = (\dot{\xi}^1 = \dot{\phi}_1, \dot{\xi}^2 = \dot{\phi}_4, \dot{\xi}^3 = \dot{\phi}_5) = \vec{\phi} \tag{77a}$$

$$\vec{p} = (\dot{p}_1 = \dot{q}_1, \dot{p}_2 = \dot{q}_4, \dot{p}_3 = \dot{q}_5) = \vec{q} . \tag{77b}$$

We can now use Eq. (76) to solve the system of Eqs. (39a) and (39b). We find,

$$\begin{cases} \left(C_1 + C_3 + \tilde{C}_4 \right) \dot{\phi}_1 + \\ \left(-\tilde{C}_4 \right) \dot{\phi}_4 + \\ \left(C_3 + \tilde{C}_4 \right) \dot{\phi}_5 = q_1 \end{cases} \tag{78a}$$

$$\begin{cases} \left(-\tilde{C}_4 \right) \dot{\phi}_1 + \\ \left(-\tilde{C}_4 \right) \dot{\phi}_4 + \\ \left(-\tilde{C}_4 \right) \dot{\phi}_5 = q_4 \end{cases} \tag{78b}$$

$$\begin{cases} \left(C_3 + \tilde{C}_4 \right) \dot{\phi}_1 + \\ \left(-\tilde{C}_4 \right) \dot{\phi}_4 + \\ \left(C_3 + C_5 \right) \dot{\phi}_5 = q_5 \end{cases} \tag{78c}$$

for the kinetic energy and

$$\left\{ \begin{array}{l} \left(L_2 + 2L_2 \frac{C_3}{C_1} + L_2 \frac{C_3^2}{C_1^2} + L_6 \frac{C_3^2}{C_1^2} \right) \dot{q}_1 + \\ \left(-L_2 - L_2 \frac{C_3}{C_1} - L_6 \frac{C_3}{C_1} \right) \dot{q}_4 + \\ \left(L_2 \frac{C_3}{C_5} + L_2 \frac{C_3^2}{C_1 C_5} + L_6 \frac{C_3^2}{C_1 C_5} + L_6 \frac{C_3}{C_1} \right) \dot{q}_5 = \phi_1 \end{array} \right. \quad (79a)$$

$$\left\{ \begin{array}{l} \left(-L_2 - L_2 \frac{C_3}{C_1} - L_6 \frac{C_3}{C_1} \right) \dot{q}_1 + \\ \left(L_2 + L_4 + L_6 \right) \dot{q}_4 + \\ \left(-L_2 \frac{C_3}{C_5} - L_6 \frac{C_3}{C_5} - L_6 \right) \dot{q}_5 = \phi_4 \end{array} \right. \quad (79b)$$

$$\left\{ \begin{array}{l} \left(L_2 \frac{C_3}{C_5} + L_2 \frac{C_3^2}{C_1 C_5} + L_6 \frac{C_3^2}{C_1 C_5} + L_6 \frac{C_3}{C_1} \right) \dot{q}_1 + \\ \left(-L_2 \frac{C_3}{C_5} - L_6 \frac{C_3}{C_5} - L_6 \right) \dot{q}_4 + \\ \left(L_2 \frac{C_3^2}{C_5^2} + L_6 \frac{C_3^2}{C_5^2} + 2L_6 \frac{C_3}{C_5} + L_6 \right) \dot{q}_5 = \phi_5 \end{array} \right. \quad (79c)$$

for the co-kinetic energy. The systems of Eqs. (78a) to (78c) and of Eqs. (79a) to (79c) can be written in a more compact fashion as

$$\left\{ \begin{array}{l} M_1 \dot{\phi}_1 + M_2 \dot{\phi}_4 + M_3 \dot{\phi}_5 = q_1 \end{array} \right. \quad (80a)$$

$$\left\{ \begin{array}{l} M_4 \dot{\phi}_1 + M_5 \dot{\phi}_4 + M_6 \dot{\phi}_5 = q_4 \end{array} \right. \quad (80b)$$

$$\left\{ \begin{array}{l} M_7 \dot{\phi}_1 + M_8 \dot{\phi}_4 + M_9 \dot{\phi}_5 = q_5 \end{array} \right. \quad (80c)$$

for the kinetic energy and

$$\left\{ \begin{array}{l} N_1 \dot{q}_1 + N_2 \dot{q}_4 + N_3 \dot{q}_5 = \phi_1 \end{array} \right. \quad (81a)$$

$$\left\{ \begin{array}{l} N_4 \dot{q}_1 + N_5 \dot{q}_4 + N_6 \dot{q}_5 = \phi_4 \end{array} \right. \quad (81b)$$

$$\left\{ \begin{array}{l} N_7 \dot{q}_1 + N_8 \dot{q}_4 + N_9 \dot{q}_5 = \phi_5 \end{array} \right. \quad (81c)$$

for the co-kinetic energy. The constants M_k and N_k for $k = 1, 2, \dots, 9$ can be readily obtained by comparing the systems of Eqs. (80a) to (80c) and of Eqs. (81a) to (81c) to those of Eqs. (78a) to (78c) and of Eqs. (79a) to (79c), respectively.

By defining the two matrices

$$\mathbf{M} = \begin{bmatrix} M_1 & M_2 & M_3 \\ M_4 & M_5 & M_6 \\ M_7 & M_8 & M_9 \end{bmatrix} \quad (82)$$

and

$$\mathbf{N} = \begin{bmatrix} N_1 & N_2 & N_3 \\ N_4 & N_5 & N_6 \\ N_7 & N_8 & N_9 \end{bmatrix} , \quad (83)$$

the systems of Eqs. (80a) to (80c) and of Eqs. (81a) to (81c) can be finally written as

$$\left\{ \begin{array}{l} \mathbf{M} \vec{\dot{\phi}}^T = \vec{q}^T \end{array} \right. \quad (84a)$$

$$\left\{ \begin{array}{l} \mathbf{N} \vec{\dot{q}}^T = \vec{\phi}^T , \end{array} \right. \quad (84b)$$

where

$$\left\{ \begin{array}{l} \vec{q} = (q_1, q_4, q_5) \end{array} \right. \quad (85a)$$

$$\left\{ \begin{array}{l} \vec{\phi} = (\phi_1, \phi_4, \phi_5) . \end{array} \right. \quad (85b)$$

By solving the systems of Eqs. (84a) and (84b) with respect to $\vec{\phi}$ and \vec{q} by simple matrix inversion and inserting the results into Eq. (76), we finally obtain the Hamiltonian \mathcal{H}_{VD} of the circuit for the canonical coordinate vectors $\vec{\phi}$ and \vec{q} .

VI. “SECOND QUANTIZATION” OF AN LC RESONATOR COUPLED TO A TRANSMON QUBIT

The circuit in Fig. 7 shows a simple L_rC_r resonator coupled by means of a capacitor with capacitance C_{rq} to a transmon qubit with qubit capacitance C_q and critical current I_{c0} . The digraph associated with this circuit is displayed in Fig. 8. We leave all the details of the problem of finding the Hamiltonian of this circuit using the incidence matrix method as an exercise to the reader. Instead, we focus here on the final result and its quantization.

Before writing down the final result for the circuit Hamiltonian and proceeding with its quantization, it is worth performing an approximation that, without losing generality for the quantization procedure, it allows us to greatly simplify the notation (the approximation captures well many experimental implementations of this circuit, an area of study sometimes called circuit quantum electrodynamics). After realizing all the steps of the incidence matrix method, we end up obtaining an inductive energy of the form

$$T^* = \left(\frac{1}{2}L_r + L_r \frac{C_{rq}}{C_r} + \frac{1}{2}L_r \frac{C_{rq}^2}{C_r^2} \right) \iota_1^2 + \left(L_r \frac{C_{rq}}{C_q} + L_r \frac{C_{rq}^2}{C_r C_q} \right) \iota_1 \iota_4 + \left(\frac{1}{2}L_r \frac{C_{rq}^2}{C_q^2} \right) \iota_4^2, \quad (86)$$

where ι_1 and ι_4 are the currents associated with branches 1 and 4 in the digraph of Fig. 8. We approximate this energy by assuming that $C_{rq} \ll C_r, C_q$ (weak coupling approximation); the inductive energy reduces to

$$T^* = \frac{1}{2}L_r \iota_1^2. \quad (87)$$

With this approximation, the circuit Hamiltonian be-

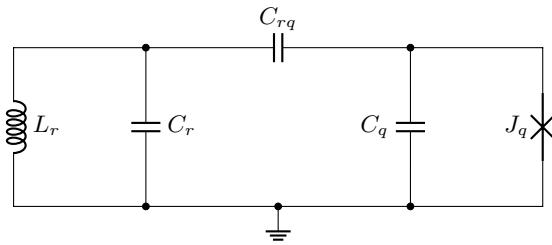


FIG. 7. An LC resonator coupled to a transmon qubit.

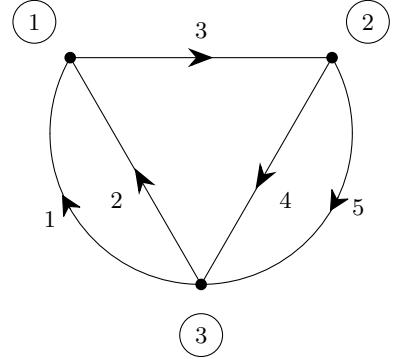


FIG. 8. Digraph of an LC resonator coupled to a transmon qubit.

comes

$$\mathcal{H}_{rq} = \frac{\phi_1^2}{2L_r} + \frac{1}{\det \mathbf{C}} \left[\frac{C_q + C_{rq}}{2} q_1^2 + q_1 C_{rq} q_4 + \frac{C_r + C_{rq}}{2} q_4^2 \right] - E_{J0} \cos[k_J(\phi_4)], \quad (88)$$

where ϕ_1, ϕ_4, q_1 , and q_4 form a complete set of canonical coordinates (we can set any $\tilde{\phi}$ phase in the cosine term due to Faraday-Henry-Neumann’s law between J_q and C_q to zero for simplicity; additionally, note that in this case there is not a simple connection between ϕ_1 and ϕ_4 because J_q and C_r are not in parallel as in the case studied in Sec. II) and

$$\mathbf{C} = \begin{bmatrix} (C_r + C_{rq}) & C_{rq} \\ C_{rq} & (C_q + C_{rq}) \end{bmatrix}. \quad (89)$$

We now follow a standard quantization procedure as, e.g., in Ref. [16]. The classical canonical coordinates can be promoted to quantum-mechanical operators as

$$\left\{ (\phi_1, \phi_4) \rightarrow (\hat{\phi}_1, \hat{\phi}_4) \right\} \quad (90a)$$

$$\left\{ (q_1, q_4) \rightarrow (\hat{q}_1, \hat{q}_4) = \left(-j\hbar \frac{\partial}{\partial \hat{\phi}_1}, -j\hbar \frac{\partial}{\partial \hat{\phi}_4} \right) \right\}, \quad (90b)$$

where $j^2 = -1$ and $\hbar = h/(2\pi)$.

The quantum-mechanical Hamiltonian then reads

$$\begin{aligned} \hat{\mathcal{H}}_{rq} = & \frac{\hat{\phi}_1^2}{2L_r} + \frac{1}{\det \mathbf{C}} \left[\frac{C_q + C_{rq}}{2} \hat{q}_1^2 - j\hbar \hat{q}_1 C_{rq} \frac{\partial}{\partial \hat{\phi}_4} \right. \\ & \left. - \frac{C_r + C_{rq}}{2} \hbar^2 \frac{\partial^2}{\partial \hat{\phi}_4^2} \right] - E_{J0} \cos[k_J(\hat{\phi}_4)]. \end{aligned} \quad (91)$$

The Hamiltonian of Eq. (91) can be written as

$$\hat{\mathcal{H}}_{rq} = \hat{\mathcal{H}}_r + \hat{\mathcal{H}}_i + \hat{\mathcal{H}}_q, \quad (92)$$

where the resonator, interaction, and qubit Hamiltonian are defined as

$$\left\{ \begin{array}{l} \hat{\mathcal{H}}_r = \frac{\hat{\phi}_1^2}{2L_r} + \frac{C_q + C_{rq}}{2 \det \mathbf{C}} \hat{q}_1^2 \end{array} \right. \quad (93a)$$

$$\left\{ \begin{array}{l} \hat{\mathcal{H}}_i = -j\hbar \frac{C_{rq}}{\det \mathbf{C}} \hat{q}_1 \frac{\partial}{\partial \hat{\phi}_4} \end{array} \right. \quad (93b)$$

$$\left\{ \begin{array}{l} \hat{\mathcal{H}}_q = -\hbar^2 \frac{C_r + C_{rq}}{2 \det \mathbf{C}} \frac{\partial^2}{\partial \hat{\phi}_4^2} - E_{J0} \cos[k_J(\hat{\phi}_4)] \end{array} \right. . \quad (93c)$$

Under the weak coupling approximation we can treat $\hat{\mathcal{H}}_r$ and $\hat{\mathcal{H}}_q$ separately, and consider $\hat{\mathcal{H}}_i$ as a perturbative interaction. Thus, $\hat{\mathcal{H}}_r$ can be quantized using the standard creation and annihilation operators \hat{a}^\dagger and \hat{a} of a simple quantum-mechanical harmonic oscillator,

$$\hat{\mathcal{H}}_r = h f_r \left(\hat{a}^\dagger \hat{a} + \frac{1}{2} \right) , \quad (94)$$

where

$$f_r = \frac{1}{2\pi\sqrt{L_r \tilde{C}}} , \quad (95)$$

with $\tilde{C} = \det \mathbf{C}/(C_q + C_{rq})$ (as expected, $\tilde{C} = C_r$ when $C_q = 0$).

By diagonalizing $\hat{\mathcal{H}}_q$ we obtain a set of eigenstates

$$\{|\ell\rangle\} = \{|g\rangle, |e\rangle, |f\rangle, \dots\} , \quad (96)$$

where $|g\rangle$ is the energy ground state, $|e\rangle$ the energy first excited state, and $|f\rangle$ the next excited state, etc. By defining the eigenfrequencies associated with these eigenstates as f_ℓ , we have

$$\hat{\mathcal{H}}_q = h \sum_\ell f_\ell |\ell\rangle \langle \ell| . \quad (97)$$

By imposing twice the completeness relation for the set of eigenstates of Eq. (96) around $\hat{\mathcal{H}}_i$,

$$\begin{aligned} \hat{\mathcal{H}}_i &= \sum_{\ell,m} |\ell\rangle \langle \ell| \left(-j\hbar \frac{C_{rq}}{\det \mathbf{C}} \hat{q}_1 \frac{\partial}{\partial \hat{\phi}_4} \right) |m\rangle \langle m| \\ &= \sum_{\ell,m} |\ell\rangle \langle \ell| \left(-j\hbar \frac{C_{rq}}{\det \mathbf{C}} \frac{\partial}{\partial \hat{\phi}_4} \right) |m\rangle \langle m| \otimes \hat{q}_1 , \end{aligned} \quad (98)$$

where $\hat{q}_1 = q_0(\hat{a}^\dagger + \hat{a})$ and the zero-point charge is given by $q_0 = \sqrt{C_r h f_r / 2}$ [17]. By defining

$$g_{\ell,m} = -j \frac{C_{rq} q_0}{2\pi \det \mathbf{C}} \langle \ell| \left(\frac{\partial}{\partial \hat{\phi}_4} \right) |m\rangle \quad (99)$$

as the coupling coefficients in unit hertz,

$$\hat{\mathcal{H}}_i = h \sum_{\ell,m} g_{\ell,m} |\ell\rangle \langle m| \otimes (\hat{a}^\dagger + \hat{a}) . \quad (100)$$

In some cases, it is possible to simplify the total Hamiltonian of this circuit by making a two-level approximation, $\{|\ell\rangle\} = \{|g\rangle, |e\rangle\}$, by neglecting the coefficients g_{gg} and g_{ee} , by offsetting the energy difference between the energy ground and first excited state such that $f_{ge} = f_e - f_g = f_q$, and by assuming $g_{ge} = g_{eg} = g_{rq}$,

$$\begin{aligned} \hat{\mathcal{H}}_{rq} &= \frac{h f_q}{2} (|e\rangle \langle e| - |g\rangle \langle g|) \\ &+ h g_{ge} (|g\rangle \langle e| + |e\rangle \langle g|) \otimes (\hat{a}^\dagger + \hat{a}) \\ &+ h f_r \left(\hat{a}^\dagger \hat{a} + \frac{1}{2} \right) \\ &= \frac{h f_q}{2} \hat{\sigma}_z + h g_{rq} \hat{\sigma}_x \otimes (\hat{a}^\dagger + \hat{a}) + h f_r \left(\hat{a}^\dagger \hat{a} + \frac{1}{2} \right) , \end{aligned} \quad (101)$$

where $\hat{\sigma}_x$ and $\hat{\sigma}_z$ are the usual Pauli operators.

By performing a rotating wave approximation we finally find the Jaynes-Cummings Hamiltonian

$$\hat{\mathcal{H}}_{JC} = \frac{h f_q}{2} \hat{\sigma}_z + h g_{rq} (\hat{\sigma}^- \hat{a}^\dagger + \hat{\sigma}^+ \hat{a}) + h f_r \left(\hat{a}^\dagger \hat{a} + \frac{1}{2} \right) , \quad (102)$$

where $\hat{\sigma}^+$ and $\hat{\sigma}^-$ are the usual two-level raising and lowering operators.

VII. CONCLUSIONS

I find it rather interesting that when deriving the total instantaneous energy of a circuit from its power written using the incidence matrix, which is nothing by a neat way to use KCL and KVL, we obtain a kinetic and a co-kinetic energy term.

As for the “Vool-Devoret circuit,” I was not too surprised to find three DOF. In fact, that circuit is basically the series of three LC resonators and, thus, should comprise three modes, i.e., three DOF. It is worth noting that when the effect of C_3 and L_4 is small compared to that of the other circuit elements in the system, the circuit effectively becomes two weakly coupled LC resonators and, thus, with just two effective DOF.

The first time I realized that auxiliary (in real life, parasitic) circuit elements can be a key to find the Hamiltonian of a circuit is when a theorist back in 2012 asked me: “How do you quantize a single capacitor C ?” You can not, unless you include the parasitic inductor L_p associated with it. Then the problem becomes that of a simple harmonic oscillator as you are just dealing with an $L_p C$ resonator. The next question was, “How can you unveil the quantum-mechanical nature of a single capacitor?” Now, the resonance frequency of the capacitor-with-parasitic-inductor resonator, $f_0 = 1/(2\pi\sqrt{L_p C})$ may be very high or very low. For example, if it is very low you will need to cool it down to extremely low temperatures to unveil its quantum-mechanical nature.

Sometimes, in real applications, the parasitic elements result in resonance frequencies (modes) very far from all the frequencies of interest for a certain experiment and,

thus, do not effectively participate much in the system's dynamics of interest. This suggests that, in the method discussed in this Note, we could effectively "eliminate" their presence by means of a limiting process; this is a topic that I am presently investigating in detail and will eventually be added to the Note.

ACKNOWLEDGEMENTS

I would like to thank J.H. Béjanin, Y. Ayadi, M.M. Ayyash, as well as the present and past members of my team at the University of Waterloo for their fruitful discussions. I am indebted to Prof. A. Premoli for teaching an excellent, and incredibly tough, course on circuit theory back in 1998 at the Politecnico di Milano. Additionally, I thank A.V. Bardysheva for helping with the figures.

- [1] D. A. Wells, *Journal of Applied Physics* **9**, 312 (1938), <https://doi.org/10.1063/1.1710422>.
- [2] B. M. Maschke, A. J. van der Schaft, and P. C. Breedveld, *IEEE Transactions on Circuits and Systems I: Fundamental Theory and Applications* **42**, 73 (1995).
- [3] G. Burkard, R. H. Koch, and D. P. DiVincenzo, *Phys. Rev. B* **69**, 064503 (2004).
- [4] U. Vool and M. Devoret, *International Journal of Circuit Theory and Applications* **45**, 897 (2017), <https://onlinelibrary.wiley.com/doi/pdf/10.1002/cta.2359>.
- [5] B. Yurke and J. S. Denker, *Phys. Rev. A* **29**, 1419 (1984).
- [6] J. A. Russer and P. Russer, in *2011 41st European Microwave Conference* (2011) pp. 1153–1156.
- [7] L. O. Chua, C. A. Desoer, and E. S. Kuh, *Linear and Nonlinear Circuits* (McGraw-Hill, Inc., USA, 1987).
- [8] C. Cercignani, *Spazio, Tempo, Movimento. Introduzione alla Meccanica Razionale* (Nicola Zanichelli S.p.A., Bologna, Italy, 1976).
- [9] This excellent textbook is only in Italian, but "equations all same.".
- [10] J. Koch, T. M. Yu, J. Gambetta, A. A. Houck, D. I. Schuster, J. Majer, A. Blais, M. H. Devoret, S. M. Girvin, and R. J. Schoelkopf, *Phys. Rev. A* **76**, 042319 (2007).
- [11] A. Barone and G. Paternò, *Physics and Applications of the Josephson Effect* (John Wiley & Sons, Inc., USA,

Appendix A: Potential Energy

In Eq. (20), the potential energy associated with the only element of the generalized coordinate set $\{\xi^k\}$, $\xi = \phi$ is

$$U(\phi) = -E_{J0} \cos[k_J(\phi - \tilde{\phi})] . \quad (\text{A1})$$

More in general, any term that can be written as

$$\left\{ \begin{array}{l} U(\vec{\xi}) = \sum_{k=1}^{N_\xi} f(\xi^k) \end{array} \right. \quad (\text{A2a})$$

$$\left\{ \begin{array}{l} U(\vec{p}) = \sum_{k=1}^{N_\xi} f(p_k) \end{array} \right. \quad (\text{A2b})$$

is a potential energy term.

Appendix B: Lagrangian

We do not need to find any Lagrangian with this method. Although unnecessary, I will make a connection between the energy and Hamiltonian as found here and their corresponding Lagrangian in a future appendix to this note.

- 1982).
- [12] The only reason Eq. (4) may aspire to be called with its own name is because of the k_J coefficient that relates ϕ to φ .
- [13] Not to get confused with the charge variables, we do not use the standard notation where the generalized coordinates are indicated by q^k . Similarly, we use the index k instead of i not to get confused with the current variables or the imaginary unit.
- [14] L. Landau and E. Lifshitz, *Mechanics - Third Edition; Course of Theoretical Physics, Vol. 1* (Elsevier Butterworth-Heinemann, Linacre House, Jordan Hill, Oxford UK, 1976).
- [15] M. Tinkham, *Introduction to Superconductivity - Second Edition* (Dover Publications, Inc., Mineola, New York USA, 1996).
- [16] R. Loudon, *The Quantum Theory of Light* (OUP Oxford UK, 2000).
- [17] This follows from the fact that the sum of the capacitive and inductive mean energies $\langle \mathcal{E}_{C0} \rangle + \langle \mathcal{E}_{L0} \rangle = h f_r / 2$ and $\langle \mathcal{E}_{C0} \rangle = \langle \mathcal{E}_{L0} \rangle$, as well as $\langle \mathcal{E}_{C0} \rangle = q_0^2 / (2C_r)$.