

MEASURING ANGLES IN AXIOMATIC EUCLIDEAN PLANAR GEOMETRY

MARTIN GRÖTSCHHEL, HARALD HANCHE-OLSEN, HELGE HOLDEN,
AND MICHAEL P. KRISTEK

ABSTRACT. We address the issue of angle measurements which is a contested issue for the International System of Units (SI). We provide a mathematically rigorous and axiomatic presentation of angle measurements that leads to the traditional way of measuring a plane angle subtended by a circular arc as the length of the arc divided by the radius of the arc, a scalar quantity. This abstract approach has the advantage that it is independent of the assumptions of Cartesian plane geometry. We distinguish between the *abstract angular measure*, defined in terms of congruence classes of angles, and the *numerical angular measure* that can be assigned to each congruence class in such a way that, e.g., the right angle has the numerical value $\frac{\pi}{2}$. We argue that angles are intrinsically different from lengths, as there are angles of special significance (such as the right angle, or the straight angle), while there is no distinguished length in Euclidean geometry.

*What's in a name? That which we call a rose,
By any other word would smell as sweet.*
– William Shakespeare

1. INTRODUCTION

There has been a long discussion within the metrology community regarding angular measures [6, 7, 8, 9, 10, 11]. Should they be considered dimensionless quantities, i.e., quantities of dimension one, as currently prescribed by the SI standard, or should the radian be made another independent (eighth) base unit? We here offer a detailed presentation of a mathematicians' view on this issue. In the following we have chosen to pursue the axiomatic approach introduced in Euclid's *Elements* [1] as made rigorous by D. Hilbert [5]. Using the ingenious method of Archimedes [4], we finally obtain the traditional way of measuring a plane angle subtended by a circular arc as the length of the arc divided by the radius of the arc, a scalar quantity. By relying on the abstract approach, we free ourselves from the assumptions inherent in Cartesian plane geometry.

The axiomatization of planar geometry as laid out in Euclid's *Elements* is a pillar in the development of mathematics. In 1899, David Hilbert gave a modern axiomatic formulation of Euclidean geometry based on the two millennia of mathematical progress since Euclid. See [2] for a historical discussion. We follow the lucid presentation due to Hartshorne [3], with a few twists of our own.

Our focus here is to give an axiomatic presentation of angular measurement in the Euclidean plane, leading to the familiar definition of the measure of a plane

Date: November 12, 2020.

2020 Mathematics Subject Classification. Primary 51M04; Secondary 51A25, 01A20.

Key words and phrases. Angle magnitude, Euclidean geometry, radians, International System of Units, SI units.

MG and HH have served as Secretary General of the International Mathematical Union (MG: 2007–2014, HH: 2015–2022).

angle subtended by a circular arc as the length of the arc divided by the radius of the arc, a scalar quantity.

Planar Euclidean geometry is decidedly well-known; however, an axiomatic presentation requires a certain care to develop the tools in a complete and consistent manner. To ease the task for the reader we give a rather detailed and complete presentation, starting with the undefined notions of points and lines, based on Hilbert’s axioms as presented in [3]. We introduce line segments axiomatically by a congruence relation. To associate a length to a line segment there are essentially two avenues to follow – one is to introduce a reference line segment that is given unit length, or the other by considering only relative lengths by comparing ratios of segments. Here we follow the second alternative, and introduce a consistent way to add lengths measured as ratios.

Before presenting our approach precisely we provide an informal preview. An angle is defined as the union of two (distinct and non-opposite) rays (half-lines with a direction) originating from a common point (denoted apex). Note that this excludes the zero angle and the straight angle. A congruence relation between angles is introduced axiomatically. We introduce the addition of (congruence classes of) angles provided their sum is less than the straight angle (more precisely, if each angle is less than the supplementary angle of the other). The extension to angles of arbitrary magnitude is essentially a book keeping issue.

Next comes the definition of the size of an angle. While lengths scale indiscriminately, angles are different in the sense that the right angle and the straight angle are distinguished any way you measure them. Here we follow the celebrated approach due to Archimedes in his approximation of the ratio of the circumference of a circle to its diameter (the name π for this ratio was of course introduced much later). Archimedes’ method consisted in approximating the circle by inscribed and circumscribed regular polygons of high order. Using 96-sided polygons, he arrived at the estimates $3\frac{10}{71} < \pi < 3\frac{1}{7}$ [4, pp. 93–98].

We define the measure of an angle as the supremum of the sum of length ratios of the polygons inscribed in the circle and inside the angle and the (common) radius. This notion of angle measurement is additive and gives the measure of $\frac{\pi}{2}$ for a right angle. We note that the measurement of an angle is a scalar quantity, arising as it does from sums of length ratios.

We distinguish between the concept of *abstract angular measure* (AAM) defined as a congruence class of an angle, and the *numerical angular measure*, assigned to each congruence class. More specifically, each congruence class consists of angles characterized in such a way that they are “of the same size”. As we will argue, this will be a function of length *ratios*, and thus independent of absolute length scales. For each AAM α we associate a numerical value $\vartheta(\alpha)$, which we can write as usual $\vartheta(\alpha) = s/r$, as the ratio between the arc length and the radius. This will lead to the classical result that a right angle has the numerical value of $\frac{\pi}{2}$. One can define the radian as the AAM for which $\vartheta(\text{rad}) = 1$.

The root of the confusion regarding angle measurements comes from the common conflation of identifying $\vartheta(\alpha)$ and α . In practical computations, there are no problems with this, but they are fundamentally different. In light of these remarks, we see it as neither desirable nor necessary to add the radian as the eighth independent unit in SI.


2. POINTS, LINES, AND LINEAR SEGMENTS

Like all axiomatic systems, geometry is based on a number of undefined terms. In our case, we begin with a set whose elements are called *points* and another set whose elements are called *lines*. We will introduce, step by step, a system of axioms that

we suppose the points and lines have to satisfy. Of particular importance are the notions of *incidence*, which is a relation between a point and a line, *betweenness*, which is a relation between three points, and *congruence* \cong , which is an equivalence relation¹ between two line segments or two angles (to be defined later).


The *incidence axioms* are:

- I1. Any two distinct points are incident with exactly one line.
- I2. Every line is incident with at least two distinct points.
- I3. There exist three noncollinear points.

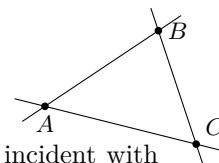


It follows from I1 and I2 that any line is given by the set of points incident with it. Thus we can, and shall, identify a line with its set of incident points. Rather than the cumbersome “incident with” we use commonly understood terms such as points lying on a line, a line passing through a point, etc. We shall write AB for the unique line through distinct points A, B .

For the *betweenness axioms* B1–B4, we need some notation and a definition. The betweenness relation “ B is between A and C ” is written $A * B * C$. The *line segment* between two distinct points D and E is the set consisting of D, E , and all points between them, and is denoted by \overline{DE} .

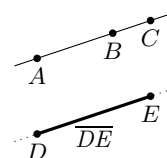

- B1. If $A * B * C$ then A, B, C are distinct points on a line, and also $C * B * A$.
- B2. For any two distinct points A and B , there exists a point C such that $A * B * C$.
- B3. Given three distinct points on a line, exactly one of them is between the other two.
- B4. *Pasch’s axiom*: If A, B, C be three non-collinear points and a line l contains none of them, but l contains a point in \overline{AB} , then l contains a point in $\overline{AC \cup BC}$.


While axiom I3 makes our geometry *at least* two-dimensional, Pasch’s axiom B4 in effect makes it *at most* two-dimensional. One aspect of this is that any line l divides the plane (with l removed) into two halves: More precisely, the set of points not on l is divided into two nonempty disjoint subsets, so that the line segment between two points in one subset does not intersect l , while the line segment between a point in one subset and a point in the other does intersect l . The two sets are called the two *sides* of l , and we are thus allowed to use phrases like “ A and B lie on the same side of l ” or “ A and B lie on opposite sides of l ”.

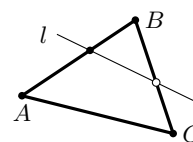

Pasch’s axiom

Axioms B1–B3 imply that any line l can be given a total order \prec so that for any distinct A, B, C on l , $A * B * C$ if and only if either $A \prec B \prec C$ or $C \prec B \prec A$. Moreover, the order is unique up to reversal. For this reason, the axiomatic system given by the incidence axioms I1–I3 and the betweenness axiom B1–B4 is known as *ordered geometry*.

The ray \overrightarrow{AB} consists of all points $C \in \overline{AB}$ so that $C * A * B$ is *not* true. We say the ray *originates* at A , or that A is the *origin* of the ray.




The *congruence axioms for line segments* are:

- C1. Given a line segment \overline{AB} and a ray r originating at C , there is a unique $D \in r$ so that $\overline{AB} \cong \overline{CD}$.
- C2. Congruence is an equivalence relation on line segments.
- C3. If $A * B * C$ and $D * E * F$ and $\overline{AB} \cong \overline{DE}$ and $\overline{BC} \cong \overline{EF}$, then $\overline{AC} \cong \overline{DF}$.


¹An *equivalence relation* R between two objects a and b is a relation that is reflexive (aRa), symmetric (if aRb , then bRa) and transitive (if aRb and bRc , then aRc). The *equivalence class* of an object a is the set of all objects that are equivalent to a .

As we like to think of line segments being congruent if and only if they have the same length, thanks to C2 we can turn this into a definition, and define the *length* $\langle \overline{AB} \rangle$ of a segment \overline{AB} to be its congruence class. Then axiom C1 states that the points on a ray (except for the origin of the ray) are in one-to-one correspondence with the set of lengths. We can also define an absolute order on the set of lengths, so that the sum of two lengths is greater than either summand.

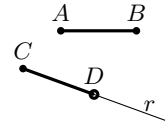

Axiom C1

We can *add* lengths by saying $\langle \overline{AB} \rangle + \langle \overline{BC} \rangle = \langle \overline{AC} \rangle$ whenever $A * B * C$; axiom C3 states that this is indeed well defined. Thus the set of lengths of line segments becomes an abelian semigroup.² In particular, we can define any positive integer multiple of a length by repeated addition. So far, we can only add lengths, but we cannot define a ratio of lengths, except for special cases where the ratio will be a rational number: If m and n are natural numbers with $m\langle \overline{AB} \rangle = n\langle \overline{CD} \rangle$, it makes sense to say that $\langle \overline{AB} \rangle / \langle \overline{CD} \rangle = n/m$.

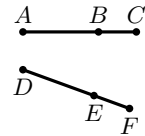


Axiom C3

This seems a good place to introduce the following two axioms:

- A. (Archimedes' axiom) Given two line segments, some integer multiple of the first segment is greater than the second.
- D. (Dedekind's axiom) If a line is a disjoint union of two nonempty sets A and B , and no point on B lies between two points of A and vice versa, there exists a point P so that $\{P\} \cup A$ and $\{P\} \cup B$ are opposite rays originating at P .

Archimedes' axiom is essential for avoiding the existence of infinitesimal or infinite lengths, whereas Dedekind's axiom guards against the existence of "point-sized holes" in a line. Related is the fact that there is no smallest length; i.e., between any given distinct points A and B another point can be found. (A proof is briefly indicated in the figure. C is any point not on the line AB , then D and E are picked by B2, and Pasch's axiom (B4) is used to show that EC must intersect \overline{AB} .)

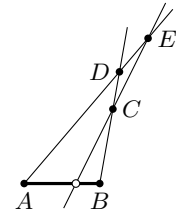

Given two lengths x and y , we can define their *ratio* $x/y \in (0, \infty)$ by


$$x/y = \sup\{a/b \mid a, b \in \mathbb{N}, ay \leq bx\}.$$

Archimedes' axiom guarantees that this ratio is positive and finite, whereas Dirichlet's axiom (together with the non-existence of any smallest length) implies that every positive real number is in fact a ratio of lengths. Relations like $(x + y)/z = x/z + y/z$ and $x/z < y/z \Leftrightarrow x < y$ are easy to show.

3. ANGLES

We now turn to the study and measurement of *angles*. In this section, we take ordered geometry (incidence and betweenness axioms) as given, along with the congruence axioms C1–C3. Axioms A and D are not needed for now.

An *angle* is the union of two distinct and non-opposite rays, called the *legs* of the angle, originating from a common point (the *apex* of the angle). Given two such rays r and s , we may write $\angle rs$ for the corresponding angle ($r \cup s$), but the notation $\angle BAC$ is more commonly employed, where the two rays are \overrightarrow{AB} and \overrightarrow{AC} . Note that $\angle BAC = \angle CAB$: Angles (like lines and segments) do not have a specific orientation. They do, however, have an inside and an outside: A point not on either leg of $\angle BAC$ is said to be *inside* $\angle BAC$ if it lies on the same side of AB as C , and on the same side of AC as B . Otherwise, it is *outside* the angle.

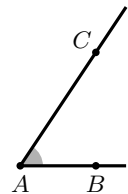

²This semigroup lacks a neutral element – a zero, since we do not include degenerate “line segments” consisting of a single point. This is easily remedied if desired.

The *triangle* ABC , with A, B, C non-collinear, is the union $\overline{AB} \cup \overline{BC} \cup \overline{CA}$ together with the given order of the corners A, B, C . Thus ABC and BAC are not considered to be the same triangle, although as points sets they are identical. Triangles ABC and DEF are called *congruent* if corresponding sides and angles are congruent, i.e., $\overline{AB} \cong \overline{DE}$, $\overline{BC} \cong \overline{EF}$, $\overline{CA} \cong \overline{FD}$, $\angle BAC \cong \angle EDF$, $\angle CBA \cong \angle FED$, and $\angle ACB \cong \angle DFE$.

The first two *congruence axioms for angles* are exact analogues of the congruence axioms C1 and C2 for segments.

C4. Given an angle $\angle BAC$ and a ray \overrightarrow{DF} , there exists a unique ray \overrightarrow{DE} on a given side of DF such that $\angle BAC \cong \angle EDF$.

C5. Congruence is an equivalence relation on angles.

SAS. (“Side–angle–side.”) Triangles ABC and DEF are congruent, provided $\overline{AB} \cong \overline{DE}$, $\angle BAC \cong \angle EDF$, and $\overline{AC} \cong \overline{DF}$.


The incidence (I1–I3) and betweenness (B1–B4) axioms, along with the congruence axioms C1–C5 and SAS, constitute an axiomatic system known as *absolute geometry*. Any model of absolute geometry, i.e., a set of lines and points with the requisite relations satisfying the axioms, is called a *Hilbert plane*. We call a Hilbert plane *real* if it satisfies the axioms of Archimedes (A) and Dirichlet (D) in addition. Here, “real” refers to the real numbers, as these two axioms serve to ensure that length ratios correspond to real numbers.

The analogue of C3 for angle addition is an easy consequence of SAS, so we do not need to add it as an axiom:

C6. Theorem. *If C is an interior point of $\angle BAD$, and G is an interior point of $\angle FEH$ with $\angle BAC \cong \angle FEG$ and $\angle CAD \cong \angle GEH$, then $\angle BAD \cong \angle FEH$.*

Here we pause to note that SAS is the main bridge connecting the notion of lengths to the notion of angles. To be specific, consider an angle $\angle BAC$. Then SAS states, among other things, that $\langle \overline{BC} \rangle$ is uniquely determined by $\langle \overline{AB} \rangle$, $\langle \overline{AC} \rangle$, and the congruence class of $\angle BAC$. In the opposite direction we find that $\langle \overline{AB} \rangle$, $\langle \overline{AC} \rangle$, and $\langle \overline{BC} \rangle$ uniquely determine the congruence class of $\angle BAC$. This is a consequence of the “Three Sides” congruence theorem:

SSS. Theorem. *Given triangles ABC and DEF , if $\overline{AB} \cong \overline{DE}$, $\overline{BC} \cong \overline{EF}$, and $\overline{CA} \cong \overline{FD}$, then the two triangles are congruent.*



These results show that angular measures and length measures are inextricably tied together, a point we shall revisit later.

4. THE PARALLEL POSTULATE

To complete our discussion of the axioms of geometry, we introduce the *parallel postulate* in its modern form (Euclid’s formulation was rather different).

Two lines are said to be *parallel* if they have no point in common, or else are the same line.

P. (Playfair’s axiom.) Given a line and a point, there is exactly one line through the given point parallel to the given line.

Euclidean geometry is absolute geometry with Playfair’s axiom added. A *Euclidean plane* is a model of Euclidean geometry, i.e., a Hilbert plane satisfying axiom P. Finally, a *real Euclidean plane* is a Euclidean plane satisfying axioms A and P.


From now on, we shall assume all the axioms of a real Euclidean plane. Non-Euclidean geometries have a number of peculiarities that do not concern us here.

A side remark: Similar triangles in a non-Euclidean geometry are congruent. In a Euclidean setting, on the other hand, even without axioms A and D we can define the ratio of lengths by an appeal to similar triangles. The resulting ratios are positive members


of a Pythagorean ordered field, for example the real part of the algebraic closure of \mathbb{Q} , or some non-standard model of \mathbb{R} .

5. ANGULAR MEASUREMENTS

In the same way that C2 allows the definition of lengths of intervals as congruence classes, we use C5 to define the *angular measure* of an angle as its congruence class, denoting by $\langle \angle BAC \rangle$ the angular measure of $\angle BAC$. Furthermore, just as C3 with the help of C1 lets us add arbitrary lengths, we can use C6 with the help of C4 to define the sum of *some* pairs of angular measures. The caveat is that we cannot add angles if the sum would be “too large”. To be more precise, we can add angles if and only if each angle is less than the supplementary angle of the other. In the image, $\langle \angle BAC \rangle + \langle \angle CAD \rangle = \langle \angle BAD \rangle$. The supplementary angle of $\angle BAC$ is $\angle CAE$, which is greater than $\angle CAD$.

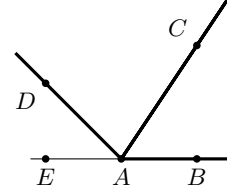

To deal with the problem of adding “too large” angles, the idea is to add (for the time being) a “fictional” angle measure ϖ corresponding to the straight “angle” defined by opposite rays.³ Technically, things become easier if we also adjoin a zero to the set of angular measures. Then a generalized angular measure would be a formal sum $a\varpi + \varphi$, where $a \geq 0$ is an integer counting half turns, and φ is a proper angular measure (or zero). The sum of $a\varpi + \varphi$ and $b\varpi + \psi$ would be one of $(a+b)\varpi + (\varphi + \psi)$ or $(a+b+1)\varpi + (\varphi + \psi - \varpi)$, where we just have to give meaning to the term $\varphi + \psi - \varpi$ when φ and ψ cannot be properly added. In the picture, $\langle \angle BAC \rangle + \langle \angle CAD \rangle - \varpi = \langle \angle EAD \rangle$. As a special case, the sum of an angular measure and its supplement will be ϖ . For future reference, note that a *right* angle is an angle congruent with its own supplement. Its angular measure is $\varpi/2$.

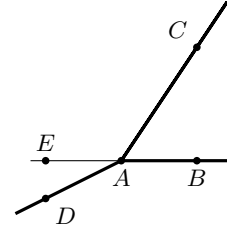


It is a trivial, albeit quite tedious, book keeping exercise to show that the set of generalized angular measures becomes an ordered additive semigroup in analogy with the semigroup of length measures. Thus we can define the ratio of angles in analogy with how we defined ratio of lengths. However, angles are different: While there is no particular distinguished length standing out from the others, some angles are special: A right angle is a right angle no matter how you measure it. Similar remarks hold for the straight angle ϖ and the full revolution 2ϖ . So if we are to measure angles by real numbers, only a few choices stand out from the other possibilities: Depending on which of the three angles mentioned above we consider more important, we could assign the number 1, 2, or 4 to the full revolution. More generally, we could assign some modest sized integer. Historically, the choice has fallen on 360, which has the advantage of having many small divisors, so that a full revolution divided by small integers often turn out to be an integral number of degrees. The only other reasonable choice we can think of, relies on measuring the length of a circular arc spanned by the angle. (We could also rely on area measurements, but the concept of area requires developing the axioms of geometry further. Nothing essentially new results from this.)

We might start very naïvely, relying on SAS and SSS and, more generally, the standard results on similar triangles, which hold in Euclidean geometry – but not in non-Euclidean geometries – and define


$$\sigma(\langle \angle BAC \rangle) = \frac{\overline{BC}}{\overline{AB}} \quad \text{provided } \overline{AB} \cong \overline{AC}.$$

In Euclidean geometry (i.e., satisfying P) this ratio is well defined.

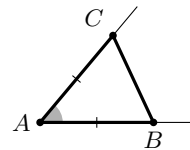

³The ad hoc notation ϖ (a variant form of the letter π) is highly nonstandard.


Indeed, σ is an increasing function of the angular measure as we have defined it. However, it is not additive. Rather, a simple application of the triangle inequality reveals that it is *subadditive*: $\sigma(\alpha + \beta) < \sigma(\alpha) + \sigma(\beta)$, as indicated in the picture, with $\alpha = \langle \angle BAC \rangle$ and $\beta = \langle \angle CAD \rangle$. We can remedy that by defining instead

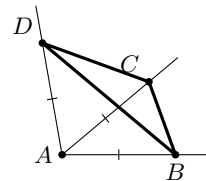

$$\vartheta(\alpha) = \sup \left\{ \sum_{i=1}^n \sigma(\beta_i) \mid \sum_{i=1}^n \beta_i = \alpha \right\}.$$

This is easily shown to be additive. Briefly, first note that if $\sum_i \beta_i = \alpha$ and $\sum_j \beta'_j = \alpha'$, then $\sum_i \beta_i + \sum_j \beta'_j = \alpha + \alpha'$, and so $\sum_i \sigma(\beta_i) + \sum_j \sigma(\beta'_j) \leq \vartheta(\alpha + \alpha')$, from which we get $\vartheta(\alpha) + \vartheta(\alpha') \leq \vartheta(\alpha + \alpha')$. For the opposite inequality, if $\sum_i \beta_i = \alpha + \alpha'$, we may (if necessary) replace one of the β_i by two angular measures, so that the angular measures may be divided into two sets summing to α and α' , respectively. Using the subadditivity of σ , we find that this procedure increases the value of $\sum_i \sigma(\beta_i)$, and we get $\sum_i \sigma(\beta_i) \leq \vartheta(\alpha) + \vartheta(\alpha')$, so that $\vartheta(\alpha + \alpha') \leq \vartheta(\alpha) + \vartheta(\alpha')$.

We can state our definition of $\vartheta(\alpha)$ in more geometric language as follows: Given an angular measure α and angular measures β_i with $\sum_{i=1}^n \beta_i = \alpha$, create an angle $\angle AOB$ with $\langle \angle AOB \rangle = \alpha$, pick a radius r , and points $P_0 = A, P_1, \dots, P_n = B$ along the circular arc from A to B with $\langle \angle P_{i-1}OP_i \rangle = \beta_i$ for $i = 1, \dots, n$. Then

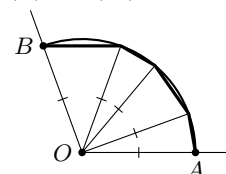


$$\sum_{i=1}^n \sigma(\beta_i) = \sum_{i=1}^n \frac{\langle \overline{P_i P_{i-1}} \rangle}{r} = \left(\sum_{i=1}^n \langle \overline{P_i P_{i-1}} \rangle \right) / r,$$

in which the sum on the right-hand side is simply the length of the piecewise linear curve passing from A via the P_i to B . In the Cartesian plane \mathbb{R}^2 , the length of a curve is defined to be the supremum of the lengths of broken lines formed by joining successive points along the curve. We can employ the same definition in our more abstract setting, concluding that $\vartheta(\alpha) = \ell/r$, where ℓ is the length measure of the circular arc from A to B :

$$\ell = \sup \sum_{i=1}^n \langle \overline{P_i P_{i-1}} \rangle,$$

where the supremum is taken over all choices of points P_i picked successively along the arc. The existence of the supremum in the set of length measures is guaranteed by Dedekind's axiom (D). In this approach, the reader may recognize Archimedes' computation of the circumference of a circle. He used regular polygons, approximating the circle both from the inside and the outside, thus getting both a lower and an upper estimate. But the idea is essentially the same.

The one thing missing from the above discussion is the fact that $\vartheta(\alpha)$ (equivalently, the length of the circular arc) will in fact be finite. The crucial observation here is that in the picture, $\langle \overline{PQ} \rangle \leq \langle \overline{P'Q'} \rangle$ (so long as $P'Q'$ lies outside the circle). Applying this to the segments of a broken line, and using each of the three indicated sides of the rectangle circumscribing the semicircle, we quickly conclude that $\vartheta(\alpha) < 4$ for any angular measure α .

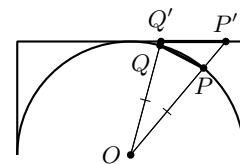

The ratio π between the arc length of a semicircle and its radius will be $\pi = \sup_{\alpha} \vartheta(\alpha)$, the supremum taken over all proper angular measures α . We may stretch this a little bit and declare $\vartheta(\varpi) = \pi$. If we perform the calculation in the standard Cartesian plane \mathbb{R}^2 , we end up with the usual value for π , or as any bright calculus student will know,

$$\pi = \int_{-1}^1 \frac{dx}{\sqrt{1-x^2}}.$$

6. OBJECTIONS

The recent letter by Quincey et al. [11] lists four “misconceptions that arise in the discussion of angles”.

We address the first two together: *Mathematics tells us that angle is a length ratio since $s = r\theta$, and an angle is defined as the ratio of an arc length to a radius.* In the immortal words of Bill Clinton, that depends on what the meaning of “is” is. What our analysis shows is that angles are most definitely intimately *related* to length ratios. For example, an angle preserving mapping f of a Euclidean plane to itself, i.e., so that $f(A) = A'$, $f(B) = B'$, and $f(C) = C'$ implies $\angle B'A'C' \cong \angle BAC$, must necessarily have the property that (with similar notation) $\langle \overline{A'B'} \rangle / \langle \overline{AB} \rangle$ is a constant independent of A, B ; or equivalently, that length ratios are preserved: $\langle \overline{A'B'} \rangle / \langle \overline{C'D'} \rangle = \langle \overline{AB} \rangle / \langle \overline{CD} \rangle$.

A related result in the same direction concerns conformal mappings. These are smooth mappings from an open subset of a Cartesian space \mathbb{R}^n into \mathbb{R}^n so that, whenever two smooth paths in the domain of the mapping cross each other, their image paths cross at the same angle. It is well known that this is equivalent with the requirement that every directional derivative of the mapping at any given point has the same magnitude (though this magnitude may vary from point to point). Again, this shows that angles and length ratios (in this case, local length ratios) are interlinked.

It is true that nothing *forces* us to define an angle as the ratio of an arc length to a radius, but however we do define it, this is the definition that thrusts itself at us as the obvious choice, far preferable over any other, at least for theoretical use. In practical measurement, traditional measures such as degrees still gain the upper hand, of course.

The third “misconception” is this: *Angle measurement requires length measurement.* We believe our discussion above disposes of this argument. It is certainly true that one can use a compass and a straight edge to repeatedly bisect a straight angle, thereby essentially creating a protractor with which one can measure an arbitrary angle to any desired precision. However, the defining characteristic of a compass is its ability to create circles of any desired diameter, a concept that relies crucially on length. The same is true of a physical protractor, typically made of a piece of plastic. To be useful, the protractor must be stiff, which by definition means that the distance between any two points of the protractor does not change as we move the protractor around. A “protractor” made of a piece of rubber membrane is no use at all! The same goes for the protractor created by repeatedly folding a piece of paper: This works only because the paper is stiff, and would fail if we replaced it by a rubber membrane.

Regarding the fourth misconception: *The radian is a derived unit equal to a metre per metre,* we do not feel that mathematics sheds any new light on this statement.

7. CONCLUSION

Let us repeat and look at the previous discussion from a general point of view. Nobody will question that points and lines are geometric objects. Angles, introduced in this article as the union of two rays with a common apex, are geometric objects as well. There is a practical need to associate numerical measures with geometric objects. For lines, the natural way is to define a length unit (such as meter) with which, for every line, the length of a line segment can be measured. For angles, no matter how they are placed in the plane, the natural way is to identify those angles that are “of the same type” and define a measure that gives the same value

to all angles of the same type. We have captured this idea by the definition of congruence of angles and have introduced the concept of angular measure in Euclidean plane geometry as the congruence class of an angle. It should perhaps better be called *abstract angular measure* (AAM) in order to emphasize its non-numerical nature. We have shown that the very notion of congruence of angles, and hence the AAMs, relies crucially on the concept of length. However, since absolute length scales have no influence on angles, we must conclude that angular measure must be considered a function of length ratios.

Among the AAMs we find ϖ , corresponding to the straight angle, $\varpi/2$, corresponding to a right angle, and the degree $^\circ = \varpi/180$. To each AAM α we have assigned a *numerical angular measure* $\vartheta(\alpha)$, for which we can write in the conventional manner $\vartheta(\alpha) = s/r$. In particular, $\vartheta(\varpi) = \pi$ and $\vartheta(1^\circ) = \pi/180$. We can also define the radian as the AAM for which $\vartheta(\text{rad}) = 1$. We now have $\varpi = \pi \text{ rad} = 180^\circ$; in particular, we no longer need the temporary notation ϖ .

Note that the conventional notation $\alpha = s/r$ is, strictly speaking, a category error, since an abstract angular measure is not a number. It is, however, quite common to conflate the two concepts, i.e., not to distinguish between α and $\vartheta(\alpha)$. In the vast majority of cases this is harmless.

If we do conflate AAMs with their numerical representation, however, the equation $\vartheta(\text{rad}) = 1$ becomes $\text{rad} = 1$, which is the source of much confusion, such as considering the unit radian to be a derived unit which is equal to the number one. Unfortunately, this statement also appears in the current SI brochure, where moreover the angular unit ‘rad’ is expressed by the quotient m/m, in order to emphasize that it *is* a derived unit in the SI. But these statements are not justified at all. The mere use of a numerical value, i.e., omitting the unit of that value (as would be correct here), is not the same as setting the unit equal to the number one.

If any value associated with a magnitude is specified, both the numerical value and the corresponding unit must always be stated. Angles are no exception. In case of a semicircle, for example, the value associated with the angular magnitude is $\pi \text{ rad}$, not simply π , i.e., the unit rad must be included. On the other hand, $c = \pi r$ must be written for the arc of a semicircle with radius r , i.e., in this case it is necessary to omit the unit, no matter which angular unit is used, because the angular measure has to be used here, which is a pure number.

When dealing with trigonometric functions, a commonly used expression such as $\sin \alpha$ would be a category error, the correct expression being instead $\sin \vartheta(\alpha)$. However, in antiquity, trigonometric functions were indeed considered functions of the geometric angle, thus lending some historical justification to this usage. We can easily resolve the ambiguity by allowing the symbol \sin to stand for a function either of an abstract angular measure or of a real number, as the context requires. Thus both equations $\sin 30^\circ = \frac{1}{2}$ and $\sin \frac{\pi}{6} = \frac{1}{2}$ can be seen as perfectly valid statements of the same fact.

We introduced the notion of abstract angular measure (AAM) and the conversion function ϑ only for the purpose of the present discussion. However, requiring scientists and engineers to maintain the distinction between AAMs and their measure in radians would impose an undue and totally unnecessary burden on them. In particular, we do not propose the general use of our function ϑ , by whatever name one would choose to give it.

Although the discussion here has been confined to the angles of planar Euclidean geometry, all conclusions apply equally to the concepts of “angle of rotation” and “phase angle”, which have not been discussed here in order to concentrate on the essential points.

REFERENCES

- [1] Euclid, *Elements*, Greek text edited by J. L. Heiberg, English translation by Richard Fitzpatrick (2008) <https://farside.ph.utexas.edu/books/Euclid/Euclid.html>
- [2] J. Gray, *Worlds Out of Nothing. A Course in the History of Geometry in the 19th Century*, Springer-Verlag, London 2011.
- [3] R. Hartshorne, *Geometry: Euclid and Beyond*, Springer-Verlag 2000.
- [4] T. L. Heath, *The Works of Archimedes*, Cambridge University Press 1897.
- [5] D. Hilbert, *Foundations of Geometry*, Open Court, La Salle, 1971. (Based on the 10th German edition.) Original edition: *Grundlagen der Geometrie*, B. G. Teubner, Leipzig 1899.
- [6] M. I. Kalinin, On the status of plane and solid angles in the International System of Units (SI). *Metrologia* **56** 065009, 2019.
- [7] M. P. Krystek, The term ‘dimension’ in the international system of units. *Metrologia* **52** 297–300, 2015.
- [8] P. J. Mohr and W. D. Phillips, Dimensionless units in the SI. *Metrologia* **52** 40–47, 2015.
- [9] P. Quincey, The range of options for handling plane angle and solid angle within a system of units. *Metrologia* **53** 840, 2016.
- [10] P. Quincey and R. J. C. Brown, Implications of adopting plane angle as a base quantity in the SI. *Metrologia* **53** 998, 2016.
- [11] P. Quincey, P. J. Mohr, and W. D. Phillips, Angles are inherently neither length ratios nor dimensionless. *Metrologia* **56** 043001, 2019.

(M. Grötschel) BERLIN-BRANDENBURG ACADEMY OF SCIENCES AND HUMANITIES, JÄGERSTRASSE 22/23, 10117 BERLIN, GERMANY

Email address: groetschel@bbaw.de

(H. Hanche-Olsen) DEPARTMENT OF MATHEMATICAL SCIENCES, NTNU NORWEGIAN UNIVERSITY OF SCIENCE AND TECHNOLOGY, NO-7491 TRONDHEIM, NORWAY

Email address: harald.hanche-olsen@ntnu.no

URL: <https://www.ntnu.edu/employees/hanche>

(H. Holden) DEPARTMENT OF MATHEMATICAL SCIENCES, NTNU NORWEGIAN UNIVERSITY OF SCIENCE AND TECHNOLOGY, NO-7491 TRONDHEIM, NORWAY

Email address: helge.holden@ntnu.no

URL: <https://www.ntnu.edu/employees/holden>

(M. P. Krystek) PHYSIKALISCH-TECHNISCHE BUNDESANSTALT, BUNDESALLEE 100, D-38116 BRAUNSCHWEIG, GERMANY

Email address: Michael.Krystek@ptb.de