

# ON ANGULAR MEASURES IN AXIOMATIC EUCLIDEAN PLANAR GEOMETRY

MARTIN GRÖTSCHHEL, HARALD HANCHE-OLSEN, HELGE HOLDEN,  
AND MICHAEL P. KRYSSTEK

ABSTRACT. We address the issue of angle measurements which is a contested issue for the International System of Units (SI). We provide a mathematically rigorous and axiomatic presentation of angle measurements that leads to the traditional way of measuring a plane angle subtended by a circular arc as the length of the arc divided by the radius of the arc, a scalar quantity. This abstract approach has the advantage that it is independent of the assumptions of Cartesian plane geometry. We distinguish between the *geometric angle*, defined in terms of congruence classes of angles, and the (numerical) *angular measure* that can be assigned to each congruence class in such a way that, e.g., the right angle has the numerical value  $\frac{\pi}{2}$ . We argue that angles are intrinsically different from lengths, as there are angles of special significance (such as the right angle, or the straight angle), while there is no distinguished length in Euclidean geometry. This is further underlined by the observation that, while units such as the metre and kilogram have been refined over time due to advances in metrology, no such refinement of the radian is conceivable. It is a mathematically constructed unit, set in stone for eternity. We conclude that angle measurements are dimensionless, and the current definition in SI should remain unaltered.

*What's in a name? That which we call a rose,  
By any other word would smell as sweet.*  
– William Shakespeare

## 1. INTRODUCTION

There has been a long discussion within the metrology community regarding angular measures [6, 7, 8, 9, 10, 11]. Should they be considered dimensionless quantities, i.e., quantities of dimension one, as currently prescribed by the SI standard, or should the radian be made another independent (eighth) base unit? We here offer a detailed presentation of a mathematicians' view on this issue, with a focus on the mathematical concept of angles, rather than their physical manifestation. In the following we have chosen to pursue the axiomatic approach introduced in Euclid's *Elements* [1] as made rigorous by D. Hilbert [5]. Using the ingenious method of Archimedes [4], we finally obtain the traditional way of measuring a plane angle subtended by a circular arc as the length of the arc divided by the radius of the arc, a scalar quantity. By relying on the abstract approach, we free ourselves from the assumptions inherent in Cartesian plane geometry.

The axiomatization of planar geometry as laid out in Euclid's *Elements* is a pillar in the development of mathematics. In 1899, David Hilbert gave a modern

---

*Date:* February 16, 2021.

*2020 Mathematics Subject Classification.* Primary 51M04; Secondary 51A25, 01A20.

*Key words and phrases.* Angle magnitude, Euclidean geometry, radians, International System of Units, SI units.

axiomatic formulation of Euclidean geometry based on the two millennia of mathematical progress since Euclid. See [2] for a historical discussion. We follow the lucid presentation due to Hartshorne [3], with a few twists of our own.

Our focus here is to give an axiomatic presentation of angular measurement in the Euclidean plane, leading to the familiar definition of the measure of a plane angle subtended by a circular arc as the length of the arc divided by the radius of the arc, a scalar quantity.

Planar Euclidean geometry is decidedly well-known; however, an axiomatic presentation requires a certain care to develop the tools in a complete and consistent manner. To ease the task for the reader we give a rather detailed and complete presentation, starting with the undefined notions of points and lines, based on Hilbert's axioms as presented in [3]. We introduce line segments axiomatically by a congruence relation. To associate a length to a line segment there are essentially two avenues to follow – one is to introduce a reference line segment that is given unit length, or the other by considering only relative lengths by comparing ratios of segments. Here we follow the second alternative, and introduce a consistent way to add lengths measured as ratios.

Before presenting our approach precisely, we provide an informal preview. An angle is defined as the union of two (distinct and non-opposite) rays (half-lines with a direction) originating from a common point (denoted apex). Note that this excludes the zero angle and the straight angle. A congruence relation between angles is introduced axiomatically. We introduce the addition of (congruence classes of) angles provided their sum is less than the straight angle (more precisely, if each angle is less than the supplementary angle of the other). The extension to angles of arbitrary magnitude is essentially a book keeping issue.

Next comes the definition of the size of an angle. While lengths scale indiscriminately, angles are different in the sense that the right angle and the straight angle are distinguished any way you measure them. Here we follow the celebrated approach due to Archimedes in his approximation of the ratio of the circumference of a circle to its diameter (the name  $\pi$  for this ratio was of course introduced much later). Archimedes' method consisted in approximating the circle by inscribed and circumscribed regular polygons of high order. Using 96-sided polygons, he arrived at the estimates  $3\frac{10}{71} < \pi < 3\frac{1}{7}$  [4, pp. 93–98].

We define the measure of an angle as the supremum of the sum of length ratios of the polygons inscribed in the circle and inside the angle and the (common) radius. This notion of angle measurement is additive and gives the measure of  $\frac{\pi}{2}$  for a right angle. We note that the measurement of an angle is a scalar quantity, arising as it does from sums of length ratios.

We distinguish between the concept of *geometric angle* defined as a congruence class of an angle, and the *angular measure*, assigned to each congruence class. More specifically, each congruence class consists of angles characterized in such a way that they are “of the same size”. As we will argue, this will be a function of length *ratios*, and thus independent of absolute length scales. For each geometric angle  $\alpha$  we associate a numerical value  $\vartheta(\alpha)$ , which we can write as usual  $\vartheta(\alpha) = s/r$ , as the ratio between the arc length and the radius. This will lead to the classical result that a right angle has the numerical value of  $\frac{\pi}{2}$ . One can define the radian as the geometric angle for which  $\vartheta(\text{rad}) = 1$ .

The common conflation of identifying  $\vartheta(\alpha)$  and  $\alpha$  appears to be the main source of much confusion regarding angular measurements. In practical computations and measurements, this does not cause any problems, but they are conceptually different. In the present letter, we are only concerned with the theoretical aspects of angular measures, not with the considerable challenges associated with practical,


accurate measurement of angles. Our goal is to participate from a mathematical point of view in the ongoing discussion regarding a base unit for angular measures. In light of our findings, we argue that it is neither desirable nor reasonable to add the radian as a base unit in the SI.

2. POINTS, LINES, AND LINEAR SEGMENTS

Like all axiomatic systems, geometry is based on a number of undefined terms. In our case, we begin with a set whose elements are called *points* and another set whose elements are called *lines*. We will introduce, step by step, a system of axioms that we suppose the points and lines have to satisfy. Of particular importance are the notions of *incidence*, which is a relation between a point and a line, *betweenness*, which is a relation between three points, and *congruence*  $\cong$ , which is an equivalence relation<sup>1</sup> between two line segments or two angles (to be defined later).


The *incidence axioms* are:

1. Any two distinct points are incident with exactly one line.
2. Every line is incident with at least two distinct points.
3. There exist three noncollinear points.

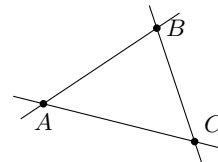


It follows from I1 and I2 that any line is given by the set of points incident with it. Thus we can, and shall, identify a line with its set of incident points. Rather than the cumbersome “incident with” we use commonly understood terms such as points lying on a line, a line passing through a point, etc. We shall write  $AB$  for the unique line through distinct points  $A, B$ .

For the *betweenness axioms* B1–B4, we need some notation and a definition. The betweenness relation “ $B$  is between  $A$  and  $C$ ” is written  $A * B * C$ . The *line segment* between two distinct points  $D$  and  $E$  is the set consisting of  $D, E$ , and all points between them, and is denoted by  $\overline{DE}$ .

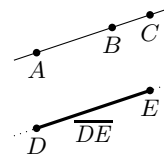

- B1. If  $A * B * C$  then  $A, B, C$  are distinct points on a line, and also  $C * B * A$ .
- B2. For any two distinct points  $A$  and  $B$ , there exists a point  $C$  such that  $A * B * C$ .
- B3. Given three distinct points on a line, exactly one of them is between the other two.
- B4. *Pasch’s axiom*: If  $A, B, C$  be three non-collinear points and a line  $l$  contains none of them, but  $l$  contains a point in  $\overline{AB}$ , then  $l$  contains a point in  $\overline{AC \cup BC}$ .

While axiom I3 makes our geometry *at least* two-dimensional, Pasch’s axiom B4 in effect makes it *at most* two-dimensional. One aspect of this is that any line  $l$  divides the plane (with  $l$  removed) into two halves: More precisely, the set of points not on  $l$  is divided into two nonempty disjoint subsets, so that the line segment between two points in one subset does not intersect  $l$ , while the line segment between a point in one subset and a point in the other does intersect  $l$ . The two sets are called the two *sides* of  $l$ , and we are thus allowed to use phrases like “ $A$  and  $B$  lie on the same side of  $l$ ” or “ $A$  and  $B$  lie on opposite sides of  $l$ ”.

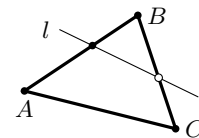


Pasch’s axiom

Axioms B1–B3 imply that any line  $l$  can be given a total order  $\prec$  so that for any distinct  $A, B, C$  on  $l$ ,  $A * B * C$  if and only if either  $A \prec B \prec C$  or  $C \prec B \prec A$ . Moreover, the order is unique up to reversal. For this reason, the axiomatic system

<sup>1</sup>An *equivalence relation*  $\cong$  between two objects  $a$  and  $b$  is a relation that is reflexive ( $a \cong a$ ), symmetric (if  $a \cong b$ , then  $b \cong a$ ) and transitive (if  $a \cong b$  and  $b \cong c$ , then  $a \cong c$ ). The *equivalence class* of an object  $a$  is the set of all objects that are equivalent to  $a$ .

given by the incidence axioms I1–I3 and the betweenness axiom B1–B4 is known as *ordered geometry*.

The ray  $\overrightarrow{AB}$  consists of all points  $C \in AB$  so that  $C * A * B$  is *not* true. We say the ray *originates* at  $A$ , or that  $A$  is the *origin* of the ray.




The *congruence axioms for line segments* are:

C1. Given a line segment  $\overline{AB}$  and a ray  $r$  originating at  $C$ , there is a unique  $D \in r$  so that  $\overline{AB} \cong \overline{CD}$ .

C2. Congruence is an equivalence relation on line segments.


C3. If  $A * B * C$  and  $D * E * F$  and  $\overline{AB} \cong \overline{DE}$  and  $\overline{BC} \cong \overline{EF}$ , then  $\overline{AC} \cong \overline{DF}$ .

As we like to think of line segments being congruent if and only if they have the same length, thanks to C2 we can turn this into a definition, and define the *length*  $\langle \overline{AB} \rangle$  of a segment  $\overline{AB}$  to be its congruence class. Then axiom C1 states that the points on a ray (except for the origin of the ray) are in one-to-one correspondence with the set of lengths. We can also define an absolute order on the set of lengths, so that the sum of two lengths is greater than either summand.

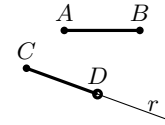

Axiom C1

We can *add* lengths by saying  $\langle \overline{AB} \rangle + \langle \overline{BC} \rangle = \langle \overline{AC} \rangle$  whenever  $A * B * C$ ; axiom C3 states that this is indeed well defined. Thus the set of lengths of line segments becomes an abelian semigroup.<sup>2</sup> In particular, we can define any positive integer multiple of a length by repeated addition. So far, we can only add lengths, but we cannot define a ratio of lengths, except for special cases where the ratio will be a rational number: If  $m$  and  $n$  are natural numbers with  $m \langle \overline{AB} \rangle = n \langle \overline{CD} \rangle$ , it makes sense to say that  $\langle \overline{AB} \rangle / \langle \overline{CD} \rangle = n/m$ .

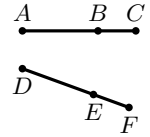


Axiom C3

This seems a good place to introduce the following two axioms:

- A. (Archimedes' axiom) Given two line segments, some integer multiple of the first segment is greater than the second.
- D. (Dedekind's axiom) If a line is a disjoint union of two nonempty sets  $A$  and  $B$ , and no point on  $B$  lies between two points of  $A$  and vice versa, there exists a point  $P$  so that  $\{P\} \cup A$  and  $\{P\} \cup B$  are opposite rays originating at  $P$ .

Archimedes' axiom is essential for avoiding the existence of infinitesimal or infinite lengths, whereas Dedekind's axiom guards against the existence of “point-sized holes” in a line. Related is the fact that there is no smallest length; i.e., between any given distinct points  $A$  and  $B$  another point can be found. (A proof is briefly indicated in the figure.  $C$  is any point not on the line  $AB$ , then  $D$  and  $E$  are picked by B2, and Pasch's axiom (B4) is used to show that  $EC$  must intersect  $\overline{AB}$ .)

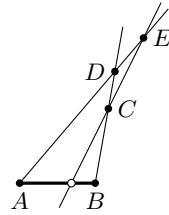

Given two lengths  $x$  and  $y$ , we can define their *ratio*  $x/y \in (0, \infty)$  by

$$x/y = \sup\{a/b \mid a, b \in \mathbb{N}, ay \leq bx\}.$$

Archimedes' axiom guarantees that this ratio is positive and finite, whereas Dedekind's axiom (together with the non-existence of any smallest length) implies that every positive real number is in fact a ratio of lengths. Relations like  $(x + y)/z = x/z + y/z$  and  $x/z < y/z \Leftrightarrow x < y$  are easy to show.

Having defined ratios, we can now define real multiples of lengths: If  $a$  is a positive real number and  $u$  is a length, we can define  $au$  to be the unique length  $x$  so that  $x/u = a$ . We could also fix such a length  $u$ , call it the unit length, and


<sup>2</sup>This semigroup lacks a neutral element – a zero, since we do not include degenerate “line segments” consisting of a single point. This is easily remedied if desired.

assign the real number  $x/u$  to any length  $x$ . This is customarily done in elementary geometry, but it is by no means necessary. One could also assign special names to several such lengths, and use multiples of the resulting “units” to specify lengths, as one does when referring to physical space.

### 3. ANGLES

We now turn to the study and measurement of *angles*. In this section, we take ordered geometry (incidence and betweenness axioms) as given, along with the congruence axioms C1–C3. Axioms A and D are not needed for now.

An *angle* is the union of two distinct and non-opposite rays, called the *legs* of the angle, originating from a common point (the *apex* of the angle). Given two such rays  $r$  and  $s$ , we may write  $\angle rs$  for the corresponding angle ( $r \cup s$ ), but the notation  $\angle BAC$  is more commonly employed, where the two rays are  $\overrightarrow{AB}$  and  $\overrightarrow{AC}$ . Note that  $\angle BAC = \angle CAB$ : Angles (like lines and segments) do not have a specific orientation. They do, however, have an inside and an outside: A point not on either leg of  $\angle BAC$  is said to be *inside*  $\angle BAC$  if it lies on the same side of  $AB$  as  $C$ , and on the same side of  $AC$  as  $B$ . Otherwise, it is *outside* the angle.

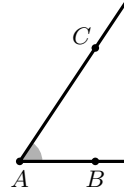

The *triangle*  $ABC$ , with  $A, B, C$  non-collinear, is the union  $\overline{AB} \cup \overline{BC} \cup \overline{CA}$  together with the given order of the corners  $A, B, C$ . Thus  $ABC$  and  $BAC$  are not considered to be the same triangle, although as points sets they are identical. Triangles  $ABC$  and  $DEF$  are called *congruent* if corresponding sides and angles are congruent, i.e.,  $\overline{AB} \cong \overline{DE}$ ,  $\overline{BC} \cong \overline{EF}$ ,  $\overline{CA} \cong \overline{FD}$ ,  $\angle BAC \cong \angle EDF$ ,  $\angle CBA \cong \angle FED$ , and  $\angle ACB \cong \angle DFE$ .

The first two *congruence axioms for angles* are exact analogues of the congruence axioms C1 and C2 for segments.

- C4. Given an angle  $\angle BAC$  and a ray  $\overrightarrow{DF}$ , there exists a unique ray  $\overrightarrow{DE}$  on a given side of  $DF$  such that  $\angle BAC \cong \angle EDF$ .
- C5. Congruence is an equivalence relation on angles.


SAS. (“Side–angle–side.”) Triangles  $ABC$  and  $DEF$  are congruent, provided  $\overline{AB} \cong \overline{DE}$ ,  $\angle BAC \cong \angle EDF$ , and  $\overline{AC} \cong \overline{DF}$ .

The incidence (I1–I3) and betweenness (B1–B4) axioms, along with the congruence axioms C1–C5 and SAS, constitute an axiomatic system known as *absolute geometry*. Any model of absolute geometry, i.e., a set of lines and points with the requisite relations satisfying the axioms, is called a *Hilbert plane*. We call a Hilbert plane *real* if it satisfies the axioms of Archimedes (A) and Dedekind (D) in addition. Here, “real” refers to the real numbers, as these two axioms serve to ensure that length ratios correspond to real numbers.

The analogue of C3 for angle addition is an easy consequence of SAS, so we do not need to add it as an axiom:

- C6. Theorem. *If  $C$  is an interior point of  $\angle BAD$ , and  $G$  is an interior point of  $\angle FEH$  with  $\angle BAC \cong \angle FEG$  and  $\angle CAD \cong \angle GEH$ , then  $\angle BAD \cong \angle FEH$ .*

Here we pause to emphasize that SAS is the main bridge connecting the notion of lengths to the notion of angles. To be specific, consider an angle  $\angle BAC$ . Then SAS states, among other things, that  $\langle \overline{BC} \rangle$  is uniquely determined by  $\langle \overline{AB} \rangle$ ,  $\langle \overline{AC} \rangle$ , and the congruence class of  $\angle BAC$ . In the opposite direction we find that  $\langle \overline{AB} \rangle$ ,  $\langle \overline{AC} \rangle$ , and  $\langle \overline{BC} \rangle$  uniquely determine the congruence class of  $\angle BAC$ . This is a consequence of the “Three Sides” congruence theorem:



SSS. Theorem. *Given triangles  $ABC$  and  $DEF$ , if  $\overline{AB} \cong \overline{DE}$ ,  $\overline{BC} \cong \overline{EF}$ , and  $\overline{CA} \cong \overline{FD}$ , then the two triangles are congruent.*

These results show that angular measures and length measures are inextricably tied together, a point we shall revisit later.

#### 4. THE PARALLEL POSTULATE

To complete our discussion of the axioms of geometry, we introduce the *parallel postulate* in its modern form (Euclid’s formulation was rather different).

Two lines are said to be *parallel* if they have no point in common, or else are the same line.

P. (Playfair’s axiom.) Given a line and a point, there is exactly one line through the given point parallel to the given line.

*Euclidean geometry* is absolute geometry with Playfair’s axiom added. A *Euclidean plane* is a model of Euclidean geometry, i.e., a Hilbert plane satisfying axiom P. Finally, a *real Euclidean plane* is a Euclidean plane satisfying axioms A and P.


From now on, we shall assume all the axioms of a real Euclidean plane. Non-Euclidean geometries have a number of peculiarities that do not concern us here.

A side remark: Similar triangles in a non-Euclidean geometry are congruent. In a Euclidean setting, on the other hand, even without axioms A and D we can define the ratio of lengths by an appeal to similar triangles. The resulting ratios are positive members of a Pythagorean ordered field, for example the real part of the algebraic closure of  $\mathbb{Q}$ , or some non-standard model of  $\mathbb{R}$ .

#### 5. GEOMETRIC ANGLES

In the same way that C2 allows the definition of lengths of intervals as congruence classes, we use C5 to define the *geometric angle* of an angle as its congruence class, denoting by  $\langle \angle BAC \rangle$  the geometric angle of  $\angle BAC$ .

Just as C3 with the help of C1 lets us add arbitrary lengths, we can use C6 with the help of C4 to define the sum of geometric angles, with the caveat that we cannot add angles if the sum would be “too large”. To make this more clear, first note that we can order angles. To do this, first move one of them (by which we mean, replace it by a congruent angle) so that the two angles to be compared have one leg in common, with the other two legs on the same side of the common leg. Unless

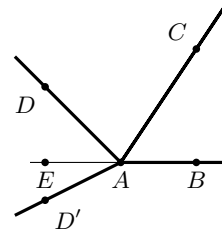

the angles are congruent, one will have its second leg inside the other angle, and will be said to be smaller. In the picture,  $C$  is inside  $\angle BAD$ . Hence  $\angle BAC$  is smaller than  $\angle BAD$ , and we write  $\langle \angle BAC \rangle < \langle \angle BAD \rangle$ . The same picture serves also to define addition: So long as  $C$  is inside  $\angle BAD$ ,  $\langle \angle BAC \rangle + \langle \angle CAD \rangle = \langle \angle BAD \rangle$ . But clearly, two arbitrary angles cannot always be arranged in this fashion, so their sum might not exist.

To be more precise, we can add angles if and only if each angle is less than the supplementary angle of the other. In the image,  $\langle \angle BAC \rangle + \langle \angle CAD \rangle = \langle \angle BAD \rangle$ . The supplementary angle of  $\angle BAC$  is  $\angle CAE$ , which is greater than  $\angle CAD$ . It is, however, smaller than  $\angle CAD'$ , and so the sum  $\langle \angle BAC \rangle + \langle \angle CAD' \rangle$  is not defined.

To deal with the problem of adding “too large” angles, the idea is to add (for the time being) a “fictional” angle measure  $\varpi$  corresponding to the straight “angle” defined by opposite rays.<sup>3</sup> Technically, things become easier if we also adjoin a zero to the set of geometric angles. Then a generalized geometric angle would be a formal sum  $a\varpi + \varphi$ , where  $a \geq 0$  is an integer counting half turns, and  $\varphi$  is a


<sup>3</sup>The ad hoc notation  $\varpi$  (a variant form of the letter  $\pi$ ) is highly nonstandard.

proper geometric angle (or zero). The sum of  $a\varpi + \varphi$  and  $b\varpi + \psi$  would be one of  $(a+b)\varpi + (\varphi + \psi)$  or  $(a+b+1)\varpi + (\varphi + \psi - \varpi)$ , where we just have to give meaning to the term  $\varphi + \psi - \varpi$  when  $\varphi$  and  $\psi$  cannot be properly added. In the picture,  $\langle \angle BAC \rangle + \langle \angle CAD \rangle - \varpi = \langle \angle EAD \rangle$ . As a special case, the sum of a geometric angle and its supplement will be  $\varpi$ . For future reference, note that a *right* angle is an angle congruent with its own supplement. Its geometric angle is  $\varpi/2$ .

It is a trivial, albeit quite tedious, book keeping exercise to show that the set of generalized geometric angles becomes an ordered additive semigroup in analogy with the semigroup of length measures. Moreover, it can be shown that angles satisfy analogues of Archimedes' and Dedekind's axioms (A and D), in a sense "inheriting" these properties from the corresponding properties of line segments. Thus we can define the ratio of angles in analogy with how we defined ratios of lengths, and we could then proceed to pick an arbitrary angle to be declared a unit, and use it to measure all other angles. However, only a very few angles stand out as reasonable candidates for this unit: The ones that first come to mind are the straight angle  $\varpi$ , the right angle  $\frac{\varpi}{2}$ , and the full revolution  $2\varpi$ . Historically, some smaller integral fractions of  $\varpi$  have been used, such as the degree  $\frac{\varpi}{180}$  (with its attendant advantage resulting from the fact that 360 has many small divisors) and the compass point  $\frac{\varpi}{16}$  once common in nautical usage. The *radian* certainly seems at first like an oddball addition to this menagerie of angular units: However, experience shows it to stand out from all other choices as the most suitable angular unit for mathematics as well as for the physical sciences.


We now proceed to the construction of angular measure. We begin very naively, relying on SAS and SSS and, more generally, the standard results on similar triangles, which hold in Euclidean geometry – but not in non-Euclidean geometries – and define

$$\sigma(\langle \angle BAC \rangle) = \frac{\langle \overline{BC} \rangle}{\langle \overline{AB} \rangle} \quad \text{provided } \overline{AB} \cong \overline{AC}.$$

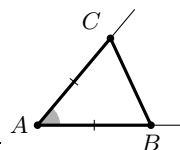

In Euclidean geometry (i.e., satisfying P) this ratio is well defined. Moreover, it also makes intuitive sense: An object of size  $\langle \overline{BC} \rangle$  seen at a distance  $\langle \overline{AB} \rangle$  subtends an angle measured by the ratio of the two lengths involved.


Indeed,  $\sigma$  is an increasing function of the geometric angle as we have defined it. However, it is not additive. Rather, a simple application of the triangle inequality reveals that it is *subadditive*:  $\sigma(\alpha + \beta) < \sigma(\alpha) + \sigma(\beta)$ , as indicated in the picture, with  $\alpha = \langle \angle BAC \rangle$  and  $\beta = \langle \angle CAD \rangle$ . We can remedy that by defining instead

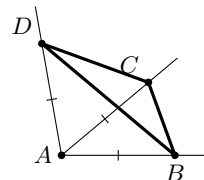

$$\vartheta(\alpha) = \sup \left\{ \sum_{i=1}^n \sigma(\beta_i) \mid \sum_{i=1}^n \beta_i = \alpha \right\}.$$

This is easily shown to be additive. Briefly, first note that if  $\sum_i \beta_i = \alpha$  and  $\sum_j \beta'_j = \alpha'$ , then  $\sum_i \beta_i + \sum_j \beta'_j = \alpha + \alpha'$ , and so  $\sum_i \sigma(\beta_i) + \sum_j \sigma(\beta'_j) \leq \vartheta(\alpha + \alpha')$ , from which we get  $\vartheta(\alpha) + \vartheta(\alpha') \leq \vartheta(\alpha + \alpha')$ . For the opposite inequality, if  $\sum_i \beta_i = \alpha + \alpha'$ , we may (if necessary) replace one of the  $\beta_i$  by two geometric angles, so that the geometric angles may be divided into two sets summing to  $\alpha$  and  $\alpha'$ , respectively. Using the subadditivity of  $\sigma$ , we find that this procedure increases the value of  $\sum_i \sigma(\beta_i)$ , and we get  $\sum_i \sigma(\beta_i) \leq \vartheta(\alpha) + \vartheta(\alpha')$ , so that  $\vartheta(\alpha + \alpha') \leq \vartheta(\alpha) + \vartheta(\alpha')$ .

We can state our definition of  $\vartheta(\alpha)$  in more geometric language as follows: Given an geometric angle  $\alpha$  and geometric angles  $\beta_i$  with  $\sum_{i=1}^n \beta_i = \alpha$ , create an angle  $\angle AOB$  with  $\langle \angle AOB \rangle = \alpha$ , pick a radius  $r$ , and points  $P_0 = A, P_1, \dots, P_n = B$  along the circular arc from  $A$  to  $B$  with

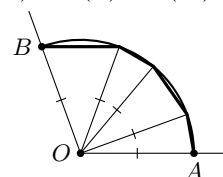

$\langle \angle P_{i-1}OP_i \rangle = \beta_i$  for  $i = 1, \dots, n$ . Then


$$\sum_{i=1}^n \sigma(\beta_i) = \sum_{i=1}^n \frac{\langle P_iP_{i-1} \rangle}{r} = \frac{1}{r} \sum_{i=1}^n \langle P_iP_{i-1} \rangle$$

in which the sum on the right-hand side is simply the length of the piecewise linear curve passing from  $A$  via the  $P_i$  to  $B$ . In the Cartesian plane  $\mathbb{R}^2$ , the length of a curve is defined to be the supremum of the lengths of broken lines formed by joining successive points along the curve. We can employ the same definition in our more abstract setting, concluding that  $\vartheta(\alpha) = \ell/r$ , where  $\ell$  is the length measure of the circular arc from  $A$  to  $B$ :

$$\ell = \sup \sum_{i=1}^n \langle P_iP_{i-1} \rangle,$$

where the supremum is taken over all choices of points  $P_i$  picked successively along the arc. The existence of the supremum in the set of length measures is guaranteed by Dedekind's axiom (D). In this approach, the reader may recognize Archimedes' computation of the circumference of a circle. He used regular polygons, approximating the circle both from the inside and the outside, thus getting both a lower and an upper estimate. But the idea is essentially the same.

The one thing missing from the above discussion is the fact that  $\vartheta(\alpha)$  (equivalently, the length of the circular arc) will in fact be finite. The crucial observation here is that in the picture,  $\langle PQ \rangle \leq \langle P'Q' \rangle$  (so long as  $P'Q'$  lies outside the circle). Applying this to the segments of a broken line, and using each of the three indicated sides of the rectangle circumscribing the semicircle, we quickly conclude that  $\vartheta(\alpha) < 4$  for any geometric angle  $\alpha$ .

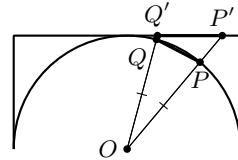

The ratio  $\pi$  between the arc length of a semicircle and its radius will be  $\pi = \sup_{\alpha} \vartheta(\alpha)$ , the supremum taken over all proper geometric angles  $\alpha$ . We may stretch this a little bit and declare  $\vartheta(\varpi) = \pi$ . If we perform the calculation in the standard Cartesian plane  $\mathbb{R}^2$ , we end up with the usual value for  $\pi$ , or as any bright calculus student will know,

$$\pi = \int_{-1}^1 \frac{dx}{\sqrt{1-x^2}}.$$

## 6. OBJECTIONS

The recent letter by Quincey et al. [11] argues that angles are not inherently length ratios, nor inherently dimensionless. The authors list four “misconceptions that arise in the discussion of angles”. We agree that the first two are at least somewhat misleading, disagree regarding the third, and express no opinion on the fourth.

We address the first two together: *Mathematics tells us that angle is a length ratio since  $s = r\theta$ , and an angle is defined as the ratio of an arc length to a radius*. In the immortal words of Bill Clinton, that depends on what the meaning of “is” is. Quincey et al. are certainly technically correct on this point: Geometric angles as we have introduced them, as congruence classes of concrete angles  $\angle BAC$ , are certainly not length ratios. What our analysis shows is that they are most definitely intimately *related* to length ratios, in the sense that they can be naturally put in a one-to-one correspondence with length ratios – in more than one way, exemplified by our functions  $\sigma$  and  $\vartheta$ . We would put it even more strongly, and claim that angles *cannot even be understood* without reference to distance ratios. Consider an angle preserving map of a Euclidean plane to itself, denoting by  $A'$ ,  $B'$ , etc. the image of  $A$ ,  $B$ , etc.: Thus  $\angle B'A'C' \cong \angle BAC$  for any angle  $\angle BAC$ .

Such a map must necessarily have the property that  $\langle \overline{A'B'} \rangle / \langle \overline{AB} \rangle$  does not depend on the initial points  $A, B$ ; or equivalently, that length ratios are preserved, i.e.,  $\langle \overline{A'B'} \rangle / \langle \overline{C'D'} \rangle = \langle \overline{AB} \rangle / \langle \overline{CD} \rangle$ .<sup>4</sup>

It is true that nothing *forces* us to define an angle as the ratio of an arc length to a radius, but however we do define it, this is the definition that thrusts itself at us as the obvious choice, far preferable over any other, at least for theoretical use. In practical measurement, traditional measures such as degrees still gain the upper hand, of course.

The third “misconception” is this: *Angle measurement requires length measurement*. We believe our discussion above disposes of this argument. It is certainly true that one can use a compass and a straightedge to repeatedly bisect a right angle, thereby essentially creating a protractor with which one can measure an arbitrary angle to any desired precision. However, the defining characteristic of a compass is its ability to keep the distance between its points constant as one moves it about: It is a distance measuring device, albeit a rather limited one. The same is true of a physical protractor. To be useful, the protractor must be stiff, which by definition means that the distance between any two points of the protractor does not change as we move the protractor around.

We are of course aware that compasses and protractors are not very precise instruments for the measurement of angles, although they are manufactured in large numbers, and are indeed sufficiently precise for many common tasks. We would have no reason to deal with them here, except in response to their mention in [11]. However, any high precision optical device used to measure angles is in principle not different, since it relies on a precise knowledge of distances between the optical components of the instrument. Moreover, even a cursory glance reveals that physical rigidity is of paramount importance for the accurate operation of such devices.

## 7. CONCLUSION

Let us repeat and look at the previous discussion from a general point of view. Nobody will question that points and lines are geometric objects. Angles, introduced in this article as the union of two rays with a common apex, are geometric objects as well. There is a practical need to associate numerical measures with geometric objects. For lines, the natural way is to define a length unit (such as metre) with which, for every line, the length of a line segment can be measured. For angles, no matter how they are placed in the plane, the natural way is to identify those angles that are “of the same type” and define a measure that gives the same value to all angles of the same type. We have captured this idea by the definition of congruence of angles and have introduced the concept of geometric angle in Euclidean plane geometry as the congruence class of an angle. We have shown that the very notion of congruence of angles, and hence the geometric angles, relies crucially on the concept of length. However, since absolute length scales have no influence on angles, we must conclude that angular measure must be considered a function of length ratios.

Among the geometric angles we find  $\varpi$ , corresponding to the straight angle,  $\varpi/2$ , corresponding to a right angle, and the degree  $^\circ = \varpi/180$ . To each geometric angle  $\alpha$  we have assigned an *angular measure*  $\vartheta(\alpha)$ , for which we can write in the conventional manner  $\vartheta(\alpha) = s/r$ . In particular,  $\vartheta(\varpi) = \pi$  and  $\vartheta(1^\circ) = \pi/180$ . We can also define the radian as the geometric angle for which  $\vartheta(\text{rad}) = 1$ . We now

---

<sup>4</sup>This must not be confused with *conformal* mappings: A conformal mapping preserves the angle between two curves at their point of intersection. Such mappings preserve length ratios only in the asymptotic limit of small lengths.

have  $\varpi = \pi \text{ rad} = 180^\circ$ ; in particular, we no longer need the temporary notation  $\varpi$ .

Note that the conventional notation  $\alpha = s/r$  is, strictly speaking, a category error, since a geometric angle is not a number. It is, however, quite common to conflate the two concepts, i.e., not to distinguish between  $\alpha$  and  $\vartheta(\alpha)$ . In the vast majority of cases this is harmless.

If we do conflate geometric angles with their numerical representation, however, the equation  $\vartheta(\text{rad}) = 1$  becomes  $\text{rad} = 1$ , which is the source of much confusion, such as considering the unit radian to be a derived unit which is equal to the number one. Unfortunately, this statement also appears in the current SI brochure, where moreover the angular unit ‘rad’ is expressed by the quotient m/m, in order to emphasize that it *is* a derived unit in the SI. But these statements are not justified at all. The mere use of a numerical value, i.e., omitting the unit of that value (as would be correct here), is not the same as setting the unit equal to the number one.

If any value associated with a magnitude is specified, both the numerical value and the corresponding unit must always be stated. Angles are no exception. In case of a semicircle, for example, the value associated with the angular magnitude is  $\pi \text{ rad}$ , not simply  $\pi$ , i.e., the unit rad must be included. On the other hand,  $c = \pi r$  must be written for the arc of a semicircle with radius  $r$ , i.e., in this case it is necessary to omit the unit, no matter which angular unit is used, because the angular measure has to be used here, which is a pure number.

When dealing with trigonometric functions, a commonly used expression such as  $\sin \alpha$  would be a category error, the correct expression being instead  $\sin \vartheta(\alpha)$ . However, in antiquity, trigonometric functions were indeed considered functions of the geometric angle, thus lending some historical justification to this usage. We can easily resolve the ambiguity by allowing the symbol  $\sin$  to stand for a function either of a geometric angle or of a real number, as the context requires. Thus both equations  $\sin 30^\circ = \frac{1}{2}$  and  $\sin \frac{\pi}{6} = \frac{1}{2}$  can be seen as perfectly valid statements of the same fact.

We introduced the notion of geometric angle and the conversion function  $\vartheta$  only for the purpose of the present discussion. However, requiring scientists and engineers to maintain the distinction between geometric angles and their measure in radians would impose an undue and totally unnecessary burden on them. In particular, we do not propose the general use of our function  $\vartheta$ , by whatever name one would choose to give it.

At this point, we wish to make a point regarding the fundamental nature of angles versus lengths and other physical quantities. Since the metre was introduced in 1793, improvements in the science of metrology has vastly increased our ability to measure lengths accurately, in turn leading to the need to refine the very definition of the metre in order to keep up with the technology. No such claim can be made for angles. In fact, even though we can certainly measure angles much more accurately today than we could three centuries ago, no conceivable technological advance can lead to a need to refine the definition of the radian, or a right angle. This simple observation supports the notion that angle is a *mathematical* concept more than a topic of the physical sciences. Mathematical objects do not require units for their measurement, as opposed to physical objects, which do.

Although the discussion here has been confined to the angles of planar Euclidean geometry, all conclusions apply equally to the concepts of “angle of rotation” and “phase angle”, which have not been discussed here in order to concentrate on the essential points.

## REFERENCES

- [1] Euclid, *Elements*, Greek text edited by J. L. Heiberg, English translation by Richard Fitzpatrick (2008) <https://farside.ph.utexas.edu/books/Euclid/Euclid.html>
- [2] J. Gray, *Worlds Out of Nothing. A Course in the History of Geometry in the 19th Century*, Springer-Verlag, London 2011.
- [3] R. Hartshorne, *Geometry: Euclid and Beyond*, Springer-Verlag 2000.
- [4] T. L. Heath, *The Works of Archimedes*, Cambridge University Press 1897.
- [5] D. Hilbert, *Foundations of Geometry*, Open Court, La Salle, 1971. (Based on the 10th German edition.) Original edition: *Grundlagen der Geometrie*, B. G. Teubner, Leipzig 1899.
- [6] M. I. Kalinin, On the status of plane and solid angles in the International System of Units (SI). *Metrologia* **56** 065009, 2019.
- [7] M. P. Krystek, The term ‘dimension’ in the international system of units. *Metrologia* **52** 297–300, 2015.
- [8] P. J. Mohr and W. D. Phillips, Dimensionless units in the SI. *Metrologia* **52** 40–47, 2015.
- [9] P. Quincey, The range of options for handling plane angle and solid angle within a system of units. *Metrologia* **53** 840, 2016.
- [10] P. Quincey and R. J. C. Brown, Implications of adopting plane angle as a base quantity in the SI. *Metrologia* **53** 998, 2016.
- [11] P. Quincey, P. J. Mohr, and W. D. Phillips, Angles are inherently neither length ratios nor dimensionless. *Metrologia* **56** 043001, 2019.

(M. Grötschel) BERLIN-BRANDENBURG ACADEMY OF SCIENCES AND HUMANITIES, JÄGERSTRASSE 22/23, 10117 BERLIN, GERMANY

Email address: [groetschel@bbaw.de](mailto:groetschel@bbaw.de)

(H. Hanche-Olsen) DEPARTMENT OF MATHEMATICAL SCIENCES, NTNU NORWEGIAN UNIVERSITY OF SCIENCE AND TECHNOLOGY, NO-7491 TRONDHEIM, NORWAY

Email address: [harald.hanche-olsen@ntnu.no](mailto:harald.hanche-olsen@ntnu.no)

URL: <https://www.ntnu.edu/employees/hanche>

(H. Holden) DEPARTMENT OF MATHEMATICAL SCIENCES, NTNU NORWEGIAN UNIVERSITY OF SCIENCE AND TECHNOLOGY, NO-7491 TRONDHEIM, NORWAY

Email address: [helge.holden@ntnu.no](mailto:helge.holden@ntnu.no)

URL: <https://www.ntnu.edu/employees/holden>

(M. P. Krystek) PHYSIKALISCH-TECHNISCHE BUNDESANSTALT, BUNDESALLEE 100, D-38116 BRAUNSCHWEIG, GERMANY

Email address: [Michael.Krystek@ptb.de](mailto:Michael.Krystek@ptb.de)