

Degradation and Failure Mechanisms of Complex Systems: Principles

Tarannom Parhizkar^{1a}, Theresa Stewart^a, Lixian Huang^a, Ali Mosleh^a

B. John Garrick Institute for the Risk Sciences, University of California, Los Angeles, 404 Westwood Plaza, Los Angeles, CA 90095, USA

Abstract

A cyber physical human complex system failure prevents the accomplishment of the system's intended function. The failure of a complex system could be a breakdown of any system hardware, human related factors, application software, or the interaction between these components. Having knowledge about all these three components would allow us to better understand the behavior, interactions, and the associated failure mechanisms of the cyber physical human systems as a whole.

In this study, degradation mechanisms in these three components are classified and discussed. The main categories are hardware related degradation mechanisms including mechanical, thermal, chemical, electronic and radiation effects degradation mechanisms. In addition to hardware related degradation mechanisms, human failure modes, software errors, and the failures due to cyber-physical-human interactions are presented and discussed. This paper covers the main types of

¹ Corresponding author

failure mechanisms in complex systems and is beneficial for developing conceptual risk and reliability models for complex systems.

Keywords

Degradation mechanisms; Cyber physical human complex system; Material degradation mechanism; Hardware failure; Electronic failure; Human error; Software failure; Complex systems; Risk; Reliability.

1 Introduction

Complex system components degrade over time due to different degradation mechanisms, [1]. Degraded components can negatively affect the system performance, reduce the system lifetime and even result in a catastrophic failure, [2]. In addition, degradation analysis can be used to assess reliability when few or even no failures are expected in a life test.

Degradation mechanisms in a complex system depend on many different factors such as type of the system, components material, system application, operating and environmental conditions, [3], [4], [5]. In complex systems, we have cyber-physical-human interactions, [6], [7]. A cyber physical human complex system is a system that is made of interacting components of software, hardware, and human operators. The three different elements in cyber physical human systems are hardware, software and humans that have different failure behavior characteristics. It is important to understand the difference between them and their failure modes, [8]. However, more importantly, having knowledge about all these three components would also allow us to better understand the behavior, interactions, and the associated failure mechanisms of the cyber physical human systems as a whole.

In this paper, hardware degradation including mechanical, thermal, chemical degradation mechanisms, degradation of electronic devices, radiation effects degradation mechanisms are introduced and discussed.

In this study, degradation mechanisms are categorized into eight main types. The main categories are hardware related degradation mechanisms including mechanical, thermal, chemical, electronic and radiation effects degradation mechanisms, discussed in Section 2 to Section 5, respectively.

The mechanical, thermal, chemical degradation mechanisms are classified to wear-out and overstress failures. Wear out mechanisms are degradation mechanisms that happen gradually in the component and result in system aging and performance deterioration. As time passes, the degradation mechanism will cause exceedance of system threshold and system failure. Overstress mechanisms, on the other hand, are sudden degradation mechanisms. In this type of mechanism, operating and environmental conditions are out of nominal range of system operating conditions and results in system failure. This paper will discuss both wear out and overstress failure mechanisms of mechanical, thermal, and chemical natures. Due to the complexity in electronics, the degradation and failure mechanisms are introduced based on different physics causes.

In addition to hardware related degradation mechanisms, we could have software and human errors resulting in system failure that are discussed in Section 4 and 5, respectively. Finally, failure mechanisms due to components interaction are introduced. The interactions result in exchange of matter, energy, force, and/or information, and we can have all the combinations between hardware-software, hardware-human and the human-software, but also the intersection between all three. In Section 8, different types of interaction failure mechanisms are presented and discussed. It should be noted that this work is not intended to give the reader a thorough understanding of each

individual failure mechanism, but rather is intended to introduce the reader to the types of failure or degradation that may be encountered in a wide variety of applications and environments.

2 Mechanical degradation and failure mechanisms

2.1 Wear out mechanisms

Mechanical wear could be defined as a process of progressive removal of material from a solid surface while it is in moving contact with another solid, liquid, or gaseous substance. The main types of wear out mechanisms is presented in Figure 1. In the following sections, different types of mechanical wear out mechanisms are presented and discussed.

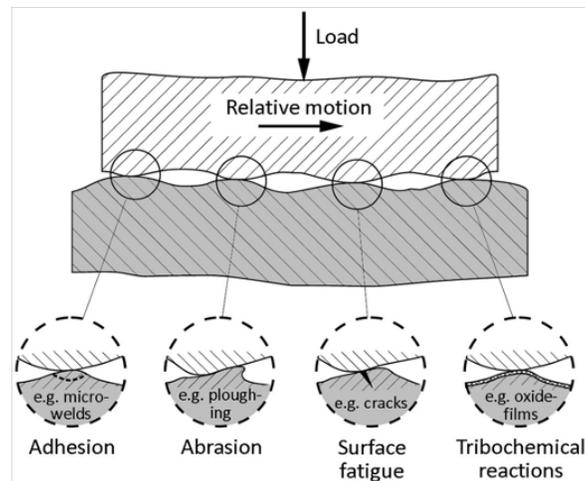


Figure 1. Four main types of wear-out Mechanisms [9]

2.1.1 Abrasion

Abrasion wear is one of the most common types of wear and appears across many applications accountings for more than 50% of all wear-related failures in industrial equipment, costing between 1 and 4% of the gross national product of industrialized nation [10]. As a result, abrasion wear resistance is a major consideration in a wide variety of industries and there are at least 17

active ASTM standards directly relating to abrasive wear, and at least 4 relating to erosive wear [11]. The term “abrasion” comprises all groove-forming mechanisms on the surface of a material by micro chipping and micro ploughing.

Abrasive wear can be defined as the removal of material from a surface while it is in relative motion with another contacting surface. This removal can be due to protuberances on the other surface or the presence of hard particles, which may be trapped between the two surfaces or embedded in one of them. In the case where particles are not embedded on either surface, this is called three-body abrasion, while the other cases are referred to as two-body abrasion. Abrasive erosion, which is a special case of erosion where hard particles are present in a moving fluid, is a form of two-body abrasion. Abrasive wear processes are typically classified as:

1. **Two-body abrasion:** This type of abrasion can be further split into two subcategories. In the first, shown in Figure 2(a), protuberances or particles attached to body 2 scratch the surface of body 1 as the two bodies move past each other. The second type of two-body abrasion, shown in Figure 2(b), describes the scenario where hard particles are free to move along the surface of body 1.
2. **Three-body abrasion:** Third body abrasive particles are free to slide and/or roll between bodies 1 and 2 and are not attached to either surface (Figure 2(c)). The origin of the abrasive particles (dust, dirt, sand, aerosol, debris, etc.) is either outside the tribological system (contaminants) or they are generated within the system itself (wear products).

Of these two categories, two-body abrasion results in a much higher rate of material removal - as much as an order of magnitude higher than that of three-body abrasion. This is because loose particles between surfaces mostly roll harmlessly between the surfaces, and only abraded surfaces about 10% of the time, [9].

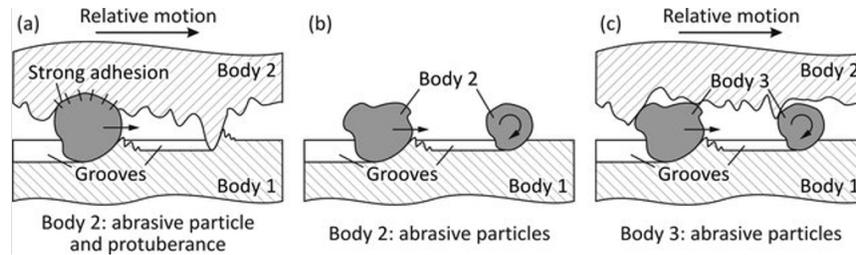


Figure 2. Two main types of abrasive wear degradation mechanism [9]

2.1.2 Adhesion

Adhesive wear is another common type of wear that occurs in systems. It occurs whenever two solid surfaces have rubbing contact and even if all wear mitigation plans have been implemented, this type of wear will remain. As two bodies slide across each other, asperities on each surface may weld together and then either deform or break off as the relative motion continues. Given the exchange of materials, this process is called micro (cold) welding. The real contact area between surfaces is very small. Thus, even with very small loads, there exists pressure between contacted areas that could result in adhesive wear and plastic formation. If two surfaces confront relative sliding motion, the contacted area may break. The break could happen at the original interface or elsewhere, depending on the temperature, material characteristics, and stress distribution. There are different types of adhesive wear including scoring, scuffing, galling, and seizing ordered in terms of increasing severity.

- **Scoring** is the transfer of a small amount of material from one component to another under sliding contact.
- **Scuffing** is a more serious form of scoring and refers to localized surface damage caused by welding of two surfaces.
- **Galling** is cyclic, severe, and large-scale metal transfer between contacting surfaces.

- **Seizing** is a more severe form of galling that becomes so severe that it prevents two surfaces from moving.

Adhesion includes the chemical interaction between the wear materials. Depending on the material properties between two surfaces, a local joining or even welding of both materials may happen. The binding forces may become so high that chips may be pulled out or chipped off from the work material, e.g., the metal debris of the work material may adhere to the ceramic cutting tool. This effect, also known as material transfer, will cause the cutting tool to no longer be in contact with the work material. Figure 3 shows several modes to explain the effect of adhesion on materials.

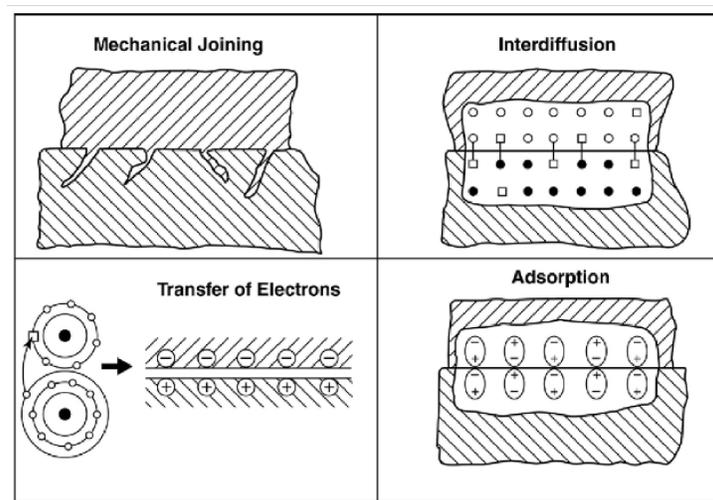


Figure 3. The effects of adhesion wear out mechanism [12]

2.1.3 Surface fatigue

This type of wear occurs when two surfaces have rolling contact. Wear here is different from sliding surfaces. As the rolling body rotates, the shear stress ranges from zero to a maximum value, resulting in cyclic stress in the components. This type of wear could result in crack formation and

eventual crack growth, leading to fatigue failure. The surface fatigue wear is common in rotatory machines.

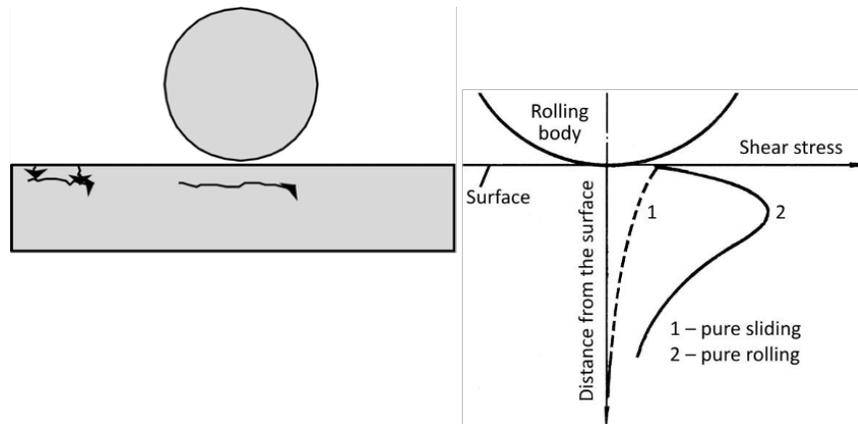


Figure 4. Surface fatigues wear out mechanism [13]

2.1.4 Erosive wear

In this type of wear, some particles slide and roll against the surface. The particles could have three different speed levels, as presented in Figure 5. At low speed, we have abrasion wear, and if these particles touch the surface on a cyclic basis, then it will result in fatigue wear out. At medium speed, plastic deformation or erosion by brittle fracture will occur. At higher speed, melting will occur.

As can be seen in Figure 5, each particle removes some small parts of the component. Over time, this phenomenon could result in serious erosion damage to the component. This type of wear could be used intentionally for some applications. For instance, in paint removal (sanding), the same concept is used to remove the coating over a surface.

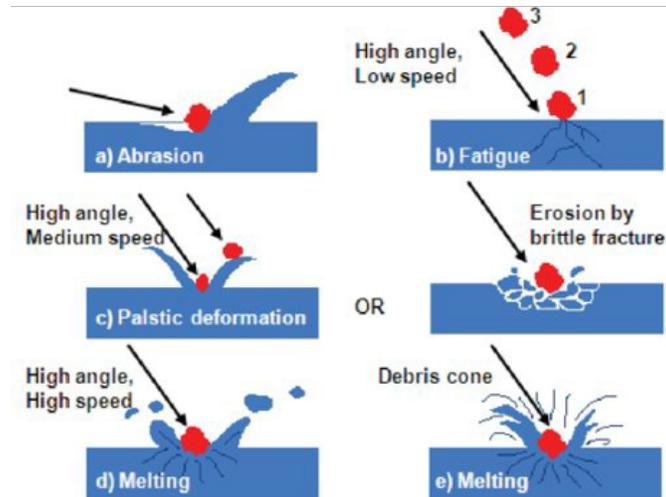


Figure 5. Different types of erosive wear out mechanism [14]

2.1.5 Fretting wear

Fretting is a type of wear that occurs in systems with two parts in close contact, vibrating at small amplitudes. During this cyclic contact motion, third body particles (which may be produced by local adhesion or abrasion) become trapped between the contacting parts and accumulate. Harder particles cause plastic deformation, delamination, void formation, and/or cracking on the surface of parts which grows over time due to the cyclic loading nature. During system operation, more particles are able to accumulate in the damaged area, and over time pits can form across the surface. Eventually cracks are able to grow deeply enough, or enough material is removed from the surface that the part will fail [15]. This type of wear out mechanism occurs commonly in components that contain parts with relative motion such as bearings.

2.1.6 Creep deformation

Creep deformation describes the process by which solid materials undergo gradual plastic (permanent) deformation at stresses below the yield stress. Creep is a time dependent process and

the rate of deformation from creep increases with temperature and stress. There are multiple mechanisms for creep, namely Nabarro-Herring (bulk diffusion), Coble (grain boundary diffusion), dislocation climb, and thermally activated glide, the last of which is exclusive to polymers and viscoelastic materials [16]. Generally, the process of creep deformation can be divided into three-time intervals.

Stage 1, Primary phase: This is a short phase that begins when elastic (reversible) deformation occurs on initial loading. Following this, there is an initially high rate of deformation that slows as work hardening occurs, [17].

Stage 2, Secondary phase: In the secondary phase, the strain rate stabilizes to an approximately linear rate that can be characterized by an equation related to the Arrhenius equation². During the secondary phase, the strain rate is at its lowest, and this phase may last a long time, [17].

Stage 3, Tertiary phase: In the final phase, the deformation rate increases as damage accumulates in the material structure. During this phase, voids begin to appear in the microstructure and noticeable necking begins to occur leading up to fracture, [17].

² The Arrhenius equation describes processes with a rate that is exponentially dependent on temperature, [16].

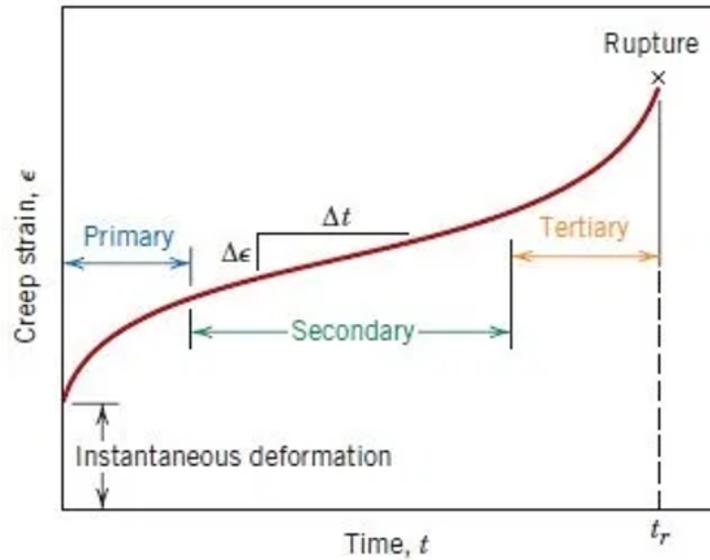


Figure 6. The three stages of creep deformation process [17]

2.1.7 Fatigue

Fatigue failure occurs as a result of long-term cyclic loading within the design limits of a component. Under these loads, initial defects may become crack initiation sites which grow as the region is loaded and unloaded. Cracks will grow until the stress intensity factor of the crack exceeds the fracture toughness of the material, at which point a complete fracture will occur [16].

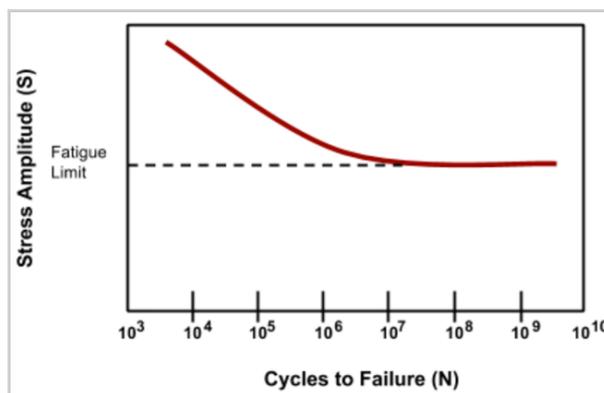


Figure 7. Stress Amplitude vs Cycles to failure [18]

Fatigue failure follows three major steps to failure:

1. **Stage 1, Initiation process:** In this step, plastic deformation occurs in the material. It has been claimed that the initiation phase is the most important step as preventing this step helps prevent fatigue failure.
2. **Stage 2, Propagation:** In this phase, cracks grow at varying rates depending on the material, environment, stress, and crack shape. A sharper crack will grow faster due to the increased stress concentration at the tip, and crack growth can even be impeded by blunting crack tips.
3. **Stage 3, Failure:** Once many microscopic cracks have been expressed and connected, fracture will occur. When the stress cycle amplitude is low, it generally takes many cycles for the material to fail and this is called high cycle fatigue (HCF). Similarly, if the amplitude is high, failure occurs quickly and is referred to as low cycle fatigue (LCF). Generally, when a material fails under HCF, cracks propagate mostly in an intergranular fashion (along grain boundaries) and allows for significant plastic deformation before failure, but when under LCF will fail in a largely transgranular and brittle fashion (through grains) due to the rapid crack propagation. The differences between the resulting fracture surfaces can be seen in Figure 8.

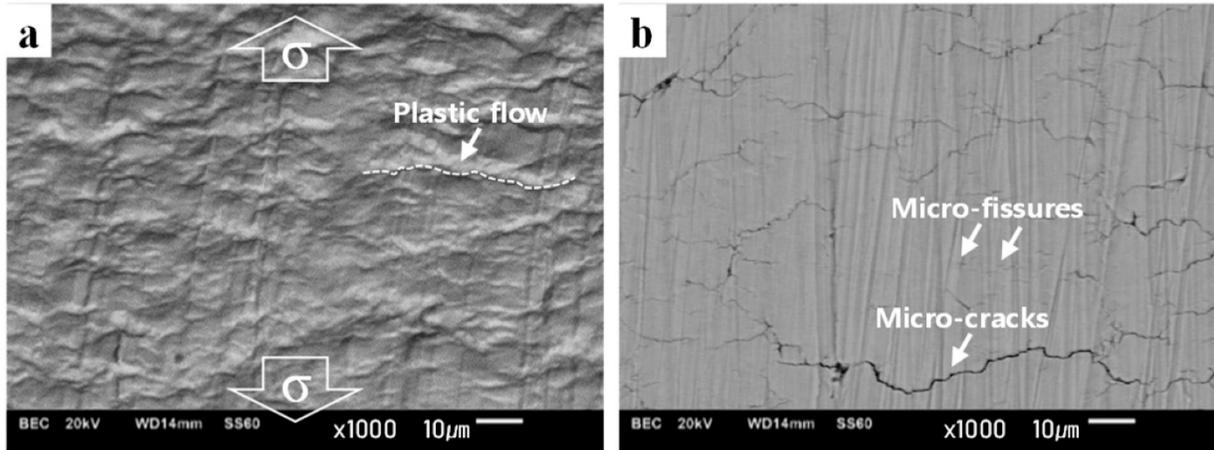


Figure 8. Fracture surfaces of a material after failing in high cycle fatigue (a), and low cycle fatigue (b) [19]

2.1.8 Cavitation pitting

Cavitation pitting is a type of pitting fatigue as a result of vibration and movement of liquids in contact with solids. It occurs mostly at low pressure regions where voids can form. Any moving system in liquid will experience cavitation pitting. Generally, corrosion can aggregate the cavitation pitting. In this diagram, the steps of cavitation pitting are simplified by showing the mechanism in slow motion. The actual mechanism happens in milliseconds, depending on vibration and rotation frequency and vapor pressure of the liquid [20].

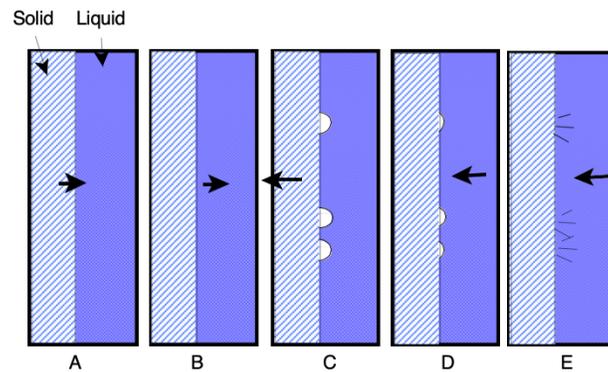


Figure 9. The process of cavitation pitting degradation mechanism

- **Step A:** The solid wall moves to the right, building inertia in the water to move right.

- **Step B:** Inertia pushes the water to continue moving to the right.
- **Step C:** The wall starts to move to the left; pressure is reduced and bubbles form. These cavities are known as low pressure bubbles. At this point, the pressure of bubbles is equal to the vapor pressure of liquid and a phase change from liquid to gas can occur.
- **Step D:** The wall stops moving and pressure starts to increase as the inertia of the water pushes it to move left, compressing the bubbles.
- **Step E:** Pressure increases until bubbles collapse as vapor changes to liquid. Implosion results in local pressures of many thousand pound-force per square inch (psi).

It should be noted that bubbles nucleate at defect sites, thus on a perfectly smooth surface no bubbles will form. Additionally, as we have liquid and the system is vibrating and possibly rotating, cavities can form in different locations around the part surface. But mostly it will happen in clusters at low pressure regions by having the same process at the specific locations. As time passes, pitting on the surface will result in fatigue failure.

2.1.9 Resonance disaster

When a structure encounters oscillations from wind, earthquakes, or vibrating motions that match the structure's natural frequency of vibration, it is able to pick up motion very easily and may sway violently or fracture. Resonance as a phenomenon is one that is often used in clocks to maintain motion of the timekeeping mechanism, such as a pendulum [21].

2.2 Overstress mechanisms

Overstress failure occurs when a material is subjected to unusually harsh conditions that aren't expected in the design of the part. This may come in the form of ground motions generating high

stress near a buried or anchored structural part, damage from accidents, a damaged connecting part creating high stress, or many other potential causes. The behavior of various materials under such conditions has been heavily studied to understand how a material may deform either elastically (reversible) or plastically (irreversible) before fracturing. [22]

The response of a material under increasing loads may be characterized using a Stress-Strain curve. These curves are developed by testing a material with a standardized cross section under increasing stress and recording the deformation in response [23].

Figure 10 shows the shape of the stress-strain curves of a typical metal, ceramic, and polymer, respectively. The exact shape and scale of the stress-strain curve varies for each material and loading type, but among similar materials in a standard tensile test, these differences can usually be categorized by the yield and tensile strength³.

The stress-strain curve for most solids can be split into at least two regions, with the first region corresponding to elastic (reversible) deformation, and the later regions corresponding to various phases of plastic (permanent) deformation. In linear elastic materials, such as most ceramics and metals, the elastic region of the curve can be used to determine the Poisson ratio by measuring the strain in the transverse direction relative to the longitudinal strain.

For metals, the stress-strain curve can be divided in 4 regions [22].

1. First is the linear portion of the curve (proportional region) which starts at no deformation and extends until the yield stress is reached at point 3 on the graph (Figure 10, metal). In this region, the slope corresponds to the young's modulus, which is a measure of the material's stiffness in tension or compression.

³ Yield strength (or stress) is defined as the minimum stress that will cause permanent (plastic) deformation in a material. Tensile strength reflects the highest point in a stress-strain curve of a material in tension loading. Additional measures can be given for other loading conditions such as compression and bending.

2. The next region is the non-linear elastic region, which is the final elastic deformation a material can sustain before yielding or fracturing. Point 2 on the graph represents the elasticity limit.
3. The third region is called the strain hardening region and extends from the point where material starts deforming plastically until it reaches its ultimate strength at point 1. As plastic deformation occurs in the metal, deformations accumulate which restrict motion and increase the strength of the material. Eventually this process reaches a limit, at which point necking begins.
4. The final region in the curve is called the necking region. As the material is stretched in one direction, its cross section will thin, and deformation becomes easier. At first, strain hardening counters this effect and the stress needed to cause deformation increases as seen in region 3, but as the strain hardening effect reaches its limit, the cross section starts to rapidly become thinner up until rupture at point 4.

Ceramics usually are brittle, undergoing little to no plastic deformation before fracture. This results in a simpler stress-strain curve characterized by a mostly linear elastic region up to the fracture point, which is nearly equal to the yield point. This is indicated by both points 1 and 2 on the second plot in Figure 10 showing the ultimate strength and yield strength in the same location.

The stress-strain curves of polymers need to be further separated into four major categories of behavior. Flexible plastics have similar mechanical behavior to metals, with various regions of elastic and plastic deformation leading up to fracture. The stress-strain behavior of these polymers can be easily differentiated from that of metals by the much greater capacity for plastic deformation before fracture. Elastomers undergo large amounts of viscoelastic (nonlinear) strain and relatively

little plastic deformation before failure. Additionally, elastomers tend to have very low ultimate strengths [22].

The behavior of fibers and rigid plastics is almost the same as ceramics. They have a very short elastic region but are very stiff and may sustain large stresses before failure [22].

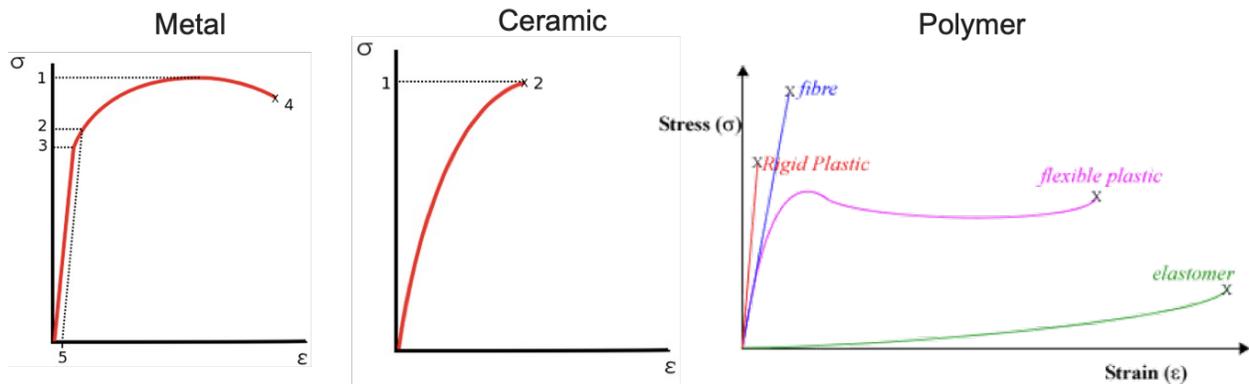


Figure 10. The general form of the stress-strain curves for metal, ceramic, and different types of polymers

Toughness is one of the material properties that can be defined based on the stress-strain curve of the material. Toughness defined as a material's ability to absorb energy or shock before fracturing. Toughness as a property is measured in terms of energy per unit volume and can be quantified as the area underneath the stress-strain curve up to the fracture point [22].

Because of the relation of toughness to the stress-strain curve, the differences in toughness between different types of materials can be easily seen in comparisons such as Figure 11. Though the ceramic in the graph presents the highest overall strength and the polymer presents the greatest amount of strain withstood before fracture, both of these materials have a low toughness. The toughest materials are those which have a moderately high strength that does not sacrifice the capacity for plastic deformation such as metals as presented in Figure 11.

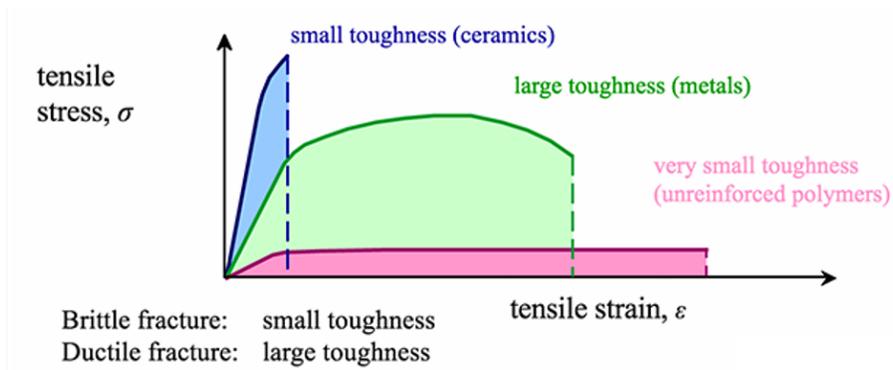


Figure 11. Stress-strain curve for materials with very small, small, and large toughness [24]

2.2.1 Plastic deformation

Whenever a solid material is subjected to a load, it will deform as a result of that load. When the load is relatively small, this deformation, referred to as elastic deformation, is reversible. Elastic deformation involves only the stretching of bonds without any slipping of atoms, and the structure will return to its former shape once the load is removed.

At higher stress levels, the change in the shape is non-recoverable. This type is called plastic deformation. When a material is plastically deformed, atoms slide past each other breaking bonds and causing changes in the material's structure. Generally speaking, this process cannot occur all at once since a large amount of energy would be needed to do so. Instead, this deformation occurs via paths of least resistance, where an initial defect in the structure moves across crystal planes (in the case of crystalline materials) or polymer chains slide past each other. In metals, dislocation motion occurs preferentially along the highest density planes. A dislocation can easily move throughout a metal structure until a grain boundary is reached. Using an optical microscope, one can see the paths of these dislocations since they mostly travel along parallel paths. When many parallel paths are close together, they can be seen as slip bands such as in Figure 12, [25].

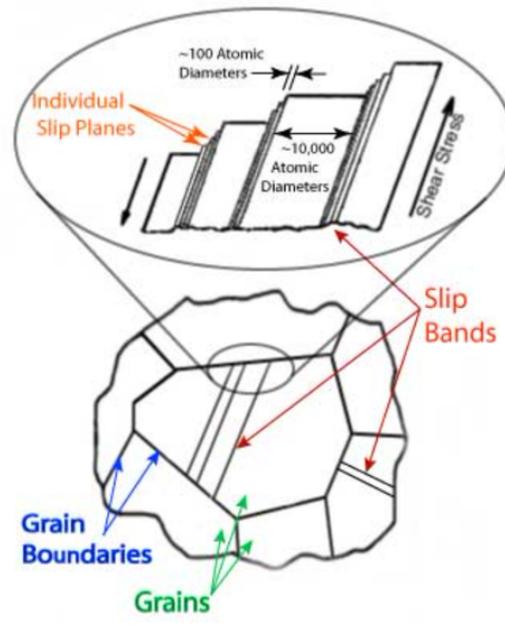


Figure 12. Slip bands in plastic deformation process

2.2.2 Fracture

Fracture is defined by the formation of new surfaces on a formerly intact piece of material not by growth but by damage from stress. Most often this occurs by the formation of cracks throughout the surface or body of the part, but in extreme cases can result in a part breaking into two or more pieces.

The general definition of cracking refers to those formed perpendicularly to the material surface and can also be called a normal tensile crack. When cracks form tangential to the surface, this is called a shear crack, slip band, or dislocation. Cracks and fracture may occur with or without deformation beforehand. If deformation occurs, this is called a ductile fracture, and a fracture without deformation is likewise called a brittle fracture. A given failed surface may contain a mix of both ductile and brittle fracture regions depending on how the break occurred. On the stress-strain curve, fracture strength is the final point in the curve [16].

In Figure 13, the fracture in a brittle and ductile steels are presented. At lower temperature, steel is more brittle, under strain, the fracture surface is perpendicular to tensile stress. However, as temperature increases, steel is more ductile, and the fracture surface is diagonal.

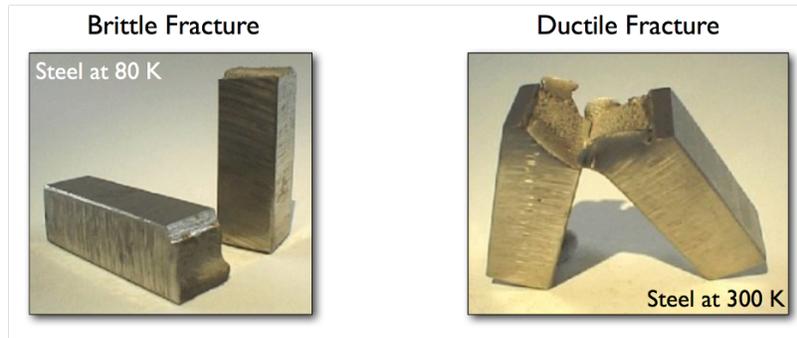


Figure 13. Sample examples of fracture for steel at low and high temperature, with brittle and ductile behaviors, respectively

[26]

2.2.3 Delamination

Composite materials, whether manmade or natural (such as woods), have anisotropic properties and they are more likely to fail in one loading direction over another. These materials are strongest when loaded in the direction parallel to that of the load bearing fibers and are weakest when the loading is out of plane. Layers of fibers are connected by a weaker matrix material or adhesive, and a failure of the material here will lead to a separation of layers, referred to as delamination. This type of damage may go unseen in a composite structure if it lies beneath the surface. Figure 14 shows three different delamination conditions: Delamination between two rigid panels, delamination of a thin flexible film or panel on a rigid panel, and delamination between two flexible panels.

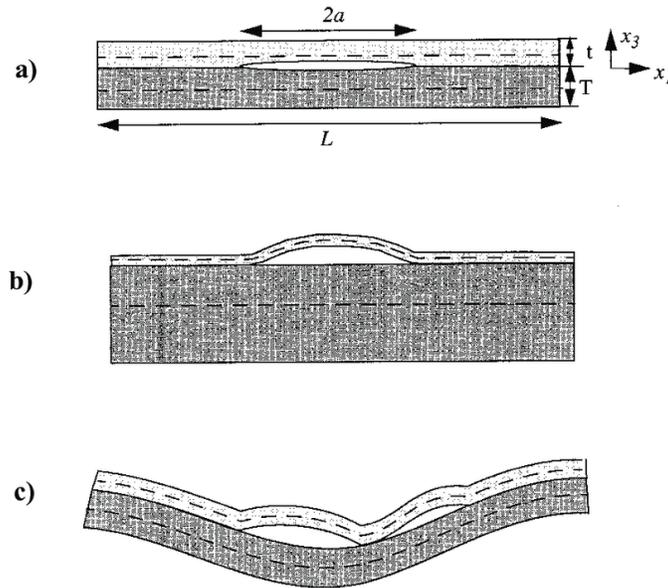


Figure 14. Three different delamination conditions, two rigid panels (a), one flexible panel or film and one rigid panel (b), two flexible panels (b) [27]

2.2.4 Degradation due to residual mechanical stress

When a material undergoes plastic deformation (temperature gradients from thermal cycling, or structural changes from a phase transformation), stress may remain due to uneven changes in the dimensions of the part. These stresses are called residual stresses.

Residual stresses can cause early failure in a structure. Generally, a large amount of energy is required to propagate a crack through the bulk of a material, but residual stresses may act to reduce the energy needed to do so by adding additional stress. In the case of thermal residual stresses, it is sometimes possible to relieve some of this stress by baking, cryogenic methods, or by introducing stress in the opposite direction to counter the negative stress, [25].

Though unwanted residual stress can be detrimental to a material's performance, there are cases in which it is desirable. In many cases, it is beneficial to introduce a residual compressive stress to

a surface which acts to close cracks that form under tension. Laser peening (LP) is an example of introducing a desirable residual stress. Laser peening and shot peening are examples of surface processes which introduce compressive stress to the surface to improve its lifetime. The compressive stress acts to close cracks formed in tension, increasing resistance to damage from fatigue and other forms of surface wear. The introduction of these residual stresses can be especially important for brittle materials such as ceramics, which can withstand large amounts of compressive stress but very little tensile stress, [25].

3 Thermal degradation and failure mechanisms

3.1 Wear out mechanisms

3.1.1 Intermetallic Growth

Soldering in electronic components provides a combination of electrical connection and mechanical support, and thus the properties of these solder joints is very important to the performance of the component. During the soldering process of electronic components, intermetallic compound layers will form. During thermal cycling or thermal shock, intermetallic compound (IMC) layers will grow, and the characteristics of the material degrade. If the layers become too thick, this compromises the mechanical strength of the joint. For instance, the precipitation of a new material increases brittleness and cracks can form more easily. Additionally, the formation of IMCs may increase the resistivity of the joint which degrades the electrical performance of the component. This type of failure is more common in electronic devices under extreme temperature environments with large temperature variations, such as in space conditions, [28].

3.1.2 Hillocks

An important source of mechanical stress in thin films is the thermal mismatch between the film and the substrate material. Depending on the sign of the mismatch and of the temperature change, tensile or compressive stresses can develop in the film. One mechanism of compressive stress relaxation which is specific to thin films is the formation of hillocks. Hillocks form during heating and cooling cycles at layer boundaries with dielectrics, [29].

The structure of the hillocks has not been investigated in detail and the exact mechanism of hillock growth remains unclear, but it is known that hillocks preferentially nucleate at a weakly bonded film/substrate interface where delamination occurs due to very high compressive stresses in the films which allow the interface to act as a sort of atom sink. Hillocks tend to be regularly arranged which may be due to the stress relaxation zones around Hillocks which make the surrounding areas less likely to become nucleation sites, [30].

Hillocks grow under continued compressive stress which encourages diffusion of atoms from grain boundaries to the hillock sites. Depending on the temperature, the atoms may diffuse along the film/substrate interface or bulk lattice. As atoms diffuse to the hillock site, they may grow in a direction normal to the film surface or grow the grain along the surface plane. Growth of hillocks in the normal direction displaces the original film upward, bending it. Once the bending stresses exceed the strength of the film, it will fracture, and new material is able to penetrate above the film layer and form a spherical cap which reduces overall surface area, [31].

3.2 Overstress mechanisms

3.2.1 Ductile to brittle transition

A ductile-to-brittle transition (DBT) is the point or range at which a material that is relatively ductile at high temperatures becomes more brittle at low temperatures. It is known to happen to thermoplastic polymers and some metal alloys, most notably ferrous alloys such as steel.

In polymers, the DBT represents a change in the main failure mechanism from yielding as the dominant mechanism at high temperatures to crazing or shear yielding at lower temperatures as shown in Figure 15. Depending on the nature of the main chain and side groups, the DBT temperature will coincide with the α -transition temperature (which is the same as the glass transition temperature), β -transition temperature, or γ -transition temperature which are listed in order of decreasing temperature, [32].

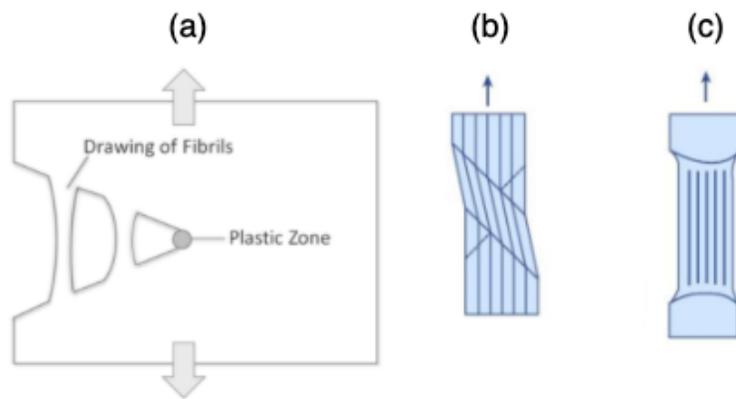


Figure 15. Crazing, [32] (a), shear yielding, [33] (b), yielding, [33] (c)

In materials with an ordered lattice structure, such as those in metals, the ductility of the structure depends on the energy needed to move a dislocation along slip planes. When the energy needed to move a dislocation is very high, the material is considered “brittle” while also being relatively strong, whereas a structure which requires little energy to move a dislocation is considered “ductile” but is often not as strong as the more brittle structures. A face-centered cubic (FCC)

lattice, seen in metals like copper, has many slip planes ⁴which allows for easy dislocation movement. On the other hand, a body-centered cubic (BCC) lattice, which is the dominant structure for iron alloys, has fewer slip planes and dislocation motion requires additional energy to occur. Figure 16 shows the structure of a BCC (a) and FCC (b) lattice. At high temperatures, energy from heat enables easier motion of dislocations in BCC structures, making the material more ductile, but weaker. At low temperatures, little dislocation motion can occur, and the material becomes harder and more brittle.

The presence of alloying elements has a major effect on the DBT in metals, particularly steel. While pure iron is fairly ductile and has a low DBT – about -50°C [34] – the addition of alloying carbon increases the DBT, and even a small amount of sulfur or phosphorous can greatly decrease the ductility and increase the DBT. The addition of manganese to a steel alloy has a positive effect, however, and can increase ductility as well as reduce DBT [34]. Precipitates, grain boundaries, and other hardening mechanisms all decrease the ductility of the material.

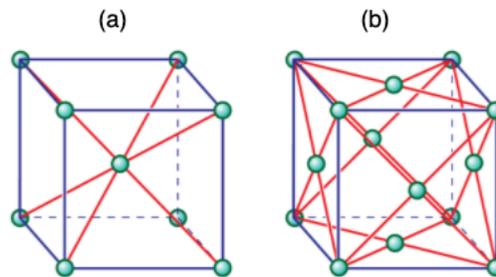


Figure 16. Body-centered cubic (a), and face-centered cubic (b) [35]

⁴ A slip plane for a given crystal lattice is the plane with the highest density of atoms (closest packed), and on which slip (motion) may occur with the least energy needed to dislocate the atoms.

3.2.2 Glass Transition Temperature

Glass transition is a second-order transformation which occurs in amorphous materials - namely, polymers, [32]. This transition occurs over a range of temperatures and marks the point at which the polymer chain is able to move with increasing degrees of freedom without breaking. This change occurs because of the contribution of intermolecular (secondary) bonding between chains. Though these bonds are not as strong as the primary covalent bonds which hold the chains together, at low temperatures it may be difficult for the chains to slide past each other due to these bonds, whereas at high temperatures it is relatively easy to overcome the intermolecular bonds.

The presence of bulky side groups, crosslinking, or polar groups on the chain will all decrease chain mobility and will therefore make glass transition occur at higher temperatures. This can be a problem for polymers that are exposed to temperatures outside of their expected application range and may fracture early or become flimsy.

3.2.3 Thermal shock

Thermal shock is the cracking mechanism as a result of rapid temperature change. It affects material properties such as toughness, thermal conductivity, and thermal expansion. In addition, as different parts expand by different amounts – creating a thermal gradient - it results in a differential strain which creates stress in the material. If this stress grows large enough, it can cause cracks to form. [36]

3.2.4 Melting

Melting is the phase change of a substance from solid to liquid. It is a first-order transformation that happens at a constant temperature and results in increased molecular vibration. The failure

mechanisms that generate heat can result in component melting as a secondary failure. For instance, in electrostatic discharge failure mechanisms heat is generated that can result in melting of electronic devices, [28].

3.2.5 Fatigue

Similar to mechanical fatigue, thermal fatigue is the weakening of a material caused by cyclic thermal loading resulting in crack growth and structural damage. Thermal fatigue is differentiated from mechanical fatigue in that it may occur by only thermal cycling, without mechanical loads. A key example of this is in turbines, where temperature differentials from the starting and stopping of the turbine produce temperature gradients in the material that leads to thermal fatigue, [16].

3.2.6 Degradation due to residual thermal stress

Residual thermal stresses are stresses introduced when a material undergoes heating or cooling and attempts to expand or contract. This can occur in one of two ways, [16]:

- If two dissimilar materials are bonded together and heated, dissimilar thermal expansion coefficients create stresses on both materials as one attempts to expand more than the other.
- A bulk material is heated or cooled unevenly, and one area is at a different temperature or changing temperature at a different rate. Thermal expansion will create stress as one area is expanding or contracting at a different rate than another.

In the following figure, an example of a residual thermal stress process is presented. There is an elastic multilayer structural material (Figure A). When we increase the temperature, the thermal strains are generated in the layers (Figure B). To satisfy the displacement compatibility condition

at the individual interface, thermal stresses should be generated (Figure C). Finally, the bending of the whole coating system occurs because of the presence of thermal stresses (Figure D).

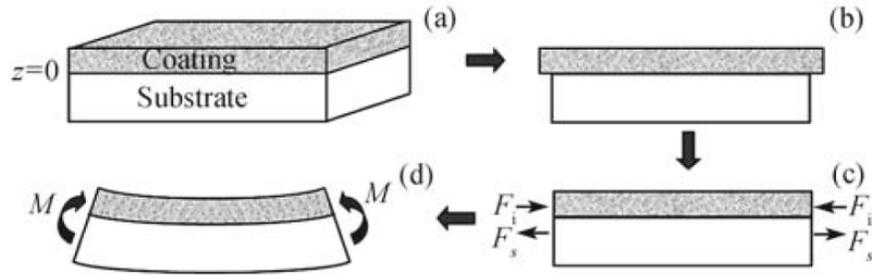


Figure 17. An example of a residual thermal stress process [37]

4 Chemical degradation and failure mechanisms

4.1 Wear out mechanisms

In this section, different types of chemical wear out mechanisms are explained. One of the main materials that suffer from chemical degradation is polymer. Polymers are a wide category of materials which includes synthetic thermoplastic and thermoset polymers, naturally occurring polymers present in organic material, and natural and synthetic rubbers. These materials undergo various forms of degradation depending on the environment and polymer chemistry, but the main forms are:

- Depolymerization
- Thermal-oxidative degradation
- Hydrolytic degradation
- Ozone Degradation

In the following section, all these degradation mechanisms are explained briefly. Then, corrosion and outgassing are presented as the other types of chemical wear out degradation mechanisms.

4.1.1 Polymer degradation-depolymerization

Depolymerization is a process which occurs at high temperatures and is defined as the decomposition of a polymer into one or more monomers, [38] [39]. It is a very common process in nature. For example, in the process of food digestion macromolecules depolymerize. For polymers formed via addition polymerization such as polyethylene, there is no chemical reaction involved and the tendency to depolymerize or polymerize is dependent on the relative size of the entropy gain times the temperature to the enthalpy change from the conversion from a single-bond carbon chain to a double-bond monomer. At low temperatures, polymerization is thermodynamically favored due to the decrease in enthalpy, but at high temperatures depolymerization will become favored, [40].

$$\Delta G = \Delta H - T\Delta S$$

In the following table, ceiling temperatures⁵ of different organic polymers are presented.

Table 1. Ceiling temperature of common organic polymers [41]

Polymer	Ceiling Temperature (°C) ^[3]	Monomer
polyethylene	610	CH ₂ =CH ₂
polyisobutylene	175	CH ₂ =CMe ₂
polyisoprene (natural rubber)	466	CH ₂ =C(Me)CH=CH ₂
poly(methyl methacrylate)	198	CH ₂ =C(Me)CO ₂ Me
polystyrene	395	PhCH=CH ₂
Polytetrafluoroethylene	1100	CF ₂ =CF ₂

Condensation polymers, on the other hand, do not have the ability to change between monomer and polymer forms in this way. The formation of these polymers occurs via the reaction of two or

⁵ The ceiling temperature of a polymer is the temperature at which polymerization ceases to become thermodynamically favorable. Above this temperature depolymerization will occur.

more constituents, for example an alcohol reacting with carboxylic acid to form polymers with ester groups. Instead, these polymers depolymerize via reactions with the environment. For example, hydrolysis is the process by which bonds in functional groups are broken in water causing depolymerization. [40]

4.1.2 Polymer degradation – thermal oxidative degradation

Polymers can degrade by chain scission in which a long main chain breaks up into smaller chains of a smaller molecular weight. This type of degradation falls under the general category of thermal-oxidative degradation and is usually caused by exposure to heat or UV radiation while in the presence of oxygen. The reaction with oxygen causes the polymer to become brittle, more susceptible to wear, and changes its optical properties such as color and opacity. Thermal-oxidative degradation can be slowed down with the use of UV stabilizers and antioxidants. [42]

4.1.3 Polymer degradation – Hydrolytic degradation

Many polymers are not impermeable to liquids and may either swell or dissolve. The ability for the polymer to take up a liquid depends on the solubility of the polymer and liquid. For polymers, the solubility is typically much higher with organic solvents than water.

As the liquid penetrates the polymer, the smaller molecules are able to fit between the large polymer molecules and gradually increase the distance between polymer chains. This separation of the chains reduces the strength of intermolecular bonds and softens the polymer along with reducing its glass transition temperature. Dissolution is the more extreme form of the same effect, where the polymer is completely soluble, [42].

4.1.4 Polymer degradation – Ozone Degradation

Polymers – especially those with doubly bonded carbon atoms in the main chain – are susceptible to chain scission caused or accelerated by reactions with ozone, as well as oxygen, to a lesser extent. If the polymer is unstressed, this reaction will proceed until a protective layer is formed and stop, but tensile stresses form cracks in this layer that expose new material to react. This problem is mainly prevalent in vulcanized rubbers, characterized by the double-bonded carbons, [42].

4.1.5 Corrosion

Corrosion is the process of metal breakdown by reacting with substances in their environment. One of the well-known examples is rusting, where iron reacts with oxygen and water from the environment to form hydrated iron oxides which are more commonly known as rust.

Corrosion can be divided into several types; the most common of these are general, pitting, crevice, intergranular, stress corrosion cracks, and galvanic corrosion. These types of corrosion are described below but note that this is not a comprehensive list of all types of corrosion since many environmental, structural, and chemical factors can impact the rate and nature of corrosion in a metal, [42].

The simplest form is general corrosion which occurs over the full body of the material but is slow relative to other forms. Pitting and crevice corrosion occur at accelerated rates in small spaces where there is poor circulation, and the local environment is allowed to become highly corrosive as the reaction proceeds. Intergranular corrosion is accelerated corrosion at metal grain boundaries where the material might be more susceptible to a reaction.

Stress corrosion cracking occurs when a material is subjected to mechanical load cycles in a corrosive environment. Stress corrosion cracks greatly accelerate the rate of both corrosion and crack propagation, since the formation of brittle reaction products reduces the strength and ductility of the structure, and the small space created by the crack allows for rapid corrosion propagation similar to pitting corrosion.

Lastly, galvanic corrosion is characterized by the preferential corrosion of one metal when it is in contact with another dissimilar metal when moisture and an electric current are present. Under galvanic corrosion, the two materials form an electrolytic cell, with the more noble metal acting as a cathode and the less noble acting as an anode.

4.1.6 Outgassing

Outgassing is the process by which a material loses mass in very low-pressure conditions, most commonly in the vacuum of space [43]. Generally, outgassing describes the process of leaching material out of a part in low-pressure conditions but depending on the makeup of the material/part, the nature and consequentiality of this process varies. Polymers are notably susceptible to undergoing phase changes at these low pressures and may lose mass as material at the surface evaporates. Additionally, even if the bulk of the material is designed to be resistant to this effect, materials trapped in pores or cracks may leach out. This can result in damage due to mass loss, and potential damage to sensors or electronics if some of the leached material attaches itself to these sensitive parts.

4.2 Overstress mechanisms

Overstress chemical degradation mechanisms are chemical degradation mechanisms that results in material break down. All degradation mechanisms presented in wear-out chemical degradation mechanisms (Section 4.1) can occur at varying speeds depending on what elements the material is exposed to. Extremely reactive materials - like strong acids or bases - can quickly break down a material structure as it reacts. These types of degradations are considered as overstress chemical degradation mechanism.

5 Electronics degradation and failure mechanisms

Electronic components can be divided into three categories: active, passive, and electromechanical. Active components include transistors, diodes, displays, etc. which can be used to amplify signal and power, and whose functions depend on external energy input. Passive components include resistors, capacitors, and inductors, etc. which cannot inject power into a circuit. Electromechanical components include switches, cable assemblies, etc. which perform their electrical functionalities by mechanical movements of their parts. Some of the failure mechanisms in these electrical components have been introduced in former sections of this paper. For example, coefficient of thermal expansion (CTE) mismatch of packaging materials can cause mechanical stresses inside the components and trigger fatigue. Corrosions due to humidity and chemicals also degrade the packaging materials and PCBs and can further fail the electronics. Outgassing and thermal shocks are also failure mechanisms involved in packaging failures. Glass transitions in the PCB failures can soften the resin matrix and cause contaminant diffusion. In the following sections, more degradation and failure mechanisms in electrical components are introduced.

Semiconductors are widely used in building up electrical systems. For example, semiconductors serve as the dielectric layer in the Metal–oxide–semiconductor field-effect transistors (MOSFETs) which are switching and signal amplifying components and as significant members in memory hierarchy. Semiconductors are also used in FLASH memory which serves as solid state memory (SSD). Thus, the following section starts from the degradation mechanisms commonly seen in the MOSFETs, moving on to the crosstalk of the neighboring circuits, and the metallic degradation of interconnections and metallic components.

5.1 Dielectric breakdown

Dielectric breakdown can be divided into five stages as shown in Figure 18. The schematics of how defect clustering affects the leakage current evolution are shown in Figure 19. There is a maximum electric field that the dielectric material can tolerate. When the applied electric field is larger than the maximum tolerable voltage in a dielectric material, the hard breakdown (HBD) happens (as shown in Figure 18 region E), and the gate oxide is no longer insulated. HBD is the most destructive phase of the breakdown. It can also be referred to as thermal runaway. The metal atoms/ ions in the gate migrate from the gate to the dielectric at this stage, causing ‘punch-through’. The transitive characteristics are completely lost in the HBD regime.

Under lower electric fields, the gate oxide can also wear out with time-dependent dielectric breakdown (TDDB) process. Stress-induced generation of traps can happen inside the oxide and at the interface. As the dielectric degradation continues, the breakdown initiates (as shown in Figure 18 region B). The degradation process and breakdown position can vary greatly with same size transistors because of the random behavior of the degradation mechanism. Because of the localized defects in the grain boundary (GB) regions, TDDB is observed to propagate faster in

GBs, [44]. TDDB can be controlled to a certain degree by the external compliance current. Similar to stress-induced leakage current (SILC), TDDB can be partially recovered, and the extent of recovery relies on the electrode material oxygen solubility, [45].

The break down (BD) modes depend on the thickness of the gate oxide. HBD marks a complete loss of the oxide dielectric properties. For sub-180nm complementary metal-oxide-semiconductor (CMOS), soft-BD (SBD) happens more frequently, resulting in a large increase of gate current noise and small increase of gate current, [46]. For ultra-thin oxides (<2.5nm), progressive-BD (PBD) follows SBD till HBD.

There are other types of break down. For instance, in digital breakdown (Di-BD), random telegraph noise (RTN) happens resulting in random jumps in current levels. The electron captures and emission by the traps cause the current fluctuations. Traps from GBs and interface can also contribute to this phenomenon besides traps in the percolation paths.

In analog breakdown (An-BD) (as shown in Figure 18 region D), additional defects are created near the percolation path, enhancing Joule heating, and increasing localized temperature. Percolation paths become wider at this stage, [47]. The device is significantly degraded at this An-BD stage and can no longer provide reliable functional operation.

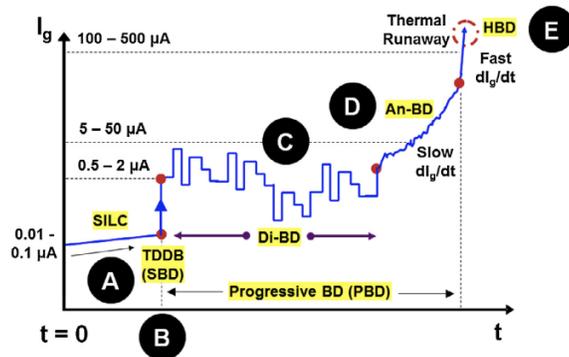


Figure 18. Leakage current evolution with time for a dielectric stressed at time $t=0$. Five regimes of dielectric breakdown are shown, [48]. A: stress-induced leakage current (SILC); B: time-dependent dielectric breakdown (TDDB); C: digital breakdown (Di-BD); D: analog breakdown (An-BD); E: hard breakdown (HBD). Different kinetics of degradation are related with different regimes. A and B are device area dependent while the rest are location dependent, [48].

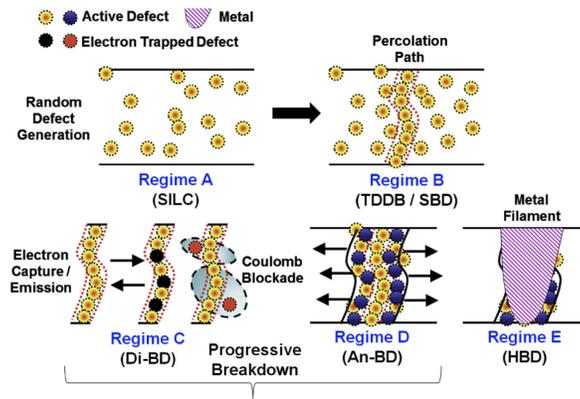


Figure 19. The correspondence of dielectric defect density and spatial distribution with the five regimes of breakdown, [48]. Yellow and blue dots are active defects in the pre-TDDB and post-TDDB stage. Black and red dots are the trapped charges. Regimes A-D involve the role of oxygen vacancy defects, while regime E relates to the metal migration from the gate electrode and/or silicon from the substrate, [48].

The continuous clustering of defects can create percolation paths that link the gate to the substrate and the TDDB process happens. Figure 20 shows the breakdown spots of an nMOS transistor.

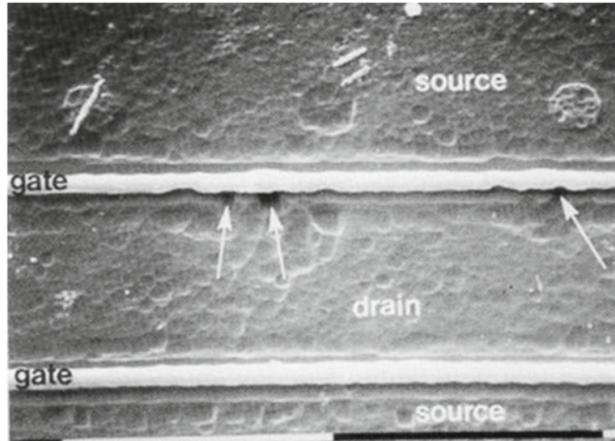


Figure 20. Multiple breakdown spots at the drain junction of an nMOS transistor, [49] [50].

5.2 Bias temperature instability (BTI)

Bias temperature instability (BTI) is a degradation mechanism of MOSFETs. A threshold voltage shift may happen due to BTI when the MOS gate is applied a bias voltage under elevated temperature. The increase or decrease of threshold voltage changes the sensitivity of the transistor. There are two types of BTI; negative BTI (NBTI) that occurs in pMOS, and positive BTI (PBTI) that occurs in nMOS. At present, there is no consensus about the origins of both types of BTI phenomena. However, many researchers believe that NBTI originates from hole trapping in oxide defects [51] [52] [53], and PBTI, on the other hand, originates from electron trapping in oxide traps [54] [55].

5.3 Hot carrier injection (HCI)

Hot carrier injection is a wear-out mechanism in MOSFETs. Hot carriers refer to the carriers that are accelerated under high electric fields and build up enough kinetic energy to inject into 'forbidden' regions like the gate oxide. These carriers can be trapped in those regions or generate

interface states, which can lead to threshold voltage shift and output conductance shift. This type of degradation first came to attention in mid-eighties as the supply voltage didn't decrease along with the transistor scaling [56] [57] [58]. As the transistors reduced power consumption and lowered the operating voltage, HCI became less severe since mid-nineties. Generally, HCI is more of a problem in nMOS devices [59], but it can also severe the NBTI in pMOS, [60].

There are four commonly encountered hot carrier injection mechanisms including, [61] 1) channel hot electron injection (CHE); 2) substrate hot electron injection (SHE); 3) drain avalanche hot carrier injection (DAHC); and 4) secondary generated hot electron injection (SGHE). In principle all these four mechanisms work in a similar manner. Their difference is in the condition that hot carriers are generated. In the following subsections, these mechanisms are explained briefly.

5.3.1 Channel hot electron (CHE) injection

It usually happens when some electrons gain sufficient energy to pass the Si/SiO₂ barrier at the drain end of the channel of the transistor without energy loss after collisions with channel atoms, [62]. CHE is worse in higher voltage because larger electric fields can cause avalanche multiplication and generate hot carriers. Since holes are heavier than electrons, CHE in nMOS is more significant than in pMOS, [63]. The Schematic of CHE is shown in Figure 21.

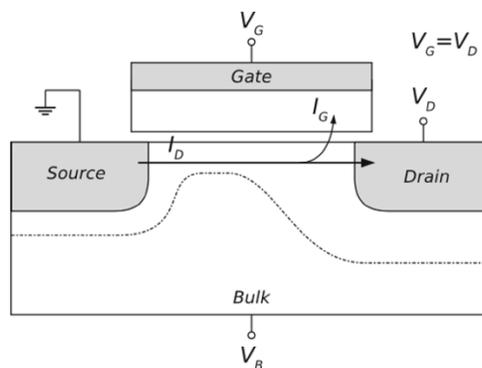


Figure 21. Channel hot electron (CHE) injection process [62].

5.3.2 Substrate hot electron (SHE) injection

This mechanism happens when the transistor bulk is applied with a very large positive or negative bias. The carriers in the substrate are driven to the Si/SiO₂ interface, gaining sufficient kinetic energy to by-pass the interface barrier, and injecting to the oxide [62]. Compared with other HCI mechanisms, hot carriers in this type are mostly uniformly distributed along the channel as shown in Figure 22. The phenomenon usually happens in stacked devices with non-zero bulk bias.

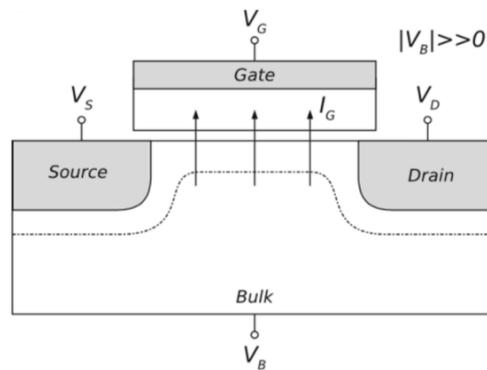


Figure 22. Substrate hot electron injection process [62].

5.3.3 Drain avalanche hot carrier injection (DAHC)

Under high drain voltage and low gate voltage, impact ionization of the channel current near the transistor drain can create electron-hole pairs as shown in Figure 23 [62]. It can also be called as avalanche multiplication which leads to drain avalanche hot carrier generation (DAHC). Bulk current can also be generated in some cases. The gate oxide can heavily degraded because of this avalanche hot carrier injection.

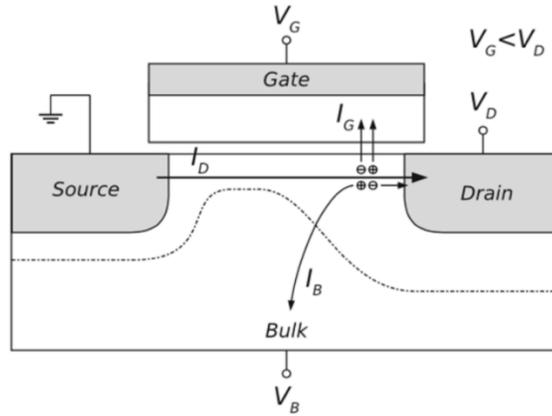


Figure 23. Drain avalanche hot carrier injection process [62].

5.3.4 Secondary generated hot electron injection (SGHE)

Impact ionization⁶ generates secondary carriers. These carriers can be generated under DAHC or bremsstrahlung radiation near the drain, gaining sufficient kinetic energy and overcoming the surface energy barrier, that results in secondary generated hot electron injection [62].

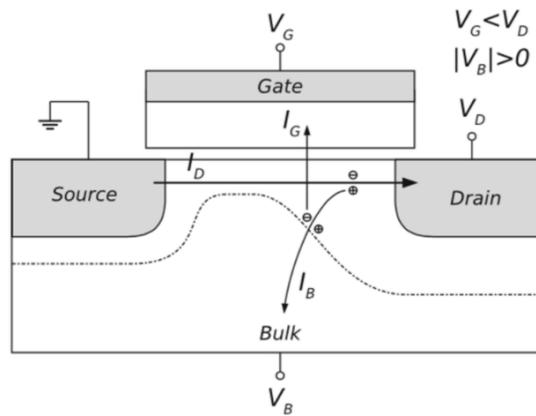


Figure 24. Secondary generated hot electron injection [62]

⁶ Happens when there is a sufficient large, applied voltage.

5.4 Electromagnetic interference (EMI)

Electromagnetic interference (EMI) is the disturbance caused by external sources to the target electrical circuits. External sources can cause disturbance on the target electrical circuits because of EMI. Such disturbance can be conductive, capacitive, magnetic, or radiative between the source and the victim circuits. Types of EMI include on-chip crosstalk, simultaneous switching noise (SSN), energetic particles, and radiated EMI, [62].

On-chip crosstalk happens between two circuits or circuit elements (like interconnect wires). The signal waves from one circuit can be influenced by the other. SSN is a case of common impedance crosstalk where subcircuits share the same power distribution bus. Large transient current spikes can be produced with the simultaneous switching of multiple digital gates. The energetic particles and radiation related interference will be introduced in section 6.

5.5 Electrostatic discharge (ESD)

When two charged objects come close to each other, electrostatic discharge (ESD) can happen and generate electricity flow suddenly. Triboelectric charging, electrostatic induction, and energetic particles can cause ESD. Triboelectric charging happens between two different materials which experience contact electrification in contact and then separate. Electrostatic induction happens when a charged object is close enough to another uncharged object, resulting in charge redistribution in the certain object. Energetic particles can be particles from space, like particles in cosmic rays. Typically, ESD can cause failure in semiconductor chip dielectrics or metal interconnects, [64]. Severe ESD can cause junction burnout.

Electrostatic discharge can generate high voltage and cause damage to the electronics. Thus, it must be carefully prevented in manufacturing and quality control processes. Moreover, ESD can be the cause of explosions with just a spark in some other industries.

5.6 Electrical overstress (EOS)

Electrical overstress (EOS) can be induced by temperature, electric field, and electromigration. EOS can cause thermal runaway, which results in local thermal conductivity loss and producing more heat locally, [65]. Current crowding can be caused by the localized heat, further severe the heat localization and can even burn the device as shown in Figure 25 and Figure 26.

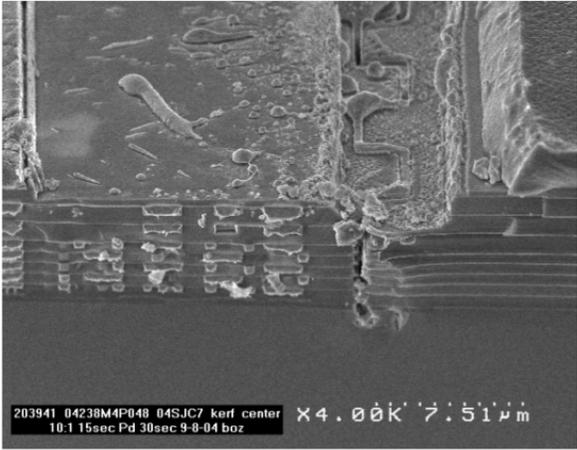


Figure 25. Plasma arcing in semiconductor manufacturing in 300 mm wafer fabricators causes EOS failure, [66]



Figure 26. EOS failure in packaged semiconductor, [67]

5.7 Electromigration (EM)

Electromigration involves the metal ion migration due to momentum transfers under electrical stresses [62]. Voids and hillocks can be created due to the gradual shift of metals. Images of voids and hillocks are shown in Figure 27. EM is sensitive with the current density in the circuit. As integrated circuits scale down these days, the effect of EM becomes more significant, and some design modifications have been performed. For instance, in advanced semiconductor manufacturing processes aluminum is being replaced by copper. Since copper has much higher melting point so the atomic diffusion is slower than aluminum.

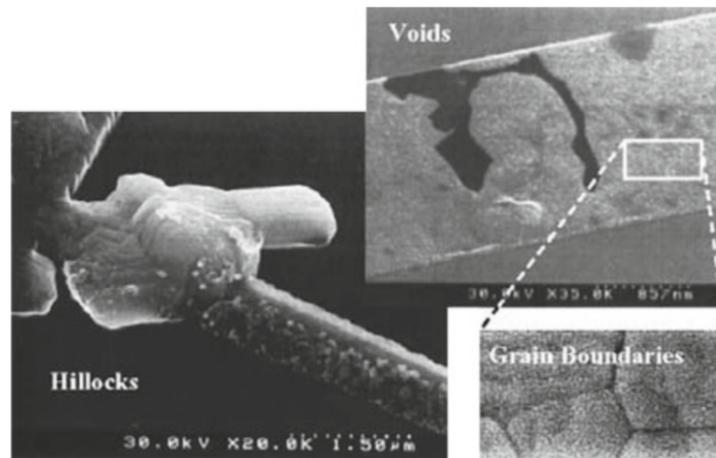


Figure 27. Hillock and void formations in wires due to electromigration, [68]

5.8 Tin whiskers

Contact resistance in electronics is carefully controlled to ensure the device's functionalities. The contact degradation can be mechanical-induced, thermal-induced and electrical-induced. For example, similar to packaging failure, thermal expansion mismatch can induce internal mechanical stress and lead to fatigue cracking. Corrosion can generate non-conductive oxides and raise the resistance high up. Electrically, electromigration and brittle intermetallic layer formation can both cause contact degradation and failure. Beyond EM discussed in the former section (Section 5.7), this section will further introduce the tin whisker formation and its possible mechanisms.

Tin whiskers are the whisker shaped crystalline structures generally grown from pure tin or zinc finished surfaces. Different from dendrites which grow along a surface (X-Y plane), tin whiskers grow outwards from a surface (Z axis). Typically, tin whiskers have length around 1 mm and diameter around $1\ \mu\text{m}$ [69], but the sizes can vary depending on the cases. The actual growth mechanism of tin whiskers has not yet come to a consensus, but this degradation is thought to be

related to the diffusion of atoms within the finish surfaces. Several theories have been raised: 1) tin whiskers can be a response to the stress relief within the tin plating; 2) the growth of the tin whiskers may result from the recrystallization and abnormal grain growth in tin grains, [69]. It is shown that neither metal dissolution nor electromagnetic field is required for the formation of tin whiskers. Figure 28 shows TEM image of long tin whiskers and Figure 29 is a schematic of probable tin whisker formation mechanism.

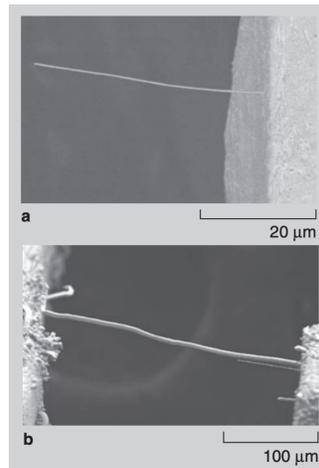


Figure 28. Examples of long tin whiskers on a 15μm thick tin film over Cu alloy (ASTM BB42) after exposure to room ambient for 222,981 hrs, [70]

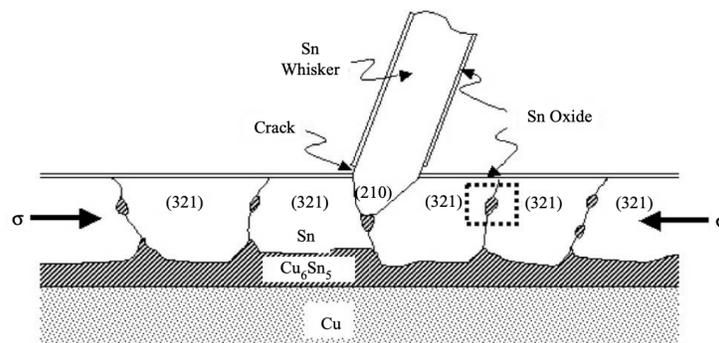


Figure 29. Diffusion of Cu into the shaded intermetallic compound to react with Sn generates a compressive stress in the volume, [71]

Tin whiskers can cause short circuits, metal vapor arc and contamination. The whisker can be fused if the current flow exceeds the fusing current of the whisker, and in this case, the short circuit is transient. Otherwise, the short circuit caused by the whisker is permanent. Under high levels of current and voltage, the tin whisker can be vaporized into conductive plasma of metal ions that form destructive metal vapor arcs. The required initiation and sustaining power for metal vapor arcs is smaller under lower air pressure. Thus, in space-based applications, this phenomenon needs to be paid more attention to. Additionally, the presence of whiskers can interfere with sensitive optics and cause contamination, [72].

5.9 Self-healing accumulation

When overvoltage is applied on non-metallized film capacitors, small localized dielectric breakdown can occur and short the electrodes. However, in metallized film capacitors, since the electrode foils are thin, the foils can vaporize under high energy density in the fault area and avoid breakdown. This is the self-healing phenomenon, [73]. Three factors affect self-healing, which are the working voltage, mechanical pressure between the winding layers and the metallization thickness, [74]. A thin layer of Al or Zn coating on the plastic film is used in the metallized film capacitor and the thickness of this coating determines the energy needed for self-healing process. Typical plastic film dielectrics include polypropylene (PP), polycarbonate and polyester, whose self-healing capabilities are different. Certain amount of energy is required to initiate the vaporization process. However, if the energy exceeds the tolerance level, weak spots will be created and may further cause avalanche breakdowns.

The capacitance can also gradually decrease because of the accumulation of multiple self-healing events. The metal layer vaporization reduces the electrode area over time. Additionally, self-healing events increase the equivalent series resistance (ESR) of the capacitor, which also reduces the capacitor's lifetime.

5.10 Self-heating

The self-heating in the metallized film capacitors happens when body generated power exceeds the surface power dissipation capability. Self-heating raises the temperature of the capacitor, reduces the breakdown voltage, and even melts the capacitor, [75]. Several factors can affect the self-heating temperature: ESR, current across the capacitor, and the thermal resistance between the case and the ambient temperature, [75].

5.11 Electrochemical corrosion

For metallized film capacitors, the electrochemical corrosion of the thin electrode can be caused by the high ripple current and voltage, [76]. The oxygen and/or moisture of the polymer migrates to the polymer and metallization interface during this corrosion process. Factors such as temperature, electrode thickness, stress and frequency affect the corrosion process. Also, the material selection of the dielectric layer in metallized film capacitors can make a difference in the sensitivity of ripple current, for example PP is less sensitive to the ripple current than polyethylene terephthalate (PET). Consequently, metallized film capacitors using PP as the dielectric have better resistance to the electrochemical corrosion.

5.12 Thermal overstress induced electrolyte evaporation

Electrolyte evaporation is the primary wear-out mechanism in electrolyte capacitors. This mechanism is caused by high temperatures within the capacitor core. For electrolytic capacitors under overstress, the electrolyte diffuses as vapor through the selling material and the diffusion rate can be accelerated by the increasing vapor pressure due to elevated temperature, [76]. The loss of electrolyte decreases the capacitance and increases ESR.

6 Radiation degradation and failure mechanisms

Radiation is defined as emission or transmission of energy through space or a medium. The word radiation came up from waves radiating that moves outward in every direction from a source, [77]. There are two fundamental damage mechanisms caused by radiations including lattice displacement and ionization effects, [78].

6.1 Lattice displacement

Threshold displacement energy (TDE) is the most common quantity for describing radiation damage in materials. Thus, displacement energy is defined as the minimum required energy to create a stable defect in a material. At the higher energy than the threshold level, a stable displacement will be generated in the structure. TDE is unique to each direction in a crystal lattice, and a solid crystalline material will typically have a minimum and an average TDE value separately identified. Lattice displacement may occur from proton, neutron, heavy ion, or high energy gamma radiation if the energy of that radiation exceeds the TDE in that crystal direction, [79] [80]. The rearrangement of atoms in the crystal lattice caused by this radiation can cause

lasting damage and increase the number of recombination centers, [80]. Additionally, high doses in a short time span can cause partial annealing of the lattice, [81].

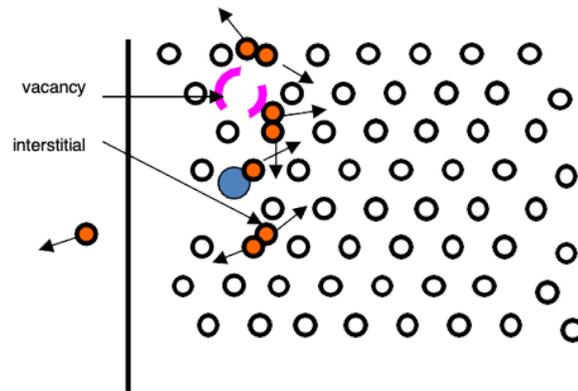


Figure 30. Lattice displacement

6.2 Ionization effects

Ionization effects result from the emission of energy from a medium through space or a medium that is sufficient to ionize molecules or atoms. The common sources of the ionizing radiation are X-rays, Alpha, Beta, Gamma, and Neutron radiations. The ionizing and nonionizing effects of energy particles is hard to define since each atom and molecule need different energy to be ionized. For example, if an x-ray photon collides an atom, the atom may absorb the energy and knock one electron to a higher orbit level. If the photon has enough energy to remove the electron from the atom, however, ionization will take place, [82]. An example of this effect can be seen in an x-ray machine. Bones and soft tissues absorb different levels of energies and x-ray machines utilize this fact to see bones and tissues.

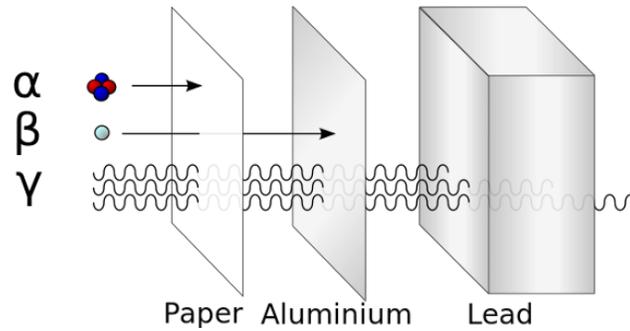


Figure 31. Alpha, Beta, and Gamma radiation

A single-event effect (SEE) is an ionization process by one single ionizing particle (ion, electron, or photon) in an electronic device. The ionization process results in change of state in or close to an important node of a logic element. This process is known as a soft error. The type of SEE in electronic devices depends on device type and technology, localization, and amount of radiation. In this section, SEEs are categorized to non-destructive and destructive single event effects, [83].

6.2.1 Non-destructive Single Event Effects

6.2.1.1 Single Event Upsets (SEU)

Single event upsets occur in memories and sequential logic circuits. A single event upset causes changes of bits on a memory array, i.e., data loss. It can happen at any time, either at reading, writing, or the idle state of a circuit. A re-write can correct the error. This effect can show up as Multiple Bit Upsets caused by a single ion, [84].

6.2.1.2 Single Event Functional Interrupts (SEFI)

A single event upset that leads to temporary loss of device functionality is considered as a single event functional interrupt (SEFI). This phenomenon occurs in control registers, e.g., processors.

SEFIs can be recovered by soft reset or power cycle, and this type of failure is usually more challenging than SEU, [85] [86].

6.2.1.3 Single Event Transients (SET)

In single event transients (SETs), an ion hit caused by cosmic rays leads to a voltage transient in the circuit. It is similar to electrostatic discharge and occurs in logic circuits. As circuit speed increases, SETs happen more often and become indistinguishable from intended signals. This type of failure is recoverable with soft reset, [87].

6.2.2 Destructive Single Event Effects

6.2.2.1 Single Event Latch-up (SEL)

A single event latch-up (SEL) occurs due to a low-impedance path generated by heavy ions or protons between two inner-transistor junctions. This results in a latch-up of the device until it is power-cycled, or the power supply and substrate creates a parasitic structure that could cause current overflow and device damage, [88]. SEL is a strongly temperature-dependent event, [89].

6.2.2.2 Single Event Gate Rupture (SEGR)

Under a high electric field between gate silicon, heavy ions passing through the gate oxide will leave a path to discharge the capacitor. This process causes local overheating and microscopic explosion of the gate dielectric region and leads to permanent damage to gate dielectric, [90].

6.2.2.3 *Single Event Burn-out (SEB)*

A single event burn-out (SEB) occurs when the substrate under the source region gets forward-biased and the drain-source voltage is higher than the breakdown voltage of the parasitic structures. This process requires a sufficient magnitude of current to overheat the device to destruction. It occurs often in bipolar and MOSFET power transistors and leads to permanent damage, [91].

6.2.2.4 *Single Event Hard Errors (SEHE)*

A single event hard error (SEHE) occurs when heavy ions strike on memory arrays, leading to a large energy transfer. It causes an unchangeable state, called a stuck bit in memory, and leads to permanent damage, [92] [93].

7 Human failure modes

Human failure modes can be classified to human error, and violation. These two failures are covered in more detail in the following sections, [94].

7.1 Human error

Human error is defined as an unintentional decision or action and can be classified to slips and lapses (skill-based errors), and mistakes. Human errors are possible to happen to even the well-trained and/or experienced person, [94].

7.1.1 Skill based errors (slip and lapse)

Slips and lapses occur in tasks that we can perform with low conscious attention; for instance, driving a vehicle. The tasks with low conscious attention requirements are very vulnerable to slips

and lapses when the attention is diverted for a very short time. Slip refers to a failure to perform a task as intended. It includes but not limited to cases such as, [94]:

- Performing a task at the wrong time; for instance, braking too late in a car
- Missing one or more steps in a task; for instance, forgetting to turn on the oven before cooking
- Performing an action with too little or too much strength; for instance, breaking a paperclip from too much bending
- Moving an object in the wrong direction; for instance, changing to the wrong gear in a car by moving the joystick in the wrong direction
- Performing a correct action on the wrong object; for instance, reading the wrong value on a thermostat

Lapse is defined by either forgetting to do a necessary action or losing your place partway through a task, [94]. Some examples of lapse include:

- Forgetting to tighten a screw after placing it
- Forgetting to retrieve a jacket that has been set down
- Being interrupted in the middle of an action and missing a step upon returning to it
- Forgetting to protect door and window borders before painting a wall

7.1.2 Mistakes

Mistakes are defined as decision-making failures., i.e., It happens when a person performs a wrong task, believing it to be right. There are two main types of mistakes, including knowledge-based and rule-based mistakes, [94].

An example of a knowledge-based mistake is poor judgement during a lane change resulting in an accident or disruption of traffic. The driver used their own assessment of the situation and unintentionally made a poor decision. A rule-based mistake may occur if an operator misinterprets procedure, such as pressing a wrong button in an emergency scenario after misunderstanding the purpose of the controls in an operation manual, [94].

7.2 Violation

Violations are intentional failures and deliberately performing the wrong task. The violation of health and safety principles and rules is one of the biggest causes of injuries and accidents at workplaces, [94]. Some common examples of violations include:

- Not using protective equipment (such as seatbelts or safety goggles)
- Skipping procedures to check a machine before starting it
- Allowing employees to operate machinery they are not trained on
- Beginning work on a new project or site without receiving permission

8 Software errors and failure mechanisms

Software errors and failure mechanisms can be classified to function failure mode, value-related and timing failure modes, and interaction failure modes, [95]. Figure 32 represents the functional decomposition of a software that includes a generic function with inputs and outputs, with outputs being used as input to other functions. The elements of the function can each have different failure modes. The process section is where the functional behavior and computation are executed, turning input(s) to output(s). Types of failure modes associated with this stage are called functional failures. A function in principle has at least one output. This may be a numerical value or a function

call to other functions. Input is the output of another function or is given from an external interface. An output of a function can be an input to several other functions. Each function can have several inputs and outputs with a specific data type and range, [96] [97].

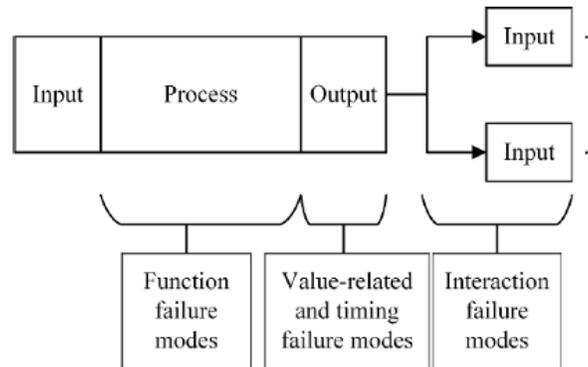


Figure 32. Functional decomposition of software, [96] [97]

The input, process and output could have different failure modes. The input could have interaction failure modes, the process can fail because of functional failure modes, and the output could fail due to value and time-related failure modes. In the following, some examples of each type of failure modes are presented, [95] [96] [97].

The function failure modes include, but are not limited to:

- Omission of a function/missing operation
- Incorrect functionality
- Additional functionality
- No voting
- Incorrect voting
- Failure in failure handling

The interaction failure modes include, but not limited to:

- Diverted/incorrect functional call

- No call of next function
- No priority for concurrent functions
- Incorrect priority for concurrent functions
- Communication protocol-dependent
- Unexpected interaction with input/output (IO) boards
 - File/database wrong name
 - File/database invalid name/extension
 - File/database does not exist
 - File/ database is open
 - Wrong/invalid file format
 - File head contains error
 - File ending contains error
 - Wrong file length
 - File/database is empty
 - Wrong file/database contents

The time related failure modes include, but not limited to:

- Output provided: too early
- Output provided: too late
- Output provided: spuriously
- Output provided: out of sequence
- Output provided: not in time
- Output rate
 - Too fast

- o Too slow
- o Inconsistent
- o Desynchronized
- Duration
 - o Too short
 - o Too long
- Recurrent functions scheduled incorrectly

The value related failure modes include, but not limited to:

- No value
- Incorrect value
 - o Too high
 - o Too low
 - o Opposite/inverse value
 - o Value is zero
- Value out of range
 - o Datatype allowable range
 - o Application allowable range
- Noisy value/precision error
- Value with wrong data type
- Elements in a data array/structure
 - o Too many
 - o Too few
 - o Data in wrong order

- o Data in reversed order
- o Enumerated value incorrect
- Non-numerical value
 - o NaN
 - o Infinite
- Redundant/frozen value
- Correct value is validated as incorrect
- Incorrect value is validated as correct
- Data is not validated

9 Cyber-Physical-Human (CPH) Systems' Interaction Failure Mechanisms

A cyber physical Human complex system is a system that is made of interacting components of software, hardware, and human operators (Figure 1). In these types of systems, we have cyber-physical-human interactions, [98], [99].

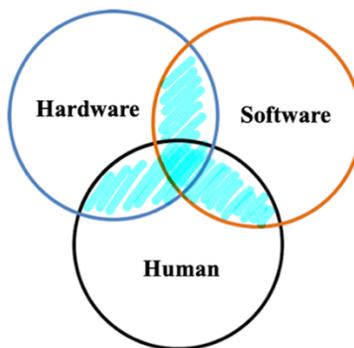


Figure 33. Cyber-Physical-Human system

The three different elements in cyber physical human systems are hardware, software and humans that have different failure behavior characteristics. It is important to understand the difference

between them and their failure modes, presented in Sections 2-8. But more importantly, having knowledge about all these three components would also allow us to better understand the behavior, interactions, and the associated failure mechanisms of the cyber physical human systems as a whole. Interaction in CPH systems is mutual or reciprocal action or influence in relation to certain function(s). The interactions result in exchange of matter, energy, force, and/or information, and we can have all the combinations as presented as the shaded area between hardware, software, hardware, human and the human software, but also the intersection between all three.

In this definition, the interaction is connected to functions. In the design of systems, interactions are established between two or more components to accomplish some functions. Essentially, the system functions are realized through interactions among the system components. Without interaction, the system functions cannot be implemented even when all components can provide their own functions. However, that does not say that interaction always contributes to the implementation of system functions. Some interactions may actually prevent system functions from being realized. So having ways of representing, identifying, and recognizing, the interactions between these elements are very important. Table 2 presents a classification for the cyber physical human system interactions. This classification is very important because it helps us identify failure modes and mechanisms. In general, identification of CPH interactions' failure mechanisms is a very challenging task in complex systems, and the provided table presents a structure for analyzing and identifying the potential interaction failure mechanisms in a complex system.

Table 2. Cyber-physical-human system interactions (P: physical, C: cyber, H: human)

P-P	P-C	P-H	C-C	C-H	H-H
------------	------------	------------	------------	------------	------------

Form	Physical contact, Signal	Signal	Physical contact, Signal	Statement	Signal	Physical contact, Signal
Content	Mass, Momentum, Energy, Information	Information	Momentum, Energy, Information	Information	Information	Momentum, Information
Functional dependency	B is required for A to work, B prevents A, Unavailability of A activates B, Coordination, Competition					
Time pattern	Continuous processes, Discrete events					

10 Discussion and conclusion

For the purpose of reliability analysis of complex systems, proper understanding of cross-filed degradation and failure mechanisms is essential. In many cases, various degradation mechanisms can have certain dependencies and consequently, the initiation of one degradation mechanism can positively or negatively affect the propagation of the others in the same system. An accurate reliability estimation of one complex system requires engineers not only to investigate the material, human and software reliability factors, but also to understand the interactions and dependencies among them.

In this study, different types of material degradation mechanisms in complex systems are classified and presented. In addition to material degradation, human errors, software failure, and cyber-physical-human interaction failure are presented and discussed.

The mechanism-based reliability studies are capable of facilitating the engineers to monitor the system health, help decision makers to weigh among reliability factors and even provide guidance on the selections of materials, system structures, operation conditions, operating strategies, operators and software.

References

- [1] "Parhizkar, T. (2018). Long-Term Degradation-Based Modeling and Optimization Framework. In Handbook of Research on Predictive Modeling and Optimization Methods in Science and Engineering (pp. 192-220). IGI Global."
- [2] "Sotoodeh, A. F., Parhizkar, T., Mehrgoo, M., Ghazi, M., & Amidpour, M. (2019). Aging based design and operation optimization of organic rankine cycle systems. Energy Conversion and Management, 199, 111892."
- [3] "Parhizkar, T., Mosleh, A., & Roshandel, R. (2017). Aging based optimal scheduling framework for power plants using equivalent operating hour approach. Applied energy, 205, 1345-1363."
- [4] "Parhizkar, T., & Hafeznezami, S. (2018). Degradation based operational optimization model to improve the productivity of energy systems, case study: Solid oxide fuel cell stacks. Energy Conversion and Management, 158, 81-91."
- [5] "Roshandel, R., & Parhizgar, T. (2013). A new approach to optimize the operating conditions of a polymer electrolyte membrane fuel cell based on degradation mechanisms. Energy Systems, 4(3), 219-237."
- [6] "Parhizkar, T., Utne, I. B., Vinnem, J. E., & Mosleh, A. (2021). Dynamic probabilistic risk assessment of decision-making in emergencies for complex systems, case study: Dynamic positioning drilling unit. Ocean Engineering, 237, 109653."
- [7] "Hu, Y., Parhizkar, T., & Mosleh, A. (2021). Guided Simulation for Dynamic Probabilistic Risk Assessment of Complex Systems: Concept, Method, and Application. Reliability Engineering & System Safety, 108047."
- [8] "Parhizkar, T., Vinnem, J. E., Utne, I. B., & Mosleh, A. (2020). Supervised Dynamic Probabilistic Risk Assessment of Complex Systems, Part 1: General Overview. Reliability Engineering & System Safety, 107406."
- [9] "Kandeva-Ivanova, M., Vencl, A., & Karastoyanov, D. (2016). Advanced tribological coatings for Heavy-duty applications: Case studies. Bulgarian Academy of Sciences, Institute of Information and Communication Technologies; Prof. Marin Drinov Publishing House".
- [10] Davis, J. R. (2001). Surface engineering for corrosion and wear resistance. ASM International. p. 56.
- [11] "Wikimedia Foundation. (2021, July 17). Abrasion (mechanical). Wikipedia. [https://en.wikipedia.org/wiki/Abrasion_\(mechanical\)](https://en.wikipedia.org/wiki/Abrasion_(mechanical))," [Online].
- [12] "Doi, T., Uhlmann, E., & Marinescu, I. D. (Eds.). (2015). Handbook of ceramics grinding and polishing. William Andrew. Chicago".
- [13] "Vencl, A., Gašić, V., & Stojanović, B. (2017, February). Fault tree analysis of most common rolling bearing tribological failures. In IOP Conference Series: Materials Science and Engineering (Vol. 174, No. 1, p. 012048). IOP Publishing."
- [14] "Abbasi, S. (2011). Characterisation of airborne particles from rail traffic (Doctoral dissertation, KTH Royal Institute of Technology). Chicago".

- [15] Shaffer, S. J.; Glaeser, W. A. (1996). Fretting Fatigue. In *Fatigue and Fracture* (Vol. 19, ASM Handbook, pp. 321–330). ASM International..
- [16] "Callister, W. D.; Rethwisch, D. G. (2012). Chapter 9: Failure. In *Fundamentals of Materials Science and Engineering: An Integrated Approach* (4th ed.) Wiley."
- [17] "Creep and stress rupture properties. Creep and Stress Rupture Properties :: Total Materia Article. (2010, December). www.totalmateria.com".
- [18] "SamuelShare, S. (2021, March 2). Fatigue failure. Punchlist Zero. <https://www.punchlistzero.com/fatigue-failure/>".
- [19] "Kim, Y., & Hwang, W. (2019). High-cycle, low-cycle, extremely low-cycle fatigue and monotonic fracture behaviors of low-carbon steel and its welded joint. *Materials*, 12(24), 4111."
- [20] "Fujisawa, N., Fujita, Y., Yanagisawa, K., Fujisawa, K., & Yamagata, T. (2018). Simultaneous observation of cavitation collapse and shock wave formation in cavitating jet. *Experimental Thermal and Fluid Science*, 94, 159-167."
- [21] "Hughes, J. (2005). *Mechanical Resonance*. Piscataway, NJ; State University of New Jersey Rutgers - Department of Physics and Astronomy."
- [22] "Callister, W. D.; Rethwisch, D. G. (2012). Chapter 7: Mechanical Properties. In *Fundamentals of Materials Science and Engineering: An Integrated Approach* (4th ed.) Wiley."
- [23] "Roynance, D. (2001, August 23). *Stress-Strain Curves*. Cambridge, MA; Massachusetts Institute of Technology - Department of Materials Science and Engineering."
- [24] "Resiliency and toughness. Resiliency and Toughness | MATSE 81: Materials In Today's World. (n.d.). <https://www.e-education.psu.edu/matse81/node/2105>".
- [25] "Callister, W. D.; Rethwisch, D. G. (2012). Chapter 8: Deformation and Strengthening Mechanisms. In *Fundamentals of Materials Science and Engineering: An Integrated Approach* (4th ed.) Wiley."
- [26] "Carmack, B. (2013, March 1). Brittle Fracture. <https://failuremechanisms.wordpress.com/2013/03/01/brittle-fracture-2/>," [Online].
- [27] "Zeng, L., & Olsson, R. (2002). Buckling-induced delamination analysis of composite laminates with soft-inclusion. Swedish Defence Research Agency Technical report: Feb."
- [28] "Callister, W. D.; Rethwisch, D. G. (2012). Chapter 10: Phase Diagrams. In *Fundamentals of Materials Science and Engineering: An Integrated Approach* (4th ed.) Wiley."
- [29] "Holzer, S. (2007, November 19). (thesis). Optimization for Enhanced Thermal Technology CAD Purposes. Retrieved from <https://www.iue.tuwien.ac.at/phd/holzer/diss.html>," [Online].
- [30] "Mirabella, D. A., Suárez, M. P., & Aldao, C. M. (2008). Understanding the hillock-and-valley pattern formation after etching in steady state. *Surface science*, 602(8), 1572-1578."

- [31] "Xiao, C., Jiang, C. S., Liu, J., Norman, A., Moseley, J., Schulte, K., ... & Moutinho, H. (2019). Carrier-transport study of gallium arsenide hillock defects. *Microscopy and Microanalysis*, 25(5), 1160-1166."
- [32] "Brittle-Ductile Transition Temperature. (2020, July 14). <https://polymerdatabase.com/polymer%20physics/Crazing2.html>."
- [33] "<https://docplayer.net/56816427-Aae-590-mechanical-behavior-of-materials-deformabon-of-polymers-lecture-23-polymer-deformabon-fracture-and-crazing-4-9-13.html>".
- [34] "Föll, H. (n.d.). Ductile to brittle transition or cold shortness. https://www.tf.uni-kiel.de/matwis/amat/iss/kap_9/illustr/s9_1_1.html," [Online].
- [35] "<https://www.britannica.com/science/face-centred-cubic-structure>".
- [36] "Askeland, Donald R. (January 2015). "22-4 Thermal Shock". *The science and engineering of materials*. Wright, Wendelin J. (Seventh ed.). Boston, MA. pp. 792–793. ISBN 978-1-305-07676-1. OCLC 903959750."
- [37] "Zhang, X., Wu, Y., Xu, B., & Wang, H. (2007). Residual stresses in coating-based systems, part I: Mechanisms and analytical modeling. *Frontiers of Mechanical Engineering in China*, 2(1), 1-12."
- [38] "Parhizkar, T., & Roshandel, R. (2017). Long term performance degradation analysis and optimization of anode supported solid oxide fuel cell stacks. *Energy Conversion and Management*, 133, 20-30."
- [39] "Roshandel, R., & Parhizkar, T. (2016). Degradation based optimization framework for long term applications of energy systems, case study: solid oxide fuel cell stacks. *Energy*, 107, 172-181."
- [40] "Callister, W. D.; Rethwisch, D. G. (2012). Chapter 4: Polymer Structures. In *Fundamentals of Materials Science and Engineering: An Integrated Approach* (4th ed.) Wiley."
- [41] "Wikimedia Foundation. (2021, April 8). Depolymerization. Wikipedia. <https://en.wikipedia.org/wiki/Depolymerization>."
- [42] "Callister, W. D.; Rethwisch, D. G. (2012). Chapter 16: Corrosion and Degradation of Materials. In *Fundamentals of Materials Science and Engineering: An Integrated Approach* (4th ed.) Wiley."
- [43] "Jiao, Z., Jiang, L., Sun, J., Huang, J., & Zhu, Y. (2019, October). Outgassing environment of spacecraft: An overview. In *IOP Conference Series: Materials Science and Engineering* (Vol. 611, No. 1, p. 012071). IOP Publishing."
- [44] "Shubhakar, K., Pey, K. L., Kushvaha, S. S., O'Shea, S. J., Raghavan, N., Bosman, M., ... & Iwai, H. (2011). Grain boundary assisted degradation and breakdown study in cerium oxide gate dielectric using scanning tunneling microscopy. *Applied Physics Letter*".
- [45] "Raghavan, N., Pey, K. L., Wu, X., Liu, W., Li, X., Bosman, M., & Kauerauf, T. (2011). Oxygen-Soluble Gate Electrodes for Prolonged High- κ Gate-Stack Reliability. *IEEE electron device letters*, 32(3), 252-254."

- [46] "Gielen, G., De Wit, P., Maricau, E., Loeckx, J., Martin-Martinez, J., Kaczer, B., ... & Nafria, M. (2008, March). Emerging yield and reliability challenges in nanometer CMOS technologies. In Proceedings of the conference on Design, automation and test in".
- [47] "Raghavan, N., Padovani, A., Li, X., Wu, X., Lip Lo, V., Bosman, M., ... & Leong Pey, K. (2013). Resilience of ultra-thin oxynitride films to percolative wear-out and reliability implications for high- κ stacks at low voltage stress. *Journal of Applied Phys*".
- [48] "Raghavan, N., Pey, K. L., & Shubhakar, K. (2014). High- κ dielectric breakdown in nanoscale logic devices—Scientific insight and technology impact. *Microelectronics Reliability*, 54(5), 847-860. Chicago".
- [49] "Yazdani, S. (2011). Electrostatic discharge (ESD) explained."
- [50] "[http://www.electronicspub.com/article/%20%2026/7/ElectroStatic-Discharge-\(ESD\)-Exp](http://www.electronicspub.com/article/%20%2026/7/ElectroStatic-Discharge-(ESD)-Exp)".
- [51] "Schroder, D. K., & Babcock, J. A. (2003). Negative bias temperature instability: Road to cross in deep submicron silicon semiconductor manufacturing. *Journal of applied Physics*, 94(1), 1-18."
- [52] "Kaczer, B., Grasser, T., Roussel, J., Martin-Martinez, J., O'Connor, R., O'sullivan, B. J., & Groeseneken, G. (2008, April). Ubiquitous relaxation in BTI stressing—New evaluation and insights. In 2008 IEEE International Reliability Physics Symposium (pp. ").
- [53] "Grasser, T., & Kaczer, B. (2009). Evidence that two tightly coupled mechanisms are responsible for negative bias temperature instability in oxynitride MOSFETs. *IEEE Transactions on Electron Devices*, 56(5), 1056-1062."
- [54] "Crupi, F., Pace, C., Cocorullo, G., Groeseneken, G., Aoulaiche, M., & Houssa, M. (2005). Positive bias temperature instability in nMOSFETs with ultra-thin Hf-silicate gate dielectrics. *Microelectronic engineering*, 80, 130-133."
- [55] "Ioannou, D. P., Mittl, S., & La Rosa, G. (2009). Positive Bias Temperature Instability Effects in nMOSFETs With HfO_2/TiN Gate Stacks. *IEEE Transactions on Device and Materials Reliability*, 9(2), 128-134. Chicago".
- [56] "Takeda, E., Suzuki, N., & Hagiwara, T. (1983, December). Device performance degradation to hot-carrier injection at energies below the Si-SiO₂ energy barrier. In 1983 International Electron Devices Meeting (pp. 396-399). IEEE."
- [57] "Tam, S., Ko, P. K., & Hu, C. (1984). Lucky-electron model of channel hot-electron injection in MOSFET's. *IEEE Transactions on Electron Devices*, 31(9), 1116-1125."
- [58] "Hu, C., Tam, S. C., Hsu, F. C., Ko, P. K., Chan, T. Y., & Terrill, K. W. (1985). Hot-electron-induced MOSFET degradation-model, monitor, and improvement. *IEEE Journal of Solid-State Circuits*, 20(1), 295-305."
- [59] "Lunenborg, M. M. (1998). MOSFET hot-carrier degradation: Failure mechanisms and models for reliability circuit simulation. Chicago".
- [60] "Parthasarathy, C. R., Denais, M., Huard, V., Ribes, G., Roy, D., Guérin, C., ... & Bravaix, A. (2006). Designing in reliability in advanced CMOS technologies. *Microelectronics Reliability*, 46(9-11), 1464-1471. Chicago".

- [61] "Takeda, E., Suzuki, N., & Hagiwara, T. (1983, December). Device performance degradation to hot-carrier injection at energies below the Si-SiO₂ energy barrier. In 1983 International Electron Devices Meeting (pp. 396-399). IEEE."
- [62] "Maricau, E., & Gielen, G. (2013). Analog IC reliability in nanometer CMOS. Springer Science & Business Media. Chicago".
- [63] "Hu, C., Tam, S. C., Hsu, F. C., Ko, P. K., Chan, T. Y., & Terrill, K. W. (1985). Hot-electron-induced MOSFET degradation-model, monitor, and improvement. IEEE Journal of Solid-State Circuits, 20(1), 295-305. Chicago".
- [64] "Stellari, F., Song, P., McManus, M. K., Weger, A. J., Gauthier, R. J., Chatty, K. V., ... & Sanda, P. (2003, October). Study of critical factors determining latchup sensitivity of ICs using emission microscopy. In INTERNATIONAL SYMPOSIUM FOR TESTING AND F".
- [65] "Díaz, C. H., Duvvury, C., & Kang, S. M. (1994). Studies of EOS susceptibility in 0.6 μm nMOS ESD I/O protection structures. Journal of Electrostatics, 33(3), 273-289."
- [66] "Voldman, S. H. (2016, July). Electrostatic Discharge (ESD) and Electrical Overstress (EOS)—The state of the art for methods of failure analysis, and testing in components and systems. In 2016 IEEE 23rd International Symposium on the Physical and Failure A".
- [67] "Voldman, S. H. (2018). Evolution, revolution, and technology scaling—The impact on ESD and EOS reliability. Frontiers in Materials, 5, 33. Chicago".
- [68] "Jerke, G., & Lienig, J. (2004). Hierarchical current-density verification in arbitrarily shaped metallization patterns of analog circuits. IEEE Transactions on Computer-Aided Design of Integrated Circuits and Systems, 23(1), 80-90."
- [69] "<https://nepp.nasa.gov/whisker/background/index.htm>".
- [70] "Osenbach, J. W. (2011). Tin whiskers: An illustrated guide to growth mechanisms and morphologies. JOM, 63(10), 57-60."
- [71] "Tu, K. N. (2007). Spontaneous tin whisker growth: mechanism and prevention. In Solder Joint Technology (pp. 153-181). Springer, New York, NY. Chicago".
- [72] "<https://nepp.nasa.gov/whisker/background/index.htm>, 2021."
- [73] "Gebbia, M. (2013). Introduction to Film Capacitors. Illinois Capacitor, Inc. Chicago".
- [74] "Qin, S., Ma, S., & Boggs, S. A. (2012, June). The mechanism of clearing in metalized film capacitors. In 2012 IEEE International Symposium on Electrical Insulation (pp. 592-595). IEEE."
- [75] "Gallay, R. (2016). Metallized film capacitor lifetime evaluation and failure mode analysis. arXiv preprint arXiv:1607.01540. Chicago".
- [76] "Gupta, A., Yadav, O. P., DeVoto, D., & Major, J. (2018, August). A review of degradation behavior and modeling of capacitors. In International Electronic Packaging Technical Conference and Exhibition (Vol. 51920, p. V001T04A004). American Society of Mecha".
- [77] "Rohrlich, F. (1961). The definition of electromagnetic radiation. Il Nuovo Cimento (1955-1965), 21(5), 811-822. Chicago".
- [78] "Slater, J. C. (1951). The effects of radiation on materials. Journal of Applied Physics, 22(3), 237-256."

- [79] "Varley, J. O. (1954). A mechanism for the displacement of ions in an ionic lattice. *Nature*, 174(4436), 886-887."
- [80] "Kikuchi, R., & Beldjenna, A. (1992). Continuous displacement of "lattice" atoms. *Physica A: Statistical Mechanics and its Applications*, 182(4), 617-634."
- [81] "Kozlovskiy, A. L., Kenzhina, I. E., & Zdorovets, M. V. (2020). FeCo–Fe₂CoO₄/Co₃O₄ nanocomposites: phase transformations as a result of thermal annealing and practical application in catalysis. *Ceramics International*, 46(8), 10262-10269. Chicago".
- [82] "Awad, H., Khamis, M. M., & El-Aneed, A. (2015). Mass spectrometry, review of the basics: ionization. *Applied Spectroscopy Reviews*, 50(2), 158-175. Chicago".
- [83] "Suge, Y., Xiaolin, Z., Yuanfu, Z., Lin, L., & Hanning, W. (2015). Modeling and simulation of single-event effect in CMOS circuit. *Journal of Semiconductors*, 36(11), 111002. Chicago".
- [84] "Hussein, J., & Swift, G. (2012). Mitigating single-event upsets. Chicago".
- [85] "Maqbool, S. (2006). A system-level supervisory approach to mitigate single event functional interrupts in data handling architectures. University of Surrey (United Kingdom)."
- [86] "Aranda, L. A., Sánchez-Macián, A., & Maestro, J. A. (2020). A Methodology to Analyze the Fault Tolerance of Demosaicking Methods against Memory Single Event Functional Interrupts (SEFIs). *Electronics*, 9(10), 1619."
- [87] "Ferlet-Cavrois, V., Massengill, L. W., & Gouker, P. (2013). Single event transients in digital CMOS—A review. *IEEE Transactions on Nuclear Science*, 60(3), 1767-1790."
- [88] "Rui, C., Jian-Wei, H., Han-Sheng, Z., Yong-Tao, Y., Shi-Peng, S., Guo-Qiang, F., & Ying-Qi, M. (2015). Comparative research on "high currents" induced by single event latch-up and transient-induced latch-up. *Chinese Physics B*, 24(4), 046103. Chicago".
- [89] "Karp, J., Hart, M. J., Maillard, P., Hellings, G., & Linten, D. (2017). Single-event latch-up: Increased sensitivity from planar to FinFET. *IEEE Transactions on Nuclear Science*, 65(1), 217-222."
- [90] "Titus, J. L. (2013). An updated perspective of single event gate rupture and single event burnout in power MOSFETs. *IEEE Transactions on nuclear science*, 60(3), 1912-1928."
- [91] "Titus, J. L. (2013). An updated perspective of single event gate rupture and single event burnout in power MOSFETs. *IEEE Transactions on nuclear science*, 60(3), 1912-1928."
- [92] "Haran, A., Barak, J., David, D., Keren, E., Refaeli, N., & Rapaport, S. (2014). Single event hard errors in SRAM under heavy ion irradiation. *IEEE Transactions on Nuclear Science*, 61(5), 2702-2710. Chicago".
- [93] G. M. P. D. J. & J. A. H. (. A. n. c. o. s. e. h. e. [. c. l. t. o. n. s. 4. 2.-2. Swift.
- [94] "Wiegmann, D. A., & Shappell, S. A. (2017). A human error approach to aviation accident analysis: The human factors analysis and classification system. Routledge. Chicago".
- [95] "Feiler, P., Hudak, J., Delange, J., & Gluch, D. P. (2016). Architecture Fault Modeling and Analysis with the Error Model Annex, Version 2. CARNEGIE-MELLON UNIV PITTSBURGH PA PITTSBURGH United States."

- [96] "Thieme, C. A., Mosleh, A., Utne, I. B., & Hegde, J. (2020). Incorporating software failure in risk analysis—Part 1: Software functional failure mode classification. *Reliability Engineering & System Safety*, 197, 106803. Chicago".
- [97] "Thieme, C. A., Mosleh, A., Utne, I. B., & Hegde, J. (2020). Incorporating software failure in risk analysis—Part 2: Risk modeling process and case study. *Reliability Engineering & System Safety*, 198, 106804. Chicago".
- [98] "Groth, K., & Mosleh, A. (2008). Data-driven modeling of dependencies among influencing factors in human-machine interactions. In *Proceedings of ANS PSA 2008 topical meeting on CD-ROM*. American Nuclear Society, Knoxville. Chicago".
- [99] "Liu, J. (2018). Autonomous Retailing: A Frontier for Cyber-Physical-Human Systems. In *Principles of Modeling* (pp. 336-350). Springer, Cham."