

Exposure-Referred Signal-to-Noise Ratio for Digital Image Sensors

Abhiram Gnanasambandam, *Student Member, IEEE*, and Stanley H. Chan, *Senior Member, IEEE*

Abstract—The signal-to-noise ratio (SNR) of a digital image sensor is typically defined as the ratio between the mean over the standard deviation of the sensor’s output, thus known as the output-referred SNR. For sensors with a large full-well capacity, the output-referred SNR demonstrates the well-known linear response in the log-log scale. However, as the input exposure approaches the full-well capacity, the vanishing randomness of the saturated pixel will cause this output-referred SNR to artificially go to infinity. Since modern digital image sensors have a small pitch and hence a small full-well capacity, the shortcomings of the output-referred SNR motivated the development of a theoretical concept known as the exposure-referred SNR, first reported in some sensors and computer vision papers in the 1990’s and more since 2010. Some intuitions of the exposure-referred SNR have been discussed in the past, but little is known how the exposure-referred SNR can be rigorously derived.

Recognizing the significance of such an analysis to all present and future small pixels, this paper presents a theoretical analysis to justify the definition and answer four questions: (1) What is the correct definition of SNR? (2) How is the output-referred SNR related to the exposure-referred SNR? (3) For simple noise models, the SNRs can be analytically derived, but for complex noise models, how to numerically compute the SNR? (4) What utilities can the exposure-referred SNR bring to solving imaging tasks? New theoretical results are shown to confirm the validity of the exposure-referred SNR for image sensors of *any* bit-depth and full-well capacity.

Index Terms—Digital image sensors, full-well capacity, signal-to-noise ratio, CMOS image sensors, charge coupled devices (CCD), quanta image sensors (QIS), single-photon imaging.

I. INTRODUCTION

The signal-to-noise ratio (SNR) is a characterization of an imaging device’s performance when acquiring, transmitting, and processing raw data in the presence of noise. In as early as 1949 when Claude Shannon derived the information capacity of a noisy Gaussian channel, the concept of SNR was already presented [1]. As the name suggests, the SNR is the ratio between the signal power and the noise power

$$\text{SNR} = \frac{\text{signal power}}{\text{noise power}}, \quad (1)$$

which is sometimes expressed in the logarithmic scale via $10 \log_{10} \text{SNR}$. In digital image sensors, since the measured pixel values are results of the analog-to-digital conversion of the voltage (instead of power), a more commonly seen definition is the ratio between the mean and the standard deviation of the raw measurement:

$$\text{SNR}_{\text{out}} = \frac{\mathbb{E}[Y]}{\sqrt{\text{Var}[Y]}}, \quad (2)$$

where in this equation Y is a random variable denoting the measurement generated by the sensor, $\mathbb{E}[\cdot]$ denotes the statistical expectation, and $\text{Var}[\cdot]$ denotes the statistical variance. The resulting SNR is known as the *output*-referred SNR because it measures directly what a sensor outputs.

The output-referred SNR is convenient to calculate. In the simplest setting where the sensor’s output is mainly influenced by the photon shot noise and the electronic read noise, Y will follow the Poisson-Gaussian distribution [2], [3]

$$Y \sim \text{Poisson}(\theta) + \text{Gaussian}(0, \sigma_{\text{read}}^2),$$

where θ denotes the flux integrated over the surface area and the exposure time, and σ_{read} is the standard deviation of the read noise. Assuming that the full-well capacity is at the *infinity* so that the measurement Y will never saturate, the expectation of Y is $\mathbb{E}[Y] = \theta$ and the variance is $\text{Var}[Y] = \theta + \sigma_{\text{read}}^2$. Thus, SNR_{out} can be computed via

$$\text{SNR}_{\text{out}}(\theta) = \frac{\theta}{\sqrt{\theta + \sigma_{\text{read}}^2}}. \quad (3)$$

If the read noise is negligible such that $\sigma_{\text{read}} = 0$, one can recover an even simpler expression $\text{SNR}_{\text{out}}(\theta) = \sqrt{\theta}$. This widely adopted equation says that as the scene becomes brighter, the gain in the signal will override the random fluctuation of the noise, and hence the SNR will increase.

A. Limitations of Output-Referred SNR

The problem arises when the full-well capacity of the sensor is *finite*. Certainly, the SNR_{out} in (2) is still valid when the exposure θ is much smaller than the full-well capacity. However, if θ reaches the full-well and goes beyond it, the mean $\mathbb{E}[Y]$ will stop growing with θ as illustrated in Figure 1. The variance $\text{Var}[Y]$ will gradually drop to zero because Y will cannot go beyond the full-well capacity. As a result, SNR_{out} according to (2) will eventually go to infinity (because $\text{Var}[Y] \rightarrow 0$.) But realistically speaking, this cannot be true because the SNR beyond saturation must be poor.

That SNR_{out} going to infinity is artificially caused by the inability of SNR_{out} to capture the behavior near and beyond the full-well capacity. The common wisdom here is then to create a special case by declaring a zero SNR_{out} [4]:

$$\text{SNR}_{\text{out}}(\theta) = \begin{cases} \frac{\theta}{\sqrt{\theta + \sigma_{\text{read}}^2}}, & \theta < L, \\ 0, & \theta \geq L, \end{cases} \quad (4)$$

where L denotes the full-well capacity. The definition in (4) is adequate for image sensors with a sufficiently large full-well capacity, and more importantly it is convenient for signal

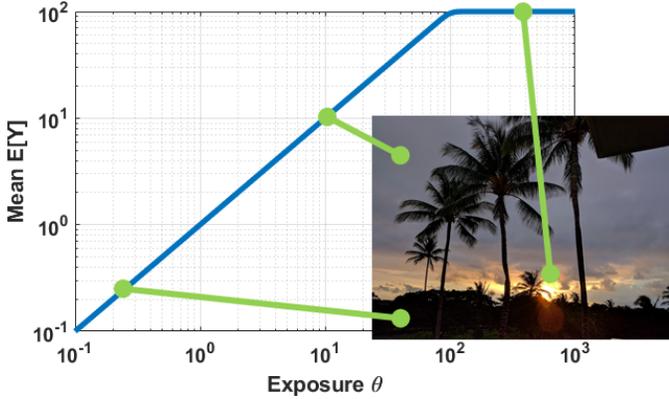


Fig. 1. With a finite full-well capacity, the mean $\mathbb{E}[Y]$ will stop growing when the exposure θ exceeds the full-well capacity $L = 10^2$.

processing: Before the saturation the SNR grows linearly (in the log-log plot), and after that the SNR is zero¹.

However, pixel pitch of image sensors over the past decade has shrunk significantly. The full-well capacity L is becoming smaller and smaller. For example, in a 1-bit quanta image sensor (QIS) with a threshold at q photons [5]–[7], the measurement Y is a binary random variable

$$Y = \begin{cases} 0, & X < q, \\ 1, & X \geq q. \end{cases} \quad (5)$$

This, in turn, is a special case of the more general ℓ -bit digital (CCD or CMOS) image sensors with a full-well capacity $L = 2^\ell - 1$ where the measurement follows the equation [8]

$$Y = \begin{cases} X, & X < L, \\ L, & X \geq L. \end{cases} \quad (6)$$

Here, $X \sim \text{Poisson}(\theta) + \text{Gaussian}(0, \sigma_{\text{read}}^2)$ is the actual voltage measured before the analog-to-digital converter. For these small pixels, the nonlinearity is missing and hence the approximation in (4) is invalid.

B. Exposure-Referred SNR and Scope of This Paper

When the full-well capacity L is small, little is known about how to derive the SNR because most of the models assume a large full-well capacity. In 2013, Fossum conducted an analysis of the single-bit and multi-bit quanta image sensor [9]. In that paper, he argued that instead of using the output-referred SNR, one can consider the so-called *exposure-referred* SNR

$$\text{SNR}_{\text{exp}}(\theta) = \frac{\theta}{\sqrt{\text{Var}[Y]}} \cdot \frac{d\mu}{d\theta}, \quad (7)$$

where $\mu = \mathbb{E}[Y]$. Tracing back the history, Mitsunaga and Nayar actually had the exact same equation in 1992 although they did not give it a name [10]. In the sensor literature, El Gamal called the calibrated noise as the “input-referred noise” in his Stanford EE 392B lecture note (2004-2015) [11].

¹A subtle point here is that when $\theta > L$, the mean $\mathbb{E}[Y]$ is saturated but an instantaneous observation Y may still be unsaturated. Thus, technically speaking, the SNR does not drop to zero instantly but it will have finite period of transient. The exposure-referred SNR is derived to mathematically describe the transient.

The intuition of the exposure-referred SNR was documented in a supplementary report of a paper by Elgandy and Chan [12]. They argued that the derivative $d\theta/d\mu$ can be considered as the “transfer function” of a black box system that takes the output μ and maps it back to the input θ . Thus $d\theta/d\mu$ is the gain of such a transfer function that scales the noise from $\sqrt{\text{Var}[Y]}$ to $\sqrt{\text{Var}[Y]} \frac{d\theta}{d\mu}$. It is also explained that if θ is beyond the full-well capacity L , the reciprocal of the derivative $d\mu/d\theta$ will become zero because any change in the exposure θ will no longer affect μ . Hence, the issue of SNR_{out} going to infinity is resolved because when a pixel saturates, $d\mu/d\theta = 0$ and so the SNR will go to zero.

The above intuition is certainly not rigorous. The objective of this paper is to fill the theoretical gap by answering four questions:

- (i) What is *the* correct way of defining the SNR and how to theoretically derive $\text{SNR}_{\text{exp}}(\theta)$ from the first principle?
- (ii) What is the relationship between $\text{SNR}_{\text{out}}(\theta)$ and $\text{SNR}_{\text{exp}}(\theta)$? Under what condition would the former become a special case of the latter?
- (iii) For complex noise models where closed-form expressions are not available, how to numerically predict the SNR via Monte-Carlo sampling techniques?
- (iv) What utilities can $\text{SNR}_{\text{exp}}(\theta)$ offer to improve the sensor’s imaging capabilities?

To answer these questions, tools in statistical estimation theory will be utilized. Conclusions of the study will provide a mathematical foundation of the performance characterization for small pixels.

II. MATHEMATICAL TOOLS

The purpose of this section is to elaborate on two sets of mathematical tools that will be useful later. For simplicity of the notations, most theoretical results will be derived for Poisson random variables that accounts for the shot noise.

A. Truncated Poisson and the Incomplete Gamma Function

Let $X \sim \text{Poisson}(\theta)$ be a Poisson random variable with a parameter θ that represents the total exposure integrated over the sensor area and the exposure time. The Poisson random variable X is subject to a finite full-well capacity L (a positive integer) beyond which X will stay at the saturation level. This leads to a truncated Poisson variable Y as defined in (6). The probability mass function of Y is given by

$$p_Y(y) = \begin{cases} \frac{\theta^y}{y!} e^{-\theta}, & y < L, \\ \sum_{\ell=L}^{\infty} \frac{\theta^\ell}{\ell!} e^{-\theta}, & y = L. \end{cases} \quad (8)$$

By construction, the random variable Y will never take a value greater than L . The probability that $Y = L$ is given by the sum of the Poisson tail, which can be conveniently expressed via the incomplete Gamma function as shown in Figure 2.

Definition 1 (Incomplete Gamma function): The upper incomplete Gamma function is defined as $\Psi_L : \mathbb{R}_+ \rightarrow [0, 1]$, with

$$\Psi_L(\theta) = \frac{1}{\Gamma(L)} \int_{\theta}^{\infty} t^{L-1} e^{-t} dt = \sum_{\ell=0}^{L-1} \frac{\theta^\ell e^{-\theta}}{\ell!}, \quad (9)$$

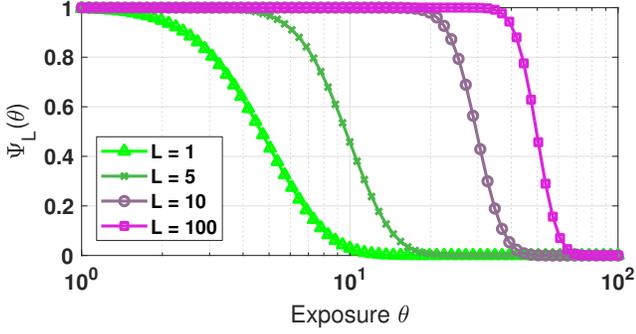


Fig. 2. Incomplete Gamma function $\Psi_L(\theta)$ as a function of θ .

for $\theta > 0, L \in \mathbb{N}$ where $\Gamma(L) = (L-1)!$ is the standard Gamma function.

The first-order derivative of $\Psi_L(\theta)$ is [13]

$$\Psi'_L(\theta) = -\frac{\theta^{L-1}e^{-\theta}}{(L-1)!} < 0, \quad \text{for all } \theta, \quad (10)$$

which means that $\Psi_L(\theta)$ is a strictly decreasing function in θ . The steepest slope can be determined by analyzing the curvature

$$\Psi''_L(\theta) = -(L-1)\theta^{L-2}e^{-\theta} + e^{-\theta}\theta^{L-1}.$$

Equating this to zero will yield $\theta^* = L-1$. At this critical point and assume $L \gg 1$, Stirling's formula implies that²

$$\Psi'_L(\theta^*) \approx -\frac{1}{\sqrt{2\pi\theta^*}} \exp\left\{-\frac{(\theta^* - (L-1))^2}{2\theta^*}\right\}. \quad (11)$$

Therefore, $\Psi'_L(\theta^*) = -\frac{1}{\sqrt{2\pi(L-1)}}$. Hence, the slope of the incomplete Gamma function reduces as L increases.

Remark: Most papers in the image sensor literature plot curves with respect to $\log \theta$ instead of θ , like the one shown in Figure 2. The x -axis compression caused by $\log \theta$ will make the curves to *appear* steeper during the transient. This is expected because for any function $f(\theta)$, the slope in the $\log \theta$ space is determined by $\frac{d}{d \log \theta} f(\theta) = \theta f'(\theta)$. So for large θ , the slope will appear steeper.

B. Delta Method

The second mathematical tool is a special case of the *Delta Method* in statistics. It approximates the variance when a random variable undergoes a nonlinear transformation.

Lemma 1 (Delta Method): Let X be a random variable with mean $\mathbb{E}[X] = \mu$ and let f be a continuously differentiable function within a small neighborhood of μ . Then

$$\mathbb{E}[(f(X) - f(\mu))^2] \approx [f'(\mu)]^2 \text{Var}[X]. \quad (12)$$

Proof: Consider the Taylor expansion

$$f(X) \approx f(\mu) + f'(\mu)(X - \mu).$$

Taking the expectation of the $(f(X) - f(\mu))^2$ will yield

$$\begin{aligned} \mathbb{E}[(f(X) - f(\mu))^2] &= \mathbb{E}[f'(\mu)^2(X - \mu)^2] \\ &= [f'(\mu)]^2 \text{Var}[X], \end{aligned}$$

thus proving the result. \square

²The proof of this result is given in the Appendix.

The validity of the approximation depends on the second order term which is assumed to be small when the random variable X is sufficiently close to μ . One way for this to hold is that the random variable X is the sample average of N independent random variables such that $X = (1/N) \sum_{n=1}^N Y_n$ where $\mathbb{E}[Y_n] = \mu$ for all n . For large enough N , X will concentrate around μ and so the Delta Method is valid. On hardware, this can be implemented using multiple temporal measurements or spatial binning.

III. SNR: A STATISTICAL DEFINITION

A. Mean Invariance Property

When defining the SNR, it is important to clarify the signal formation process. In most of the imaging problems, the underlying signal is the scene exposure θ . This is the *signal*. The observations are random samples drawn from a certain distribution $p_Y(y; \theta)$ parameterized by θ . For example, if $Y \sim \text{Poisson}(\theta)$ then $p_Y(y; \theta) = \theta^y e^{-\theta} / y!$ is the distribution.

Reconstruction of the signal θ from Y is often based an estimator $\hat{\theta}(\cdot)$. An estimator can be *any* mapping that maps Y to an estimate $\hat{\theta}(Y)$. The estimator $\hat{\theta}(\cdot)$ can be the maximum-likelihood estimator, the maximum-a-posteriori estimator, or other mappings as long as they make sense. In the context of SNR, a technical requirement of the estimator is that it has to satisfy the mean invariance property.

Definition 2 (Mean invariance property): Let Y be a random variable drawn from a distribution $p_Y(y; \theta)$, with a mean $\mathbb{E}[Y] = \mu(\theta)$ for some function $\mu(\cdot)$. An estimator $\hat{\theta}(\cdot)$ of θ is said to satisfy the mean invariance property if

$$\hat{\theta}(\mu(\theta)) = \theta. \quad (13)$$

That is, the estimator evaluated at the sample mean $\mathbb{E}[Y]$ will return the true estimate θ .

One should not confuse about the mean invariance property and the unbiasedness of an estimator. An estimator $\hat{\theta}(Y)$ is unbiased if $\mathbb{E}[\hat{\theta}(Y)] = \theta$. This is different from mean invariance which requires $\hat{\theta}(\mathbb{E}[Y]) = \theta$. An estimator satisfying the latter does not necessarily satisfy the former, and vice versa. One of the exceptions is that $\hat{\theta}(\cdot)$ is linear.

At the first glance, it would seem that the mean invariance property is constructed for some technical convenience. But a careful examination would confirm that the property indeed holds for many estimators. The two examples below shall illustrate this point.

Example 1: Let $Y \sim \text{Gaussian}(\theta, \sigma_{\text{read}}^2)$ where θ is the unknown parameter. It can be shown that the maximum-likelihood estimator is

$$\hat{\theta}(Y) = \underset{\theta}{\text{argmax}} \frac{1}{\sqrt{2\pi\sigma_{\text{read}}^2}} \exp\left\{-\frac{(Y - \theta)^2}{2\sigma_{\text{read}}^2}\right\} = Y.$$

Notice that since Y is Gaussian, the mean is $\mu = \mathbb{E}[Y] = \theta$. Therefore, the mean invariance property holds:

$$\hat{\theta}(\mu) \stackrel{(a)}{=} \mu = \theta,$$

where (a) is due to the fact that $\hat{\theta}(Y) = Y$. \square

Example 2: Let Y be the 1-bit quantized image sensor with a threshold $q = 1$ in (5). In this case, the distribution of Y

is a Bernoulli such that $Y \sim \text{Bernoulli}(1 - e^{-\theta})$. Then the maximum-likelihood estimator is³

$$\hat{\theta}(Y) = \underset{\theta}{\operatorname{argmax}} (1 - e^{-\theta})^Y (e^{-\theta})^{1-Y} = -\log(1 - Y).$$

Since the mean of Y is $\mu = \mathbb{E}[Y] = 1 - e^{-\theta}$, it follows that

$$\hat{\theta}(\mu) = -\log(1 - \mu) = -\log(1 - (1 - e^{-\theta})) = \theta.$$

Again, the mean invariance property is satisfied. \square

If it is not difficult for estimators to satisfy the mean invariance property, why bother introducing this concept? From a practical point of view, the distribution of the measurement Y may come with a complicated expression. Thus, constructing an estimator $\hat{\theta}(Y)$ based on maximizing the likelihood is not always easy. On the other hand, determining the mean $\mathbb{E}[Y]$ is much easier; even if one cannot analytically derive an expression for $\mathbb{E}[Y]$, a Monte Carlo sampling would be sufficient to numerically generate it. Once the mean $\mathbb{E}[Y]$ is determined, the estimator $\hat{\theta}(Y)$ can be defined by citing the mean invariance property: Let $\mu(\theta) = \mathbb{E}[Y]$, then the property will give

$$\hat{\theta} = \mu^{-1}. \quad (14)$$

Going back to Examples 1 and 2, the above argument provides a procedure to *construct* an estimator that would satisfy the mean invariance principle.

Follow up of Example 1. Let $Y \sim \text{Gaussian}(\theta, \sigma_{\text{read}}^2)$ where θ is the unknown parameter. Since the mean is $\mathbb{E}[Y] = \theta$, it follows that $\mu(\theta) = \theta$. This μ is the identity mapping, and so the inverse mapping is $\mu^{-1}(s) = s$. Thus, one can define an estimator as $\hat{\theta}(Y) = \mu^{-1}(Y) = Y$, and it is the same result as Example 1. Moreover, $\hat{\theta}(Y)$ satisfies the mean invariance property because $\hat{\theta}$ is constructed in that way. \square

Follow up of Example 2. Let Y be the 1-bit quanta image sensor with a distribution $Y \sim \text{Bernoulli}(1 - e^{-\theta})$. The mean is $\mu(\theta) = 1 - e^{-\theta}$, and so the inverse is $\mu^{-1}(s) = -\log(1 - s)$. Therefore, one can define the estimator as $\hat{\theta}(Y) = -\log(1 - Y)$, and this $\hat{\theta}(Y)$ satisfies the mean invariance property. The result is identical to Example 2. \square

The advantage of the mean invariance property is that it bypasses the complication of solving an optimization (as in maximum-likelihood). Yet, on the other hand, because of the way how $\hat{\theta}$ is constructed, it is guaranteed to satisfy the mean invariance property.

Two remarks here: (i) Based on the analysis so far, it would seem nature to conjecture that any maximum-likelihood estimator would satisfy the mean invariance property. That is, $\hat{\theta}_{\text{ML}}(\mathbb{E}[Y]) = \theta$ for all reasonably smooth likelihoods. Proving (or giving conditions for) the conjecture would be valuable. (ii) A completely arbitrary estimator $\hat{\theta}(\cdot)$ does not work for SNR. For example, $\hat{\theta}(Y) = 0$ for all Y is an estimator but it is useless. Therefore, the mean invariance property can be considered as a sufficient condition to guarantee a meaningful SNR. Whether it is a necessary condition, however, is another open question that would be valuable to explore.

³In practice, Y is often the sample average of N independent measurements so that $Y = (1/N) \sum_{n=1}^N Y_n$. For sufficiently large N , the chance that $Y = 1$ is negligible and hence this will prevent $\log(1 - Y)$ from going to negative infinity.

B. Defining the SNR

After clarifying the assumption of the estimator, it is necessary to discuss the *noise* in SNR. First, notice that the estimator $\hat{\theta}(Y)$ is random because it is a function of Y . Thus $\hat{\theta}(Y)$ fluctuates relative to the true deterministic parameter θ . The randomness defines the noise, which is technically the mean squared error:

$$\text{noise} = \mathbb{E}[(\hat{\theta}(Y) - \theta)^2]. \quad (15)$$

The SNR is then defined as follows.

Definition 3 (SNR, formal definition): Let Y be a random variable with a distribution $p_Y(y; \theta)$ where θ is the underlying parameter to be estimated. Construct an estimator $\hat{\theta}(Y)$ which satisfies the mean invariance property. Then the signal-to-noise ratio (SNR) is defined as

$$\text{SNR}(\theta) \stackrel{\text{def}}{=} \frac{\theta}{\sqrt{\mathbb{E}[(\hat{\theta}(Y) - \theta)^2]}}. \quad (16)$$

The above definition is not a new invention. When Vetterli and colleagues presented the analysis of the quanta image sensor in 2012 [7], this definition was already used to derive the Cramer-Rao lower bound. Subsequent papers such as [12] and [14] by Chan and colleagues also rely on this definition. A version for single-photon avalanche diode (SPAD) is presented by Gupta and colleagues [15].

To convince readers that the formal definition of the SNR is valid, consider the two examples below.

Example 3 (Poisson): Let $Y \sim \text{Poisson}(\theta)$, and consider the maximum-likelihood estimator $\hat{\theta}(Y) = Y$ (whose proof is skipped for brevity.) It is relatively straightforward to show that $\mathbb{E}[Y] = \theta$ and that $\hat{\theta}(\mathbb{E}[Y]) = \mathbb{E}[Y] = \theta$; so the estimator satisfies the mean invariance property. Since the estimator is $\hat{\theta}(Y) = Y$, it follows that

$$\mathbb{E}[(\hat{\theta}(Y) - \theta)^2] = \mathbb{E}[(Y - \theta)^2] = \theta,$$

where the second equality holds because the variance of a Poisson is θ . Therefore, $\text{SNR}(\theta) = \sqrt{\theta}$, which is consistent with (3) when $\sigma_{\text{read}} = 0$. \square

Example 4 (Poisson + Gaussian): Let $Y \sim \text{Poisson}(\theta) + \text{Gaussian}(0, \sigma_{\text{read}}^2)$. Then the maximum-likelihood estimator is $\hat{\theta}(Y) = Y$. (Again, the proof is skipped for brevity.) The mean invariance property holds because $\mathbb{E}[Y] = \theta$ and $\hat{\theta}(\mathbb{E}[Y]) = \mathbb{E}[Y] = \theta$. It then follows that

$$\mathbb{E}[(\hat{\theta}(Y) - \theta)^2] = \mathbb{E}[(Y - \theta)^2] = \theta + \sigma_{\text{read}}^2,$$

where the second equality holds because the variance of a Poisson-Gaussian is the sum of the two variances. Therefore, $\text{SNR}(\theta) = \sqrt{\theta + \sigma_{\text{read}}^2}$. This result is consistent with (3) for a general σ_{read} . \square

C. Exposure-Referenced SNR

A natural question to ask now is how does $\text{SNR}(\theta)$ compare to $\text{SNR}_{\text{exp}}(\theta)$ and $\text{SNR}_{\text{out}}(\theta)$. It turns out that the $\text{SNR}(\theta)$ is the same as $\text{SNR}_{\text{exp}}(\theta)$ up to the approximation inherent from the Delta Method. With that, one can explain where the “magical” derivative $d\mu/d\theta$ in (7) comes from.

Theorem 1: Let Y be a random variable with a probability density function $p_Y(y; \theta)$. Let $\mathbb{E}[Y] = \mu$, and let $\hat{\theta}(Y)$ be an estimator such that $\hat{\theta}(\mu) = \theta$. Then the SNR defined in (16) is related to the SNR_{out} and SNR_{exp} as follows:

$$\text{SNR}(\theta) \approx \text{SNR}_{\text{exp}}(\theta) = \text{SNR}_{\text{out}}(\theta) \cdot \frac{\theta}{\mu} \cdot \frac{d\mu}{d\theta}. \quad (17)$$

Proof: By the delta method, the mean squared error can be approximated by

$$\begin{aligned} \mathbb{E} \left[\left(\hat{\theta}(Y) - \theta \right)^2 \right] &= \mathbb{E} \left[\left(\hat{\theta}(Y) - \hat{\theta}(\mu) \right)^2 \right] \\ &\approx \left[\hat{\theta}'(\mu) \right]^2 \text{Var}[Y]. \end{aligned}$$

Since $\hat{\theta}(\mu) = \theta$, it follows that $\frac{d\hat{\theta}(\mu)}{d\mu} = \frac{d\theta}{d\mu}$. So,

$$\mathbb{E} \left[\left(\hat{\theta}(Y) - \theta \right)^2 \right] = \left[\frac{d\theta}{d\mu} \right]^2 \text{Var}[Y].$$

Using the fact that $\frac{d\theta}{d\mu} = 1/\frac{d\mu}{d\theta}$, the SNR can be written as

$$\text{SNR}(\theta) = \frac{\theta}{\sqrt{\mathbb{E} \left[\left(\hat{\theta}(Y) - \theta \right)^2 \right]}} = \frac{\theta}{\underbrace{\sqrt{\text{Var}[Y]} \cdot \frac{d\mu}{d\theta}}_{\text{SNR}_{\text{exp}}(\theta)}}.$$

To show the second relationship, notice that

$$\begin{aligned} \frac{\theta}{\sqrt{\text{Var}[Y]}} \cdot \frac{d\mu}{d\theta} &= \frac{\mu}{\sqrt{\text{Var}[Y]}} \cdot \frac{\theta}{\mu} \cdot \frac{d\mu}{d\theta} \\ &= \frac{\mathbb{E}[Y]}{\sqrt{\text{Var}[Y]}} \cdot \frac{\theta}{\mu} \cdot \frac{d\mu}{d\theta} \\ &= \underbrace{\frac{\mathbb{E}[Y]}{\sqrt{\text{Var}[Y]}}}_{=\text{SNR}_{\text{out}}(\theta)} \cdot \frac{\theta}{\mu} \cdot \frac{d\mu}{d\theta}. \end{aligned}$$

This completes the proof. \square

As one can see from the proof of the theorem, what makes $\text{SNR}_{\text{exp}}(\theta)$ and $\text{SNR}_{\text{out}}(\theta)$ different is the derivative term $d\mu/d\theta$. The derivative changes the *output*-referred noise $\sigma_{\text{out}} \stackrel{\text{def}}{=} \sqrt{\text{Var}[Y]}$ to the *exposure*-referred noise, as noted by Elgendy and Chan [12] via the ‘‘transfer function’’ perspective:

$$\sigma_{\text{exp}} \stackrel{\text{def}}{=} \sqrt{\text{Var}[Y]} \cdot \frac{d\theta}{d\mu}. \quad (18)$$

Thus, while $\text{SNR}_{\text{out}}(\theta) = \mu/\sigma_{\text{out}}$, the exposure-referred SNR is $\text{SNR}_{\text{exp}}(\theta) = \theta/\sigma_{\text{exp}}$. For saturated pixels, σ_{exp} will have a large value.

D. Illustrating the SNR via 1-bit QIS

To elaborate on the difference between $\text{SNR}_{\text{exp}}(\theta)$ and $\text{SNR}_{\text{out}}(\theta)$, it would be instructive to consider the statistics of a 1-bit quanta image sensor. Let $X \sim \text{Poisson}(\theta)$ and let Y be a random variable following (5).

First, consider the case where $q = 1$. Since $Y \sim \text{Bernoulli}(1 - e^{-\theta})$, the mean is $\mathbb{E}[Y] = 1 - e^{-\theta}$. Define the mean as $\mu = \mathbb{E}[Y] = 1 - e^{-\theta}$. As shown in Example 2, the maximum-likelihood estimate of θ is $\hat{\theta}(Y) = -\log(1 - Y)$ and it satisfies the mean invariance property. The derivative $d\mu/d\theta$ is

$$\frac{d\mu}{d\theta} = \frac{d}{d\theta} [1 - e^{-\theta}] = e^{-\theta}.$$

Substituting into Theorem 1, it can be shown that

$$\text{SNR}_{\text{exp}}(\theta) = \frac{\theta}{\sqrt{\text{Var}[Y]}} \cdot \frac{d\mu}{d\theta} = \theta \cdot \sqrt{\frac{e^{-\theta}}{1 - e^{-\theta}}}.$$

For cases where $q > 1$, one can utilize the incomplete Gamma function for the truncated Poisson random variable such that

$$p_Y(y; \theta) = \begin{cases} 1 - \Psi_q(\theta), & y = 1, \\ \Psi_q(\theta), & y = 0. \end{cases}$$

It then follows that $\mathbb{E}[Y] = 1 - \Psi_q(\theta)$ and the estimator can be chosen such that $\hat{\theta}(Y) = -\Psi_q^{-1}(1 - Y)$. The mean invariance property is therefore validated. The derivative $d\mu/d\theta$ is

$$\frac{d\mu}{d\theta} = \frac{d}{d\theta} (1 - \Psi_q(\theta)) = \frac{\theta^{q-1} e^{-\theta}}{(q-1)!}.$$

Hence, the SNR is

$$\text{SNR}_{\text{exp}}(\theta) = \frac{\theta}{\sqrt{\Psi_q(\theta)(1 - \Psi_q(\theta))}} \cdot \frac{\theta^{q-1} e^{-\theta}}{(q-1)!}, \quad (19)$$

of which the visualization is shown in Figure 3. This result is consistent with the one shown by Elgendy and Chan by deriving the Fisher Information [12].

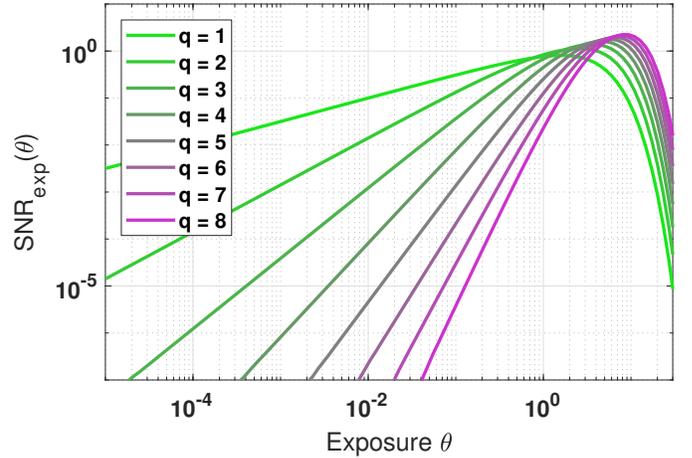


Fig. 3. Exposure-referred SNR for a 1-bit quanta image sensor where Y is defined in (5). As θ goes beyond the threshold q , $\text{SNR}_{\text{exp}}(\theta)$ starts to drop as it should be.

Unlike $\text{SNR}_{\text{exp}}(\theta)$, the output-referred SNR goes to infinity when θ grows. For the same 1-bit statistics, the output-referred SNR is simply the ratio between $\mathbb{E}[Y]$ and $\text{Var}[Y]$, which is

$$\text{SNR}_{\text{out}}(\theta) = \frac{\mathbb{E}[Y]}{\sqrt{\text{Var}[Y]}} = \sqrt{\frac{1 - \Psi_q(\theta)}{\Psi_q(\theta)}}. \quad (20)$$

As shown in Figure 4, $\text{SNR}_{\text{out}}(\theta)$ grows indefinitely as θ grows which is known to be false because when θ grows beyond the threshold q , the measurement Y will stay at $Y = 1$ more likely. The signal degrades and hence eventually the SNR should drop to zero.

IV. $\text{SNR}_{\text{EXP}}(\theta)$ FOR FINITE FULL WELL CAPACITY

The subject of this paper is to understand the exposure-referred SNR for digital (CCD and CMOS) image sensors with a finite full-well capacity L . In particular, the goal is to understand the situation when L is small, e.g., a few bits. This section presents the main result for such a scenario.

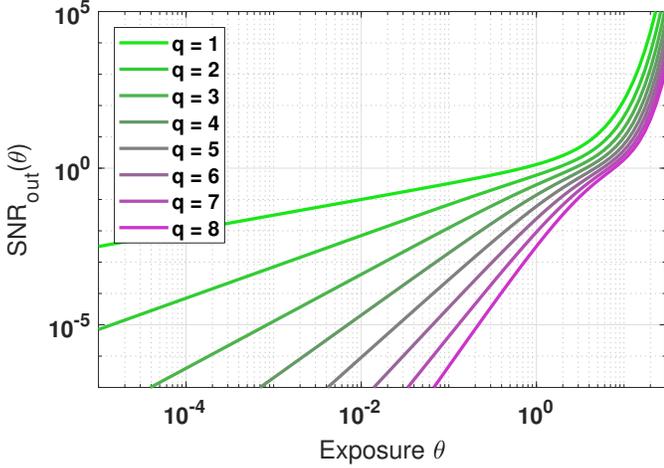


Fig. 4. Output-referred SNR for a 1-bit quanta image sensor where Y is defined in (5). As θ goes beyond the threshold q , $\text{SNR}_{\text{out}}(\theta)$ continues to grow because of the inability of $\text{SNR}_{\text{out}}(\theta)$ to handle pixel saturation.

A. $\text{SNR}_{\text{exp}}(\theta)$ for Truncated Poisson

To make the analysis tractable, the derivation in this section will be focusing on a truncated Poisson distribution defined in (6). Extension to the more complex noise model will be analyzed later.

Theorem 2 ($\text{SNR}_{\text{exp}}(\theta)$ for truncated Poisson): Consider the truncated Poisson statistics defined in (6). Let $\hat{\theta}(\cdot)$ be an estimator satisfying the mean invariance property, i.e., $\hat{\theta}(\mathbb{E}[Y]) = \theta$. Then the exposure-referred SNR is

$$\text{SNR}_{\text{exp}}(\theta) = \frac{\theta}{\sqrt{\text{Var}[Y]}} \cdot \frac{d\mu}{d\theta}, \quad (21)$$

where

$$\begin{aligned} \mathbb{E}[Y] &= \theta \Psi_{L-1}(\theta) + L(1 - \Psi_L(\theta)) \stackrel{\text{def}}{=} \mu, \\ \text{Var}[Y] &= \theta^2 \Psi_{L-2}(\theta) + \theta \Psi_{L-1}(\theta) + L^2(1 - \Psi_L(\theta)) - \mu^2, \\ \frac{d\mu}{d\theta} &= \theta \Psi'_{L-1}(\theta) + \Psi_{L-1}(\theta) - L \Psi'_L(\theta). \end{aligned} \quad (22)$$

Proof: The proof is presented in the Appendix. \square

To illustrate the predicted $\text{SNR}_{\text{exp}}(\theta)$ as a function of θ , Figure 5 shows several curves evaluated at different full-well capacity L . As is consistent with the 1-bit QIS example shown in Section III.D, the exposure-referred SNR for a truncated Poisson random variable also demonstrates a drop in $\text{SNR}_{\text{exp}}(\theta)$ after the pixel saturates. What is more interesting is that as L increases, $\text{SNR}_{\text{exp}}(\theta)$ becomes a straight line in the log-log plot with a sharp decay after saturation. This is reminiscent to the heuristic definition of the $\text{SNR}_{\text{out}}(\theta)$ in (4). However, for small L , the smooth transition is something that was not predicted by (4).

The rapid drop after the saturation is attributed to two reasons. First, as explained in the remark in Section II.A, the log-log plot has a compression of the x -axis so that the slope is amplified with θ . If one plots the x -axis in the linear scale (instead of the log scale), the sharp cutoff will appear in a smoother transition. However, since in practice the exposure is always shown in the log scale, what is being shown in Figure 5 is valid. The second reason for the drop after the saturation

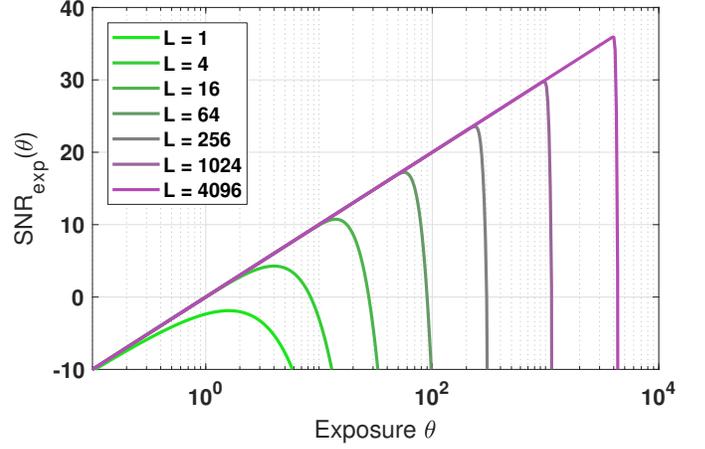


Fig. 5. Exposure-referred SNR for a digital image sensor with a full-well capacity of L electrons.

is due to the limiting behavior of the incomplete Gamma function. As L increases, the incomplete Gamma function in the log-log plot will have an increasingly sharp transient as shown in Figure 2. This can be shown theoretically in the next subsection.

A corollary of the theorem is the case where there are N i.i.d. observations Y_1, \dots, Y_N instead of a single measurement. In this case, $\text{SNR}_{\text{exp}}(\theta)$ will grow linearly with respect to the square root of the number of observations \sqrt{N} .

Corollary 1: Consider the same setting as Theorem 2, but assume a sequence of i.i.d. random variables Y_1, \dots, Y_N . Define the average $Y = (1/N) \sum_{n=1}^N Y_n$. The exposure-referred SNR for Y is

$$\text{SNR}_{\text{exp}}(\theta) = \sqrt{N} \cdot \frac{\theta}{\sqrt{\text{Var}[Y_1]}} \cdot \frac{d\mu}{d\theta}. \quad (23)$$

Proof: See Appendix. \square

B. Limiting Case

Figure 5 shows that as the full-well capacity L increases, $\text{SNR}_{\text{exp}}(\theta)$ becomes more linear in the log-log plot. Such a behavior can be theoretically derived by analyzing the limiting cases of the incomplete Gamma function.

Recall in Figure 2 that the incomplete Gamma function is a monotonically decreasing function with a transient located around L . Suppose that the width of the transient is δ , then there exists an interval $\{\theta \mid L - \delta/2 \leq \theta \leq L + \delta/2\}$ such that the lower and the upper limits are

$$\Psi_L(\theta) \approx \begin{cases} 1, & \theta \leq L - \delta/2, \\ 0, & \theta \geq L + \delta/2. \end{cases} \quad (24)$$

Here, the approximation “ \approx ” can be defined based on a confidence, e.g., a 99% confidence. Under these two limiting cases, the exposure-referred SNR can be derived accordingly.

Corollary 2: Consider the same conditions as in Theorem 2 but with $L \gg 1$. Let $\Psi = \Psi_L(\theta)$. Under the limiting assumption of $\Psi_L(\theta)$ described in (24), it holds that when $\theta < L - \delta/2$,

$$\mu = \theta, \quad \text{Var}[Y] = \theta, \quad \frac{d\mu}{d\theta} = 1,$$

and when $\theta > L + \delta/2$,

$$\mu = \theta\Psi + L, \quad \text{Var}[Y] = \theta\Psi(\theta + 1 - 2L), \quad \frac{d\mu}{d\theta} = \Psi.$$

Consequently,

$$\text{SNR}_{\text{exp}}(\theta) = \begin{cases} \sqrt{\theta}, & \theta \leq L - \delta/2, \\ 0, & \theta \geq L + \delta/2. \end{cases} \quad (25)$$

Proof: See Appendix. \square

The implication of the corollary is that as L increases, plotting $\text{SNR}_{\text{exp}}(\theta)$ in the log-log plot will give a linear response followed by an abrupt transition. This is exactly what is happening in the output-referred SNR equation shown in (4). Therefore, Theorem 2 is a generalized version of the output-referred SNR curves reported in the literature. For practical algorithms such as those for high dynamic range imaging, (25) is very common, for example used in [4].

V. MONTE-CARLO SIMULATION

So far the theoretical derivations have been focusing on the Poisson distribution only. Read noise, dark current, quantization error, and other sources of noise have not been considered. When including these factors, seeking for an analytic expression would be significantly more challenging. A more reasonable approach here is to resort to numerical schemes to approximately estimate the SNR.

A. General Principle

In general, the measurement Y generated by an image sensor is the result of a sequence of optical-electronic operations such as

$$Y = \text{clip} \left\{ \text{round} \left\{ \text{Poisson}(\theta + \theta_{\text{dark}}) + \text{Gauss}(0, \sigma_{\text{read}}^2) \right\} \right\}, \quad (26)$$

where θ_{dark} denotes the dark current, “round” denotes the analog-to-digital (A/D) conversion, and “clip” denotes the saturation due to a finite full-well capacity.

Without the clipping and the A/D conversion, it is known that the (output-referred) SNR is given by [4], [16]

$$\text{SNR}_{\text{out}}(\theta) = \frac{\theta}{\sqrt{\theta + \theta_{\text{dark}} + \sigma_{\text{read}}^2}}. \quad (27)$$

If clipping is involved, $\text{SNR}_{\text{out}}(\theta)$ will include a special case where $\text{SNR}_{\text{out}}(\theta) = 0$ for θ exceeding the full-well L .

To compute $\text{SNR}_{\text{exp}}(\theta)$, the more viable approach is to sample the the distribution defined by the forward model:

$$Y_m = \text{forward model}(\theta | \theta_{\text{dark}}, \sigma_{\text{read}}, L), \quad (28)$$

for $m = 1, \dots, M$, where M denotes the number of Monte Carlo samples drawn to compute the SNR. The notation in (28) means that the m th sample Y_m is drawn from the forward model such as the one specified in (26). The sample Y_m is a function of the underlying signal θ , among with other model parameters. When running the Monte Carlo simulation, for each θ a set of $\{Y_1, \dots, Y_M\}$ will be drawn to compute the mean and variance.

Specifically, for every θ , the sample average is an estimate of $\mathbb{E}[Y]$ and the sample variance is an estimate of $\text{Var}[Y]$:

$$\hat{\mu}(\theta) = \frac{1}{M} \sum_{m=1}^M Y_m, \quad \text{and} \quad \hat{\sigma}^2(\theta) = \frac{1}{M} \sum_{m=1}^M (Y_m - \hat{\mu})^2.$$

Once $\hat{\mu}(\theta)$ has been determined for every θ , the derivative $d\mu/d\theta$ can be approximated by

$$\frac{d\hat{\mu}}{d\theta} = \frac{\hat{\mu}(\theta_{k+1}) - \hat{\mu}(\theta_k)}{\theta_{k+1} - \theta_k},$$

where $\{\theta_k | \theta_k < \theta_{k+1}, k = 1, \dots, K\}$ is the discrete set of exposures used to evaluate the mean and variance. Consequently, $\text{SNR}_{\text{exp}}(\theta)$ can be approximately estimated by

$$\widehat{\text{SNR}}_{\text{exp}}(\theta) = \frac{\theta}{\hat{\sigma}} \cdot \frac{d\hat{\mu}}{d\theta}. \quad (29)$$

The MATLAB implementation of this Monte-Carlo simulation scheme can be found in the Appendix.

B. Visualizing the Impacts of θ_{dark} and σ_{read}

With the Monte Carlo simulation technique, complex forward models can be visualized. To illustrate the utility of the simulation, it would be useful to consider two scenarios as follows.

Example 5 (Influence of Read Noise): The first scenario considers a fixed dark current, full-well capacity, and A/D converter, but a varying read noise level. Let $\theta_{\text{dark}} = 0.016\text{e-}$ (which is consistent with the quanta image sensor [17]), a full-well capacity of $L = 15$ electrons, and 4-bit A/D converter. The read noise level σ_{read} varies from 0e- to 5e- with a step interval of 0.5e- . By using $M = \times 10^6$ Monte-Carlo samples, the numerically simulated $\text{SNR}_{\text{exp}}(\theta)$ is plotted in Figure 6.

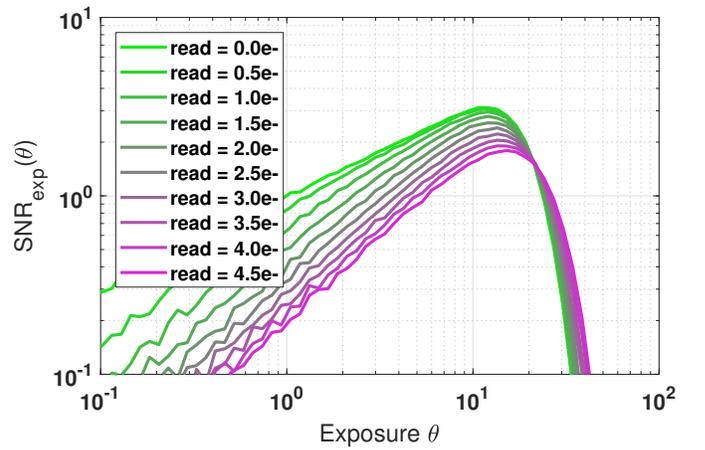


Fig. 6. Exposure-referred SNR for a digital image sensor by considering different levels of read noise.

As one can observe in this example, increasing the read noise leads to a reduced SNR for all θ before saturation. After saturation, the presence of the read noise will occasionally move a saturated measurement back to an unsaturated state because the Gaussian noise can take a negative value. See that the purple curves on the right-hand side of the plot is higher than the green curves. Therefore, for large θ , there is a minor

but noticeable gain in SNR especially when the read noise is high. This is not necessarily a better outcome because the increased read noise would require a more powerful denoising algorithm which is not an easy problem either.

Remark: The small fluctuation towards the tail in Figure 6 is due to the randomness in the Monte-Carlo simulation. As M goes to infinity, the random estimate will approach the expectation by the law of large number. \square

Example 6 (Influence of Dark Current): The second scenario considers a fixed read noise, full-well capacity, and A/D converter, but a varying dark current. To be consistent with the literature, the dark current θ_{dark} is assumed to vary from 0e- to 0.5e- with a step interval of 0.05e- . The read noise level is fixed at 0.2e- based on [17]. The full-well capacity is $L = 15$ electrons, and a 4-bit A/D converter is used. Same as Example 5, $M = 10^6$ Monte Carlo samples are used to numerically generate the $\text{SNR}_{\text{exp}}(\theta)$ plot in Figure 7.

Unlike Example 5 where the read noise has a substantial influence to the SNR, an increased dark current will only show its impact for small θ . This should not be a surprise because when the true signal θ is strong, the influence of θ_{dark} will be negligible considering the small magnitude it usually has. For small θ , the impact of θ_{dark} is more prominent. A smaller dark current indeed leads to a higher SNR as expected. \square

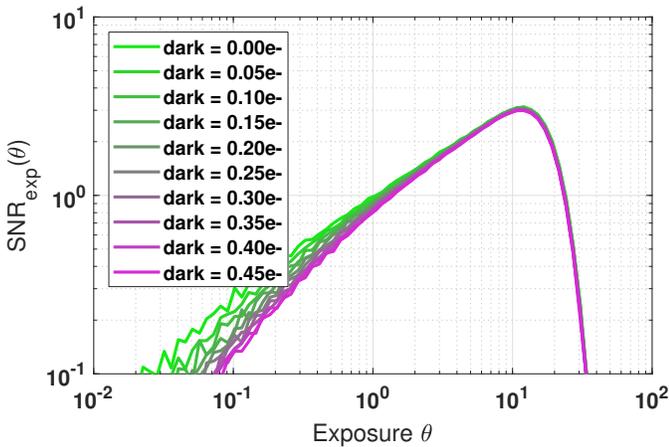


Fig. 7. Exposure-referred SNR for a digital image sensor by considering different levels of read noise. The small fluctuation towards the tail on the left-hand side is due to randomness in the Monte-Carlo simulation.

The utility of the Monte Carlo simulation is that it bypasses the complication of seeking for an analytic expression of $\text{SNR}_{\text{exp}}(\theta)$. To account for even more difficult modelings such as the pixel response non-uniformity, $1/f$ noise, conversion gain, and exposure time, etc, one just needs to modify the forward image formation model. For extreme cases such as very small θ where the random fluctuation is significant, one easy fix is to approximate $\text{SNR}_{\text{exp}}(\theta)$ by $\text{SNR}_{\text{out}}(\theta)$ using (27). This approximation is reasonably accurate for small θ that is sufficiently far away from the saturation cutoff.

VI. UTILITIES FOR IMAGING TASKS

The development of the exposure-referred SNR is not just about answering scientific curiosity, but to provide a new utility that can be used to enable imaging applications. This section highlights two of them.

A. High Dynamic Range Image Reconstruction

The majority of the high dynamic range (HDR) image reconstruction algorithms today are designed for digital image sensors with a linear signal response. The implicit assumption here is that the full-well capacity is sufficiently large so that $\text{SNR}_{\text{out}}(\theta)$ is adequate to model the SNR. However, as the pixel pitch of the sensor becomes small, the full-well capacity also drops. For very small devices such as single-photon avalanche diodes (SPAD) and quanta image sensors (QIS), $\text{SNR}_{\text{out}}(\theta)$ will miss many of the nonlinear behavior of the sensors which will lead to a sub-optimal HDR reconstruction algorithm.

To illustrate the impact of $\text{SNR}_{\text{exp}}(\theta)$ in HDR imaging, consider the simplest problem of reconstructing one HDR image (a single pixel) $\hat{\theta}$ from a stack of M low dynamic range images (pixels) $\{Y_1, \dots, Y_M\}$ where each image is drawn from a Poisson of a different exposure time. That is,

$$Y_m \sim \text{Poisson}(\tau_m \theta), \quad (30)$$

for some exposure time τ_m , where $m = 1, \dots, M$. The image reconstruction scheme is based on the concept of linear combination of inputs⁴

$$\hat{\theta} = \sum_{m=1}^M w_m Y_m, \quad (31)$$

where $\{w_1, \dots, w_M\}$ is a set of linear combination weights. This reconstruction scheme is elementary and it predates all the deep learning method. The development of the idea can be traced back to Debevec and Malik [18] among other works [4], [19], [20].

Despite the various forms of the formulation, at the core of the reconstruction problem is the SNR maximization:

$$\begin{aligned} & \underset{\{w_m\}}{\text{maximize}} \quad \frac{\theta}{\sqrt{\sum_{m=1}^M \left(\frac{w_m}{\tau_m}\right)^2 \sigma_m^2(\theta)}}, \\ & \text{subject to} \quad \sum_{m=1}^M w_m = 1, \quad \text{and} \quad w_m \geq 0, \end{aligned} \quad (32)$$

where τ_m is the exposure time of the m th image, and $\sigma_m(\theta)$ is the noise standard deviation of the m th low dynamic range image. For output-referred noise, $\sigma_m(\theta) = \sqrt{\tau_m \theta}$, and for exposure-referred noise, $\sigma_m(\theta)$ follows $\sqrt{\text{Var}[Y]}$ in (22) with the input as $\tau_m \theta$. The intuitive interpretation of (32) is that it weights the noise according to the exposure τ_m and combination weight w_m to produce a ‘‘calibrated’’ noise. Thus, the ratio is the SNR with respect to the optimally combined image $\hat{\theta}$. The two constraints in (32) ensures that the weights are non-negative and they sum to the unity.

The solution to (32) has been derived and reported by Gnanasambandam and Chan in [14]. It was found that the optimal weight is

$$w_m = \frac{\text{SNR}_m^2(\theta)}{\sum_{m=1}^M \text{SNR}_m^2(\theta)}, \quad (33)$$

⁴The problem here does not assume any motion so that the theoretically optimal solution can be analytically derived. Handling motion remains an open problem in computer vision, although significant progress has been made over the past decade.

where $\text{SNR}_m(\theta)$ is the SNR of the m th low dynamic range image. Under the classical assumption where the full-well capacity is sufficiently large so that the SNR is linear, the simplest solution is to use $\text{SNR}_{\text{out},m}(\theta)$ in place of $\text{SNR}_m(\theta)$. This will yield

$$w_m = \frac{\text{SNR}_{\text{out},m}^2(\theta)}{\sum_{m=1}^M \text{SNR}_{\text{out},m}^2(\theta)} \stackrel{(a)}{=} \frac{(\sqrt{\tau_m \theta} \cdot \mathbb{I}_{\{\tau_m \theta < L\}})^2}{\sum_{m=1}^M (\sqrt{\tau_m \theta} \cdot \mathbb{I}_{\{\tau_m \theta < L\}})^2} = \frac{\tau_m \cdot \mathbb{I}_{\{\tau_m \theta < L\}}}{\sum_{m=1}^M \tau_m \cdot \mathbb{I}_{\{\tau_m \theta < L\}}}, \quad (34)$$

where in (a) the SNR is represented using (4) (assuming a zero read noise $\sigma = 0$). The function $\mathbb{I}_{\{\tau_m \theta < L\}}$ is a binary indicator showing whether the total exposure $\tau_m \theta$ has exceeded the full-well capacity. $\mathbb{I}_{\{\tau_m \theta < L\}} = 1$ if the argument is true and $\mathbb{I}_{\{\tau_m \theta < L\}} = 0$ if the argument is false.

The result in (34) is exactly the classical result derived by Granados et al. in 2010 [4]. All it says is that the weight is calculated based on the unsaturated pixels. A saturated pixel will have an SNR sinking to zero and so the weight w_m is zero. Otherwise, the optimal weight will be linearly proportional to the amount of SNR the m th exposure offers. The higher the SNR, the more weight that exposure will have.

For small pixels, the nonlinearity of the SNR becomes very important and so (34) is inadequate to capture the essence. $\text{SNR}_{\text{exp}}(\theta)$ can handle this situation. Replacing $\text{SNR}_m(\theta)$ by $\text{SNR}_{\text{exp},m}(\theta)$, the optimal weight becomes

$$w_m = \frac{\text{SNR}_{\text{exp},m}^2(\theta)}{\sum_{m=1}^M \text{SNR}_{\text{exp},m}^2(\theta)}, \quad (35)$$

where one can substitute (21) into this solution. Because of the non-linearity in $\text{SNR}_{\text{exp},m}$, the optimal weight will no longer be just depending on the full-well capacity L and the exposure τ_m . The nonlinear behavior of the SNR plays a role when the exposure is near the saturation point. This is something that can be offered by SNR_{exp} but not SNR_{out} .

Figure 8 illustrates a visual comparison between the HDR image reconstructed using SNR_{out} and SNR_{exp} . In this example, the full-well capacity is assumed to be $L = 2^3 - 1 = 7$ electrons. Four different exposures (1/64 ms, 1/16 ms, 1/4 ms, and 1 ms) were used to construct the low dynamic range images, where each image is the result of 100 frames averaged over time. (Multiple frames are needed here because the full-well capacity is only 7 electrons. If there is only one frame, the photon shot noise will overwhelm the signal.) The scene in this demonstration is static, and so the reconstructed results are theoretically optimal with respect to the linear combination and the choice of the SNR. The visual comparison shows an obvious benefit of SNR_{exp} over SNR_{out} . Such a performance gap will become smaller when the full-well capacity becomes larger.

B. Threshold for 1-bit Quanta Image Sensors

The second application is the 1-bit quanta images sensor (QIS). The 1-bit QIS has an interesting forward model given by (5) where the corresponding $\text{SNR}_{\text{exp}}(\theta)$ is derived in (19) (assuming that the read noise σ_{read} is negligible compared to

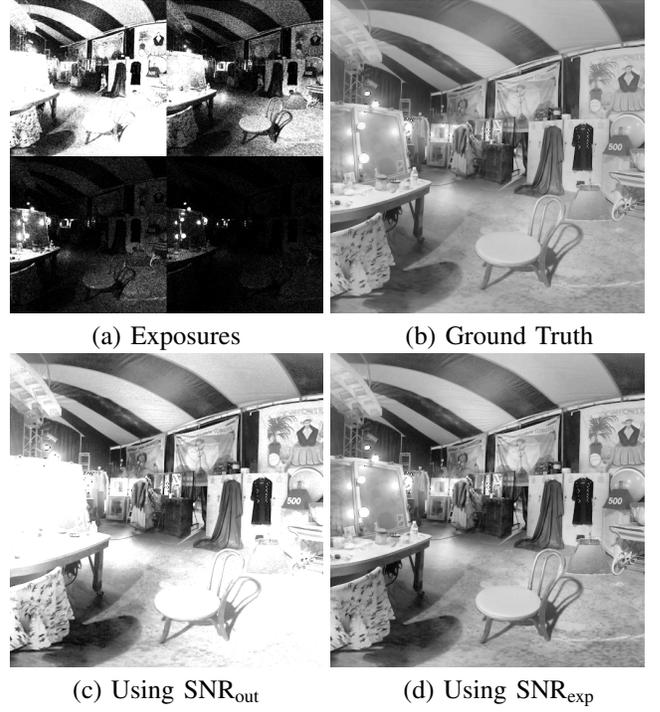


Fig. 8. High dynamic range (HDR) image reconstruction using the optimal linear combination scheme. (a) The four exposures are captured at 1/64 ms, 1/16 ms, 1/4 ms, and 1 ms. Shown in this sub-figure are the single-frame measurements with a full-well capacity of 3 bits. (b) The ground truth HDR image. (c) Linear combination using the output-referred SNR. (d) Linear combination using the exposure-referred SNR. For (c)-(d), the reconstruction is based on averaging 100 frames per exposure.

the signal θ .) One utility $\text{SNR}_{\text{exp}}(\theta)$ brings is that it enables the theoretical derivation of the optimal threshold q to maximize the SNR.

To illustrate the application, consider two operating regimes of the sensor: (i) $\theta \gg 1$ and (ii) $\theta \approx 1$.

1) *Optimal q for $\theta \gg 1$:* The context of this operating regime is that sensor sees a sufficient amount of photon flux but it chooses to operate in a single-bit mode to earn the speed. In this case, the threshold q should be dynamically adjusted to maximize the information carried by the binary bits.

When $\theta \gg 1$, the read noise σ_{read} can be neglected. Consequently, the SNR follows the Poisson statistics as in (19). By noting that $0 \leq \Psi_q(\theta) \leq 1$ and hence $\Psi_q(\theta)(1 - \Psi_q(\theta)) \leq 1/4$ where the maximum is attained when $\Psi_q(\theta) = 1/2$, $\text{SNR}_{\text{exp}}(\theta)$ can be lower bounded by

$$\begin{aligned} \text{SNR}_{\text{exp}}(\theta) &= \frac{\theta}{\sqrt{\Psi_q(\theta)(1 - \Psi_q(\theta))}} \cdot \frac{\theta^{q-1} e^{-\theta}}{(q-1)!} \\ &\geq \frac{\theta}{\frac{1}{2}} \cdot \frac{\theta^{q-1} e^{-\theta}}{(q-1)!}. \end{aligned} \quad (36)$$

The following lemma shows the optimal q for the lower bound.

Lemma 2 (Maximizing the lower bound): Consider the SNR lower bound for 1-bit QIS given by (36). The bound is maximized when $q^* = \lceil \theta \rceil + 1$.

Proof: The proof of this lemma can be found in [12] and is repeated in the Appendix for completeness. \square

What was not proved in [12] is that at this optimal q , the inequality in (36) is actually an equality. The reason is that for large θ , $\Psi_q(\theta)$ can be approximated by the cumulative distribution function of a Gaussian via the Stirling's formula. This can be seen from (11) where for large θ ,

$$\Psi_q(\theta) \approx \int_{-\infty}^q \frac{1}{\sqrt{2\pi\theta}} \exp\left\{-\frac{(\theta+1-y)^2}{2\theta}\right\} dy.$$

The integral is $\Psi_q(\theta) = 1/2$ when $q = \theta + 1$, because the integrand is a Gaussian probability distribution centered at $\theta + 1$. In other words, at the optimal q , $\Psi_q(\theta) = 1/2$ and so $\Psi_q(\theta)(1 - \Psi_q(\theta)) = 1/4$. Hence, the equality in (36) is satisfied, meaning that $q = \theta + 1$ does not only maximize the lower bound but it also maximizes the SNR.

2) *Optimal q for $\theta \approx 1$:* The context of this operating regime is that the photon flux is small and so the goal of the sensor is to count the number of photons. However, for small θ , the read noise plays a role because if σ_{read} is big, two adjacent counts cannot be differentiated. The threshold q in this context is used to quantize the analog voltage (which is a Poisson-Gaussian random variable) so that the SNR is maximized.

For 1-bit Poisson-Gaussian, the probability distribution of the binary random variable Y still follows (5) but with $X \sim \text{Poisson}(\theta) + \text{Gaussian}(0, \sigma_{\text{read}}^2)$. The exposure-referred SNR is computable because Y is binary. To see this, notice that the mean of Y is

$$\begin{aligned} \underbrace{\mathbb{E}[Y]}_{\mu(\theta)} &= \sum_{k=0}^{\infty} \frac{\theta^k e^{-\theta}}{k!} \int_{-\infty}^q \frac{1}{\sqrt{2\pi\sigma_{\text{read}}^2}} \exp\left\{-\frac{(y-k)^2}{2\sigma_{\text{read}}^2}\right\} dy \\ &= \frac{1}{2} \sum_{k=0}^{\infty} \frac{\theta^k e^{-\theta}}{k!} \operatorname{erfc}\left(\frac{q-k}{\sqrt{2}\sigma_{\text{read}}}\right), \end{aligned} \quad (37)$$

where in the first equation the term inside the summation is the convolution of a Poisson probability density and a Gaussian probability density, evaluated at the threshold q . (37) can be computed using numerical techniques.

The variance of Y follows from the fact that Y is binary (i.e. a Bernoulli random variable). Thus,

$$\operatorname{Var}[Y] = \mathbb{E}[Y](1 - \mathbb{E}[Y]) = \mu(\theta)(1 - \mu(\theta)). \quad (38)$$

The derivative $d\mu/d\theta$ can be approximated numerically:

$$\frac{d\mu}{d\theta} \approx \frac{\mu(\theta + \epsilon) - \mu(\theta)}{\epsilon}, \quad (39)$$

where ϵ is a small numerical constant. Combining everything in (37), (38) and (39), the exposure-referred SNR can be numerically computed via Theorem 1.

The derived $\operatorname{SNR}_{\text{exp}}(\theta)$ is plotted in Figure 9 as a function of the threshold q , for various read noise levels σ_{read} . When $\sigma_{\text{read}} = 0$, the SNR is a constant for all q considered. This is because in the absence of read noise, there is no ambiguity in determining the measured number of photons regardless where the threshold q is put. As σ_{read} increases, two adjacent counts begin to overlap due to the Gaussian. The maximum is located around $q = 0.5$. For high read noise where the two peaks of the photon count merge, there is limited SNR one can expect from the sensor.

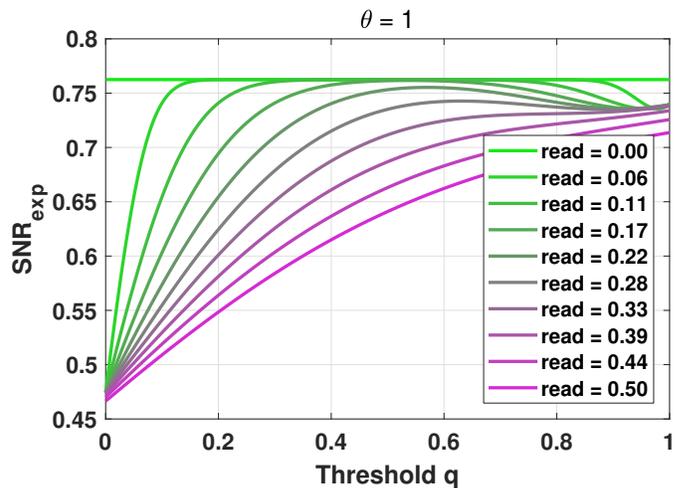


Fig. 9. $\operatorname{SNR}_{\text{exp}}$ as a function of the threshold when the exposure is $\theta = 1$. As the read noise σ_{read} , increases, the SNR drops when $q = 0.5$.

VII. DISCUSSIONS AND CONCLUSION

A. Alternatives to SNR?

While SNR is a natural choice for analyzing the performance of an image sensor, it is by no means the *only* option. Especially for 1-bit devices such as the quanta image sensor, there are other ways to characterize the performance.

1) *Entropy:* As far as 1-bit measurements are concerned, the entropy is a natural substitute of the SNR. If Y is binary with $p_Y(1) = 1 - \Psi_q(\theta)$ and $p_Y(0) = \Psi_q(\theta)$, the entropy is

$$\begin{aligned} H(Y) &= -p_Y(1) \log_2 p_Y(1) - p_Y(0) \log_2 p_Y(0) \\ &= -(1 - \Psi_q(\theta)) \log_2(1 - \Psi_q(\theta)) \\ &\quad - \Psi_q(\theta) \log_2 \Psi_q(\theta). \end{aligned} \quad (40)$$

It is relatively easy to show that the derivative of the entropy with respect to $\Psi_q(\theta)$ is

$$\frac{d}{d\Psi_q(\theta)} H(Y) = -\log\left(\frac{1 - \Psi_q(\theta)}{\Psi_q(\theta)}\right).$$

Setting it to zero will yield $\Psi_q(\theta) = \frac{1}{2}$. Therefore, the entropy is maximized when $\mathbb{E}[Y] = 1 - \Psi_q(\theta) = \frac{1}{2}$. Since $\mathbb{E}[Y]$ is the expected value of the measurement, $\mathbb{E}[Y] = \frac{1}{2}$ means that the entropy is maximized when there are 50% one's and 50% zero's in a set of independent measurements. So, if the application goal is to identify a threshold q such that the performance of the sensor is maximized, then instead of optimizing for the SNR as in Section VI.B.1, the alternative is to optimize the entropy. The solution to $\Psi_q(\theta) = 1/2$ is $q^* = \theta + 1$, which is consistent with Section VI.B.1.

2) *Bit Error Rate (BER):* In the presence of read noise, the bit error rate is another commonly used criterion to evaluate the performance of a sensor. For 1-bit quanta image sensor, the BER measures the probability of making a wrong decision

(i.e., declaring a 0 as a 1, or declaring a 1 as a 0). It can be readily computed as

$$\begin{aligned} \text{BER}(\theta) &= p_Y(0) \cdot \int_q^\infty \frac{1}{\sqrt{2\pi\sigma_{\text{read}}^2}} e^{-\frac{t^2}{2\sigma_{\text{read}}^2}} dt \\ &\quad + p_Y(1) \cdot \int_{-\infty}^q \frac{1}{\sqrt{2\pi\sigma_{\text{read}}^2}} e^{-\frac{(t-1)^2}{2\sigma_{\text{read}}^2}} dt \\ &= \frac{1}{2} \text{erfc} \left(\frac{q}{\sigma_{\text{read}}\sqrt{2}} \right) \Psi_q(\theta) \\ &\quad + \frac{1}{2} \text{erfc} \left(\frac{1-q}{\sigma_{\text{read}}\sqrt{2}} \right) (1 - \Psi_q(\theta)). \end{aligned} \quad (41)$$

Therefore, if $q = 1/2$, the BER is simplified to

$$\text{BER}(\theta) = \frac{1}{2} \text{erfc} \left(\frac{1}{\sigma_{\text{read}}\sqrt{8}} \right), \quad (42)$$

which does not depend on θ . If $\text{BER}(\theta)$ can be empirically measured, then by inverting (42) one can estimate the read noise σ_{read} . For a fixed θ , one can also optimize (41) by finding an appropriate q .

B. Conclusion

The exposure-referred SNR is a concept motivated by the need to capture the sensor's behavior near and beyond the full-well capacity. For small image sensors with one or few bits, exposure-referred SNR provides a natural characterization of the performance without showing an infinite SNR due to the artificial squeezing of the noise. In order to establish the exposure-referred SNR, the paper introduces new mathematical concepts and showed a few results:

- The mean invariance property is introduced. The property asserts that when an estimator $\hat{\theta}(\cdot)$ is applied to the mean of the measurement, the mapped value is the true parameter $\hat{\theta}(\mu) = \theta$.
- Exposure-referred SNR calibrates the noise variance $\text{Var}[Y]$ by the derivative $d\mu/d\theta$, where the derivative is the result of the first-order approximation used in the Delta Method.
- SNR of a sensor with a finite full-well capacity is analytically derived via the incomplete Gamma function. The new result generalizes the conventional ones. For sensors with a large full-well capacity, the new result recovers the classical one that shows a linear response. For sensors with a small full-well capacity, the new result shows how the transient of the SNR looks like.
- Monte-Carlo simulation is presented for complex noise models. The general procedure is to estimate the mean of the measurement $\mu(\theta)$ and the variance of the measurement $\text{Var}[Y]$. Then by using a numerical finite difference operator, the derivative $d\mu/d\theta$ can be approximated.
- Optimal high dynamic range image reconstruction is shown. The new result generalizes the classical linear response.
- Threshold analysis of 1-bit sensors is revisited and generalized. For $\theta \gg 1$, the optimal threshold is $q = \theta + 1$. For $\theta \approx 1$, the optimal threshold needs to overcome the read noise and so the optimal value is $q = 1/2$.

- For 1-bit sensors, it was found that the entropy of the bits and the bit error rate can be used as alternatives to characterize the sensor.

For small pixels, it is anticipated that the exposure-referred SNR will become a useful utility for sensor design, signal processing [21], algorithm development [22], and computer vision applications [23]. Because of its generality to both large and small pixels, classical problems such as sensor gain control, exposure analysis, bit-depth to speed trade off, and color filter array, can be analyzed.

ACKNOWLEDGEMENT

The work is supported, in part, by the United States National Science Foundation under the grants CCF-1718007, CCSS-2030570, IIS-2133032. The authors thank Professor Eric Fossum for discussing the ideas of this paper.

VIII. APPENDIX

A. Gaussian approximation of Poisson

When deriving the first-order derivative of the incomplete Gamma function, it was mentioned that the Poisson distribution can be approximated by a Gaussian. The formal statement is as follows.

Lemma 3 (Gaussian approximation of Poisson): For large θ (i.e., $\theta \gg 1$), it holds that

$$p_X(x) \stackrel{\text{def}}{=} \frac{\theta^x e^{-\theta}}{x!} \approx \frac{1}{\sqrt{2\pi\theta}} e^{-\frac{(x-\theta)^2}{2\theta}}. \quad (43)$$

Note that this is *not* the Central Limit theorem because it does not involve any sample average. The approximation compares the two functions.

Proof: First of all, take the log on the Poisson equation:

$$\log p_X(x) = \log \left\{ \frac{\theta^x e^{-\theta}}{x!} \right\} = x \log \theta - \theta - \log x!$$

Stirling's formula states that for $x \rightarrow \infty$, we have $x! \approx x^x e^{-x} \sqrt{2\pi x}$. Substitute into the previous equation yields

$$\begin{aligned} \log p_X(x) &\approx x \log \theta - \theta - \log \left(x^x e^{-x} \sqrt{2\pi x} \right) \\ &= x \log \theta - \theta - x \log x + x - \log \sqrt{2\pi x}. \end{aligned}$$

The Gaussian has to fit the Poisson well around the mean, which is θ . Thus define $x = \theta + \epsilon$ with $\theta \gg \epsilon$. Then,

$$\begin{aligned} \log p_X(x) &= x \log \theta - \theta - x \log x + x - \log \sqrt{2\pi x} \\ &= (\theta + \epsilon) \log \theta - \theta - (\theta + \epsilon) \log (\theta + \epsilon) \\ &\quad + (\theta + \epsilon) - \log \sqrt{2\pi(\theta + \epsilon)} \\ &= \epsilon + (\theta + \epsilon) \log \frac{\theta}{\theta + \epsilon} - \log \sqrt{2\pi(\theta + \epsilon)} \\ &= \epsilon - (\theta + \epsilon) \log \left(1 + \frac{\epsilon}{\theta} \right) - \log \sqrt{2\pi\theta} - \frac{1}{2} \log \left(1 + \frac{\epsilon}{\theta} \right) \\ &= \epsilon - \log \sqrt{2\pi\theta} - \left(\theta + \epsilon + \frac{1}{2} \right) \log \left(1 + \frac{\epsilon}{\theta} \right). \end{aligned}$$

For $\frac{\epsilon}{\theta} \ll 1$, it holds that $\log(1 + \frac{\epsilon}{\theta}) \approx \frac{\epsilon}{\theta} - \frac{\epsilon^2}{2\theta^2} + \dots$. Therefore,

$$\log p_X(x) \approx \epsilon - \log \sqrt{2\pi\theta} - \left(\theta + \epsilon + \frac{1}{2}\right) \left(\frac{\epsilon}{\theta} - \frac{\epsilon^2}{2\theta^2} + \dots\right)$$

$$= \epsilon - \log \sqrt{2\pi\theta} - \epsilon - \frac{\epsilon^2}{\theta} - \frac{\epsilon^2}{2\theta} + \frac{\epsilon^2}{4\theta^2} + \dots$$

By canceling terms, and removing $\frac{\epsilon^2}{4\theta^2}$ and $\frac{\epsilon}{2\theta}$ (because $\frac{\epsilon}{\theta} \ll 1$), it follows that

$$\log p_X(x) \approx -\frac{\epsilon^2}{2\theta} - \log \sqrt{2\pi\theta}.$$

This implies that

$$p_X(x) \approx \frac{1}{\sqrt{2\pi\theta}} e^{-\frac{\epsilon^2}{2\theta}}.$$

Substituting $x = \theta + \epsilon$ completes the proof. \square

B. Proof of Theorem 2

Proof: Recall the probability density function of Y :

$$p_Y(y) = \begin{cases} \frac{\theta^y}{y!} e^{-\theta}, & y < L, \\ \sum_{k=L}^{\infty} \frac{\theta^k}{k!} e^{-\theta} = 1 - \Psi_L(\theta), & y \geq L, \end{cases}$$

where $\Psi_L(\theta)$ is the incomplete Gamma function. The mean of Y can be shown as

$$\begin{aligned} \mu = \mathbb{E}[Y] &= \sum_{k=0}^{L-1} k \cdot \frac{\theta^k}{k!} e^{-\theta} + L \cdot \left(\sum_{k=L}^{\infty} \frac{\theta^k}{k!} e^{-\theta} \right) \\ &= \sum_{k=1}^{L-1} \frac{\theta^k}{(k-1)!} e^{-\theta} + L \cdot (1 - \Psi_L(\theta)) \\ &= \theta \sum_{k=0}^{L-2} \frac{\theta^{k-1}}{(k)!} e^{-\theta} + L \cdot (1 - \Psi_L(\theta)) \\ &= \theta \Psi_{L-1}(\theta) + L \cdot (1 - \Psi_L(\theta)). \end{aligned}$$

The derivative $d\mu/d\theta$ is therefore

$$\begin{aligned} \frac{d\mu}{d\theta} &= \frac{d}{d\theta} \{ \theta \Psi_{L-1}(\theta) + L \cdot (1 - \Psi_L(\theta)) \} \\ &= \theta \Psi'_{L-1}(\theta) + \Psi_{L-1}(\theta) - L \cdot \Psi'_L(\theta). \end{aligned}$$

For the variance, since $\text{Var}[Y] = \mathbb{E}[Y^2] - \mu^2$, it remains to determine $\mathbb{E}[Y^2]$.

$$\begin{aligned} \mathbb{E}[Y^2] &= \sum_{k=0}^{L-1} k^2 \cdot \frac{\theta^k}{k!} e^{-\theta} + L^2 \cdot \left(\sum_{k=L}^{\infty} \frac{\theta^k}{k!} e^{-\theta} \right) \\ &= \sum_{k=1}^{L-1} k \frac{\theta^k}{(k-1)!} e^{-\theta} + L^2 \cdot (1 - \Psi_L(\theta)) \\ &= \sum_{k=1}^{L-1} (k-1+1) \frac{\theta^k}{(k-1)!} e^{-\theta} + L^2 \cdot (1 - \Psi_L(\theta)) \\ &= \sum_{k=2}^{L-1} \frac{\theta^k}{(k-2)!} e^{-\theta} + \sum_{k=1}^{L-1} \frac{\theta^k}{(k-1)!} e^{-\theta} \\ &\quad + L^2 \cdot (1 - \Psi_L(\theta)) \\ &= \theta^2 \Psi_{L-2}(\theta) + \theta \Psi_{L-1}(\theta) + L^2 (1 - \Psi_L(\theta)). \end{aligned}$$

This completes the proof. \square

C. Proof of Corollary 1

Proof: Since $Y = (1/N) \sum_{n=1}^N Y_n$, the mean $\mathbb{E}[Y] = \mathbb{E}[Y_1]$. It then follows that the derivative $d\mu/d\theta$ remains unchanged. For the variance, it is easy to show that $\text{Var}[Y] = \text{Var}[Y_1]/N$. Substituting these results into (21) would yield

$$\begin{aligned} \text{SNR}_{\text{exp}}(\theta) &= \frac{\theta}{\sqrt{\text{Var}[Y]}} \cdot \frac{d\mu}{d\theta} \\ &= \frac{\theta}{\sqrt{\text{Var}[Y_1]/N}} \cdot \frac{d\mu}{d\theta}, \end{aligned}$$

which is the desired result. \square

D. Proof of Corollary 2

Proof: When L is large, $\Psi_L(\theta)$ and $\Psi_{L-1}(\theta)$ are close enough that they can be considered approximately equal. Denote the value $\Psi_L(\theta)$ as Ψ . Then by (24) it holds that $\Psi \rightarrow 0$ for $\theta \geq L + \delta/2$ and $\Psi \rightarrow 1$ for $\theta \leq L - \delta/2$. In either case, since Ψ is a constant, it follows that the derivative $\Psi'_L(\theta) = 0$ as long as $\theta \geq L + \delta/2$ or $\theta \leq L - \delta/2$. Therefore, the two cases can be derived as follows.

When $\theta \leq L - \delta/2$, it holds that

$$\begin{aligned} \mu &= \theta \Psi + L(1 - \Psi) = \theta, \\ \text{Var}[Y] &= \theta^2 \Psi + \theta \Psi + L^2(1 - \Psi) - \mu^2 \\ &= \theta^2 \cdot 1 + \theta \cdot 1 + L^2 \cdot 0 - \mu^2 = \theta, \\ \frac{d\mu}{d\theta} &= \Psi - (L - \theta) \Psi'_{L-1}(\theta) \\ &= 1 - (L - \theta) \cdot 0 = 1. \end{aligned}$$

So, the overall SNR for $\theta \leq L - \delta/2$ is

$$\text{SNR}_{\text{exp}}(\theta) = \frac{\theta}{\sqrt{\text{Var}[Y]}} \cdot \frac{d\mu}{d\theta} = \sqrt{\theta}.$$

When $\theta \geq L + \delta/2$, $\Psi \rightarrow 0$. Therefore,

$$\begin{aligned} \mu &= \theta \Psi + L(1 - \Psi) \approx \theta \Psi + L, \\ \text{Var}[Y] &= \theta^2 \Psi + \theta \Psi + L^2(1 - \Psi) - \mu^2 \\ &= \theta^2 \Psi + \theta \Psi + L^2(1 - \Psi) - (\theta \Psi + L)^2 \\ &= \theta^2 \Psi + \theta \Psi + L^2 - \theta^2 \Psi^2 - 2\theta \Psi L - L^2 \\ &= \theta^2 \Psi + \theta \Psi - 2\theta \Psi L \\ &= \theta \Psi(\theta + 1 - 2L), \\ \frac{d\mu}{d\theta} &= \theta \Psi'_{L-1}(\theta) + \Psi_{L-1}(\theta) - L \Psi'_L(\theta) \\ &= \theta \cdot 0 + \Psi - L \cdot 0 = \Psi. \end{aligned}$$

By taking the limit that $\Psi \rightarrow 0$, it follow that

$$\begin{aligned} \lim_{\Psi \rightarrow 0} \text{SNR}_{\text{exp}}(\theta) &= \lim_{\Psi \rightarrow 0} \frac{\theta}{\sqrt{\text{Var}[Y]}} \cdot \frac{d\mu}{d\theta} \\ &= \lim_{\Psi \rightarrow 0} \frac{\theta}{\sqrt{\theta \Psi(\theta + 1 - 2L)}} \cdot \Psi \\ &= \lim_{\Psi \rightarrow 0} \frac{\sqrt{\theta \Psi}}{\sqrt{(\theta + 1 - 2L)}} = 0. \end{aligned}$$

Combining with the case where $\theta \leq L - \delta/2$, the overall SNR is proved. \square

E. MATLAB Code for Monte-Carlo Simulation

The MATLAB code below illustrates the Monte-Carlo simulation of how $\text{SNR}_{\text{exp}}(\theta)$ is generated for a truncated Poisson distribution. Adding other factors to the forward model can be done by modifying the random variable Y .

```
N = 100000;
L = 10;
theta_set = logspace(-2, 3, 100);
mu = zeros(1, 100);
sigma = zeros(1, 100);
for i=1:100
    theta = theta_set(i);
    Theta = theta*ones(N, 1);
    Y = poissrnd(Theta);
    Y(Y>L) = L;
    mu(i) = mean(Y);
    sigma(i) = std(Y);
end
dmu_dt = [diff(mu)./diff(theta_set) 1];
SNR = theta_set./sigma.*dmu_dt;
loglog(theta_set, SNR);
```

For plotting the theoretical $\text{SNR}_{\text{exp}}(\theta)$, one just needs to call the incomplete Gamma function.

```
theta = logspace(-2, 3, 100);
Psi = gammainc(theta, L, 'upper');
Psi1 = gammainc(theta, L-1, 'upper');
Psi2 = gammainc(theta, L-2, 'upper');
dPsi = -theta.^(L-1).*exp(-theta) ...
    /gamma(L);
dPsi1 = -theta.^(L-2).*exp(-theta) ...
    /gamma(L-1);
mu = theta.*Psi1 + L.*(1 - Psi);
sigma = sqrt(theta.^2 .* Psi2 + ...
    theta.*Psi1 + L^2*(1-Psi) - ...
    mu_theory.^2);
dmu_dt = theta.*dPsi1 + Psi1 - L*dPsi;
SNR = theta./sigma.*dmu_dt;
loglog(theta, SNR);
```

The combination of the two pieces of codes, with minor modifications, is sufficient to reproduce all the figures reported in this paper.

F. Proof of Lemma 2

Proof: Consider the log of the lower bound:

$$\begin{aligned} L(q) &= \log \text{SNR}_{\text{exp}}(\theta) \\ &= \log 2 + q \log \theta - \theta - \log(q-1)! \\ &= \log 2 + (q-1) \log \theta + \log \theta - \theta - \sum_{k=1}^{q-1} \log k \\ &= \log 2 - \theta + \log \theta - \sum_{k=1}^{q-1} \log(\theta/k). \end{aligned}$$

When $q-1 \leq \theta$, the summands $\log(\theta/k)$ are positive and so $L(q)$ increases with q . When $q-1 \geq \theta$, the summands

$\log(\theta/k)$ are negative and so $L(q)$ increases with q . Therefore, $L(q)$ attains the maximum when $q-1 = \lfloor \theta \rfloor$ where $\lfloor \cdot \rfloor$ denotes the flooring operation. \square

REFERENCES

- [1] C. Shannon, "Communication in the presence of noise," *Proceedings of the IRE*, vol. 37, no. 1, pp. 10–21, 1949.
- [2] J. Nakamura, *Image Sensors and Signal Processing for Digital Still Cameras*. CRC Press, Taylor and Francis Group, 2005.
- [3] S.-H. Lim, "Characterization of noise in digital photographs for image processing," in *Digital Photography II*, vol. 6069, p. 606900, International Society for Optics and Photonics, 2006.
- [4] M. Granados, B. Ajdin, M. Wand, C. Theobalt, H.-P. Seidel, and H. P. Lensch, "Optimal HDR reconstruction with linear digital cameras," in *IEEE Conference on Computer Vision and Pattern Recognition*, pp. 215–222, 2010.
- [5] E. R. Fossum, "Some thoughts on future digital still cameras," *Image sensors and signal processing for digital still cameras*, p. 305, 2006.
- [6] S. H. Chan, O. A. Elgandy, and X. Wang, "Images from bits: Non-iterative image reconstruction for Quanta Image Sensors," *MDPI Sensors*, vol. 16, no. 11, p. 1961, 2016.
- [7] F. Yang, Y. M. Lu, L. Sbaiz, and M. Vetterli, "Bits from photons: Oversampled image acquisition using binary Poisson statistics," *IEEE Transactions on Image Processing*, vol. 21, no. 4, pp. 1421–1436, 2011.
- [8] H. Tian, B. Fowler, and A. El Gamal, "Analysis of temporal noise in CMOS photodiode active pixel sensor," *IEEE Journal of Solid-State Circuits*, vol. 36, no. 1, pp. 92–101, 2001.
- [9] E. R. Fossum, "Modeling the performance of single-bit and multi-bit quanta image sensors," *IEEE Journal of the Electron Devices Society*, vol. 1, no. 9, pp. 166–174, 2013.
- [10] T. Mitsunaga and S. K. Nayar, "Radiometric self calibration," in *IEEE Conference on Computer Vision and Pattern Recognition*, vol. 1, pp. 374–380, 1999.
- [11] A. E. Gamal, "EE392B Lecture Note: SNR and Dynamic Range." <https://isl.stanford.edu/~abbas/ee392b/lect08.pdf>, accessed 12/7/2021.
- [12] O. A. Elgandy and S. H. Chan, "Optimal threshold design for Quanta Image Sensor," *IEEE Transactions on Computational Imaging*, vol. 4, no. 1, pp. 99–111, 2018.
- [13] J. R. B. Whittlesey, "Incomplete gamma functions for evaluating erlang process probabilities," *Mathematics of Computation*, vol. 17, no. 81, pp. 11–17, 1963.
- [14] A. Gnanasambandam and S. H. Chan, "HDR imaging with Quanta Image Sensors: Theoretical limits and optimal reconstruction," *IEEE Trans. Computational Imaging*, vol. 6, pp. 1571–1585, 2020.
- [15] A. Ingle, A. Velten, and M. Gupta, "High flux passive imaging with single-photon sensors," in *IEEE Conference on Computer Vision and Pattern Recognition*, pp. 6760–6769, 2019.
- [16] A. El Gamal and H. Eltoukhy, "CMOS image sensors," *IEEE Circuits and Devices Magazine*, vol. 21, no. 3, pp. 6–20, 2005.
- [17] J. Ma, S. Masoodian, D. A. Starkey, and E. R. Fossum, "Photon-number-resolving megapixel image sensor at room temperature without avalanche gain," *OSA Optica*, vol. 4, pp. 1474–1481, Dec 2017.
- [18] P. Debevec and J. Malik, "Recovering high dynamic range radiance maps from photographs," in *ACM SIGGRAPH*, pp. 369–378, 1997.
- [19] S. K. Nayar and T. Mitsunaga, "High dynamic range imaging: Spatially varying pixel exposures," in *IEEE Conference on Computer Vision and Pattern Recognition*, vol. 1, pp. 472–479, 2000.
- [20] K. Kirk and H. J. Andersen, "Noise characterization of weighting schemes for combination of multiple exposures," in *The British Machine Vision Conference*, pp. 1129–1138, 2006.
- [21] O. A. Elgandy, A. Gnanasambandam, S. H. Chan, and J. Ma, "Low-light demosaicking and denoising for small pixels using learned frequency selection," *IEEE Transactions on Computational Imaging*, vol. 7, pp. 137–150, 2021.
- [22] Y. Chi, A. Gnanasambandam, V. Koltun, and S. H. Chan, "Dynamic low-light imaging with Quanta Image Sensors," in *Proceedings of the European Conference on Computer Vision*, pp. 122–138, 2020.
- [23] C. Li, X. Qu, A. Gnanasambandam, O. A. Elgandy, J. Ma, and S. H. Chan, "Photon-limited object detection using non-local feature matching and knowledge distillation," in *IEEE/CVF International Conference on Computer Vision Workshops (ICCVW)*, pp. 3959–3970, 2021.