

Analytical form of the density of states of a Fermi gas in low dimensions

Benedick Andrade and Rayda Gammag

Department of Physics, Mapúa University, Intramuros, Manila,
Philippines.

Contributing authors: bmandrade@mymail.mapua.edu.ph;
rpgammag@mapua.edu.ph;

Abstract

The behavior of a Fermi gas across various dimensions has already been extensively explored. However, existing formulations often lack clarity or exhibit inconsistencies. In this work, we present a streamlined approach for deriving the density of states (DOS) for a d-dimensional Fermi gas for semiconductors. We provide explicit general expressions for key Fermi quantities, including the wavevector, energy, temperature, momentum, wavelength, and velocity. Moreover, we apply these expressions to calculate for the carrier concentration and thermodynamic properties such as the internal energy, chemical potential, specific heat, electron degeneracy pressure, and bulk modulus. From the degeneracy pressure, we attribute a purely quantum mechanical explanation for the enhancement of carrier concentration in lower dimensions.

Keywords: Density of states, Degeneracy pressure, Fermi gas, Carrier concentration

1 Introduction

In condensed matter physics, the density of states (DOS) is essential for understanding the distribution of electronic states in a material across different energy levels. For non-interacting fermions, accurate DOS calculations are fundamental for predicting the electronic, thermal, and optical properties of semiconductors. While closed-form expressions for the DOS in one, two, and three dimensions are well-established, there are notable inconsistencies in the literature regarding the constants used in these formulations, as shown in Table 1 [1–3].

Table 1 Existing d-dimensional DOS equations

Reference	DOS ¹
Al-Jaber (1999)	$g(\varepsilon) = \frac{d}{2}(d-1) \left(\frac{L}{2\pi}\right)^d \frac{\pi^{d/2}}{\Gamma(1+d/2)} \left(\frac{2m^*}{\hbar^2}\right)^{d/2} \varepsilon^{d/2-1} \quad (1)$
Pichanusakorn (2010)	$g(\varepsilon) = \frac{N}{g_d L^{3-d}} \left(\frac{2m^*}{\hbar^2}\right)^{d/2} \varepsilon^{d/2-1}; g_d = \begin{cases} 2\pi^2, & \text{if } d = 3 \\ d\pi, & \text{if } d = 2, 1 \end{cases} \quad (2)$
Cowan (2019)	$g(\varepsilon) = \frac{d}{2} \frac{N}{2} \varepsilon^{(d-2)/2} / \varepsilon_F^{d/2} \quad (3)$

¹Refer to the following sections for definition of terms.

Historically, the study of the DOS in various dimensions has been closely tied to the investigation of the Fermi gas model in textbooks [4, 5]. This approach has been applied across a range of contexts, including the study of low-dimensional Fermi and Bose gases [6–10], systems under generic power-law potentials [11–14], non-equilibrium transport phenomena [15], in a harmonic trap [16–19], and even in relativistic systems [20, 21].

Dimensionality-specific constants, such as the confinement length, are essential for accurately characterizing the DOS across different systems. However, conflicting approaches to deriving these constants often result in divergent expressions, particularly in low-dimensional systems. Some studies adopt scaling factors derived from first-principle calculations, while others apply empirical corrections or use approximations that are not universally accepted. This disparity is especially pronounced in one- and two-dimensional cases, where quantum confinement effects amplify the impact of seemingly minor discrepancies in constants.

In this paper, we examine the derivation of the d-dimensional DOS for fermions, with an emphasis on clarifying the origins and implications of these various constants. We aim to shed light on the underlying causes of these discrepancies. By inspecting the constants within DOS expressions, we aim to contribute to a more standardized understanding of electronic behavior in semiconductors across various dimensions. This clarification is essential not only for accurate theoretical modeling but also for providing support for experimental studies, where precise control over material properties is paramount.

2 Formalism

The density of states is a fundamental physical property that measures the number of electronic states per unit volume within a specific energy range $(\varepsilon, \varepsilon + d\varepsilon)$. For a d-dimensional thermodynamic system, we consider the Fermi gas model. The density of states $g(\varepsilon)$ can be expressed in terms of the wavevector k ,

$$g(\varepsilon) = \frac{dn}{d\varepsilon} = \frac{dn}{dk} \frac{dk}{d\varepsilon} \quad (4)$$

with the sample's volume $V = L^d$ (where L is the confinement length and d is the dimensionality of the system) and the total number of possible states N , the carrier

concentration is given by $n = N/L^d$. The derivative $dk/d\varepsilon$ can be derived from the dispersion relation, $\varepsilon(k) = \frac{\hbar^2 k^2}{2m^*}$, where \hbar is the reduced Planck constant and m^* is the effective mass of the particle:

$$\frac{dk}{d\varepsilon} = \left(\frac{m^*}{2\hbar^2} \right)^{1/2} \varepsilon^{-1/2}. \quad (5)$$

The volume of a single quantum momentum state V_s in d-dimensional k-space, which can be interpolated by solving the 1D Schrödinger equation and then extended to d-dimensions, is given by:

$$V_s = \left(\frac{\pi}{L} \right)^d. \quad (6)$$

On the other hand, the volume of the Fermi hypersphere V_d in k-space with k as the radius, is defined as

$$V_d = \frac{\pi^{d/2}}{\Gamma\left(\frac{d}{2} + 1\right)} k^d, \quad (7)$$

where $\Gamma(t) = \int_0^\infty x^{t-1} e^{-x} dx$ is the Euler's gamma function. To account for spin degeneracy, we introduce a factor of 2, and for the redundancy due to counting both positive and negative values of the quantum number (similar to counting only the positive octant in 3D), we apply a factor of $\left(\frac{1}{2}\right)^d$. Therefore, the total number of available quantum states $N(k)$, up to the Fermi surface, is given by:

$$N(k) = \frac{\text{region occupied by the Fermi gas}}{\text{region occupied by a quantum state}}.$$

Substituting in the respective hypervolumes, we get

$$N(k) = 2 \cdot \left(\frac{1}{2} \right)^d \cdot \frac{V_d}{V_s} = \frac{L^d k^d}{2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right)}. \quad (8)$$

Dividing by the sample's volume L^d , we obtain the concentration,

$$n = \frac{k^d}{2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right)}. \quad (9)$$

Taking the derivative of n with respect to k , we find:

$$\frac{dn}{dk} = \frac{dk^{d-1}}{2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right)}. \quad (10)$$

Now, using the dispersion relation again, we can express the derivative in terms of energy ε :

$$\frac{dn}{dk} = \frac{dm^{*(d-1)/2}}{2^{(d-1)/2}\pi^{d/2}\hbar^{d-1}\Gamma\left(\frac{d}{2} + 1\right)}\varepsilon^{(d-1)/2}. \quad (11)$$

Therefore, the density of states for a d-dimensional Fermi gas is

$$g(\varepsilon) = \frac{dn}{dk} \frac{dk}{d\varepsilon} = \frac{d}{\Gamma\left(\frac{d}{2} + 1\right)} \left(\frac{m^*}{2\pi\hbar^2}\right)^{d/2} \varepsilon^{d/2-1}. \quad (12)$$

Equation 12 gives the commonly known formula of DOS in 1D, 2D, and 3D:

$$\begin{aligned} g_{1D}(\varepsilon) &= \frac{m^*}{\pi\hbar^2} \frac{2\hbar}{\sqrt{2m^*\varepsilon}} && [\text{Energy}]^{-1}[\text{Length}]^{-1} \\ g_{2D}(\varepsilon) &= \frac{m^*}{\pi\hbar^2} && [\text{Energy}]^{-1}[\text{Area}]^{-1} \\ g_{3D}(\varepsilon) &= \frac{m^*}{\pi\hbar^2} \frac{\sqrt{2m^*\varepsilon}}{\pi\hbar} && [\text{Energy}]^{-1}[\text{Volume}]^{-1} \end{aligned}$$

2.1 Quasi dimensional space

When analyzing quasi-dimensional systems such as quasi-one-dimensional (Q1D) or quasi-two-dimensional (Q2D) systems, it's important to distinguish them from purely one-dimensional (1D) or two-dimensional (2D) systems. For example, quantum dots, quantum wires, and quantum wells actually describe systems in quasi-zero-dimensional (Q0D), quasi-one-dimensional (Q1D), and quasi-two-dimensional (Q2D) states, respectively.

2.1.1 Energy band structures

Consider a box of sides L_x , L_y , and L_z , and assume that there is zero potential energy for electrons inside and an infinite potential outside. In a Q2D system (e.g., a quantum well), we assume that the lengths in the x and y directions (L_x, L_y) are macroscopic, while the thickness in the z -direction is confined ($L_z \ll L_x, L_y$). In this case, the energy is a combination of a continuous free-electron component in the xy -plane and a quantized component along the z -direction. In a Q1D system (e.g., a quantum wire), we assume the system has a macroscopic length in the z -direction (L_z), while the dimensions in the x and y -directions are confined ($L_x, L_y \ll L_z$).

2.1.2 Correction factor

In strictly one-dimensional systems, we would consider the limits where L_y and L_z tend to zero. However, in realistic quasi-dimensional systems, these lengths are non-zero. As a result, we have a quasi-continuum of states in one direction (e.g., along z in Q1D), while the other two directions are confined, leading to discrete energy

levels. To account for this quasi-dimensional confinement, there is a need to introduce a correction factor for the density of states, $\left(\frac{L^d}{L^3}\right)$ [22]:

$$g(\varepsilon) = \frac{2}{L^{3-d}\Gamma\left(\frac{d}{2}\right)} \left(\frac{m^*}{2\pi\hbar^2}\right)^{d/2} \varepsilon^{d/2-1}. \quad (13)$$

The correction factor L^{3-d} accounts for the quantum confinement effect in lower dimensions. When $d = 3$, there is no confinement, as the system behaves like a bulk 3D material. This factor also ensures that the correct units of volume, such as $[\text{cm}^{-3}]$, are preserved in quasi-one-dimensional (Q1D) and quasi-two-dimensional (Q2D) materials, making it consistent with experimental measurements.

2.2 Fermi quantities

Assuming the system is at absolute zero temperature, the Fermi wavevector k_F corresponds to the radius of the Fermi hypersphere. The expression for the Fermi wavevector can be derived from the total number of particles in Equation 8 by substituting k with k_F ,

$$k_F = \left[2^{d-1}\pi^{d/2}\Gamma\left(\frac{d}{2} + 1\right)n\right]^{1/d}. \quad (14)$$

Using Equations 14 and 15, we obtain the Fermi wavevector and the Fermi energy, which are summarized as follows [3],

$$k_F = (3\pi^2n)^{1/3} \quad \varepsilon_F = \frac{\hbar^2}{2m^*} (3\pi^2n)^{2/3} \quad [3D]$$

$$k_F = (2\pi n)^{1/2} \quad \varepsilon_F = \frac{\hbar^2}{2m^*} 2\pi n \quad [2D]$$

$$k_F = \frac{\pi n}{2} \quad \varepsilon_F = \frac{\hbar^2}{2m^*} \left(\frac{\pi n}{2}\right)^2 \quad [1D]$$

Table 2 summarizes various expressions related to the Fermi wavevector and associated quantities. These quantities play a crucial role in understanding the electronic properties of a material at zero temperature. For example, the Fermi temperature T_F gives an estimate of the thermal energy scale below which quantum effects dominate. This value helps to determine whether thermal excitations are significant compared to ε_F . The Fermi wavelength Λ_F is related to the spacing of the quantum states at the Fermi level and provides insight into the wave-like behavior of electrons in the material.

3 On carrier concentrations

Understanding the density of states and the likelihood of their occupation enables us to calculate the total number of charge carriers involved in the conduction of semiconductors.

Table 2 Expressions for quantities related to the Fermi wavevector.

Definitions	Expressions
Fermi energy = $\frac{\hbar^2 k_F^2}{2m^*}$	$\varepsilon_F = \frac{\hbar^2}{2m^*} \left[2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right) n \right]^{2/d}$ (15)
Fermi temperature = $\frac{\varepsilon_F}{k_B}$	$T_F = \frac{\hbar^2}{2m^* k_B} \left[2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right) n \right]^{2/d}$ (16)
Fermi momentum = $\hbar k_F$	$p_F = \hbar \left[2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right) n \right]^{1/d}$ (17)
Fermi velocity = $\frac{\hbar k_F}{m^*}$	$v_F = \frac{\hbar}{m^*} \left[2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right) n \right]^{1/d}$ (18)
Fermi wavelength = $\frac{2\pi}{\varepsilon_F}$	$\Lambda_F = 2\pi / \frac{\hbar^2}{2m^*} \left[2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right) n \right]^{2/d}$ (19)

3.1 Occupation probability

The Fermi-Dirac distribution function gives the probability that an quantum state or orbital at energy ε will be occupied by an electron in thermal equilibrium,

$$f(\varepsilon) = \frac{1}{\exp[(\varepsilon - \varepsilon_F)/k_B T] + 1}. \quad (20)$$

The Fermi energy ε_F , refers to the highest occupied energy level at absolute zero. Here, T represents the temperature and k_B is the Boltzmann constant. While it is more precise to refer to the chemical potential μ - the energy change associated with a change in the number of particles - in many contexts, at sufficiently low temperatures close to absolute zero, ε_F serves as a reliable representation of the highest occupied energy level in a system. Conversely, given that a state must fall into one of these two categories - occupied or unoccupied, the probability of it being unoccupied is straightforwardly expressed as

$$1 - f(\varepsilon) = \frac{1}{\exp[(\varepsilon_F - \varepsilon)/k_B T] + 1}. \quad (21)$$

This formula is useful for calculating concentrations of holes in the valence band, where holes are equivalent to empty electronic states which can be analyzed through energy reversal.

3.2 Electron concentration

In the case of n-type semiconductors where electrons serve as the primary carriers, we sum the available electron states within the conduction band. Since the conduction band extends indefinitely in energy beyond the bandgap, the upper limit of integration ε_c^{top} is taken as infinity. On the other hand, the lower limit of integration ε_c corresponds to the energy reference level chosen for the system. In many cases, the energy of the conduction band minimum is used as the reference energy level, which is typically set

to zero. Hence,

$$n = \int_{\varepsilon_c}^{\varepsilon_c^{\text{top}}} g_c(\varepsilon) f(\varepsilon) d\varepsilon \quad (22)$$

where

$$g_c(\varepsilon) = \frac{2}{L^{3-d} \Gamma(\frac{d}{2})} \left(\frac{m_n^*}{2\pi\hbar^2} \right)^{d/2} (\varepsilon - \varepsilon_c)^{d/2-1}, \quad \varepsilon \geq \varepsilon_c. \quad (23)$$

To simplify the integral, we define the following: the reduced band energy $\xi = \varepsilon/k_B T$, the reduced chemical potential $\eta = \varepsilon_F/k_B T$ and the complete Fermi-Dirac integral,

$$\mathfrak{F}_j(\eta) = \frac{1}{\Gamma(j+1)} F_j = \frac{1}{\Gamma(j+1)} \int \xi^j f_0(\xi) d\xi. \quad (24)$$

The electron concentration is

$$n = \frac{2}{L^{3-d}} \left(\frac{m_n^* k_B T}{2\pi\hbar^2} \right)^{d/2} \mathfrak{F}_{d/2-1}(\eta_c); \quad \eta_c = \frac{\varepsilon_v - \varepsilon_F}{k_B T}. \quad (25)$$

It is important to note that researchers often do not distinguish between $\mathfrak{F}_j(\eta)$ and $F_j(\eta)$ when evaluating Fermi integrals. Clarifying this distinction can help prevent confusion, as most numerical computations employ the complete Fermi-Dirac integrals. Figure 3.2 demonstrates that in lower dimensions (1D and 2D), there is a significant

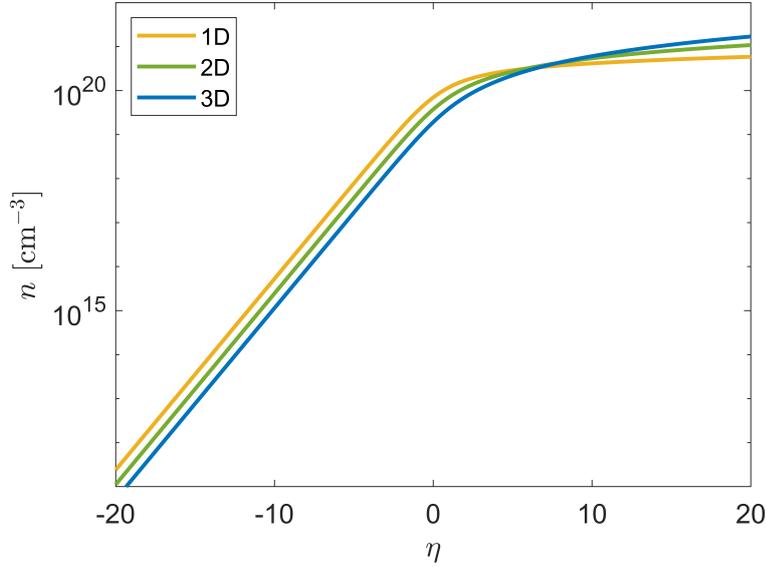


Fig. 1 Carrier concentration in 1D, 2D, 3D.

increase in the carrier concentration as a result of the higher density of states and the stronger effects of quantum confinement.

3.3 Hole concentration

Analogously, in p-type semiconductors where holes are the primary carriers, the hole concentration is defined as

$$p = \int_{\varepsilon_v^{\text{bottom}}}^{\varepsilon_v} g_v(\varepsilon)[1 - f(\varepsilon)](\varepsilon)d\varepsilon \quad (26)$$

where

$$g_v(\varepsilon) = \frac{2}{L^{3-d}\Gamma\left(\frac{d}{2}\right)} \left(\frac{m_p^*}{2\pi\hbar^2}\right)^{d/2} (\varepsilon_v - \varepsilon)^{d/2-1} \quad \varepsilon \leq \varepsilon_v. \quad (27)$$

Similarly, the hole concentration is

$$p = \frac{2}{L^{3-d}} \left(\frac{m_p^*k_B T}{2\pi\hbar^2}\right)^{d/2} \mathfrak{F}_{d/2-1}(\eta_v); \quad \eta_v = \frac{\varepsilon_v - \varepsilon_F}{k_B T}. \quad (28)$$

We can relate the carrier concentrations to the effective density of states (N_c or N_v) through the expressions

$$n = N_c \mathfrak{F}_{d/2-1}(\eta_c) \quad (29)$$

$$p = N_v \mathfrak{F}_{d/2-1}(\eta_v) \quad (30)$$

where

$$N_c = \frac{2}{L^{3-d}} \left(\frac{m_n^*k_B T}{2\pi\hbar^2}\right)^{d/2}; \quad N_v = \frac{2}{L^{3-d}} \left(\frac{m_p^*k_B T}{2\pi\hbar^2}\right)^{d/2}. \quad (31)$$

This means that the carrier concentration is the same as it would be if the band edge had $(2/L^{3-d})(m^*k_B T/2\pi\hbar^2)^{d/2}$ energy levels.

3.4 Degeneracy

The Fermi-Dirac integrals derived from the previous equations are difficult to solve analytically but can be solved by approximations. In this paper, we consider approximations for the degenerate and non-degenerate semiconductors.

3.4.1 Nondegenerate semiconductors

For nondegenerate semiconductors ($\eta \ll 0$), i.e., the Fermi level lies within the energy gap. In cases where these semiconductors contain few impurities, we can simplify the Fermi-Dirac integral using the Boltzmann approximation, which applies when $\varepsilon - \varepsilon_f >$

$3k_B T$ (Boltzmann criterion). This ensures that in the denominator of Equation 20, the exponential term dominates. Under this approximation, the Fermi-Dirac integral can be expressed as

$$\mathfrak{F}_j(\eta) \approx e^\eta.$$

3.4.2 Degenerate semiconductors

For degenerate semiconductors ($\eta \gg 0$), the Fermi level is situated above the bottom of the conduction band for electrons or below the top of the valence band for holes. In this highly doped regime, the Fermi-Dirac integral can be approximated as

$$\mathfrak{F}_j \approx \frac{\eta^{j+1}}{\Gamma(j+1)\Gamma(j+2)}. \quad (32)$$

The degeneracy approximations for n-type and p-type semiconductors are summarized as follows: For non-degenerate semiconductors:

$$n = N_c e^{\eta_c} \quad \text{and} \quad p = N_v e^{\eta_v}, \quad (33)$$

For degenerate semiconductors:

$$n = N_c \frac{\eta_c^{d/2}}{\Gamma(d/2)\Gamma(d/2+1)} \quad \text{and} \quad p = N_v \frac{\eta_v^{d/2}}{\Gamma(d/2)\Gamma(d/2+1)}. \quad (34)$$

Figure 3.4.2 shows the nondegenerate and degenerate regime approximation of the

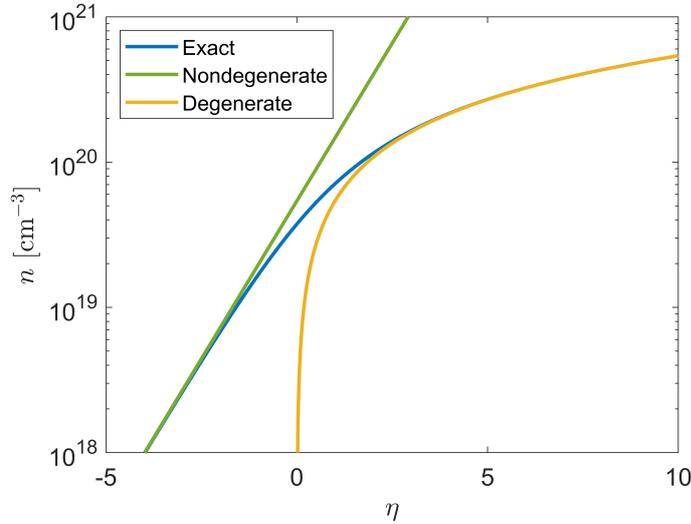


Fig. 2 Degeneracy approximations on the carrier concentration for 2D.

complete Fermi integral.

3.5 Intrinsic carrier concentration

The intrinsic carrier concentration, denoted as n_i , represents the concentration of thermally generated charge carriers (electrons or holes) in an undoped semiconductor at thermal equilibrium. In intrinsic semiconductors, it is common to express this as $n_i = n = p$ indicating that the concentrations of electrons and holes are equal. The intrinsic carrier concentration is

$$\begin{aligned} n_i &= (N_c N_v)^{1/2} \exp\left(-\frac{\varepsilon_g}{2k_B T}\right), \\ n_i &= \frac{2}{L^{3-d}} \left(\frac{k_B T}{2\pi\hbar^2}\right)^{d/2} (m_n^* m_p^*)^{d/4} \exp\left(-\frac{\varepsilon_g}{2k_B T}\right), \end{aligned} \quad (35)$$

where $\varepsilon_g = \varepsilon_c - \varepsilon_v$ is the bandgap. This equation is commonly known as the law of mass action. It asserts that at a given temperature, knowing the concentration of one type of carrier (either electrons or holes) is sufficient to determine the concentration of the other. Here, we show that this relationship is influenced by dimensionality, as the temperature dependence of carrier concentrations changes with $T^{d/2}$. Specifically, lower-dimensional systems (such as 2D or 1D materials) exhibit distinct thermal behavior compared to their 3D counterparts, due to the confinement of carriers and altered density of states. This relationship, however, does not hold true in degenerate semiconductors.

4 Thermodynamic quantities

4.1 Concentration near the Fermi energy

Only electrons near the Fermi energy participate in conduction. We see that the expression of the Fermi energy in Equation 15 can be solved by evaluating Equation 22 at ε_F . Noting that at $T = 0$, the probability $f(\varepsilon) = 1$.

$$N = V \int_0^{\varepsilon_F} g(\varepsilon) d\varepsilon = \frac{2V}{L^{3-d} \Gamma\left(\frac{d}{2} + 1\right)} \left(\frac{m^*}{2\pi\hbar^2}\right)^{d/2} \varepsilon_F^{d/2}. \quad (44)$$

4.2 Density of states near the Fermi energy

The density of states at the Fermi energy $g(\varepsilon_F)$ is of special importance in many calculations, since only electrons within the Fermi sphere are capable of participating in conduction processes due to thermal excitation. We can directly derive it by evaluating Equation 15 at ε_F .

$$g(\varepsilon_F) = \frac{d}{L^{3-d} \Gamma\left(\frac{d}{2} + 1\right)} \left(\frac{m^*}{2\pi\hbar^2}\right)^{d/2} \varepsilon_F^{d/2-1} = \frac{d}{2} \frac{n}{\varepsilon_F}. \quad (45)$$

Table 3 Thermodynamic quantities that can be solved using the density of states.

Physical quantity	Dimensional dependence
Electron concentration	$n = \frac{2}{L^{3-d}\Gamma\left(\frac{d}{2} + 1\right)} \left(\frac{m^*}{2\pi\hbar^2}\right)^{d/2} \varepsilon_F^{d/2}$ (36)
DOS at Fermi energy	$g(\varepsilon_F) = \frac{d}{2} \frac{n}{\varepsilon_F}$ (37)
Energy per electron ¹	$u_0/N = \left(\frac{d}{d+2}\right) \varepsilon_F$ (38)
Total energy density	$u = u_0 + \frac{d\pi^2}{12} (k_B T)^2 \frac{n}{\varepsilon_F}$ (39)
Chemical potential	$\mu = \varepsilon_F \left[1 - \frac{\pi^2}{6} \left(\frac{d}{2} - 1\right) \left(\frac{k_B T}{\varepsilon_F}\right)^2\right]$ (40)
Specific heat	$C_v = \frac{d\pi^2}{6} \left(\frac{k_B T}{\varepsilon_F}\right) n k_B$ (41)
Pressure	$P = \left(\frac{2}{d+2}\right) n \varepsilon_F$ (42)
Bulk modulus	$B = \frac{2}{d} n \varepsilon_F$ (43)

¹At ground state

4.3 Energy density at the ground state

Let u_0 represent the internal energy of the electron gas at absolute zero. At this temperature, all available states are occupied up to ε_F , and states with energies higher than ε_F remain unoccupied:

$$u_0 = V \int_0^{\varepsilon_F} \varepsilon g(\varepsilon) d\varepsilon = \frac{Vd}{L^{3-d}\Gamma\left(\frac{d}{2} + 1\right)} \left(\frac{m^*}{2\pi\hbar^2}\right)^{d/2} \left[\frac{2}{d+2} \varepsilon_F^{d/2} \varepsilon_F\right] = \left(\frac{d}{d+2}\right) N \varepsilon_F.$$

Hence, the average electron energy per electron is given as

$$\frac{u_0}{N} = \left(\frac{d}{d+2}\right) \varepsilon_F = \left(\frac{d}{d+2}\right) k_B T_F. \quad (46)$$

4.4 Chemical potential and specific heat

To evaluate the chemical potential and specific heat of a metal at the degenerate approximation, we apply the Sommerfeld expansion to the concentration density and energy density [23].

4.5 Electron degeneracy pressure

Electron degeneracy pressure is a purely quantum mechanical property that arises due to the Pauli exclusion principle [24]. This causes a form of "repulsion" between electrons, not from electrostatic forces but from the anti-symmetric nature of the total wavefunction. In thermodynamic systems, pressure arises from particles colliding with the walls of a container. In the case of electron degeneracy, the "pressure" comes from the electrons' momenta as they are confined to a smaller volume (for example, in 2D thin films or in 1D nanowires). This confinement increases their average momentum (due to Heisenberg's uncertainty principle), which in turn increases the force they exert on the boundaries of their confinement, manifesting as degeneracy pressure. This internal energy increases as electrons are forced to occupy higher-energy states as the volume decreases. The degeneracy pressure P resists further compression of the system. From the first law of thermodynamics, $P = -(\partial u_0 / \partial V)_N$. It follows that:

$$P = \frac{1}{(d+2)} \frac{\hbar^2}{m^*} \left[2^{d-1} \pi^{d/2} \Gamma\left(\frac{d}{2} + 1\right) \right]^{2/d} n^{(d+2)/d}. \quad (47)$$

4.6 Bulk modulus

Lastly, the bulk modulus of a substance is the ratio of a small decrease in pressure to the resulting fractional increase in volume:

$$B = -V \frac{dP}{dV} = \left(\frac{d+2}{2} \right) P.$$

Table 3 summarizes the relationship of each thermodynamic quantity with dimensions. Although some of these expressions are no longer novel, we showed in this study that the simplicity of the DOS naturally leads to the exact equations without resorting to complex and sophisticated approaches.

5 Conclusion

We thoroughly reviewed the derivation of the density of states (DOS) for low-dimensional semiconductor of non-interacting spin-1/2 fermions. The closed-form expression for the DOS of a Fermi gas is crucial for analyzing how the carrier concentration and thermodynamic properties depend on dimensionality. We find a purely quantum mechanical origin for the enhancement of the carrier concentration in lower dimensions via the electron degeneracy pressure.

References

- [1] Al-Jaber, S.M.: Fermi gas in d-dimensional space. *International Journal of Theoretical Physics* **38**(3), 919–923 (1999)
- [2] Pichanusakorn, P., Bandaru, P.: Nanostructured thermoelectrics. *Materials Science and Engineering: R: Reports* **67**(2-4), 19–63 (2010)

- [3] Cowan, B.: On the chemical potential of ideal fermi and bose gases. *Journal of Low Temperature Physics* **197**(5), 412–444 (2019)
- [4] Huang, K.: *Statistical Mechanics*. John Wiley & Sons, ??? (2008)
- [5] Pathria, R.K.: *Statistical Mechanics: International Series of Monographs in Natural Philosophy* vol. 45. Elsevier, ??? (2017)
- [6] Chávez, I., Grether, M., De Llano, M.: Low-dimensional fermi and bose gases. *Physica E: Low-dimensional Systems and Nanostructures* **44**(2), 394–399 (2011)
- [7] Acharyya, M.: Noninteracting fermions in infinite dimensions. *European journal of physics* **31**(6), 89 (2010)
- [8] Sevilla, F.J.: Thermodynamics of low-dimensional trapped fermi gases. *Journal of Thermodynamics* **2017**(1), 3060348 (2017)
- [9] Guo-Zhen, S., Cong-Jie, O., Qiu-Ping, W.A., Jin-Can, C.: Finite-size effects in a d-dimensional ideal fermi gas. *Chinese Physics B* **18**(12), 5189 (2009)
- [10] Apostol, M.: Dimensionality effects in the ideal bose and fermi gases. *Physical Review E* **56**(4), 4854 (1997)
- [11] Faruk, M.M.: A note on the fermi energy of an ideal fermi gas trapped under a generic power law potential in d-dimension. *European Journal of Physics* **36**(5), 058003 (2015)
- [12] Valiente, M., Zinner, N.T., Mølmer, K.: Universal properties of fermi gases in arbitrary dimensions. *Physical Review A—Atomic, Molecular, and Optical Physics* **86**(4), 043616 (2012)
- [13] Faruk, M.M., Bhuiyan, G.: Thermodynamics of ideal fermi gas under generic power law potential in d -dimension. *arXiv preprint arXiv:1504.06050* (2015)
- [14] Li, M., Yan, Z., Chen, J., Chen, L., Chen, C.: Thermodynamic properties of an ideal fermi gas in an external potential with $u = b r t$ in any dimensional space. *Physical Review A* **58**(2), 1445 (1998)
- [15] Collura, M., Martelloni, G.: Non-equilibrium transport in d-dimensional non-interacting fermi gases. *Journal of Statistical Mechanics: Theory and Experiment* **2014**(8), 08006 (2014)
- [16] Forrester, P.J.: Moments of the ground state density for the d-dimensional fermi gas in an harmonic trap. *Random Matrices: Theory and Applications* **10**(02), 2150018 (2021)
- [17] Brack, M., Zyl, B.P.: Simple analytical particle and kinetic energy densities for a dilute fermionic gas in a d-dimensional harmonic trap. *Physical review letters*

86(8), 1574 (2001)

- [18] Wang, X.Z.: Exact finite-temperature particle and energy densities for noninteracting bose and fermi gases in d-dimensional anisotropic harmonic traps. *Physical Review A* **65**(4), 045601 (2002)
- [19] Zyl, B.P.: Analytical expression for the first-order density matrix of a d-dimensional harmonically confined fermi gas at finite temperature. *Physical Review A* **68**(3), 033601 (2003)
- [20] Sevilla, F.J., Piña, O.: Thermodynamics of the relativistic fermi gas in d dimensions. *Physica A: Statistical Mechanics and its Applications* **482**, 585–596 (2017)
- [21] Cai, S., Su, G., Chen, J.: Thermostatistic properties of a relativistic fermi gas. *International Journal of Modern Physics B* **24**(29), 5783–5792 (2010)
- [22] Kelly, M.J.: *Low-dimensional Semiconductors: Materials, Physics, Technology, Devices* vol. 3. Clarendon Press, ??? (1995)
- [23] Ashcroft, N.W., Mermin, N.D.: *Solid State Physics*. Holt-Saunders, ??? (1976)
- [24] Pauli, W.: Pauli exclusion principle. *Naturwiss* **12**, 741 (1924)