

Low noise cryogenic electronics : preamplifier configurations with feedback on the bolometer

D. Yvon^{1,*} and V. Sushkov²

¹CEA, Centre d'Etude de Saclay, DAPNIA, Service de Physique des Particules, bat 141, F-91191 Gif sur Yvette Cedex.

²CEA, Centre d'Etude de Saclay, DAPNIA, Service d'Electronique et d'Informatique, bat 141, F-91191 Gif sur Yvette Cedex.

*Corresponding author, Electronic mail address: yvon@hep.saclay.cea.fr,
Tel: (33) 0169083911, Fax: (33) 0169086428

PACS: 85 (Electronics), 07.57.K (Detector, bolometer), 07.20.M (Cryogenics instrumentation)

We discuss the various electronic configurations one can use to readout resistive bolometers such as those based on Neutron Transmuted Doped Germanium thermometers (so called NTD Ge thermometers)[1] or NbSi thin film thermometers [2, 3]. The simple voltage amplifier configuration, is compared to readout configurations with feedback on the bolometer. Using the adiabatic thermal model of bolometer as a guide for computations, it is shown that feedback readout configurations allow a natural calibration of the detector and readout electronics. Furthermore, these configurations simplify the design and improve performance of detection such as bandwidth and relaxation time. Finally we show that looped readout configurations may improve the signal to noise ratio.

Introduction:

In the last ten years, low temperature detectors have undergone extensive development. They address detection problems which require high sensitivity, high resolution and/or low thresholds: X-ray and far infrared spectroscopy, double beta decay, Dark Matter searches. Their performance critically depends on the quality of the thermometer used, and of the readout electronics and wiring of the apparatus. This paper describes some of the electronics developments we have made for the EDELWEISS and Planck Surveyor collaboration.

We assume in the following that the thermometers used are resistive, of the order of $1 \text{ M}\Omega$ resistance, or more. The temperature increase of the bolometer induces a thermometer impedance variation. In this context, JFETs are the most commonly used as

front end electronics to achieve low noise performance. We will discuss the concepts and properties of three preamplifier configurations, with feedback on the bolometer, relative to the classical voltage amplifier readout. Preamplifiers have been developed or are under test for each of these configurations. Computations will allow us to quantify the behaviour of the four configurations. We will use a simple adiabatic model of bolometer with standard parametrisation to compute the bolometer's thermal behaviour. It is shown that feedback on bolometers yield significant changes in the detection behaviour such as natural calibration of the detector, bandwidth enhancement, reduced relaxation time, improved signal to noise ratio. Thus, it simplifies readout electronics, avoiding the complex additional circuits otherwise needed to achieve the same behaviour. We will sum up and compare the merits of the different readout configurations. Detailed explanation of designs, performances and implementations of electronic boards will be published later.

Thermal behaviour of a bolometer: the adiabatic approximation.

Figure 1) shows a simplified schematic of the thermal structure of a bolometer. In this approximation, the bolometer is characterised by few parameters: its heat capacity C_t , its thermal conductivity to the cryostat: $g=dP_t/dT$ and the thermometer behaviour, $R_b(T)$. P_t is the sum of P_e from Joule effect of the current flowing through the resistive thermometer, $P_{ph}(t)$ power of physical interest to be measured. We will often use the dimensionless slope of the thermometer α .

$$\alpha(T) = \frac{dF(T; R_b)}{dR_b} = \frac{dF(dR_b; dT)}{dT}$$

The thermal behaviour of the bolometer is described by the thermal differential equation

$$C_t \frac{dF(dT; dt)}{dT} = P_e - G_0(T - T_0) + P_{ph} \quad \text{with } G_0 = \frac{dF(\Delta P_t; \Delta T)}{dT}$$

In the limit of small temperature changes, we get:

$$C_t \frac{dF(d\Delta T; dt)}{dT} = \Delta P_e - g \Delta T + \Delta P_{ph} \quad \text{Equation(1).}$$

The physical quantity computed from these parameters is the thermal relaxation time:

$$\tau_{th} = C_t/g \quad \text{when } P_e=0.$$

In an unbiased detector, when a particle interacts, releasing a power $E \delta(t)$ ($\delta(t)$ being Dirac's distribution) the thermometer's resistance variation is expressed by:

$$\Delta R_b = \frac{dF(R_b \alpha E; T C_t)}{dT} e^{-t/\tau_{th}} \theta(t) \quad \text{Equation(2).}$$

When an infrared flux power $\Delta P_{ph} \theta(t)$ ($\theta(t)$ step function) enters such unbiased bolometer, the bolometer reaction becomes:

$$\Delta R_b = \frac{dF(R_b \alpha \Delta P_{ph}; T g)}{dT} (1 - e^{-t/\tau_{th}}) \theta(t) \quad \text{Equation(2bis)}$$

For order of magnitude estimates, we will use the following typical values:

$C_t = 2 \cdot 10^{-11} \text{ JK}^{-1}$, $P_e = P_t = 2 \cdot 10^{-10} \text{ W}$, $T = 0.3 \text{ K}$, $\alpha = -4$, $g = 3.3 \cdot 10^{-9} \text{ WK}^{-1}$, $R_b = 5 \cdot 10^{-6} \Omega$, $C_s = 100 \text{ pF}$, $R_f = 10^8 \Omega$, where C_s is the stray capacitance of the readout coaxial cable between the bolometer and the JFET, added to the input capacitance of the JFET. R_f is the current feedback resistor that will be introduced later.

Then $\tau_{th} = 6$ ms, $\omega_{th} = 1/\tau_{th} = 165$ rad s⁻¹.

Basic readout schematics and properties

Figure 2) shows the simplified schematics of the four preamplifier configurations under study. For the first order calculations performed in this paper, we consider that the operational amplifier is ideal, unless otherwise specified.

Unloop Voltage amplifier:

In the first configuration Fig 2a), the thermometer is biased with a constant current source. Impedance variations induce voltage change at the input of the preamplifier. The detailed schematic of such a low noise preamplifier, as well as a discussion of the necessary compromises with the very low temperature cryogenic requirements is presented in [4]. Straightforward algebra in Laplace domain leads to:

$$V_{out}(s) = i_b \cdot F((1+R_2/R_1); (1+R_b C_s s)) R_b \quad \text{Equation. (3)}$$

where s is the Laplace parameter, equal to $j \omega$, ω pulsation of the signal.

$$\Delta V_{out}(s) = i_b \cdot F((1+R_2/R_1); (1+R_b C_s s)^2) \Delta R_b \quad \text{Equation (3bis)}$$

Current amplifier

The current amplifier configuration (Fig 2c) was developed to study the physics of ballistic phonons in large bolometers. (For this preamplifier configuration, we intentionally neglected the stray capacitor in parallel with the bolometer: as far as detection behaviour is concerned, this is the worst case). The operational amplifier actively regulates the voltage at its inverted input to be constant. The stray capacitance is charged to a constant voltage. Thus the signal is no longer lowpassed with the time constant $R_b C_s$.

$$V_{out}(s) = - V_p \cdot F(R_f; 1+s R_f C_f) \cdot F(1+s R_b C_b; R_b) \quad \text{Equation. (4)}$$

In the limit where $\Delta R_b/R_b \ll 1$,

$$\Delta V_{out}(s) = F(R_f; R_b^2) V_p F(\Delta R_b; (1+s R_f C_f)),$$

The voltage amplifier

The voltage amplifier (Fig 2b) is a variation of the current amplifier, where position of feedback resistor and the thermometer are inverted. The operational amplifier actively regulates the inverting input to ground. Thus the parasitic capacitor C_s does not charge, and a constant current flows through the bolometer.

$$V_{out}(s) = - F(V_p Z_b; R_f) = F(V_p R_b; R_f (1+R_b C_b s))$$

$$\Delta V_{out}(s) = - V_p F(\Delta R_b; R_f (1+R_b C_b s)^2) \quad \text{Equation. (5)}$$

Impedance regulating amplifier

The impedance regulating amplifier Fig 2d) is more tricky to understand. The condition for the output not to be saturated is that the inverting input of the amplifier be kept to ground. Then $\mathcal{F}(V_{out};R_f) = \mathcal{F}(V_{out};G R_b)$, leading immediately to the DC equilibrium criteria:

$$R_b = R_f / G.$$

If we want to ensure smooth recovery of the equilibrium state and prevent ringing, we have to extend the above criteria at arbitrary frequencies:

$$Z_b(s) = Z_f(s) / G(s)$$

Due to parasitic capacitors, this means that the preamplifier will have to be tuned to a specific bolometer. The output voltage is no longer computable from the electric circuit only. The system reaches an equilibrium because the thermometer's resistance changes, when heated by an electric bias power. Let us assume the thermometer is cold enough, so that $R_b \gg R_f/G$. When we turn on the power on the preamplifier, it goes to saturation. Then the bolometer heats up, and the resistance of the thermometer drops, until the equilibrium criterium, $R_b = R_f/G$, is satisfied. Then output voltage drops and stabilises to the value V_{eq} necessary to keep the temperature and resistance of the thermometer at their equilibrium values. We notice that if $V_{out} = V_{eq}$ is a stable state, due to the central symmetry of I-V characteristic of bolometers, $-V_{eq}$ is an other. In this readout configuration, the preamplifier acts as a temperature regulator of the bolometer, and the feedback is *electrothermal*.

Let us define P_{eq} the electric power dissipated into the thermometer at equilibrium. $P_{eq} = \mathcal{F}(V_{eq}^2; G R_f)$. If a physics event occurs in the bolometer (particles interaction or variation of the incoming power), leading to an overheating of the bolometer, the output voltage will drop so as to keep the total power on the bolometer constant. Then in the small signal approximation:

$$\Delta P_{ph} = -\Delta P_e = -2 \mathcal{F}(V_{eq}; G R_f) \Delta V_{out}. \quad \text{Equation (6)}$$

We notice that measuring the output signals of the preamplifier V_{eq} and ΔV_{out} , we detect, without the need of an external calibration, the physical power incoming on the bolometer, independently from the bolometer inner properties. The detector and readout electronics are naturally calibrated.

Dynamic performance

Let us now compute the behaviour (rise time, decay time, effective thermal bandwidth) of the four different readout configurations. A heat signal is modelled by a power $E \delta(t)$. This produces a decrease of the thermometer impedance according to Equation (2). The observed relaxation time at the output of a biased bolometer does not match the thermal relaxation time of adiabatic model. This is due to the so called electrothermal feedback effect.

We then solve equation (1), for the four different biasing conditions we are studying.

We obtain: $\Delta T = \mathcal{F}(E; C_t) \exp(-(\mathcal{F}(t; \tau_{eth}))$, Equation (7)

where τ_{eth} is the electrothermal relaxation time, and depends of the readout configuration.

A physic signal power is noted $\Delta P_{ph}(s)$. Let us define $H_{therm}(s)$ as

$\Delta R_b(s) = H_{therm}(s) \Delta P_{ph}(s)$ and $H_{elec}(s)$ as $\Delta V_{out}(s) = H_{elec}(s) \Delta R_b(s)$, and finally $H_{tot}(s)$ as $H_{tot}(s) = H_{therm}(s) H_{elec}(s)$. For all the readout configuration we are studying, we can write $H_{therm}(s) = \alpha \mathcal{F}(R_0; T_0 C_t) \mathcal{F}(1; s+1/\tau_{eth})$

and $H_{elec}(s)$ have been computed for all the configurations in the basics readout properties paragraph. For $H_{tot}(s)$, we can compute the effective detection bandwidth of the readout configuration.

Unlooped Voltage amplifier

The properties of this configuration are the most common. On high thermometer impedance, the signal is low passed, due to the parasitic capacitance of the readout connection and JFET input. $R_b = 10^7 \Omega$ and C_s of the order of 100 pF are typical of a readout connection in cryogenic environment. Then the output rise time is limited to:

$$\theta = 2.2 R_b C_s = 2.2 \text{ ms.}$$

When biased with a constant current, $P_e = R_b i^2_b$, and $P_{ph} = E \delta(t)$. From equation (1) we get: $\tau_{eth} = \mathcal{F}(C_t; g - \mathcal{F}(P_e \alpha; T))$.

Since in Metal to Insulator Transition thermometers, $\alpha < 0$, $\tau_{eth} = 3.3 \text{ ms} < \tau_{th}$. Biasing the thermometer shortens the bolometer relaxation time.

Looped voltage amplifier

From Equation 5 we find that the signal is filtered with a double lowpass filter of time constant $R_b C_b$. The rise time is $\theta_{voltage} = 2.2 R_b C_b$. NTD-like thermometers have of the order of 20 pF parasitic capacitance. Thus the expected $\theta_{voltage}$ is $440 \mu\text{s}$, five time faster than the unlooped voltage readout configuration, but, unless the parasitic capacitance of the bolometer can be made very small, much slower than using the looped current amplifier configuration (see below).

Using the Equation 1, and the fact that the bolometer is biased through a constant current, leads us to the same relaxation time as in the unlooped voltage amplifier

$$\tau_{eth} = \mathcal{F}(C; g - \mathcal{F}(P_e \alpha; T)) \quad \text{and since } \alpha < 0, \tau_{eth} = 3.3 \text{ ms} < \tau_{th}.$$

Looped current amplifier

From Eq.4, the signal is lowpassed with the cutting pulsation s_f . Resistors of high ohmic value, stable at a temperature of 20 mK with parasitic capacitance of 0.2 pF are available on the market. Using 10 M Ω resistors, the rise time of this detection configuration becomes $4.4 \mu\text{s}$, 500 times faster than in the unlooped voltage amplifier.

However from Eq. (1), and since the bolometer is biased through a constant voltage, $P_e = \mathcal{F}(V^2; R_b)$, a straightforward computation of a electrothermal relaxation time gives:

$$\tau_{eth} = \mathcal{F}(C; g + \mathcal{F}(P_e \alpha; T)), \quad \text{and} \quad \tau_{eth} = 32 \text{ ms} > \tau_{th}.$$

The more the bolometer is biased the slower the thermal relaxation time is.

Impedance regulating amplifier.

In the model of adiabatic bolometer, a Dirac heat pulse of energy E induces an instantaneous change of the thermometer impedance $\Delta R_b = \mathcal{F}(\alpha R_b E; T C_t)$. The rise time is potentially limited by the charging time of the stray capacitance C_s . If ϵ is the voltage drop on the parasitic capacitance, then $\mathcal{F}(d\epsilon; dt) = \mathcal{F}(1; C_s) \Delta I_s$, with $\Delta I_s = \Delta B \mathcal{F}(\mathcal{F}(-V_{out}; G R_b))$. Thus we obtain $\mathcal{F}(d\epsilon; dt) = \mathcal{F}(V_{out} \Delta R_b; G R_b^2 C_s)$. We then compute the time at which the integrated loss of electric power applied on the bolometer will cancel out the heat pulse energy. We get

$t_r^2 = \mathcal{F}(R_f C_s T C_t; V_b^2 A \alpha) \sim 30 \text{ ns}$, where A is the open loop gain of the preamplifier, $A=10^5$ is a typical value taken for estimations. From this we conclude that the rise time of this preamplifier configuration is extremely short, and that the input stray capacitance does not limit the amplifier rise time. We will neglect its effect in the following computations.

Though on time scales larger than t_r minute variation of the bolometer resistance happen: the open loop gain of the preamplifier A is limited, and small input voltages ϵ do establish. This induces a small error in the equilibrium equations above. Calculation leads to : $\mathcal{F}(d\epsilon; dR_b) = \mathcal{F}(V_{out}; (G+1) R_b)$. Equation (8)

Using Equation (8) we can compute the behaviour of the power amplifier to a physics event $E \delta(t)$. After simple conversion, we get the relaxation time:

$$\tau_{eth} = \mathcal{F}(G+1; 2A\alpha\beta) \tau_{th}, \quad \text{where } \beta = \mathcal{F}(P_e; gT) \text{ is of the order of unity.}$$

Assuming $A \sim 10^5$, $G=20$, and the numerical values above, we get:

$$\tau_{eth} = 0.8 \mu\text{s}.$$

A readout system aiming at this property, with a different design has been published [9]. This shows that using a power amplifier readout configuration, bolometers become relatively fast detectors, able to handle counting rates of the same order of magnitude as high resolution semiconductor diodes.

However a word of caution is necessary. The adiabatic thermal model of bolometer is often incomplete. At very low temperatures (less than 200 mK), the electrons of the thermometer are only weakly linked to the phonons [5, 3]. Figure 3) shows a more realistic thermal model of a bolometer at low temperatures. The electrons of the thermometer are weakly thermalised by phonons of the crystal lattice. This is quantified by an effective heat conductivity g_{eph} . The thermometer impedance is a function of its electron temperature. Thus the impedance regulating amplifier effectively regulates the temperature of the thermometer's electrons. The bulk of the absorber will be thermalised

with the typical time constant of C_t/g_{ph} . To be able to achieve microseconds relaxation time, the bolometer will have to be designed to maximise g_{ph} . This can be achieved, as described in [3].

Table 1 sums up the above computations.

Discussion

The most commonly used bolometer readout configuration is so far the unlooped voltage amplifier. Their drawbacks are well known. Due to the input stray capacitance and high thermometer impedance, the signal is electronically lowpassed. This reduces the amplitude of the output signal and results in the loss of the rise time information. Transient effects [3] in bolometers cannot be studied. When used in the lock-in configuration, the parasitic capacitor limits the modulation frequency, and induces a phase shift.

The looped voltage amplifier configuration moderately shortens the rise time. The limitation on it is technological. Most resistive thermometers at low temperature are based on the metal to insulator transition. Close to the transition, their dielectric constant increases. It turns out that unless thin film technology is available [2], it is very difficult to achieve thermometers with stray capacitance much lower than of 20 pF. Thus, we expect a rise time shortened by a factor 5, for the looped voltage configuration, with respect to unlooped configuration.

The looped Current amplifier readout configuration solves the problem of rise time. Low temperature resistors of stray capacitance 0.2 pF are available on the market. Using 10 M Ω resistor, we expect a rise time of 4.4 μ s, independent of the thermometer impedance. Much shorter transient effects can then be studied. When used in a lock-in amplifier loop, with square wave AC bias, the preamplifier's output provides a detected square wave with minimal distortion, no amplitude loss, and a minute phase shift (delay) not depending on the sensor impedance. Compensation of phase shift may be unnecessary. If implemented, the adjustment is fixed, no tuning is necessary when sensor impedance changes. In case of spurious noise, the modulation frequency can be chosen in a much wider frequency range, without requiring a new calibration of the apparatus.

Finally, when implementing the boards, the looped current amplifier allows much flexibility of the design. The looped voltage amplifier configuration does not allow the best rise times, and since the preamplifier has a voltage gain of 1, requires a highly optimised second stage post amplifier to avoid performance's degradation of the electronic chain ($1 \text{ nV/Hz}^{1/2}$). This problem can be overcome, adding a gain divider of $1/C$ at the output of the operational amplifier and then close the loop on the bolometer. The preamplifier output is then before the divider and the voltage gain becomes C . The drawback is that the dynamic is then reduced.

It is pointed out that the electrothermal relaxation time is slower using the looped current amplifier configuration than the looped voltage amplifier. For experiments aiming at measuring high rate particle interactions, this is a drawback of the looped current amplifier configuration.

The impedance regulating amplifier combines all the advantages of fast rise time and shortens relaxation time. The advantage of fast rise time have been given at the previous paragraph. The new feature is that due to extreme electrothermal feedback the electrothermal relaxation time is dramatically reduced. This allows the use of conventional bolometers, to handle particle detection rates of the order of magnitude as high resolution semiconductor diodes.

Furthermore, on time scales larger than a few τ_{eth} , the output of the impedance regulating preamplifier directly measures (equation 6) the variation of the physics power entering the bolometer. The properties of the bolometer and preamplifier do not enter in Equation 6. This means that the bolometer with its electronic readout chain is *auto calibrated*.

Finally, if V_{out} is a steady state, $-V_{out}$ is an other. If we achieve a design to switch from one state to the other, under the control of a clock, the thermometer becomes square wave AC biased. We then achieve the modulation and preamplifier stages of an autobiased lock-in detection chain. The commonly used high stability amplitude biasing oscillator vanishes, replaced by the preamplifier itself. This design requires fewer electronic parts and does not require a very high stability oscillator (10^{-6} relative stability in amplitude) as used in low noise apparatus. The main drawback of the impedance regulating amplifier is that the design turned out to be tricky. We conducted intensive electrothermal simulation of the bolometer and electronics to understand the behaviour of this configuration.

If noise is not a matter of concern, we can now choose the best configuration for the planned measurement, given the bolometer available. But bolometers are mostly used because of their high sensitivity, and low noise. Then a noise discussion is necessary.

Noise modelling and computations

In the following, we will compute the noise performance of the four preamplifiers configurations. The noise contributions considered will be:

- The Johnson noise of the biasing resistors and thermometer:

$e_n = (4kT R_b)^{1/2}$ or $i_n = (4kT / R_b)^{1/2}$, where k is the Boltzmann constant, and T the temperature in Kelvin.

- Noise of the cold JFET. The current noise of a good cold (150K) JFET is very low. We will use the typical value of 10^{-16} A/Hz $^{1/2}$. The voltage noise e_n is measured and will be taken for numerical computations to the value of 1.5 nV/Hz $^{1/2}$. [6,4]

- In looped readout configurations, the output voltage noise due to JFET input noise heats the bolometer. We call these contributions the electrothermal noise power. Due to JFET's input voltage noise (Pethen(s)) and input current noise (Pethin(s)).

- The thermal noise of the bolometer will be computed according to [7]

$$P_n^2 = 4kT^2g \quad (\text{W}^2/\text{Hz})$$

P_{ph} is defined as the signal to be measured.

We quantify the various noises contributions from electronic and thermal origins. As a support for discussion, we assume we use a bolometer running at a temperature of 300 mK, with parameters extracted from [8].

When we calculate a noise contribution at the output of the preamplifier, dividing by $H_{\text{tot}}(s)$ provides the equivalent power noise at the input of the bolometer. In the appendix, we write the explicit formulae for the various noises contributions of the four preamplifier configurations.

Figure 4) displays the noise contributions as equivalent power noise at the input of the bolometer, and figure 5) the thermal noise power density to electronic noise power density ratio. The Johnson and electronics noise contributions are added quadratically. For clarity, only the dominant noise contributions are plotted.

We first notice at frequencies within the bandwidth of the bolometer, where the thermal noise dominates, that the Johnson noise dominates among electronics noise contributions. This is true, but in the looped current amplifier configuration. This shows that electronics components have the potential to read bolometers at lower temperatures, with improved performances.

In the above calculations the bolometers has been rather strongly biased. This allows us to demonstrate the impact of electrothermal feedback on signal readout. Figure 5) shows that the current amplifier is best as far as detecting physics signals. This is due to the electrothermal positive feedback effect that enhances thermal signals at the input of the bolometer. Thus the thermal noise P_n and the electrothermal noise contributions (see Appendix) are enhanced with respect to the others. The unlooped and looped voltage amplifiers display qualitatively the same behaviour, but the negative electrothermal feedback effect depresses the thermal signal amplitudes. The impedance regulating amplifier increases the thermal bandwidth, but does not enhance or depress the thermal signal amplitude.

Discussion

Let us now consider the case of an experiment, aiming at measuring some small power variation ΔP_{ph} . The thermal noise adds up to the physics noise, and, as far as readout is concerned, behaves the same way. When computing signal to noise ratio, we will consider the physics signal to be equal to the thermal noise, and we aim at reducing readout (electronics) noise to a negligible level. At low frequencies, if the thermal noise were dominant, the effective signal to noise ratio would be $\Delta P_{\text{ph}}(\omega)/P_{\text{therm}}(\omega)=1$, independently of the readout configuration chosen. This is not the case in the computations above (Figure 6). For the voltage readout configurations, due to the

negative electrothermal feedback, the Johnson noise contribution is at the same level as the thermal noise and thus degrades the measurement. Looped current configuration is best in this respect. Thus for low level signals measurements, where readout noise is dominant, a strongly biased looped current amplifier could be of great help. Finally, though the impedance regulating amplifier enhances dramatically the bandwidth of the power signal that may be detected by the bolometer, the signal to noise ratio at high frequencies is of the same order of magnitude as with other readout configurations. At frequencies above the thermal bandwidth of the bolometer, for all the configurations, the signal to noise ratio worsens quickly.

Conclusion

We have studied the performances of four different readout electronic configurations for cryogenic bolometers. We have shown that looped readout configuration improves signal rise time and thus allows the study of transient effects in cryogenics detectors and fundamental physics such as ballistic phonons collection. Furthermore using impedance regulating amplifiers, thermal relaxation times can be drastically reduced, allowing particle detection rates of the same order of magnitude as high resolution semiconductor detectors. Bolometer and electronic detection chain are autocalibrated, the output voltage providing unambiguously the input power variation. Finally, we showed that the current amplifier configuration combines the advantages of fast risetime and improved signal to noise ratio, when electronics noise in classical readout configuration prevails. From the above computations, we find no advantage to an unlooped readout configuration. Experimental constraints will decide which looped readout configuration is the most appropriate for a given apparatus and bolometer.

The designs and performances of the boards will be published in this journal later.

Acknowledgements

We want to thank the staff of the Service d'Electronique et d'Informatique (DAPNIA/SEI, Saclay) and Service d'Instrumentation Générale (DAPNIA/SIG, Saclay) for their support. We are grateful to J.L Bret and A. Benoit, (CRTBT Grenoble), for stimulating discussions and suggesting the looped voltage configuration, to JP.Torre (Laboratoire d'aéronomie, Verrière le Buisson, France) and P. Garoche (Université d'Orsay, France) for their help, and to J.M. Lamarre and A. Puget (INSU/IAS Orsay) for their support in the Planck Surveyor collaboration.

References

- [1] EE. Haller, N. P. Palaio, M. Rodder, W.L. Hansen, and E. Kreysa, in Neutron Transmutation Doping of Semiconductor Materials, ed. R. D. Larrabée, (Plenum, New York, 1984) p.21.
- [2] L. Dumoulin et al., Nucl. Inst. Meth. Phys. Res. A370 (1996) 211.

- [3] D. Yvon, L. Bergé, L. Dumoulin et al., Nucl. Inst. Meth. Phys. Res. A370 (1996) 200.
- [4] D. Yvon et al, Nucl. Inst. Meth. Phys. Res. A368 (1996) 778
- [5] E. Aubourg et al., J. of Low Temp. Phys. 93 (1993) 289
- [6] Inter FET corp., 322 Gold Street, Garland Texas 75042, USA
- [7] J. C. Mather, Appl. Opt. 21 (1982) 1125
- [8] T. Wilbanks, Phd thesis, University of California at Berkeley, (1994)
- [9] Galeazzi et al., Proc. of the VIIth International Workshop on Low Temperature Detectors (LTD-7), 27 July 1997, p 174, Munich, Max Planck Institute of Physics.

Appendix: Noise contributions computations

In the following, we calculate the various noise contributions. These are expressed as output voltage noise or Power noise referred to the input of the bolometer, whichever are the easiest to compute. These two quantities are simply related by the equation:

$$\text{noiseVout}(s) = H_{\text{tot}}(s) \text{Powernoise}(s),$$

with $H_{\text{tot}}(s) = H_{\text{therm}}(s) H_{\text{elec}}(s); \quad H_{\text{therm}}(s) = \alpha \sqrt{F(R_0; T_0 C_t)} \sqrt{F(1; s+1/\tau_{\text{eth}})}$

The electrothermal noise contributions due to voltage noise (P_{ethen}) and current noise (P_{ethin}) of JFET are evaluated by computing the induced voltage variations at the end of the thermometer, from which we deduce the electrothermal noise power. For looped current and voltage amplifier, the Johnson noise does not induce electrothermal power noise: the feedback loop of the preamplifier, within the bandwidth of the amplifier, cancels the noise voltage occurring at the the bolometer inducing no power dissipation. On the other hand, electronic noise contributions using impedance regulating amplifier all happen through the electrothermal process: a noise voltage at the input of the amplifier has to be cancelled by an impedance (temperature) change of the thermometer instigated by a biasing voltage variation. The calculated noise contributions are:

Unlooped Voltage readout

$$H_{\text{elec}}(s) = i_B \sqrt{F(\text{Gunloop}; (1+R_b C_s)^2)}, \text{ where Gunloop is equal to } 1+R_2/R_1$$

$$e_n V_{\text{out}}(s) = e_n \text{ Gunloop}$$

$e_n V_{\text{out}}$ output voltage noise due to e_n .

$$i_n V_{\text{out}}(s) = i_n Z_b(s) \text{ Gunloop}$$

$i_n V_{\text{out}}$, output voltage noise due to i_n .

$$J_{\text{ohn}} V_{\text{out}}(s) = (4kT_0 R_b)^{1/2} \sqrt{F(1; 1+s R_b C_s)}$$

$J_{\text{ohn}} V_{\text{out}}$, output voltage noise due to the Johnson noise of the thermometer.

$$P_{\text{therm}}(s) = (4kT_0^2 g)^{1/2}$$

$P_{\text{therm}}(s)$, input noise power due to the thermal fluctuations of the bolometer.

Since the output voltage is not feedback on the bolometer, the electrothermal power noise are null.

Voltage amplifier

$$H_{elec}(s) = -\mathcal{F}(V_p; R_f (1+R_b C_b s)^2)$$

$$e_n V_{out}(s) = (1+\mathcal{F}(Z_b; Z_p)) e_n$$

$$i_n V_{out}(s) = i_n Z_b(s)$$

$JohnV_{out}(s) = \mathcal{B} \mathcal{C} (\mathcal{F}(4k_b T_0; R_b))^{1/2} \mathcal{F}(1; 1+R_b C_s s)$, where $JohnV_{out}(s)$ is the output noise induced by the Johnson noise of the thermistor.

$$P_{therm}(s) = (4k T_0^2 g)^{1/2}$$

$P_{ethen}(s) = \mathcal{F}(2 V_b Z_b e_n; R_b R_f)$, where P_{ethen} is the electrothermal noise due to the JFET's voltage noise e_n .

$P_{ethin}(s) = \mathcal{F}(2 V_b Z_b i_n; R_b)$, where P_{ethin} is the electrothermal noise due to the JFET's current noise i_n .

Current amplifier

$$H_{elec}(s) = -\mathcal{F}(R_f V_p; R_b^2 (1+s R_f C_f))$$

$$e_n V_{out}(s) = (1+\mathcal{F}(Z_f; Z_p)) e_n$$

$$i_n V_{out}(s) = i_n Z_f(s)$$

$$JohnV_{out}(s) = \mathcal{B} \mathcal{C} (\mathcal{F}(4 k_b T; R_b))^{1/2} Z_f(s)$$

$$P_{therm}(s) = (4k_b T^2 g)^{1/2}$$

$$P_{ethen}(s) = \mathcal{F}(2 V_b e_n; R_b)$$

$$P_{ethin}(s) = 0$$

Power amplifier

$$H_{elec}(s) = -\mathcal{F}(A V_{out}; (G+1) R_b)$$

$$H_{tot}(s) = -\mathcal{F}(G R_f; 2 V_{out}) \mathcal{F}(1; 1+s \tau_{eth})$$

$$P_{ethen}(s) = \mathcal{F}(g T e_n; \alpha V_{out}) (1+\tau_{th} s) (G+1+R_f C_s s)$$

$$P_{ethin}(s) = \mathcal{F}(g T R_b i_n; \alpha V_{out}) (1+\tau_{th} s) (G+1+R_f C_s s)^{1/2}$$

$JohnV_{out}(s) = \mathcal{B} \mathcal{C} (\mathcal{F}(4k_b T; R_b))^{1/2} \mathcal{F}(1; 1+R_b C_b s) \mathcal{F}(g T; \alpha V_{out}) (1+\tau_{th} s) (G+1+R_f C_s s)$

$$P_{therm}(s) = (4k_b T^2 g)^{1/2}$$

Captions:

Table 1): Summary of the numerical values presented in the previous paragraphs, for the four readout configurations presented in this paper, assuming the detector parameters extracted from [8]. Within the adiabatic thermal model presented here, the electronics risetime would be the risetime of a pulse induced by a particle interaction in the bolometer, and τ_{eth} , the relaxation time. The socalled thermal bandwidth is the effective bandwidth at -3dB, when measuring a varying physics power $\Delta P_{\text{ph}}(s)$, as deduced from $H_{\text{tot}}(s)$.

Figure 1): Basic schematics of the four preamplifier configurations we are studying in this paper.

Figure 2): The adiabatic bolometer model. The detector is made from a thermometer in perfect thermal contact with an absorber at a temperature T . The total heat capacity is C_t . The absorber is thermalised to the cryostat through a heat leak of dynamic thermal conductance $g=dP/dT$.

Figure 3): Realistic thermal model of a bolometer, including electron-phonon decoupling in the thermometer [3, 5]

Figure 4): Dominant noise contributions versus frequency, for the four readout configurations studied in this paper: a) is unlooped voltage amplifier readout, b) is the looped voltage amplifier, c) is the looped current amplifier, case d) is the impedance regulating amplifier. Noise contributions are expressed as power noise equivalents at the input of the bolometer. P_{en} is the noise due to the JFET voltage noise, P_{in} is the noise due to JFET's current noise, P_{John} is the noise contribution due to the thermometer's Johnson noise. P_{therm} is the bolometer thermal noise. P_{ethen} is the electrothermal noise due to JFET's input voltage noise.

Figure 5): Ratio of the thermal noise power density to the electronic noise power density for the four readout configurations. Triangles are for the looped current amplifier, crosses are for the impedance regulating amplifier, squares are for looped voltage amplifier, circles are for unlooped voltage amplifier.

Figure 6) Signal to noise ratio versus pulsation, for the four readout configuration studied in this article, of an experiment whose physics power density is equal to the thermal noise power density of the bolometer. Triangles are for the looped current amplifier, crosses

are for the impedance regulating amplifier, squares are for looped voltage amplifier, circles are for unlooped voltage amplifier.

| Readout configuration | Electronic risetime (s) | τ_{eth} (s) | Thermal Bandwidth (Rad s ⁻¹) |
|--------------------------------|-------------------------|-------------------------|--|
| Unloop Voltage amplifier | $2.2 \cdot 10^{-3}$ | $3.3 \cdot 10^{-3}$ | 280 |
| Looped Voltage amplifier | $4.4 \cdot 10^{-4}$ | $3.3 \cdot 10^{-3}$ | 300 |
| Looped current amplifier | $4.4 \cdot 10^{-6}$ | $3.2 \cdot 10^{-2}$ | 31 |
| Impedance regulating amplifier | $< 3 \cdot 10^{-8}$ | $8 \cdot 10^{-7}$ | $1.25 \cdot 10^6$ |

Table 1)



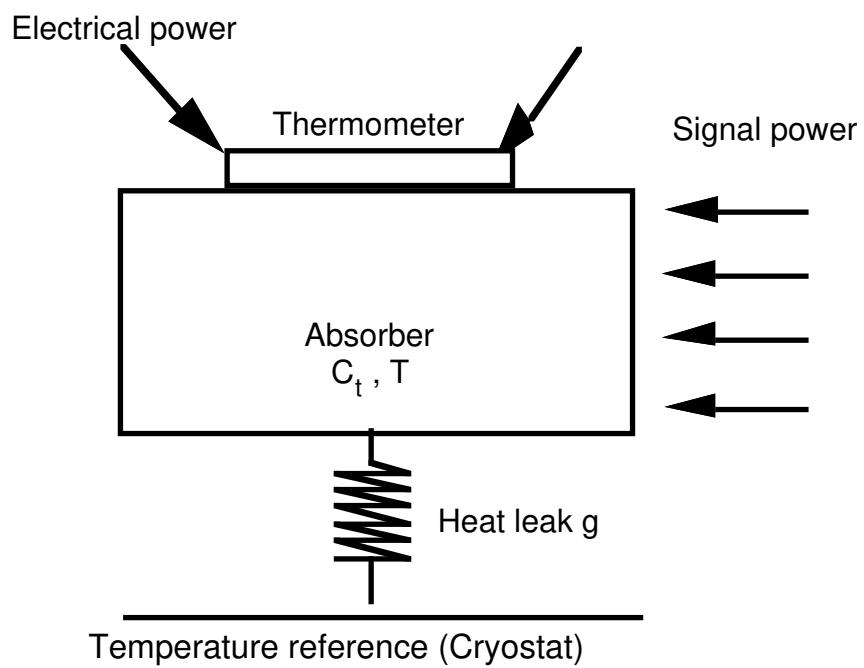



Figure 1)

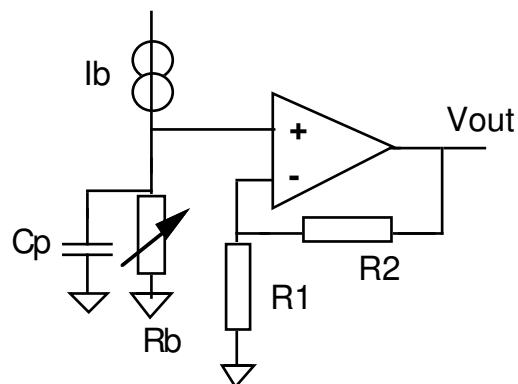


a) "Classical unlooped Voltagereadout"

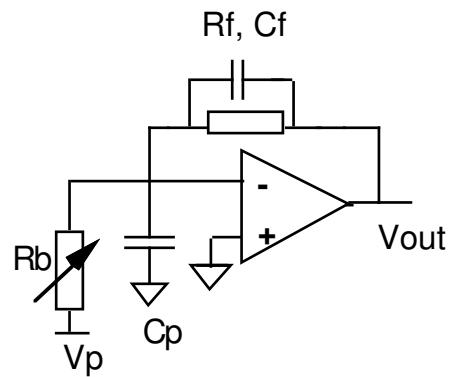

c) Looped current amplifier

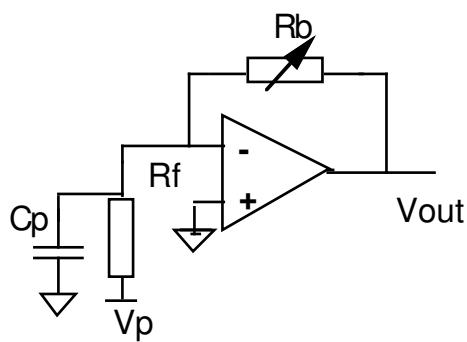

b) Looped voltage amplifier

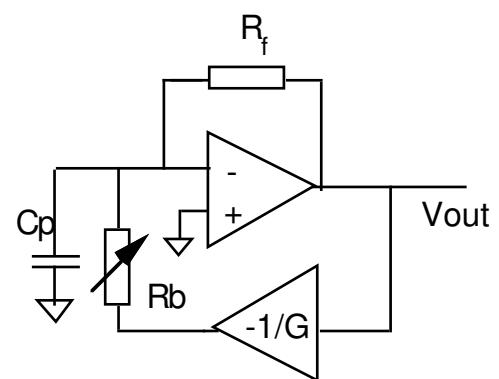

d) Impédance regulating amplifier

Figure 2)

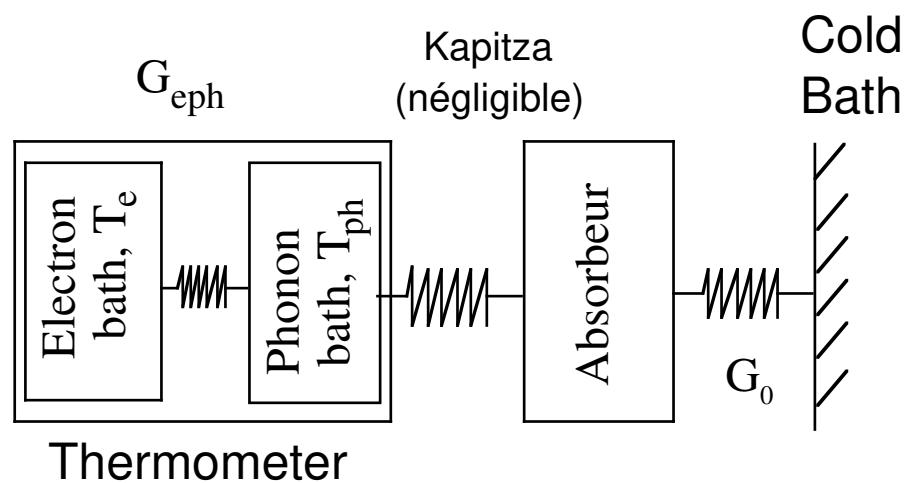


Figure 3)

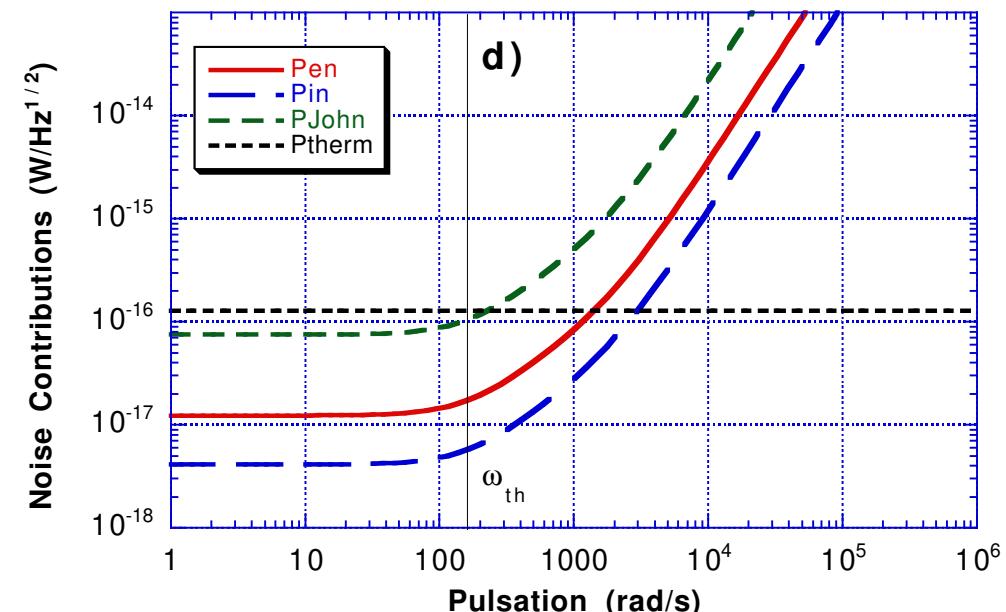
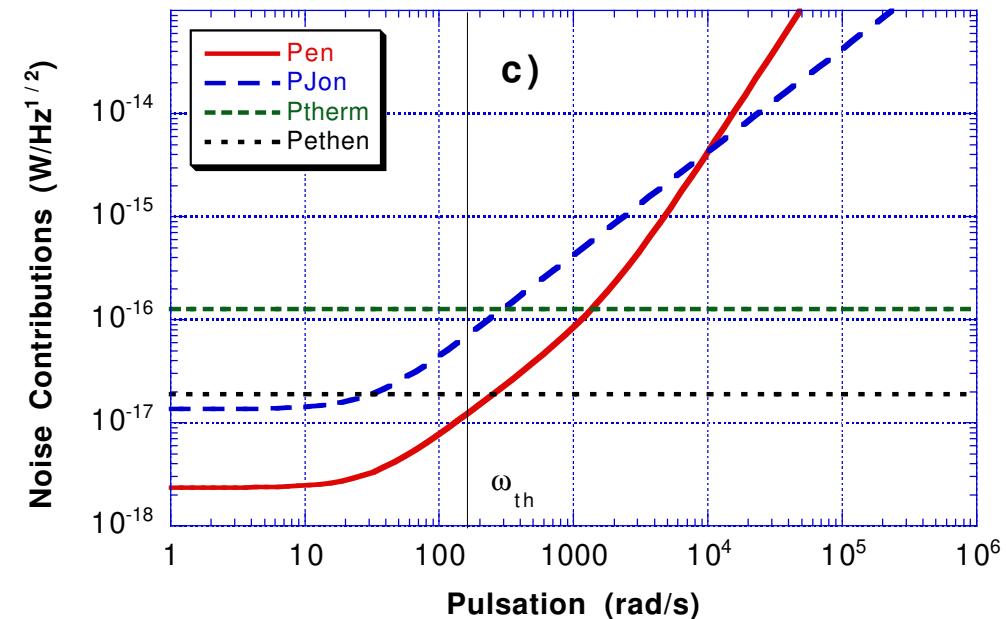
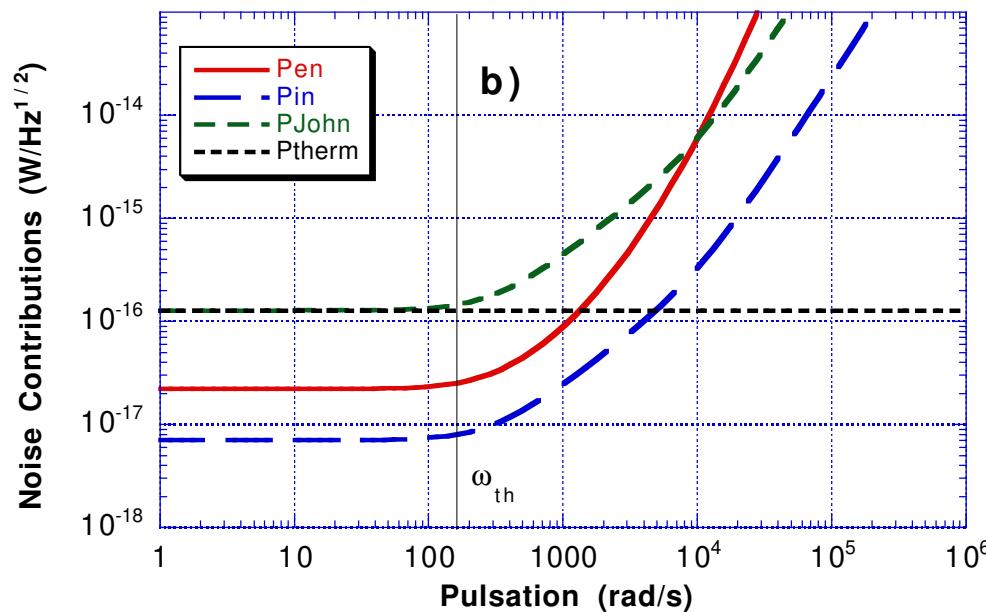
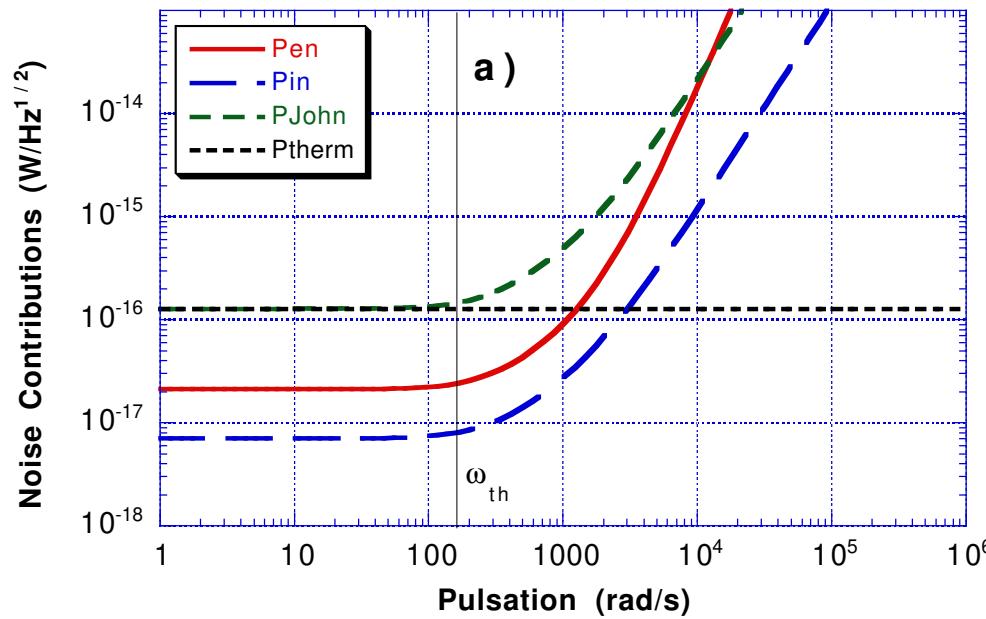


Figure 4)

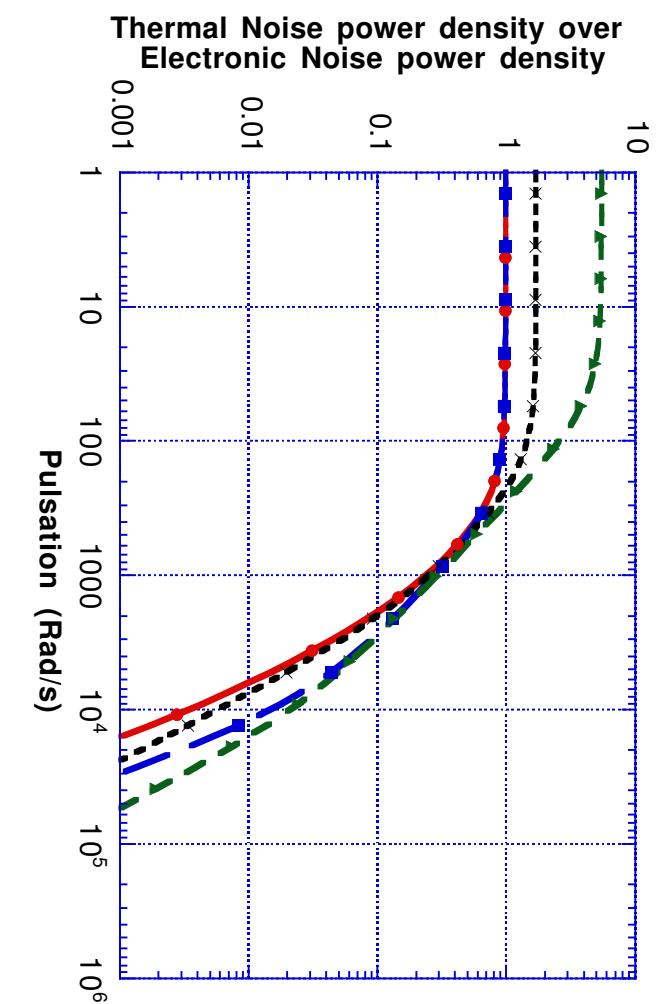


Figure 5)

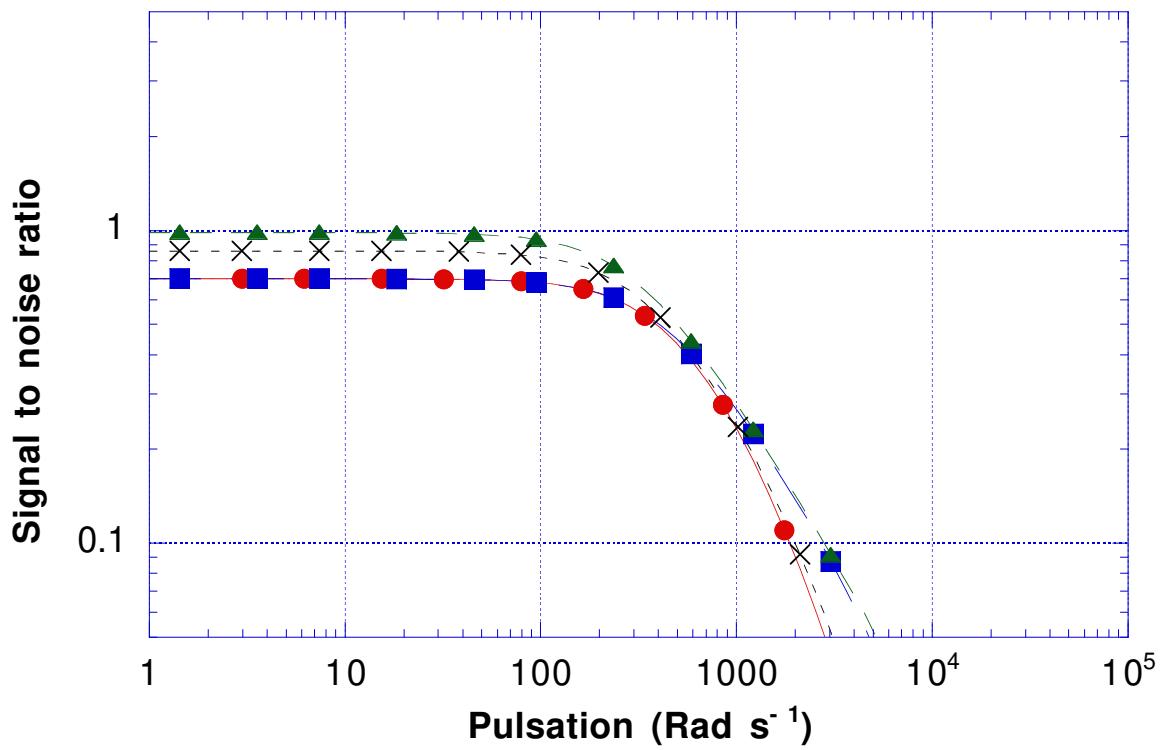


Figure 6)