

**Low noise cryogenic electronics :  
preamplifier configurations with feedback on the bolometer**

D. Yvon<sup>1,\*</sup> and V. Sushkov<sup>2,3</sup>

<sup>1</sup>CEA, Centre d'Etude de Saclay, DAPNIA, Service de Physique des Particules, bat 141,  
F-91191 Gif sur Yvette Cedex.

<sup>2</sup>CEA, Centre d'Etude de Saclay, DAPNIA, Service d'Electronique et d'Informatique,  
bat 141, F-91191 Gif sur Yvette Cedex.

<sup>3</sup>Now at University of California Riverside, IGPP, Riverside CA 92521, USA.

\*Corresponding author, Electronic mail address: [yvon@hep.saclay.cea.fr](mailto:yvon@hep.saclay.cea.fr),  
Tel: (33) 0169083911, Fax: (33) 0169086428

PACS: 85 (Electronics), 07.57.K (Detector, bolometer), 07.20.M (Cryogenics  
instrumentation)

We developed preamplifier configurations used to readout resistive bolometers such as those based on Neutron Transmuted Doped Germanium thermometers (so called NTD Ge thermometers)[1] or NbSi thin film thermometers [2, 3]. We introduce the impedance regulating preamplifier configuration. This configuration, is compared to previously proposed readout configurations with feedback on the bolometer [11]. It is shown that the impedance regulating preamplifier allows to achieve Extreme Electrothermal Feedback without using transition edge thermometer and SQUIDS readout. Thus the detector and readout electronics are straightforwardly calibrated and can handle much larger event rate. Furthermore, looped configurations simplify the design and improve performance of detection such as bandwidth. Finally, we show that the effects on signal to noise ratio are marginal.

## **Introduction:**

Over the last ten years, low temperature detectors have undergone extensive development. They address detection problems which require high sensitivity, high energy resolution and/or low thresholds: X-ray and far infrared spectroscopy, double beta decay, Dark Matter searches. Their performance critically depends on the quality of the thermometer used, and of the readout electronics and wiring of the apparatus. This paper describes some of the electronics we have developed for the EDELWEISS and Planck Surveyor collaborations.

We assume in the following that the thermometers used are resistive, of the order of  $1 \text{ M}\Omega$  resistance, or more. The temperature increase of the bolometer induces a variation of the thermometer impedance. In this context, JFETs are used as front end electronics to achieve low noise performance. We introduce a new preamplifier configuration: the impedance regulating preamplifier and discuss the properties of previously proposed preamplifier configurations with feedback on the bolometer[11] and of the classical unlooped voltage amplifier readout. Preamplifiers have been developed or are under test for each of these configurations. We will use a simple adiabatic model of bolometer with standard parametrisation to compute the bolometer's thermal behaviour. It is shown that feedback on bolometers yields significant changes in the detection behaviour such as natural calibration of the detector, shorter risetime, reduced relaxation time. Thus, it simplifies readout electronics, avoiding the complex additional circuits otherwise needed to achieve the same behaviour. The effect on signal to noise ratio are only marginal. We will summarise and compare the merits of the different readout configurations in the discussion. Detailed explanation of designs, performances and implementations of electronic boards will be published later.

## **Thermal behaviour of a bolometer: the adiabatic approximation.**

Figure 1) shows a simplified schematic of the thermal structure of a bolometer. In this approximation, the bolometer is characterised by few parameters: its heat capacity  $C_t$ , its thermal conductivity to the cryostat:  $g = dP_t/dT$  and the thermometer behaviour,  $R_b(T)$ .  $P_t$  is the sum of  $P_e$  from Joule effect of the current flowing through the resistive thermometer,  $P_{ph}(t)$  power of physical interest to be measured. We will use the dimensionless slope of the thermometer  $\alpha$  defined as:

$$\alpha(T) = \frac{T}{R_b} \frac{dR_b}{dT}$$

The thermal behaviour of the bolometer is described by the thermal differential equation

$$C_t \frac{dT}{dt} = P_e - G_0(T-T_0) + P_{ph}, \quad \text{with } G_0 = \frac{\Delta P_t}{\Delta T}$$

In the limit of small temperature changes, we get:

$$C_t \frac{d\Delta T}{dt} = \Delta P_e - g \Delta T + \Delta P_{ph} \quad \text{Equation(1).}$$

$$\text{with } g = \frac{d(\Delta P_t)}{d(\Delta T)}$$

The physical quantity computed from these parameters is the thermal relaxation time:

$$\tau_{th} = C_t/g \quad \text{when } P_e=0.$$

In an unbiased detector, when a particle interacts, releasing a power  $E \delta(t)$  ( $\delta(t)$  being Dirac's distribution) the change of the thermometer's resistance is expressed by:

$$\Delta R_b = \frac{R_b \alpha E}{T C_t} e^{-t/\tau_{th}} \theta(t) \quad \text{Equation(2).}$$

When an infrared flux power  $\Delta P_{ph} \theta(t)$  ( $\theta(t)$  step function) enters such an unbiased bolometer, the bolometer reaction becomes:

$$\Delta R_b = \frac{R_b \alpha \Delta P_{ph}}{T g} (1 - e^{-t/\tau_{th}}) \theta(t) \quad \text{Equation(2bis)}$$

For order of magnitude estimates, we will use the following typical values:

$C_t = 2 \cdot 10^{-11} \text{ JK}^{-1}$ ,  $P_e = P_t = 2 \cdot 10^{-10} \text{ W}$ ,  $T = 0.3 \text{ K}$ ,  $\alpha = -4$ ,  $g = 3.3 \cdot 10^{-9} \text{ WK}^{-1}$ ,  $R_b = 5 \cdot 10^6 \Omega$ ,  $C_s = 100 \text{ pF}$ ,  $R_f = 10^8 \Omega$ , where  $C_s$  is the stray capacitance of the bolometer's wiring and the JFET.  $R_f$  is the current feedback resistor in the configurations that will be discussed later.

Then  $\tau_{th} = 6 \text{ ms}$ ,  $\omega_{th} = 1/\tau_{th} = 165 \text{ rad s}^{-1}$ .

### Basic readout schematics and properties

Figure 2) shows the simplified schematics of the four preamplifier configurations under study. For the first order calculations performed in this paper, we consider that the operational amplifier is ideal, unless otherwise specified.

### **Unlooped Voltage amplifier:**

In the first configuration Fig 2a), the thermometer is biased with a constant current source. Impedance variations induce voltage changes at the input of the preamplifier. The detailed schematic of such a low noise preamplifier, as well as a discussion of the necessary compromises with the very low temperature cryogenic requirements are presented in [4]. Straightforward algebra in Laplace domain leads to:

$$V_{\text{out}}(s) = i_b \frac{(1+R_2/R_1)}{(1+R_b C_s s)} R_b \quad \text{Equation. (3)}$$

where  $s$  is the Laplace parameter, equal to  $j \omega$ ,  $\omega$  pulsation of the signal. In the limit where  $\Delta R_b / R_b \ll 1$ ,

$$\Delta V_{\text{out}}(s) = i_b \frac{(1+R_2/R_1)}{(1+R_b C_s s)^2} \Delta R_b \quad \text{Equation (3bis)}$$

### **Current amplifier**

The current amplifier configuration (Fig 2c) was developed to study the physics of ballistic phonons in large bolometers. The operational amplifier actively regulates the voltage at its inverted input to be constant. The stray capacitance is charged to a constant voltage. Thus the signal is no longer lowpassed with the time constant  $R_b C_s$ .

$$V_{\text{out}}(s) = - V_p \frac{R_f}{1+s R_f C_f} \frac{1+ s R_b C_b}{R_b} \quad \text{Equation. (4)}$$

$$\Delta V_{\text{out}}(s) = \frac{R_f}{R_b^2} V_p \frac{\Delta R_b}{(1+s R_f C_f)},$$

### **The looped voltage amplifier**

The voltage amplifier (Fig 2b) is a variation of the current amplifier, where position of feedback resistor and the thermometer are inverted. The operational amplifier actively regulates the inverting input to ground. Thus the parasitic capacitor  $C_s$  does not charge, and a constant current flows through the bolometer.

$$V_{\text{out}}(s) = -\frac{V_p Z_b}{R_f} = \frac{V_p R_b}{R_f (1 + R_b C_b s)}$$

$$\Delta V_{\text{out}}(s) = -V_p \frac{\Delta R_b}{R_f (1 + R_b C_b s)^2} \quad \text{Equation. (5)}$$

## Impedance regulating amplifier

The impedance regulating amplifier Fig 2d) is more tricky to understand. The condition for the output not to be saturated is that the inverting input of the amplifier be kept to ground. Then  $\frac{V_{\text{out}}}{R_f} = \frac{V_{\text{out}}}{G R_b}$ , leading immediately to the DC equilibrium criteria:

$$R_b = R_f / G.$$

If we want to ensure smooth recovery of the equilibrium state and prevent ringing, we have to extend the above criteria at arbitrary frequencies:

$$Z_b(s) = Z_f(s) / G(s)$$

Due to parasitic capacitors, this means that the preamplifier will have to be tuned to a specific bolometer. The output voltage is no longer computable from the electric circuit only. The system reaches an equilibrium because the thermometer resistance changes when heated by an electric bias power. Let us assume the thermometer is cold enough, so that  $R_b \gg R_f/G$ . When we power the preamplifier, it goes to saturation. Then the bolometer heats up, and the resistance of the thermometer drops, until the equilibrium criterion,  $R_b = R_f/G$ , is satisfied. Then output voltage drops and stabilises to the value  $V_{\text{eq}}$  necessary to keep the temperature and resistance of the thermometer at their equilibrium values. We notice that if  $V_{\text{out}} = V_{\text{eq}}$  is a stable state then, due to the central symmetry of I-V characteristic of bolometers,  $-V_{\text{eq}}$  is another. In this readout configuration the preamplifier acts as a temperature regulator of the bolometer, and the feedback is *electrothermal*.

Let us define  $P_{\text{eq}}$  the electric power dissipated into the thermometer at equilibrium.  $P_{\text{eq}} = \frac{V_{\text{eq}}^2}{G R_f}$ . If the bolometer is heated, (by a variation of the incoming power, or a particle interaction), the output voltage will drop so as to keep the total power on the bolometer constant. Then in the small signal approximation:

$$\Delta P_{ph} = -\Delta P_e = -2 \frac{V_{eq}}{GR_f} \Delta V_{out}. \quad \text{Equation (6)}$$

We notice that measuring the output voltage of the preamplifier  $V_{eq}$  and  $\Delta V_{out}$ , we measure, without the need of an external calibration, the physical power incoming on the bolometer (or energy of an event by integration), independently from the bolometer inner properties. The detector and readout electronics are naturally calibrated.

### Dynamic performance

Let us now compute the behaviour (rise time, decay time, effective thermal bandwidth) of the four different readout configurations. A heat signal is modelled by a power  $E \delta(t)$ . This produces a decrease of the thermometer impedance according to equation (2). The observed relaxation time at the output of a biased bolometer does not match the thermal relaxation time of adiabatic model. This is due to the so called electrothermal feedback effect.

We then solve equation (1), for the four different biasing conditions we are studying. We obtain:  $\Delta T = \frac{E}{C_t} \exp\left(-\frac{t}{\tau_{eth}}\right)$ , Equation (7)

where  $\tau_{eth}$  is the electrothermal relaxation time, and depends of the readout configuration.

A signal power is noted  $\Delta P_{ph}(s)$ . Let us define  $H_{therm}(s)$  as

$\Delta R_b(s) = H_{therm}(s) \Delta P_{ph}(s)$  and  $H_{elec}(s)$  as  $\Delta V_{out}(s) = H_{elec}(s) \Delta R_b(s)$ , and finally  $H_{tot}(s)$  as  $H_{tot}(s) = H_{therm}(s) H_{elec}(s)$ . For all the readout configurations we are studying, we can write

$$H_{therm}(s) = \alpha \frac{R_0}{T_0 C_t} \frac{1}{s + 1/\tau_{eth}}$$

and  $H_{elec}(s)$  have been computed for all the configurations in the basics readout properties paragraph. From  $H_{tot}(s)$ , we can compute the effective detection bandwidth of the readout configuration.

### **Unlooped Voltage amplifier**

The properties of this configuration are the most common. For large thermometer impedances, the signal is low-passed, due to the parasitic capacitance of the readout

connection and JFET input.  $R_b=10^7 \Omega$  and  $C_s$  of the order of 100 pF are typical of a readout connection in cryogenic environment. Then the output rise time is limited to:

$$\theta = 2.2 R_b C_s = 2.2 \text{ ms.}$$

When biased with a constant current,  $P_e = R_b i^2_b$ , and  $P_{ph} = E \delta(t)$ . From equation (1) we get:  $\tau_{eth} = \frac{C_t}{g - \frac{P_e \alpha}{T}}$ .

Since in Metal to Insulator Transition thermometers,  $\alpha < 0$ ,  $\tau_{eth} = 3.3 \text{ ms} < \tau_{th}$ . Biasing the thermometer shortens the bolometer relaxation time.

### Looped voltage amplifier

From equation 5 we find that the signal is filtered with a double lowpass filter of time constant  $R_b C_b$ . The rise time is  $\theta_{voltage} = 2.2 R_b C_b$ . NTD-like thermometers have of the order of 20 pF parasitic capacitance. Thus the expected  $\theta_{voltage}$  is  $440 \mu\text{s}$ , five time faster than the unlooped voltage readout configuration, but much slower than using the looped current amplifier configuration (see below), unless the parasitic capacitance of the bolometer can be made very small.

Using Equation 1, and the fact that the bolometer is biased through a constant current, leads us to the same relaxation time as in the unlooped voltage amplifier

$$\tau_{eth} = \frac{C}{g - \frac{P_e \alpha}{T}} \quad \text{and since } \alpha < 0, \tau_{eth} = 3.3 \text{ ms} < \tau_{th}.$$

### Looped current amplifier

From Eq.4, the signal is lowpassed with the cutting angular frequency  $s_f$ . Resistors of high ohmic value, stable at a temperature of 20 mK with parasitic capacitance of 0.2 pF are available on the market. Using  $10 \text{ M}\Omega$  resistors, the rise time of this detection configuration becomes  $4.4 \mu\text{s}$ , 500 times faster than in the unlooped voltage amplifier.

However since the bolometer is biased through a constant voltage,  $P_e = \frac{V^2}{R_b}$ , a

straightforward computation of an electrothermal relaxation time gives:

$$\tau_{eth} = \frac{C}{g + \frac{P_e \alpha}{T}}, \quad \text{and} \quad \tau_{eth} = 32 \text{ ms} > \tau_{th}.$$

The more the bolometer is biased the slower the thermal relaxation time is. Since  $\alpha < 0$ , in this configuration  $\tau_{\text{eth}}$  becomes infinite for  $P_e = -gT/\alpha$ , leading to thermal instability of the bolometer preamplifier chain.

### Impedance regulating amplifier.

In the model of adiabatic bolometer, a  $E \delta(t)$  heat pulse induces an instantaneous change of the thermometer impedance  $\Delta R_b = \frac{\alpha R_b E}{T C_t}$ . The rise time is potentially limited by the charging time of the stray capacitance  $C_s$ . If  $\epsilon$  is the voltage drop on the parasitic capacitance, then  $\frac{d\epsilon}{dt} = \frac{1}{C_s} \Delta I_s$ , with  $\Delta I_s = \Delta \left( \frac{-V_{\text{out}}}{G R_b} \right)$ . Assuming  $R_b$  stays constant within the risetime, we obtain  $\frac{d\epsilon}{dt} \geq \frac{V_{\text{out}} \Delta R_b}{G R_b^2 C_s}$ . Then we compute the time at which the integrated loss of electric power applied on the bolometer will cancel out the heat pulse energy. We get

$$t_r^2 \sim \frac{R_f C_s T C_t}{V_b^2 A \alpha} \sim 30 \text{ ns}, \text{ where } A \text{ is the open loop gain of the preamplifier, } A=10^5 \text{ is}$$

a typical value taken for estimations. From this we conclude that the rise time of this preamplifier configuration is extremely short, justifying the approximation, and that the input stray capacitance does not limit the amplifier rise time. We will neglect its effect in the following computations.

Though on time scales larger than  $t_r$  minute variation of the bolometer resistance happens: the open loop gain of the preamplifier  $A$  is limited, and small input voltages  $\epsilon$  do establish. This induces a small error in the equilibrium equations above. Calculation leads to:

$$\frac{d\epsilon}{dR_b} = \frac{V_{\text{out}}}{(G+1) R_b}. \quad \text{Equation (8)}$$

We can compute the behaviour of the power amplifier to a physics event  $E \delta(t)$ . A large energy event would induce saturation of the preamplifier at zero output for a short time, proportional to its energy, until the thermometer cools enough and the output voltage becomes non zero:

$$\Delta t_{\text{sat}} \sim \frac{E R_b}{V_b^2} \sim 0.8 \mu\text{s, assuming } E=1 \text{ keV event, and } P_e=2 \cdot 10^{-10} \text{ W.}$$

Then the thermometer impedance is very close to equilibrium value. Using Equation (8) and after simple conversion, we get the relaxation time:

$$\tau_{eth} = \frac{G+1}{2A\alpha\beta} \tau_{th}, \quad \text{where } \beta = \frac{P_e}{gT} \text{ is of the order of unity.}$$

Assuming  $A \sim 10^5$ ,  $G=20$ , and the numerical values above, we get:

$$\tau_{eth} = 0.8 \mu s.$$

This shows that when using an impedance regulating amplifier, bolometers become relatively fast detectors, able to handle counting rates of the order of magnitude of high resolution semiconductor diodes. An other readout system aiming at this property, using an unlooped voltage preamplifier and a slow long AC coupled feedback chain has been recently published [9].

Saturation of the output would be a troublesome feature to recover the energy of the event through analog filtering. However the adiabatic thermal model of bolometer is incomplete. At very low temperatures (less than 200 mK), the electrons of the thermometer are only weakly linked to the phonons [5, 3]. Figure 3) shows a more realistic thermal model of a bolometer at low temperatures. The electrons of the thermometer are weakly thermalised by phonons of the crystal lattice. This is quantified by an effective heat conductivity  $g_{eph}$ . The thermometer impedance is a function of its electron temperature. The impedance regulating amplifier effectively regulates the temperature of the thermometer's electrons. When an event happen in the absorber, the maximum power flux induced on the thermometer is  $P_{max} = \frac{E}{g_{eph} C_{abs}}$ , ( $C_{abs}$  is the heat capacity of the absorber) with a rise time constant of  $C_{therm}/g_{eph}$ , and a relaxation time constant of  $C_t/g_{eph}$ , preventing saturation of the preamplifier and slowing down the relaxation time. Thus to be able to achieve microseconds relaxation time, the bolometer will have to be designed to maximise  $g_{eph}$ . This can be achieved, as described in [3]. If saturation occurred for large energy events, sampling the output signal and integrating  $\frac{(V_{eq}-V_{out}(t))^2}{G^2 R_b}$  would allow to recovery of the energy of the event, calibration and linearity of the electronic chain. Detailed computer simulations of the electrothermal

behavior of the bolometer and amplifier chain have been conducted using PSPICE software and they confirm the above computations.

Table 1 summarise the computations.

## Discussion

The most commonly used bolometer readout configuration is so far the unlooped voltage amplifier. Its drawbacks are well known. Due to the input stray capacitance and high thermometer impedance, the signal is electronically low-passed. This reduces the amplitude of the output signal, and results in the loss of the rise time information. Transient effects [3] in bolometers can hardly be studied. When used in the lock-in configuration, the parasitic capacitor limits the modulation frequency, and induces a phase shift.

The looped voltage amplifier configuration moderately shortens the rise time. The limitation on it is technological. Most resistive thermometers at low temperature are based on the metal to insulator transition. Close to the transition, their dielectric constant increases. It turns out that unless thin film technology is available [2], it is very difficult to achieve thermometers with stray capacitance much lower than of 20 pF. Thus, we expect a rise time shortened by a factor 5, for the looped voltage configuration, with respect to unlooped configuration.

The looped current amplifier readout configuration solves the problem of rise time. Low temperature resistors of stray capacitance 0.2 pF are available on the market. Using 10 M $\Omega$  resistor, we expect a rise time of 4.4  $\mu$ s, independent of the thermometer impedance. Much shorter transient effects can then be studied. When used in a lock-in amplifier loop, with square wave AC bias, the preamplifier provides a detected square wave with minimal distortion, (no amplitude loss, and a minute phase shift (delay) not dependent on the sensor impedance). Compensation of phase shift may be unnecessary. If implemented, the adjustment is fixed, no tuning is necessary when sensor impedance changes. In case of spurious noise, the modulation frequency can be chosen in a much wider frequency range, without requiring a new calibration of the apparatus.

In practice, the looped current amplifier allows much flexibility of the design. The looped voltage amplifier configuration does not allow the best rise times, and since the preamplifier has a voltage gain of 1, requires a highly optimised second stage post amplifier to avoid performance's degradation of the electronic chain ( $1 \text{ nV/Hz}^{1/2}$ ). This problem can be overcome by adding a gain divider of  $1/C$  at the output of the operational amplifier and then closing the loop on the bolometer. The preamplifier output is then before the divider and the voltage gain becomes  $C$ . The drawback is that the dynamic is then reduced.

It is to be pointed out that the electrothermal relaxation time is slower using the looped current amplifier configuration than the looped voltage amplifier. For experiments aiming at measuring high rate particle interactions, this is a drawback of the looped current amplifier configuration.

The impedance regulating amplifier combines all the advantages of fast rise time and shortens relaxation time. The advantage of fast rise time have been discussed at the previous paragraph. The new feature is that due to extreme electrothermal feedback the electrothermal relaxation time is dramatically reduced. This allows the use of conventional bolometers, to handle particle detection rates of the order of magnitude of high resolution semiconductor diodes.

Furthermore, on time scales larger than a few  $\tau_{\text{eth}}$ , the output of the impedance regulating preamplifier directly measures (equation 6) the variation of the signal power entering the bolometer. The properties of the bolometer and preamplifier do not enter in equation 6. This means that the bolometer with its electronic readout chain is *auto calibrated*.

Finally, if  $V_{\text{out}}$  is a steady state, then  $-V_{\text{out}}$  is an other. If we achieve a design to switch from one state to the other, under the control of a clock, the thermometer becomes square wave AC biased. We then achieve the modulation and preamplifier stages of an auto biased lock-in detection chain. The commonly used high stability amplitude biasing oscillator vanishes, replaced by the preamplifier itself. This design requires fewer electronic parts and does not require a very high stability oscillator ( $10^{-6}$  relative stability in amplitude) as used in low noise apparatus.

The main drawback of the impedance regulating amplifier is that the design turned out to be tricky. Designs of the boards requested a detailed PSPICE electrothermal simulation.

If noise is not a matter of concern, we can now choose the best configuration for the planned measurement, given the bolometer available. Bolometers however are mostly used because of their high sensitivity, and low noise. Then a discussion of the noise is necessary.

### **Noise modelling and computations**

In the following, we will compute the noise performance of the four preamplifiers configurations. The noise contributions considered will be:

- The Johnson noise of the biasing resistors and thermometer. Mather has shown [7], taking into account the power dissipation in the thermometer induced by the Johnson noise voltage and the bias current, the Johnson noise transform into a noise equivalent power at the input of the bolometer given by:

$$P_{\text{john}}(s) = (4kTP_e(1+s^2\tau_{\text{th}}^2))^{1/2} \frac{gT}{\alpha P_e}, \text{ where } k \text{ is the Boltzmann constant, and } T \text{ the temperature in Kelvin.}$$

- Noise of the cold JFET. The current noise of a good cold (150K) JFET is very low. We will use the typical value of  $10^{-16} \text{ A/Hz}^{1/2}$ . The voltage noise  $e_n$  has been measured and will be taken for numerical computations to the value of  $1.5 \text{ nV/Hz}^{1/2}$ . [6,4]

- In looped readout configurations, the output voltage noise due to JFET input noise heats the bolometer. We name these contributions the electrothermal noise power, respectively due to JFET's input voltage noise ( $P_{\text{ethen}}(s)$ ) and input current noise ( $P_{\text{ethin}}(s)$ ).

- The thermal noise of the bolometer will be computed according to [7]

$$P_n^2 = 4kT^2g \text{ (W}^2/\text{Hz)}$$

$P_{\text{ph}}$  is defined as the signal to be measured.

We quantify the various noises contributions from electronic and thermal origins. As a support for discussion, we assume we use a bolometer running at a temperature of 300 mK, with parameters extracted from [8].

When we calculate a noise contribution at the output of the preamplifier, dividing it by  $H_{\text{tot}}(s)$  provides the equivalent power noise at the input of the bolometer. In the appendix, we write the explicit formulae for the various noises contributions of the four preamplifier configurations.

Figure 4) displays the noise contributions as equivalent power noise at the input of the bolometer. For clarity, only the dominant noise contributions are plotted.

We first notice that at frequencies within the bandwidth of the bolometer, where the thermal noise dominates, that the Johnson noise dominates among "electronics" noise contributions. This shows that electronics components have the potential to read bolometers at lower temperatures, with improved performances.

In the above calculations the bolometers has been rather strongly biased. This allows us to demonstrate the impact of electrothermal feedback on signal readout. Figure 4) shows that the current amplifier depress electronic noise equivalent power:  $P_{\text{in}}$  become negligible (not shown) and  $P_{\text{en}}$  is lower by a factor ten relative to Voltage amplifier configurations. The reason is that the positive thermal feedback enhance the thermal noise  $P_{\text{therm}}$ , the Johnson noise and the electrothermal noise contributions (see Appendix). The unlooped and looped voltage amplifiers display qualitatively the same behaviour, but the negative electrothermal feedback effect depresses the thermal signal amplitudes relative to electronic contribution. The impedance regulating amplifier increases the thermal bandwidth, but does not enhance or depress the thermal signal amplitude.

Let us now consider the case of an experiment, aiming at measuring some small power variation  $\Delta P_{\text{ph}}$ . The thermal noise adds up to the physics noise, and, as far as readout is concerned, behaves the same way. To make the discussion short, we consider the physics signal to be the thermal noise, and compare it to the readout (electronics) noise. Figure 4 shows that at frequencies were signal to noise ratio is of the order of one, Johnson noise dominates the electronic noise. The value of  $e_{\text{h}}$  and  $i_{\text{h}}$  are those of state of

the art preamplifiers. This shows, that unless the readout noise preamplifier are significant (microphonics or very low power JFETs), the signal to noise ratio will not depend on readout configuration. At frequencies above the thermal bandwidth of the bolometer, for all the configurations, the signal to noise ratio worsens quickly.

## **Conclusion**

We have studied the performances of four different readout electronic configurations for cryogenic bolometers. We have shown that looped readout configurations improve signal rise time and thus allow the study of transient effects in cryogenics detectors and fundamental physics such as ballistic phonons collection. Furthermore using impedance regulating amplifiers, we achieve extreme electrothermal feedback electronically, allowing the use of resistive thermometer and JFETs: superconducting transition edge thermometer and SQUIDs readout are no more necessary. Thus thermal relaxation times can be drastically reduced and allow particle detection rates of the same order of magnitude as high resolution semiconductor detectors. Bolometer and electronic detection chain are autocalibrated, the output voltage providing unambiguously the input power variation. Experimental constraints will decide which looped readout configuration is the most convenient for a given apparatus and bolometer.

The PSPICE, designs and performances of the boards will be published in this journal later.

## **Acknowledgements**

We want to thank the staff of the Service d'Electronique et d'Informatique (DAPNIA/SEI, Saclay) and Service d'Instrumentation Générale (DAPNIA/SIG, Saclay) for their support. We are grateful to J.L Bret and A. Benoit, (CRTBT Grenoble), for stimulating discussions, to JP.Torre (Laboratoire d'aéronomie, Verrière le Buisson, France) and P. Garoche (Université d'Orsay, France) for their help. We are happy to acknowledge the scientific input of Irwin et al.[10], that motivated us to develop the

impedance regulating amplifier. We want to than D. Mc Cammon and the Referee for usefull comments and discussions.

## **References**

- [1] EE. Haller, N. P. Palaio, M. Rodder, W.L. Hansen, and E. Kreysa, in Neutron Transmutation Doping of Semiconductor Materials, ed. R. D. Larrabée, (Plenum, New York, 1984) p.21.
- [2] L. Dumoulin et al., Nucl. Inst. Meth. Phys. Res. A370 (1996) 211.
- [3] D. Yvon, L. Bergé, L. Dumoulin et al., Nucl. Inst. Meth. Phys. Res. A370 (1996) 200.
- [4] D. Yvon et al, Nucl. Inst. Meth. Phys. Res. A368 (1996) 778
- [5] E. Aubourg et al., J. of Low Temp. Phys. 93 (1993) 289
- [6] Inter FET corp., 322 Gold Street, Garland Texas 75042, USA
- [7] J. C. Mather, Appl. Opt. 21 (1982) 1125, J.C. Mather, Appl. Opt. 23 (1984) 584
- [8] T. Wilbanks, Phd thesis, University of California at Berkeley, (1994)
- [9] Galeazzi et al., Proc. of the VII<sup>th</sup> International Workshop on Low Temperature Detectors (LTD-7), 27 July 1997, p 174, Munich, Max Planck Institute of Physics.
- [10] Irwin K. D. et al., Nucl. Inst. Meth. A 370 (1996) 177
- [11] Silver E. et al., SPIE, vol. 1159 EUV, (1989) 423

## **Appendix: Noise contributions computations**

In the following, we calculate the various noise contributions. These are expressed as output voltage noise or Power noise referred to the input of the bolometer, whichever are the easiest to compute. These two quantities are simply related by the equation:

$$\text{noiseVout}(s) = H_{\text{tot}}(s) \text{Powernoise}(s), \text{ with } H_{\text{tot}}(s) = H_{\text{therm}}(s) H_{\text{elec}}(s);$$

$$H_{\text{therm}}(s) = \alpha \frac{R_0}{T_0 C_t} \frac{1}{s+1/\tau_{\text{eth}}}$$

The electrothermal noise contributions due to voltage noise ( $P_{\text{ethen}}$ ) and current noise ( $P_{\text{ethin}}$ ) of JFET are evaluated by computing the induced voltage variations at the

end of the thermometer, from which we deduce the electrothermal noise power. For looped current and voltage amplifier, the Johnson noise does not induce electrothermal power noise: the feedback loop of the preamplifier, within the bandwidth of the amplifier, cancels the noise voltage occurring at the bolometer inducing no power dissipation. On the other hand, electronic noise contributions using impedance regulating amplifier all happen through the electrothermal process: a noise voltage at the input of the amplifier has to be cancelled by an impedance (temperature) change of the thermometer instigated by a biasing voltage variation. The calculated noise contributions are:

### Unlooped Voltage readout

$$H_{\text{elec}}(s) = i_b \frac{\text{Gunloop}}{(1+R_b C_s s)^2}, \text{ where Gunloop is equal to } 1+R_2/R_1$$

$$e_n V_{\text{out}}(s) = e_n \text{ Gunloop}$$

$e_n V_{\text{out}}$  output voltage noise due to  $e_n$ .

$$i_n V_{\text{out}}(s) = i_n |Z_b(s)| \text{ Gunloop}, Z_b(s) = \frac{1}{1+s C_b R_b}$$

$i_n V_{\text{out}}$ , output voltage noise due to  $i_n$ .

$$P_{\text{John}}(s) = \left| 4kT P_e (1+s^2 \tau_{\text{th}}^2) \right|^{1/2} \frac{gT}{\alpha P_e}, P_{\text{John}}(s) \text{ noise equivalent power noise}$$

due to the Johnson noise of the thermometer.

$$P_{\text{therm}}(s) = (4kT_0^2 g)^{1/2}$$

$P_{\text{therm}}(s)$ , input noise power due to the thermal fluctuations of the bolometer.

Since the output voltage is not feedback on the bolometer, the electrothermal power noise are null.

### Voltage amplifier

$$H_{\text{elec}}(s) = - \frac{V_p}{R_f (1+R_b C_b s)^2}$$

$$e_n V_{\text{out}}(s) = \left(1 + \frac{Z_b}{Z_p}\right) e_n$$

$$i_n V_{\text{out}}(s) = i_n |Z_b(s)|$$

$$P_{\text{John}}(s) = \left| 4kT P_e (1+s^2 \tau_{\text{th}}^2) \right|^{1/2} \frac{gT}{\alpha P_e}$$

$$P_{\text{therm}}(s) = (4kT_0^2 g)^{1/2}$$

$P_{\text{ethen}}(s) = \frac{2 V_b Z_b e_n}{R_b R_f}$ , where  $P_{\text{ethen}}$  is the electrothermal noise due to the JFET's voltage noise  $e_n$ .  
 $P_{\text{ethin}}(s) = \frac{2 V_b Z_b i_n}{R_b}$ , where  $P_{\text{ethin}}$  is the electrothermal noise due to the JFET's current noise  $i_n$ .

### Current amplifier

$$H_{\text{elec}}(s) = \frac{R_f V_p}{R_b^2 (1 + s R_f C_f)}$$

$$e_n V_{\text{out}}(s) = \left| 1 + \frac{Z_f}{Z_p} \right| e_n$$

$$i_n V_{\text{out}}(s) = i_n |Z_f(s)|$$

$$P_{\text{john}}(s) = \left| 4kT P_e (1 + s^2 \tau_{\text{th}}^2) \right|^{1/2} \frac{gT}{\alpha P_e}$$

$$P_{\text{therm}}(s) = (4k_b T^2 g)^{1/2}$$

$$P_{\text{ethen}}(s) = \frac{2 V_b e_n}{R_b}$$

$$P_{\text{ethin}}(s) = 0$$

### Power amplifier

$$H_{\text{elec}}(s) = -\frac{A V_{\text{out}}}{(G+1) R_b}$$

$$H_{\text{tot}}(s) = -\frac{G R_f}{2 V_{\text{out}}} \frac{1}{1 + s \tau_{\text{eth}}}$$

$$P_{\text{ethen}}(s) = \frac{g T e_n}{\alpha V_{\text{out}}} \left| (1 + \tau_{\text{th}} s) (G+1 + R_f C_s s) \right|$$

$$P_{\text{ethin}}(s) = \frac{g T R_b i_n}{\alpha V_{\text{out}}} \left| (1 + \tau_{\text{th}} s) (G+1 + R_f C_s s) \right|$$

$$P_{\text{john}}(s) = \left| 4kT P_e (1 + s^2 \tau_{\text{th}}^2) \right|^{1/2} \frac{gT}{\alpha P_e}$$

$$P_{\text{therm}}(s) = (4k_b T^2 g)^{1/2}$$

### **Captions:**

Table 1): Summary of the numerical values presented in the previous paragraphs, for the four readout configurations presented in this paper, assuming the detector parameters extracted from [8]. Within the adiabatic thermal model presented here, the electronics risetime would be the risetime of a pulse induced by a particle interaction in the bolometer, and  $\tau_{\text{eth}}$ , the relaxation time. The so-called thermal bandwidth is the effective bandwidth at -3dB, when measuring a varying physics power  $\Delta P_{\text{ph}}(s)$ , as deduced from  $H_{\text{tot}}(s)$ .

Figure 1): The adiabatic bolometer model. The detector is made from a thermometer in perfect thermal contact with an absorber at a temperature  $T$ . The total heat capacity is  $C_t$ . The absorber is thermalised to the cryostat through a heat leak of dynamic thermal conductance  $g=dP/dT$ .

Figure 2): Basic schematics of the four preamplifier configurations we are discussing in this paper.


Figure 3): Realistic thermal model of a bolometer, including electron-phonon decoupling in the thermometer [3, 5]

Figure 4): Dominant noise contributions versus frequency, for the four readout configurations studied in this paper: a) is unlooped voltage amplifier readout, b) is the looped voltage amplifier, c) is the looped current amplifier, case d) is the impedance regulating amplifier. Noise contributions are expressed as power noise equivalents at the input of the bolometer.  $P_{\text{en}}$  is the noise due to the JFET voltage noise,  $P_{\text{in}}$  is the noise due to JFET's current noise,  $P_{\text{John}}$  is the noise contribution due to the thermometer's


Johnson noise.  $P_{\text{therm}}$  is the bolometer thermal noise.  $P_{\text{ethen}}$  is the electrothermal noise due to JFET's input voltage noise.

Readout configuration	Electronic risetime (s)	$\tau_{\text{eth}}$ (s)	Thermal Bandwidth (Rad s <sup>-1</sup> )
Unloop Voltage amplifier	$2.2 \cdot 10^{-3}$	$3.3 \cdot 10^{-3}$	280
Looped Voltage amplifier	$4.4 \cdot 10^{-4}$	$3.3 \cdot 10^{-3}$	300
Looped current amplifier	$4.4 \cdot 10^{-6}$	$3.2 \cdot 10^{-2}$	31
Impedance regulating amplifier	$< 3 \cdot 10^{-8}$	$8 \cdot 10^{-7}$	$1.25 \cdot 10^6$


Table 1)

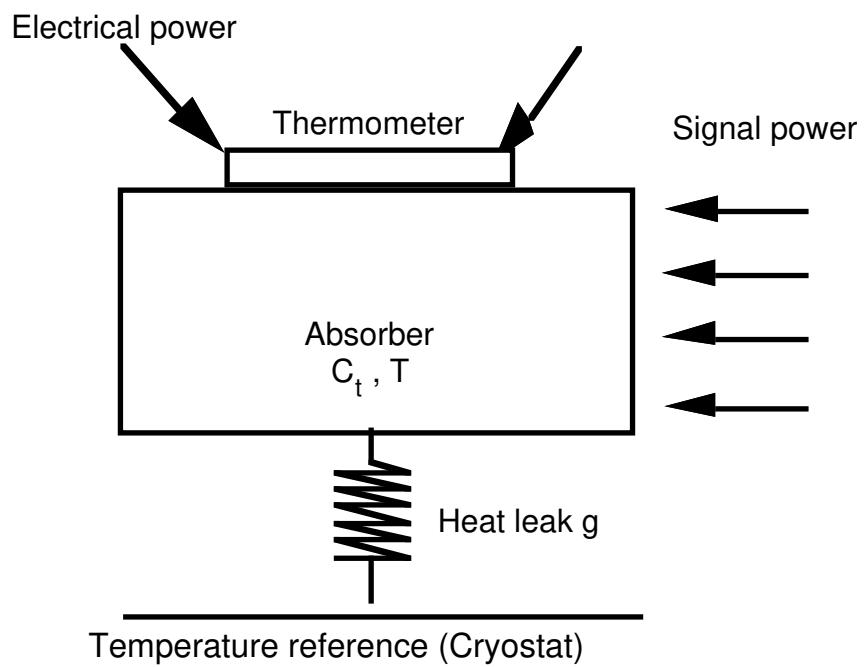


**Figure 1)**

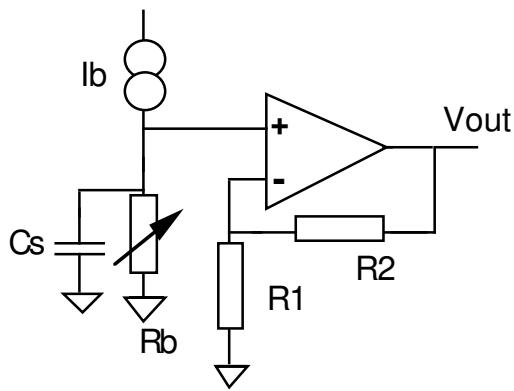


a) "Classical" unlooped  
Voltage amplifier

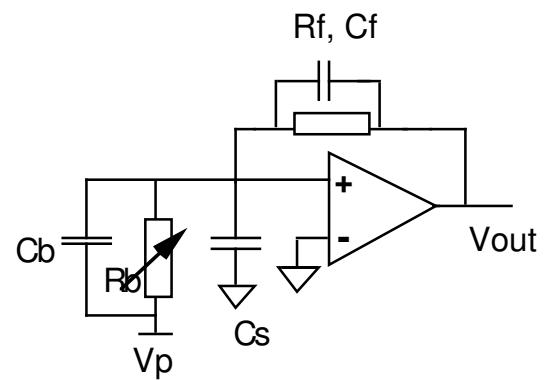

c) Looped current amplifier

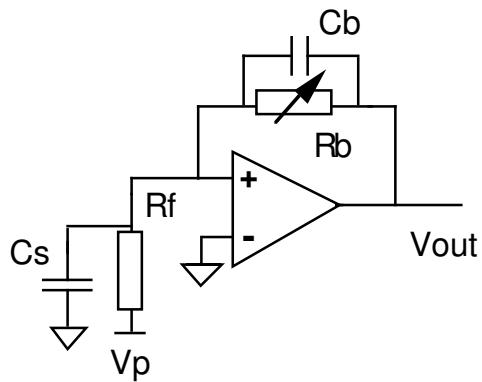

b) Looped voltage  
amplifier

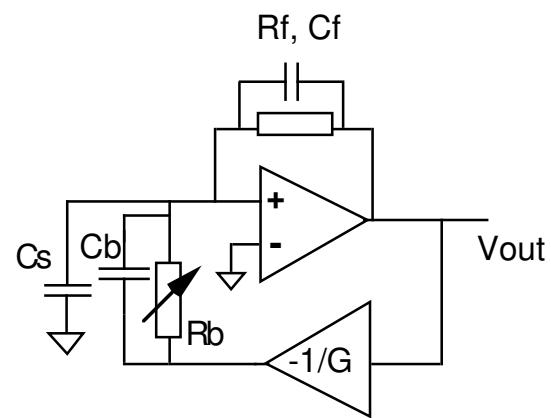

d) Impedance regulating  
amplifier

Figure 2)

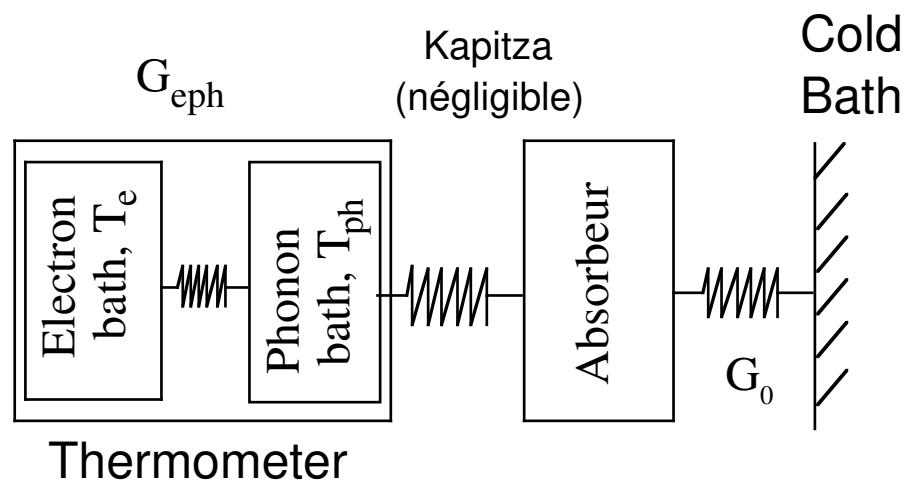


Figure 3)

