

## **Thermal Noise at Quasi-equilibrium**

D. Ritter

Department of Electrical Engineering

Technion, Israel Institute of Technology

Haifa, Israel 32000

[ritter@ee.technion.ac.il](mailto:ritter@ee.technion.ac.il)

An expression that relates thermal current fluctuations in two terminal networks at quasi-equilibrium to their current voltage characteristics is presented. It is based upon the observation that the available thermal noise power at quasi-equilibrium is very close to the equilibrium value. As an example, current noise in ideal p-n junctions is obtained from their characteristics. Thermal current noise in field effect transistors is predicted by this approach, as well as “shot noise suppression” due to barrier lowering in solid-state diodes.

Nyquist's theorem [1] is widely used to describe current fluctuations in linear resistors at non-equilibrium, although it is precisely valid only at equilibrium. The justification for using Nyquist's theorem is that macroscopic conductors show no shot noise [2], or more precisely, that shot noise at low electric fields is strongly suppressed by the frequent collisions [3-5]. Since current fluctuations due to resistance fluctuations can be neglected above some characteristic frequency [6-7], it is common practice to attribute only thermal noise, or Johnson-Nyquist noise, to linear resistors at non-equilibrium. Nyquist's theorem is very general. No information on the internal structure and physics of the linear network is required to calculate its current fluctuations. The only required information is the conductance, namely the current voltage characteristics of the linear network. By contrast, it is presently believed that non-equilibrium current fluctuations in non-linear networks cannot be obtained macroscopically from their current voltage characteristics. Thus, all theories of noise in non-linear devices are based upon a microscopic description of the network. For example, thermal noise in non-linear resistors such as field effect transistors is calculated by Shockley's impedance field method [8,9], which requires the knowledge of the electron concentration and electron diffusion coefficient at any position in the device. Another important example is p-n junctions. Although the expression that describes current fluctuations in p-n junctions is universally accepted, the underlying microscopic derivation is controversial. While the early theory by van der Ziel attributed noise in p-n junctions to the shot effect in the depletion region [6], later theories invoke thermal diffusion noise and generation recombination noise in the quasi-neutral regions [7]. Thus, there is no consensus even on the most basic questions whether noise in p-n junctions should be understood as thermal noise or shot noise, and in which region of the junction it is generated. The same questions may also be raised regarding rectifying metal-semiconductor junctions (Schottky diodes) in which thermal diffusion noise and generation recombination noise are absent.

In many practical cases the electron or hole energy distribution functions may be approximated by the Fermi-Dirac function, with the chemical potential replaced by the quasi Fermi level. The goal of this publication is to point out that in such cases, defined here as quasi-equilibrium, it is possible to calculate current fluctuations from the current voltage characteristics of the network. The advantage of the suggested approach is that it does not require a microscopic description of the network. Quasi-equilibrium is defined here as follows. The current at any position in a device is determined by the distribution function  $f(\mathbf{r}, \mathbf{k})$ , which specifies the probability of finding an electron with wave vector  $\mathbf{k}$  at the position  $\mathbf{r}$ . It is common practice to divide  $f$  into a symmetric component in  $\mathbf{k}$ ,  $f_S$ , and an antisymmetric component,  $f_A$ . At equilibrium  $f$  is the Fermi-Dirac function  $f_0$ . The definition of quasi-equilibrium may thus be summarized by the two conditions:  $f_S \gg f_A$  and  $f_S \approx f_0$  (with the chemical potential replaced by the quasi Fermi level).

A result obtained from Nyquist's theorem is that at equilibrium the available noise power,  $P_{av}$ , in a small frequency interval  $\Delta f$  is  $kT\Delta f$ , where  $k$  is Boltzmann's constant, and  $T$  the absolute temperature [6,7]. The available noise power is the maximum noise power that can be delivered to a noiseless load. It is obtained at equilibrium when the load is impedance matched to the noise source. This definition of the available noise power may be extended to networks at non-equilibrium. Most generally,  $P_{av}$  at non-equilibrium is a function of the fluctuations of  $f$  which generate the noise, and the response of the network to these fluctuations. One may thus write that

$$(1) \quad P_{av} = G[\delta f, f_A(V)]$$

where  $\delta f$  stands for fluctuations of  $f$ , and  $f_A(V)$  describes the response of the network to an applied voltage, or in other words the current voltage characteristics of the network. At quasi-equilibrium one thus has

$$\begin{aligned}
 P_{av} &= G[\delta(f_S + f_A), f_A(V)] \approx G[\delta f_S, f_A(V)] \\
 (2) \quad &\approx G[\delta f_0, f_A(V)] = kT\Delta f
 \end{aligned}$$

Eq.2 shows that the available noise power at quasi-equilibrium of any network is very close to the equilibrium value. This property allows the derivation of an expression that relates current fluctuations and the current voltage characteristics of two terminal networks at quasi-equilibrium.

Two possible configurations for the extraction of noise power from networks at non-equilibrium are shown in Fig.1. The network  $W$  is biased by a noiseless current (voltage) source. The voltage fluctuations and current fluctuations are denoted by  $v_n$  and  $i_n$  respectively. For simplicity, the two terminal network is represented by a real function  $V(I)$  or  $I(V)$ . In the current source configuration a noiseless load resistor  $R$  is connected in parallel to the network via a large capacitor. In the voltage source configuration the noiseless resistor is connected in series to the network, and is shunted by a large inductance. The time average of the current (voltage) fluctuations is zero, due to the DC blocking (shunting) effect of the capacitor (inductor). However, due to the possible non-linearity of  $W$ , the time average of the voltage (current) fluctuations does not necessarily vanish. The noise power generated by the network thus contains two components: the product of the current and voltage fluctuations, and the product of the average voltage (current) fluctuations and the DC current (voltage). Note that the load consists of the current (voltage) source and the resistor. The

value of  $R$  can be adjusted to maximize the noise power generated by the network, and delivered to the load.

The current source configuration is more convenient for calculating the short circuit current noise  $i_{n0}$ , as shown in Fig.2. Using the notation shown in Fig.2 ,the fluctuating noise voltage across the network is given to second order by

$$(3) \quad v_n = ri_{n1} + \frac{1}{2} \frac{dr}{dI} i_{n1}^2$$

where  $r$  is the differential resistance of  $W$ , and  $dr/dI$  is the second order derivative of the current voltage characteristics of  $W$ . The noise power generated in  $W$  and delivered to the load (the resistor and current source) is

$$(4) \quad P_n = \langle i_n^2 \rangle R - \langle v_n \rangle I = \langle i_n^2 \rangle R - \frac{I}{2} \frac{dr}{dI} i_{n1}^2$$

where  $\langle \rangle$  denotes time average. Note again that in this configuration  $\langle i_n \rangle = 0$ . Since

$$(5) \quad \langle i_n^2 \rangle = \langle i_{n0}^2 \rangle \left( \frac{r}{r+R} \right)^2$$

$$(6) \quad \langle i_{n1}^2 \rangle = \langle i_{n0}^2 \rangle \left( \frac{R}{r+R} \right)^2$$

one obtains that

$$(7) \quad P_n = \left\langle i_{n0}^2 \right\rangle \frac{rR}{(r+R)^2} (r + mR)$$

where the parameter  $m$  is given by

$$(8) \quad m = \frac{-I}{2r} \frac{dr}{dI} .$$

In some cases it is more convenient to calculate  $m$  using the voltage dependence of the differential conductivity,  $g = 1/r$  obtaining

$$(9) \quad m = \frac{I}{2g^2} \frac{dg}{dV} .$$

The available noise power is obtained by differentiating with respect to  $R$  in order to find the optimum value of  $R$

$$(10) \quad R_{opt} = \frac{r}{1-2m} \quad m < 0.5 .$$

Inserting Eq.10 into Eq.7 the available noise power is

$$(11) \quad P_{av} = \left\langle i_{n0}^2 \right\rangle \frac{r}{4(1-m)}$$

and finally making use of Eq.2 one obtains that

$$(12) \quad \langle i_{n0}^2 \rangle \approx \frac{4kT(1-m)}{r} \Delta f$$

Eq.12 relates thermal current fluctuations in networks at quasi-equilibrium to their current voltage characteristics. Obviously, it reduces to Nyquist's theorem at equilibrium when  $I = 0$ . If  $dr/dI = 0$  then  $m = 0$ , showing again that Nyquist's theorem may be used at quasi-equilibrium for linear networks.

Eq.12 may be applied to an ideal p-n diode. Shockley's theory of p-n diodes is based upon the quasi Fermi level concept [10], and one may therefore safely conclude that p-n diodes are at quasi-equilibrium if Shockley's model applies. The current voltage curve of an ideal p-n junction is

$$(13) \quad I = I_0[\exp(qV/kT) - 1]$$

where  $I_0$  is the saturation current, and  $q$  the electron charge. The differential resistance of the diode is given by

$$(14) \quad r = \frac{kT}{(I + I_0)q}$$

and thus

$$(15) \quad m = \frac{I}{2(I + I_0)} < 0.5$$

and

$$(16) \quad \langle i_{n0}^2 \rangle \approx 2q(I + 2I_0)\Delta f.$$

Eq.16 is the well-established expression for noise in ideal p-n junctions [6,7]. It is derived here macroscopically from the current voltage characteristics of the junction, whereas all previous derivations are based upon microscopic models. The exact recovery of the expression of noise in p-n junctions supports the validity of Eq.12. An interesting conclusion is that noise in p-n junctions is best described as thermal fluctuations, by contrast to van der Ziel's shot noise approach. A similar point of view was presented in an early work on noise in thermionic emission vacuum diodes [11]. Recent microscopic theories also emphasize the thermal origin of noise in p-n diodes [7], as well as the thermal origin of shot noise in macroscopic devices [12].

Having tested the macroscopic approach on pn-junctions some predictions can now be made. The first example is barrier-lowering effects in solid-state diodes, such as image force in Schottky junctions, or recombination in the depletion region of p-n junctions. In all these cases one has at forward bias [13]

$$(17) \quad I = I_0[\exp(qV/nkT)]$$

where  $n > 1$ . Using Eq.12 one obtains

$$(18) \quad \langle i_{n0}^2 \rangle \approx 2qn^{-1}I\Delta f$$

Eq.18 demonstrates that the so-called “suppression of shot noise” in solid-state devices at quasi-equilibrium is related to barrier lowering effects. Some experimental and theoretical studies have reported such behavior for depletion region recombination p-n junctions [6].

Predicting drain current fluctuations in field effect transistors (FETs) is an important application of Eq.12. It must be kept in mind though that one needs to verify that quasi-equilibrium applies in any specific example. A three terminal transistor can be turned into a two terminal network by shorting the gate to the drain. A typical current voltage characteristics in this case is

$$I_D = A(V - V_T)^s$$

$$(19) \quad \begin{aligned} V &> V_T \\ s &> 0 \end{aligned}$$

where  $V_T$  is the threshold voltage, and  $A$  a constant. The differential conductance (which equals the transconductance) is thus

$$(20) \quad g = sK(V_{DS} - V_T)^{s-1}$$

and using Eq.9 one obtains that

$$(21) \quad m = \frac{s-1}{2s} < 0.5$$

and

$$(22) \quad \langle i_{n0}^2 \rangle \approx 4kT \frac{s+1}{2s} g \Delta f$$



In previous work on noise in FETs the parameter given here as  $\frac{s+1}{2s}$  is denoted by  $P$  [9]. It is usually calculated using Shockley's impedance field method [8,9]. The impedance field method is not necessarily equivalent to the method derived in this work. A comparison of the predictions of both methods, as well as comparison to experiment, is therefore of much interest. A particular example for the application of Eq.22 is long channel metal oxide field effect transistors (MOSFET) in which  $s=2$ . One thus finds that in MOSFETs  $P=3/4$ , by contrast to the result  $P=2/3$  calculated by van der Ziel [5] using yet a different approach.

In conclusion, an expression that relates current fluctuations in two-terminal networks at quasi-equilibrium to their DC current voltage characteristics was presented. It is useful for predicting noise in many practical devices, and provides some additional insight on the physical origin of noise. Most recent studies of noise analyze high field effects in mesoscopic conductors, where the theory presented here does not apply. However, it may be used as a high temperature low electric field limit.


The author wishes to thank E. Zeldov, A. Ron, M. Reznikov, B. Shapira, and F. Green for very helpful discussions, and E. Zeldov also for a critical reading of the manuscript.

## References

1. H. Nyquist, Phys. Rev. **32**, 110 (1928).
2. A. Shimizu and M. Ueda, Phys. Rev. Lett. **69**, 1403 (1992), and references within on earlier work.
3. R. Landauer , Phys. Rev. **B47**, pp. 16,427 (1993).
4. F. Green and M. P Das, J. Phys.: Condens. Matter **12** 5 233 (2000), M. P. Das and F. Green, Aust. J. Phys. **53**, 499 (2000).
5. G. Gomila and L. Reggiani, Phys. Rev. **B62**, pp. 8,068 (2000).
6. A van der Ziel “Noise in solid state devices and circuits” (Wiley, New York, 1986).
7. M.J. Buckingham “Noise in electronic devices and systems” (Ellis Horwood, Chichester, 1983).
8. W. Shockley, John A. Copeland, and R.P. James “The impedance field method of noise calculation in active semiconductor devices” in “Quantum theory of atoms, molecules, and the solid state” ed. Per-Olov Löwdin (Academic Press, New York, 1966).
9. A. Cappy, IEEE Transactions on Microwave Theory and Techniques **36**, 1 (1988).
10. W. Shockley, M. sparks, and G.K. Teal, Phy. Rev. **83**, 151 (1951).
11. R. Fürth, Proc. R. Soc. London Ser. A **192**, 593 (1948).
12. Ya. M. Blanter and M. Büttiker, Phys. Rep. **336**, 1 (2000).
13. S.M. Sze “Physics of semiconductor devices” (Wiley, New York, 1981).

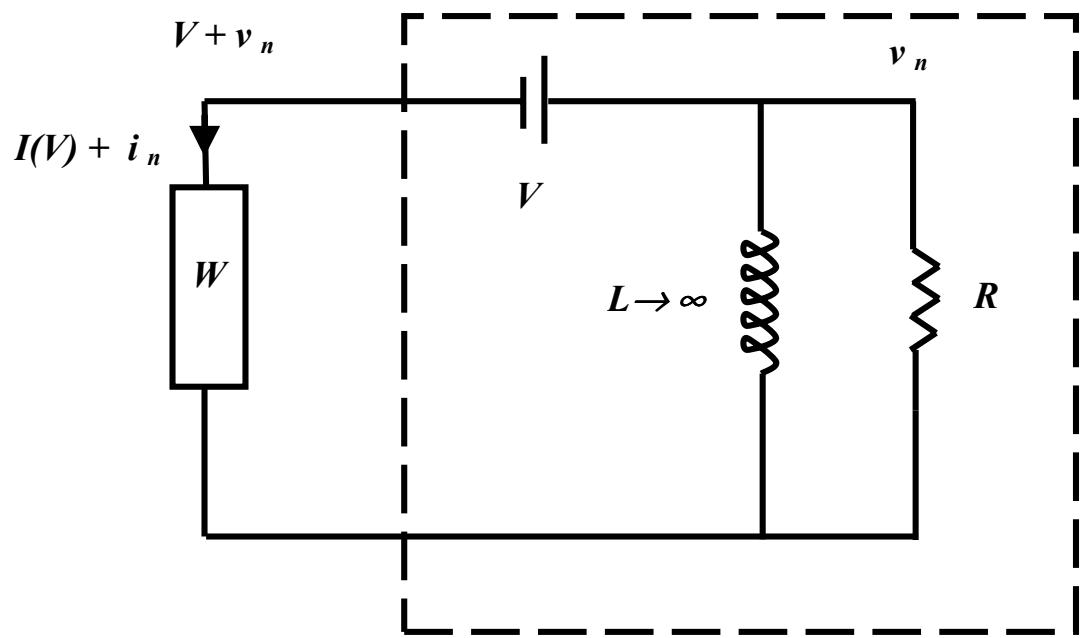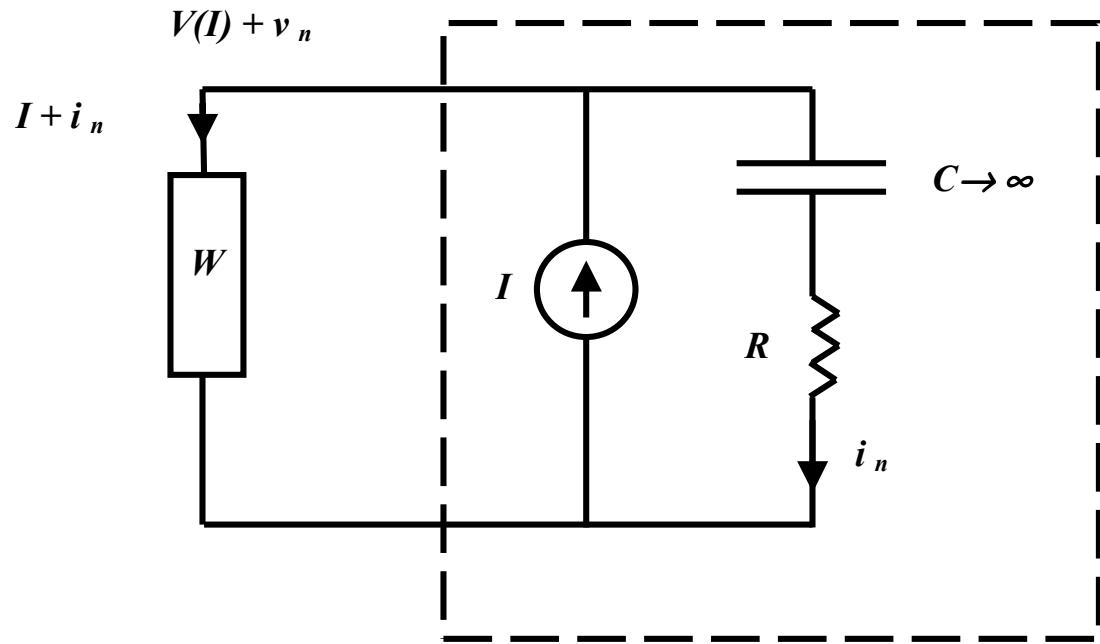

**Figure 1** – Two alternative circuits for extracting noise power out of the network  $W$  at non-equilibrium. Dashed boxes mark the load.

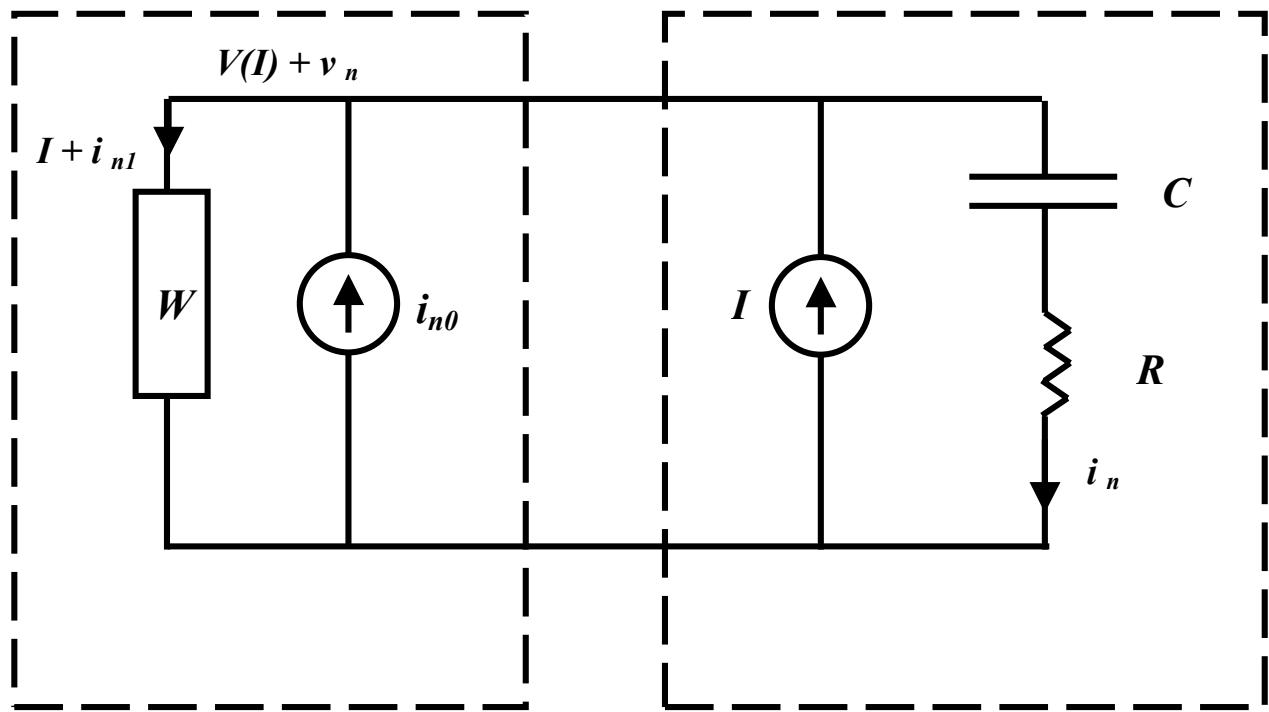

**Figure 2 –** Arrangement for evaluating the available noise power of a nonlinear network  $W$  at quasi-equilibrium. Dashed boxes mark the network and load.