

# Low-frequency characterization of quantum tunneling in flux qubits

Ya. S. Greenberg,<sup>1,\*</sup> A. Izmalkov,<sup>1</sup> M. Grajcar,<sup>2,†</sup> E. Il'ichev,<sup>1,‡</sup> W. Krech,<sup>2</sup> H.-G. Meyer,<sup>1</sup> M.H.S. Amin,<sup>3</sup> and Alec Maassen van den Brink<sup>3</sup>

<sup>1</sup>*Institute for Physical High Technology, P.O. Box 100239, D-07702 Jena, Germany*

<sup>2</sup>*Department of Solid State Physics, FSU Jena, Germany*

<sup>3</sup>*D-Wave Systems Inc., 320-1985 W. Broadway, Vancouver, B.C., V6J 4Y3, Canada*

(Dated: October 12, 2019)

We propose a method for the investigation of flux qubits based on the impedance measurement technique (IMT), currently used to measure the current–phase relation in Josephson junctions. A detailed measurement scheme is developed for the particular case of the persistent-current qubit, to which IMT was successfully applied in the classical regime.

PACS numbers: 74.50.+r, 84.37.+q, 03.67.-a

## I. INTRODUCTION

Josephson-junction flux qubits are known to be candidates for solid-state quantum computing circuits.<sup>1</sup> This qubit variety has the advantage of good tolerance to external noise, especially to dangerous background-charge fluctuations.<sup>2</sup> A flux qubit is a superconducting loop, the two lowest-energy states of which differ in the direction of circulating persistent current. For many flux qubits, these two states become degenerate when the external flux  $\Phi_x$  threading the loop equals  $\Phi_0/2$  ( $\Phi_0 = h/2e$  is the flux quantum), and quantum tunneling between them becomes possible. Moving the external flux away from  $\Phi_0/2$  lifts the degeneracy and applies a bias between the two states. When the biasing energy exceeds the tunneling matrix element  $\Delta$  the resonant tunneling will stop, but the relative phase between the two states will still evolve in time. This, together with the coherent tunneling, provides single-bit quantum gate operations. To have a universal set of gates, necessary for quantum computing, one needs to be able to couple two qubits. The methods of coupling two flux qubits and performing gate operations are beyond the present scope. Instead, we propose a method to characterize the quantum behavior of a flux qubit by coupling it to a tank circuit. The discussion will be quite general and can be applied to different types of flux qubit such as rf-SQUID,<sup>3</sup> three-Josephson-junction (3JJ),<sup>4,5</sup> multi-terminal,<sup>6</sup> etc. We will use the example of the 3JJ qubit, where quantum superposition of the macroscopic current states has been observed.<sup>5</sup>

Due to the loop self-inductance, the total qubit flux  $\Phi$  may differ from  $\Phi_x$ , depending on the direction of the persistent current. Figure 1 shows the  $\Phi$ – $\Phi_x$  curve for a typical flux qubit. The solid lines correspond to classical behavior. Near the degeneracy point, the diagram is hysteretic, a signature of the qubit's bistability. This kind of hysteresis has been observed for the 3JJ in Refs. 7,8. In the quantum regime, tunneling between the states at degeneracy may eliminate the hysteresis (dashed line in Fig. 1). This phenomenon will be discussed in detail below.

Quite generally, one can plot the classical (local) min-

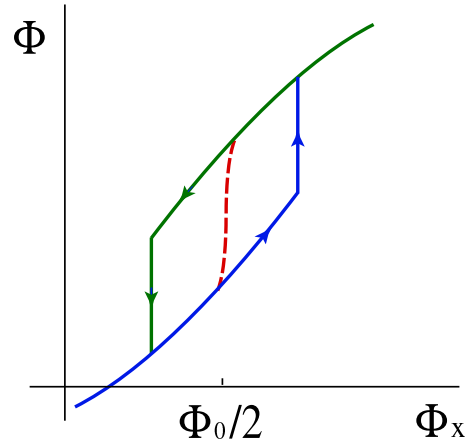


FIG. 1: Solid lines: hysteretic dependence of the total flux  $\Phi$  on the external flux  $\Phi_x$  in the classical regime. Dashed line: disappearance of the hysteresis by quantum tunneling.

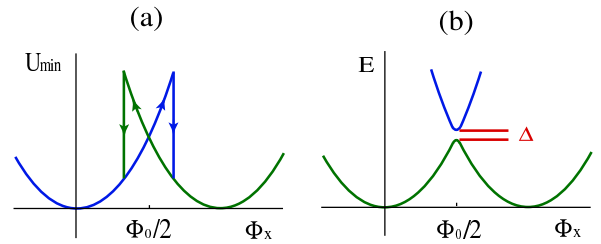


FIG. 2: (a) Minimum energies of a qubit as a function of external magnetic flux in the classical regime. (b) Quantum mechanical energy profile for the same qubit as in (a).

imum energies of a flux qubit as in Fig. 2a. The left (right) branch of the curve then corresponds to clockwise (counterclockwise) flow of the spontaneous current. The hysteretic behavior is also evident from this diagram. In the quantum regime, there will be discrete local states in each of the qubit's bistable potential wells. From now on we denote the lowest-lying such states as  $\Psi_L$  and  $\Psi_R$ ,

corresponding to “left” and “right” directions of the persistent current respectively. At degeneracy  $\Phi_x = \Phi_0/2$ , resonant tunneling will render the lowest eigenstates of the full Hamiltonian as superpositions  $(\Psi_L \pm \Psi_R)/\sqrt{2}$ . A small splitting equal to  $\Delta$  will appear between their energies (Fig. 2b). Starting with the qubit in its ground state (lower band in Fig. 2b), adiabatically changing  $\Phi_x$  will keep it in the ground state. This means that by passing through the degeneracy point, the qubit will continuously transform from  $\Psi_L$  to  $\Psi_R$ . This purely quantum-mechanical behavior is shown by the dashed line in Fig. 1. On the other hand, if  $\Phi_x$  changes rapidly, there is a considerable probability to excite the qubit and therefore continue on the same classical branch (left or right). This so-called Landau–Zener effect can be used to distinguish the classical from quantum energy curves.

The curvature of the energy profile is related to the qubit’s effective inductance and is therefore important for measurement. Figure 3 displays the second derivative of the curves in Fig. 2. In the classical regime (Fig. 3a), the hysteretic behavior is the same as for the energy. On the other hand, in the quantum regime the hysteresis is replaced by a sharp spike, due to the level anticrossing. The appearance of this spike can be ascribed to enhanced susceptibility of the system due to tunneling. Its size and width can provide information about  $\Delta$ .

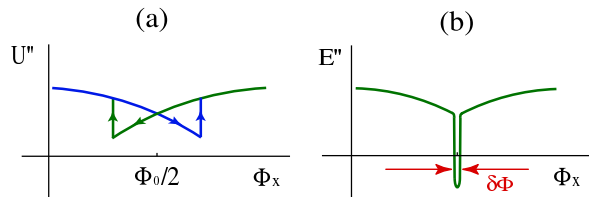


FIG. 3: (a) Second derivative of the qubit’s classical minimum energy vs. external magnetic flux. (b) Second derivative of the same qubit’s ground-state energy in the quantum regime.

A simple experimental implementation is to inductively couple the qubit to an  $LC$  tank circuit with known inductance  $L_T$ , capacitance  $C_T$ , and quality  $Q$  through a mutual inductance  $M$  (see Fig. 4). The resonant characteristics of the tank circuit (frequency, phase shift, etc.) will then be sensitive to the qubit inductance and therefore can be used to observe the energy curvature. In particular, the spike presented in Fig. 3 appears as sharp peaks in the phase shift or sharp dips in the voltage of the tank circuit as a function of the external flux through the qubit (see section III).

This method, known as *impedance measurement technique* (IMT), has been used for current–phase measurements of Josephson junctions. It originates from the pioneering work of Rifkin and Deaver,<sup>9</sup> and is analyzed in detail in Ref. 10. IMT has also successfully been applied to a 3JJ qubit in the classical regime,<sup>8</sup> and the hysteretic dependence of the ground-state energy on  $\Phi_x$  (cf. Fig. 2a) was observed in accordance with the predictions of Ref. 4.

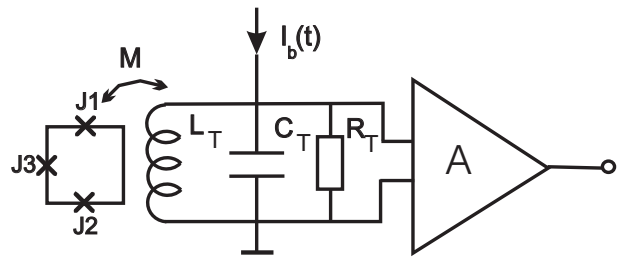


FIG. 4: Flux qubit coupled to a tank circuit: direct biasing scheme.

The method has also been used for the investigation of quantum transitions in an rf-SQUID (see Ref. 11 and references therein).

The paper is organized as follows. In Section II, we derive more accurate formulas for the two qubit-state energies than those in Ref. 4. In Section III, we study the qubit’s interaction with a high-quality resonant tank. We show that useful information about quantum behavior of the qubit can be found from impedance measurements at low frequencies. Finally, in Section IV, the effect of noise is briefly considered.

## II. QUANTUM DYNAMICS OF 3JJ FLUX QUBIT

Quantum dynamics of this qubit has been studied in detail in Ref. 4. The qubit consists of a loop with three Josephson junctions. The loop has very small inductance, typically in pH range. It insures effective decoupling of qubit from external environment. Two Josephson junctions have equal critical current  $I_c$  and capacitance  $C$ , while the critical current and capacitance of a third junction is a little bit smaller,  $\alpha I_c$ ,  $\alpha C$  where  $0.5 < \alpha < 1$ . If the Josephson coupling energy  $E_J = I_c \Phi_0/2\pi$ , where  $\Phi_0 = h/2e$  is a flux quantum, is much more than the Coulomb energy  $E_C = e^2/2C$ , then the phase of a Cooper pair wave function is well defined. As was shown in Refs. 4,12 in the vicinity of  $\Phi = \Phi_0/2$  this system has two quantum stable states with persistent circulating current of opposite sign. The expression for the energy splitting between these states in the presence of a small biasing flux has been given in Ref. 5, but it does not show the explicit dependence on qubit parameters such as  $\alpha$  and  $E_J/E_C$ . Evidently it was written for a particular choice of these parameters. In this Section we derive the energy splitting with explicit dependence on these parameters. The energy levels are derived from Hamiltonian [see Eq. (12) in Ref. 4]

$$H_0 + \frac{P_\varphi^2}{2M_\varphi} + \frac{P_\theta^2}{2M_\theta} + U(f, \varphi, \theta) \quad (1)$$

where  $\varphi = (\varphi_1 + \varphi_2)/2$ ,  $\theta = (\varphi_1 - \varphi_2)/2$  with  $\varphi_1$  and  $\varphi_2$  being the phase differences across the two identi-

cal junctions,  $P_\varphi = -i\hbar\partial/\partial\varphi$ ,  $P_\theta = -i\hbar\partial/\partial\theta$ ,  $M_\varphi = (\Phi_0/2\pi)^2 2C$ ,  $M_\theta = (\Phi_0/2\pi)^2 2C(1+2\alpha)$ , and

$$U(f, \varphi, \theta) = E_J \left\{ 2 + \alpha - 2 \cos \varphi \cos \theta + \cos \left[ 2\pi \left( f + \frac{1}{2} \right) + 2\theta \right] \right\}. \quad (2)$$

In contrast to Ref. 4, we define the flux bias  $f = \Phi/\Phi_0 - \frac{1}{2}$  as a small parameter measuring the departure from degeneracy.

Since the qubit is assumed to have small inductance  $L$  and critical  $I_C$  (typical values  $L \approx 10$  pH,  $I_C \approx 100$  nA) the shielding factor  $LI_C/\Phi_0 \approx 0.001$ . Therefore, we may neglect the shielding current and consider  $\Phi$  as external flux.

At the degeneracy point  $f = 0$  potential energy (2) shows two minima at the points  $\varphi = 0$ ,  $\theta = \theta_C$ , where  $\cos \theta_C = 1/2\alpha$ . The tunnelling between the minima lifts the degeneracy leading to the energy levels  $E_\pm = \varepsilon_0 \pm \Delta$ , where  $\Delta$  is a tunneling matrix element between two minima. However, at the degeneracy point the current in a qubit loop vanishes, so that it is necessary to move a little bit away from this point. In order to find the levels in the close vicinity of degeneracy point we expand potential energy (2) near its minima taking account for linear terms in  $f$  and quadratic terms in quantum variables  $\varphi$ ,  $\theta$ . Here  $\theta_C^\pm$  is the shift of the minima due to  $f$ :

$$\theta_C^\pm = \pm \theta_C + 2\pi f \frac{1 - 2\alpha^2}{4\alpha^2 - 1} \quad (3)$$

Below we assume  $f > 0$ , so that the upper sign refers to the right well, the lower sign refers to the left well. Thus we get the following expression for potential energy:

$$\begin{aligned} \frac{U}{E_J} = & 2 - \frac{1}{2\alpha} \mp f \frac{\pi}{\alpha} \sqrt{4\alpha^2 - 1} \\ & + \varphi^2 \frac{1}{2\alpha} \left( 1 \pm 2\pi f \frac{2\alpha^2 - 1}{\sqrt{4\alpha^2 - 1}} \right) \\ & + (\theta - \theta_C^\pm)^2 \left( 2\alpha - \frac{1}{2\alpha} \pm f \frac{\pi}{\alpha} \frac{2\alpha^2 + 1}{\sqrt{4\alpha^2 - 1}} \right) \end{aligned} \quad (4)$$

We are looking for the solution of stationary Schrodinger equation  $H_0\Psi_\pm = E_\pm\Psi_\pm$  in the vicinity of degeneracy point. The stationary state wave functions  $\Psi_\pm$  are eigenfunctions of the Hamiltonian  $H_0$  and can be written as the superpositions of the wave functions  $\Psi_L, \Psi_R$  in the left, right well, respectively:  $\Psi_\pm = a_\pm\Psi_L + b_\pm\Psi_R$ . With the use of standard technique we can find the well known expression for the splitting of two nearly degenerate levels:

$$E_\pm = \frac{\varepsilon_+ - \varepsilon_-}{2} \pm \sqrt{\left( \frac{\varepsilon_+ - \varepsilon_-}{2} \right)^2 + \Delta^2} \quad (5)$$

where  $\varepsilon_+ = \langle \Psi_L | H_0 | \Psi_L \rangle$ ;  $\varepsilon_- = \langle \Psi_R | H_0 | \Psi_R \rangle$  and the quantities  $a_\pm, b_\pm$  are as follows:

$$\begin{aligned} a_\pm &= \frac{\Delta}{\sqrt{(\varepsilon_+ - E_\pm)^2 + \Delta^2}} \\ b_\pm &= \frac{\varepsilon_+ - E_\pm}{\sqrt{(\varepsilon_+ - E_\pm)^2 + \Delta^2}}; \end{aligned} \quad (6)$$

The tunnelling matrix element  $\Delta$  cannot be accurately found in terms of wave functions  $\Psi_L, \Psi_R$ . In what follows we assume it is a constant neglecting its dependence on biasing flux  $f$ . In order to find explicit dependence of energies  $E_\pm$  on  $f$  we take the functions to be oscillatory ground state wave functions in the left, right well, respectively:

$$\begin{aligned} \Psi_{L,R} = & \frac{1}{\sqrt{\pi}} \left( \frac{M_\varphi \omega_\varphi^\pm}{\hbar} \right)^{1/4} \left( \frac{M_\theta \omega_\theta^\pm}{\hbar} \right)^{1/4} \\ & \times \exp \left( -\frac{M_\varphi \omega_\varphi^\pm}{2\hbar} \varphi^2 - \frac{M_\theta \omega_\theta^\pm}{2\hbar} (\theta - \theta_C^\pm)^2 \right), \end{aligned} \quad (7)$$

where  $-$  refers to left well,  $+$  refers to the right well.

Now we find the lowest quantum energy levels in the wells:

$$\varepsilon_\pm = E_J \left( 2 - \frac{1}{2\alpha} \mp f \frac{\pi}{\alpha} \sqrt{4\alpha^2 - 1} \right) + \frac{\hbar\omega_\varphi^\pm}{2} + \frac{\hbar\omega_\theta^\pm}{2} \quad (8)$$

where

$$\hbar\omega_\varphi^\pm = E_J \sqrt{\frac{4}{\alpha g}} \left( 1 \pm \pi f \frac{2\alpha^2 - 1}{\sqrt{4\alpha^2 - 1}} \right) \quad (9)$$

$$\hbar\omega_\theta^\pm = E_J \sqrt{\frac{4(2\alpha - 1)}{\alpha g}} \left( 1 \pm \pi f \frac{2\alpha^2 + 1}{(4\alpha^2 - 1)^{3/2}} \right) \quad (10)$$

with  $g = E_J/E_C$ .

Therefore, we get the following expression for the energies of two levels:

$$E_\pm = \varepsilon_0 \pm \sqrt{E_J^2 f^2 \lambda^2(\alpha) + \Delta^2} \quad (11)$$

where

$$\varepsilon_0 = E_J \left( 2 - \frac{1}{2\alpha} + \sqrt{\frac{1}{\alpha g}} (1 + \sqrt{2\alpha - 1}) \right) \quad (12)$$

$$\begin{aligned} \lambda(\alpha) = & \frac{\pi}{\alpha} \left( -\sqrt{4\alpha^2 - 1} + \sqrt{\frac{\alpha}{g}} \right. \\ & \times \left. \left( \frac{2\alpha^2 - 1}{\sqrt{4\alpha^2 - 1}} + \frac{2\alpha^2 + 1}{\sqrt{2\alpha + 1}(4\alpha^2 - 1)} \right) \right) \end{aligned} \quad (13)$$

The splitting energy given by expression (11) differs from that of Eq. (1) in Ref. 5 by a factor  $\lambda(\alpha)$  which explicitly

accounts for the dependence of the energies  $E_{\pm}$  on  $\alpha$  and  $E_J/E_C$ .

For stationary states the current circulating in the qubit loop can be calculated either as the average of a current operator  $\hat{I}_q = I_c \sin(\varphi + \theta)$  over stationary wave functions or as the derivative of the energy over the external flux:

$$I_q = \langle \Psi_{\pm} | \hat{I}_q | \Psi_{\pm} \rangle = \frac{\partial E_{\pm}}{\partial \Phi} = \pm I_c f \frac{\lambda^2(\alpha)}{\pi} \frac{E_J}{\hbar \omega_0} \quad (14)$$

where  $\hbar \omega_0 = E_+ - E_-$ . The generalization of (14) to the finite temperatures is straightforward: the current circulating in a qubit loop under thermal equilibrium is as follows:

$$\begin{aligned} I_q &= \langle \Psi_+ | \hat{I}_q | \Psi_+ \rangle \rho_{++}^{eq} + \langle \Psi_- | \hat{I}_q | \Psi_- \rangle \rho_{--}^{eq} \\ &= -I_c \frac{E_J f \lambda^2(\alpha)}{\pi \hbar \omega_0} \tanh \left( \frac{\hbar \omega_0}{2 k_B T} \right) \end{aligned} \quad (15)$$

where  $\rho_{++}^{eq}, \rho_{--}^{eq}$  are equilibrium density matrix elements at finite temperature:  $\rho_{++}^{eq} = \frac{1}{Z} e^{-\frac{E_+}{k_B T}}$ ;  $\rho_{--}^{eq} = \frac{1}{Z} e^{-\frac{E_-}{k_B T}}$  with  $Z = e^{-\frac{E_+}{k_B T}} + e^{-\frac{E_-}{k_B T}}$ .

### III. THE INTERACTION OF FLUX QUBIT WITH A TANK CIRCUIT

We propose here to extract information about quantum dynamics of flux qubit with the aid of a classical linear high quality tank circuit coupled inductively with the qubit via mutual inductance  $M$ . The tank circuit consists of a capacitor  $C_T$ , inductor  $L_T$ , and a resistor  $R_T$  which are connected in parallel and driven by a current source  $I_b(t)$  (Fig. 4). The problem of coupling of a quantum object to a classical one, which is dissipative in its nature, has no unique theoretical solution. However, if we assume that characteristic frequencies of the classical object are much smaller than those of the quantum one, we may solve for quantum motion of the quantum object accounting for the coupling coordinates of the classical object as external parameters in quantum equations (see, for example, Ref. 11). In our case the characteristic frequency of the flux qubit is the gap frequency,  $\Delta/\hbar$ , which lies in GHz range, while the resonance frequencies of our tank circuit lie below 100 MHz. There exist two different schemes of a coupling of a tank circuit to the qubit. First we consider a direct biasing scheme where a bias current  $I_b(t) = I_0 \cos \omega t$  is feed directly to the tank circuit inductance  $L_T$  (Fig. 4).

#### A. Direct biasing scheme

The equation for the voltage across tank circuit coupled inductively with the flux qubit is as follows:

$$\ddot{V} + \frac{\omega_T}{Q} \dot{V} + \omega_T^2 V = -M \omega_T^2 \frac{dI_q}{dt} + \frac{1}{C_T} \dot{I}_b(t) \quad (16)$$

Here  $Q = \omega_T R_T C_T \gg 1$  is the tank quality,  $\omega_T = 1/\sqrt{L_T C_T}$ . The current in the qubit loop  $I_q$  is the expectation values of the quantum current operator which is given in (14) and (15). It depends on the flux threading qubit loop,  $\Phi = \Phi_x + M I_L$ , where  $I_L = (1/L_T) \int V dt$  is the current in the tank circuit inductance,  $\Phi_x$  is a time independent external flux. Below we study the most simple case when the temperature is zero or  $k_B T \ll \Delta$ , so that the qubit is definitely in its ground state  $E_-$ . In the case Eq. (16) takes the form:

$$\ddot{V} + \frac{\omega_T}{Q} \dot{V} + \omega_T^2 V = -k^2 L \omega_T^2 \frac{d^2 E_-}{d\Phi^2} V + \frac{1}{C_T} \dot{I}_b(t) \quad (17)$$

where

$$\frac{d^2 E_-}{d\Phi^2} = \frac{I_c^2 \Delta^2 \lambda^2(\alpha)}{(2\pi)^2 (E_J^2 f^2 \lambda^2(\alpha) + \Delta^2)^{3/2}} \quad (18)$$

and  $f = [\Phi_x + M I_L(t) - \Phi_0/2]/\Phi_0 \ll 1$ . Therefore, (17) is a nonlinear equation with respect to  $V$ . Since the coupling to qubit is small we may apply here the method of harmonic balance which is well known in the theory of RF SQUID.<sup>13</sup> According to the method if the bias frequency  $\omega$  is close to resonant frequency of the tank circuit  $\omega_T$  the voltage across the tank circuit oscillates with frequency  $\omega$ , while voltage amplitude,  $a(t)$  and its phase,  $\theta(t)$  are slow functions of time:  $V(t) = a(t) \cos[\omega t + \theta(t)]$ . From (17) we obtain the following equations for slow variables:

$$\dot{a} = -\frac{\omega_T}{2Q} a + \frac{I_0}{2C_T} \cos \theta \quad (19)$$

$$\dot{\theta} = \omega_T - \omega - \frac{I_0}{2aC_T} \sin \theta - \frac{k^2 \omega_T L I_c^2}{2} \frac{1}{\Delta} \left( \frac{\lambda(\alpha)}{2\pi} \right)^2 F(a, f_x) \quad (20)$$

where

$$F(a, f_x) = \frac{1}{\pi} \int_0^{2\pi} \frac{\cos^2 \phi}{[1 + \eta^2 (f_x + \gamma \sin \phi)^2]^{3/2}} d\phi \quad (21)$$

with  $\eta = E_J \lambda(\alpha)/\Delta$ ,  $\gamma = M a/\omega_T L_T \Phi_0$ ,  $f_x = \Phi_x/\Phi_0 - 1/2$ .

From (19) and (20) we obtain stationary equations for the amplitude and the phase:

$$a = I_0 Q \omega_T L_T \cos \theta \quad (22)$$

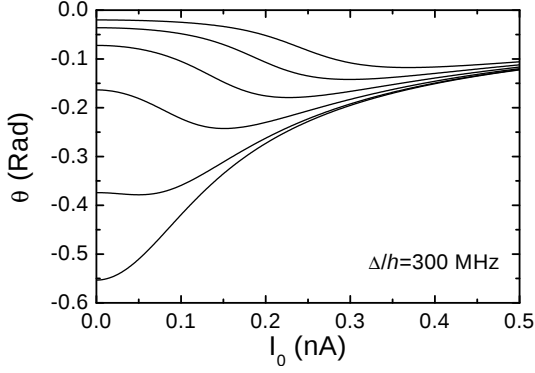


FIG. 5: The dependence of the phase  $\theta$  on the amplitude of bias current  $I_0$  for different values of bias flux  $f_x$ ;  $\Delta/h = 300$  MHz. From lower to upper curve  $f_x$  successively takes the values:  $0, 2 \times 10^{-4}, 4 \times 10^{-4}, 6 \times 10^{-4}, 8 \times 10^{-4}, 1 \times 10^{-3}$ .

$$2a\xi_0 - k^2 a \frac{LI_c^2}{\Delta} \left( \frac{\lambda(\alpha)}{2\pi} \right)^2 F(a, f_x) = I_0 \omega_T L_T \sin \theta \quad (23)$$

where frequency detuning  $\xi_0 = (\omega_T - \omega)/\omega_T$ . From last two equations we obtain the voltage-current and phase-current characteristics:

$$a^2 (1 + 4Q^2 \xi^2(a, f_x)) = I_0^2 \omega_T^2 L_T^2 Q^2 \quad (24)$$

$$\tan \theta = 2Q\xi(a, f_x) \quad (25)$$

where we introduce a flux dependent detuning:

$$\xi(a, f_x) = \xi_0 - k^2 \frac{LI_c^2}{2\Delta} \left( \frac{\lambda(\alpha)}{2\pi} \right)^2 F(a, f_x) \quad (26)$$

We use Eqs. (24), (25), (26) to find voltage-flux,  $a(f_x)$ , phase-current,  $\theta(I_0)$  and phase-flux,  $\theta(f_x)$  characteristics of the flux qubit at resonance  $\omega = \omega_T$ . For calculations we take the following parameters of qubit:  $I_c = 400$  nA,  $\alpha = 0.8$ ,  $L = 15$  pH,  $E_J/E_C = 100$ , and a tank circuit:  $L_T = 50$  nH,  $Q = 1000$ , inductive coupling to qubit,  $k^2 = M^2/LL_T = 10^{-4}$ , resonance frequency of a tank circuit  $\omega_T/2\pi = 30$  MHz. The dependence of the phase  $\theta$  on the amplitude of bias current  $I_0$  for different values of bias flux  $f_x$  is shown in Fig. 5. The phase-flux and voltage-flux curves are shown in Fig. 6 and Fig. 7 for different values of tunneling splitting  $\Delta$ . The sharp peak in Fig. 6 and the dip in Fig. 7 correspond to the spike in the second derivative of the energy profile presented in Fig. 3. As is clearly seen from these graphs the width of the peaks is correlated with the tunneling splitting  $\Delta$ : with the increase of  $\Delta$  the width of peak is also increased. The phase-flux curves for different values of the amplitude of biasing current  $I_0$  are shown in Fig. 8. As one can see

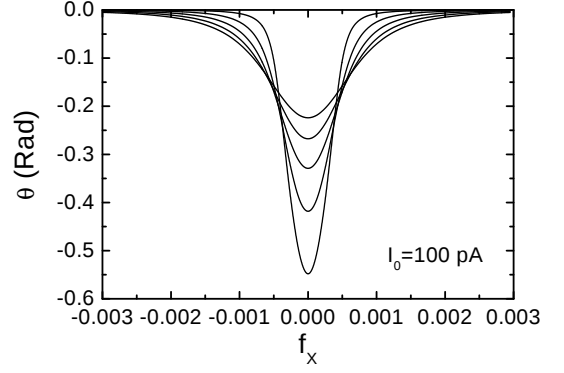


FIG. 6: The dependence of the phase  $\theta$  on the flux bias  $f_x$  for different values of tunnelling frequency  $\Delta/h$ ;  $I_0 = 100$  pA. From lower to upper curve  $\Delta/h$  successively takes the values: 150, 300, 450, 600, 750 MHz.

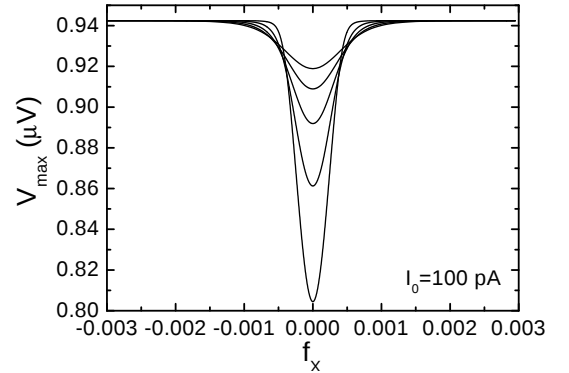


FIG. 7: The dependence of the voltage amplitude  $V$  on the flux bias  $f_x$  for different values of tunnelling frequency  $\Delta/h$ ;  $I_0 = 100$  pA. From lower to upper curve  $\Delta/h$  successively takes the values: 150, 300, 450, 600, 750 MHz.

from the graphs of Fig. 8 the shape and the value of the phase  $\theta$  are very sensitive to the value of  $I_0$ . The dependence of the voltage modulation  $\delta V = V_{max}(f_x = 0) - V_{max}(f_x = 1 \times 10^{-3})$  on bias current  $I_0$  is shown on Fig. 9.

### B. Scheme with a separate driving coil.

The scheme is that with independent biasing when a time-dependent bias flux  $\Phi_b(t) = \Phi_{ac} \sin \omega t$  is externally applied to the qubit loop from a separate coil (Fig. 10).

The response of a qubit to independent bias is described by equation which is similar to (17):

$$\ddot{V} + \frac{\omega_T}{Q} \dot{V} + \omega_T^2 V = -M\omega_T^2 \frac{d^2 E_-}{d\Phi^2} \omega \Phi_{ac} \cos \omega t + \tilde{\Phi}_{ac} \omega \cos \omega t \quad (27)$$

where  $\tilde{\Phi}_{ac}$  is the flux from external coil coupled to the tank circuit coil;  $d^2 E_-/d\Phi^2$  is given by (18) with  $f =$

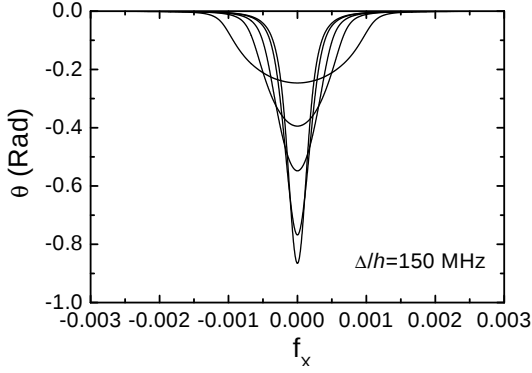


FIG. 8: The dependence of the phase  $\theta$  on the flux bias  $f_x$  for different values of the amplitude of biasing current  $I_0$ ; the tunnelling frequency  $\Delta/h = 150$  MHz. From lower to upper curve  $I_0$  successively takes the values: 10, 50, 100, 150, 250 pA.

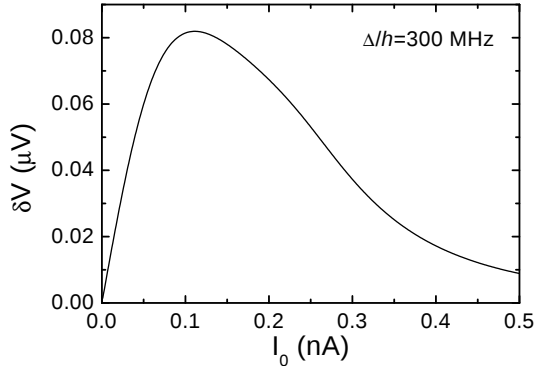


FIG. 9: The dependence of the voltage modulation  $\delta V = V_{max}(f_x = 0) - V_{max}(f_x = 1 \times 10^{-3})$  on bias current  $I_0$ . The tunnelling splitting  $\Delta/h = 300$  MHz.

$(\Phi_x + \Phi_{ac} \sin \omega t - \Phi_0/2)/\Phi_0 \equiv f_x + f_{ac} \sin \omega t$ . We write down the qubit term in r.h.s. of (27) showing the explicit dependence on time:

$$-k \sqrt{\frac{L_T}{L}} \frac{L I_c^2}{\Delta} \left( \frac{\lambda}{2\pi} \right)^2 \omega_T^2 \omega \Phi_0 f_{ac} G(t) \quad (28)$$

where

$$G(t) = \frac{\cos \omega t}{[1 + \eta^2 (f_x + f_{ac} \sin \omega t)^2]^{3/2}} \quad (29)$$

The advantage of separate driving coil is we can effectively decouple tank circuit from the harmonic of a driving signal, since the qubit signal  $G(t)$  contains not only driving harmonic  $\omega$ , but the higher harmonics  $2\omega$ ,  $3\omega$ , etc. At the degeneracy point ( $f_x = 0$ )  $G(t)$  contains only odd harmonics of  $\omega$ . This property can be used to find a degeneracy point in practice: for example, at the degeneracy point where  $f_x = 0$  the second harmonic of the tank circuit voltage vanishes, while the

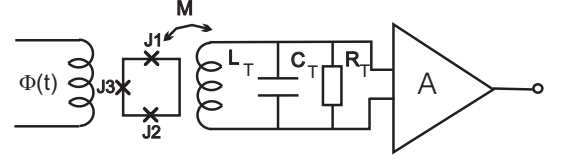


FIG. 10: Phase qubit coupled to a tank circuit. Scheme with a separate driving coil.

third harmonic reaches its maximum. In order to show the behavior of higher harmonics we found the computer solution of Eq. 27 with  $\tilde{\Phi}_{ac} = 0$  for two different driving frequencies  $\omega = \omega_T/2$ ,  $\omega = \omega_T/3$ . The results of the computer simulations are seen on Fig. 11 where the amplitudes of second and third harmonic as a function of bias flux  $f_x$  are shown.

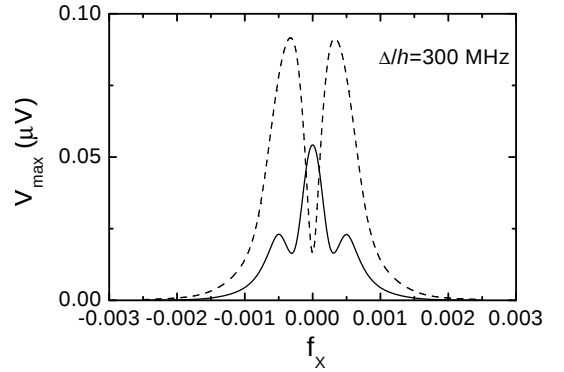


FIG. 11: The voltage across tank circuit as a function of bias flux  $f_x$ ;  $\Delta/h = 300$  MHz;  $\Phi_{ac} = 5 \times 10^{-4} \Phi_0$ ; dotted line: driving frequency  $\omega = \omega_T/2$ ; solid line: driving frequency  $\omega = \omega_T/3$ .

#### IV. REQUIREMENTS TO NOISE SOURCES

From Figs. 6 and 7 it is clearly seen that the quantum nature of the flux qubit is revealed in the close vicinity of degeneracy point  $\Phi_x = \Phi_0/2$  within the range of external flux relative to this point  $|\delta\Phi_x| \leq 5 \times 10^{-4} \Phi_0$ . Therefore, the flux noise coupled to the qubit from external environment must be much smaller than this value. There exists several unavoidable sources of flux noise. The most important are the Nyquist noise of a tank circuit resistance and the current noise of preamplifier. The Nyquist noise of a tank circuit  $I_n = \sqrt{k_B T/R}$  where  $R = Q/\omega_T C$ , generates the flux noise at the qubit location  $\Phi_n = M I_n Q \sqrt{B}$ , where  $B = \omega_T/2\pi Q$  is the bandwidth of a tank circuit. We make estimation for  $T = 20$  mK and the tank circuit parameters which are given above. We get  $\Phi_n \approx 4 \times 10^{-6} \Phi_0$ . For a current noise of preamplifier  $I_A = 1 \times 10^{-14}$  A/√Hz we estimate corresponding flux noise  $\Phi_A = M Q I_A \sqrt{B} \approx 7 \times 10^{-6} \Phi_0$ . Therefore, the flux noise coupled to the qubit from these

noise sources at least two orders of magnitude smaller than the widths of peaks at Figs. 6 and 7. From the other hand these noise sources give rise to the voltage noise across the tank circuit which is directly detected. The voltage noise from the thermal noise of the tank circuit  $V_n = I_n \omega_T L Q \sqrt{B} \approx 8.8$  nV. The voltage noise generated by the current noise of preamplifier is  $V_{A1} = I_A \omega_T L Q \sqrt{B} \approx 16$  nV. And finally, if we get for the voltage noise of preamplifier itself  $V_{A2} = 40$  pV/ $\sqrt{Hz}$  we get in the bandwidth of a tank circuit  $V_{A2} \sqrt{B} \approx 7$  nV. Comparing these values with the voltage modulation in Figs. 7, 9, 11 we see that the noise values are at least several times smaller than the voltage signal from qubit.

## V. CONCLUSION

We show that the impedance measurement technique can be used for the low frequency characterization of a quantum stationary state of a flux qubit. The method allows the determination of the tunnelling splitting between qubit states and can be applied for the control and readout in a quantum computing network which uses flux qubits as a key building element.

**Acknowledgement.** A detailed discussion of the main issues of the paper with A. Zagoskin is greatly acknowledged.

---

\* On leave from Novosibirsk State Technical University, 20 K. Marx Ave., 630092 Novosibirsk, Russia.

† On leave from Department of Solid State Physics, Comenius University, SK-84248 Bratislava, Slovakia.

‡ Electronic address: ilichev@ipht-jena.de

<sup>1</sup> Yu. Makhlin, G. Schön, and A. Shnirman, *Rev. Mod. Phys.* **73**, 357 (2001).

<sup>2</sup> G. Blatter, V.B. Geshkenbein, and L.B. Ioffe, *Phys. Rev. B* **63**, 174511 (2001).

<sup>3</sup> M. J. Feldman and M. F. Bocko, *Physica C* **350**, 171 (2001); J.R. Friedman, V. Patel, W. Chen, S.K. Tolpygo, and J.E. Lukens, *Nature* **406**, 43 (2000); M. V. Fistul, submitted to *Physica Status Solidi*.

<sup>4</sup> T.P. Orlando, J.E. Mooij, L. Tian, C.H. van der Wal, L. Levitov, Seth Lloyd, and J.J. Mazo, *Phys. Rev. B* **60**, 15398 (1999).

<sup>5</sup> C.H. van der Wal, A.C.J. ter Haar, F.K. Wilhelm, R.N. Schouten, C.J.P.M. Harmans, T.P. Orlando, S. Lloyd, and J.E. Mooij, *Science* **290**, 773 (2000).

<sup>6</sup> M.H.S. Amin, A.N. Omelyanchouk, A. Blais, Alec Maassen van den Brink, G. Rose, T. Duty, and A.M. Zagoskin,

*Physica C* **368**, 310 (2002).

<sup>7</sup> H. Tanaka, Y. Sekine, S. Saito, and H. Takayanagi, *Physica C* **368**, 300 (2002).

<sup>8</sup> E. Il'ichev, Th. Wagner, L. Fritzsche, J. Kunert, V. Schultze, T. May, H.E. Hoenig, H.-G. Meyer, M. Grajcar, D. Born, W. Krech, M.V. Fistul, and A.M. Zagoskin, *Appl. Phys. Lett.* **80**, 4184 (2002).

<sup>9</sup> R. Rifkin and B.S. Deaver, *Phys. Rev. B* **13**, 3894 (1976).

<sup>10</sup> E. Il'ichev, V. Zakosarenko, L. Fritzsche, R. Stolz, H.E. Hoenig, H.-G. Meyer, M. Gotz, A.B. Zorin, V.V. Hanin, A.B. Pavolotsky, and J. Niemeyer, *Rev. Sci. Instr.* **72**, 1882 (2001).

<sup>11</sup> T.D. Clark, J. Diggins, J.F. Ralph, M. Everitt, R.J. Prance, H. Prance, R. Whiteman, A. Widom, and Y.N. Srivastava, *Ann. Phys.* **268**, 1 (1998).

<sup>12</sup> J.E. Mooij, T.P. Orlando, L. Levitov, L. Tian, C.H. van der Wal, and S. Lloyd, *Science* **285**, 1036 (1999).

<sup>13</sup> K.K. Likharev, *Dynamics of Josephson Junctions and Circuits* (Gordon and Breach, New York, 1986).