

SiMRX - A Simulation toolbox for *MRX*

Technical Report

Janic Föcke^{1,2}

May 16, 2022

Abstract

SiMRX is a *MRX* simulation toolbox written in *MATLAB* for simulation of realistic 2D and 3D Magnetorelaxometry (*MRX*) setups, including coils, sensors and activation patterns. *MRX* is a new modality that uses magnetic nanoparticles (MNP) as contrast agent and shows promising results in medical applications, e.g. cancer treatment. Its basic principles were outlined in [2], further elaborated in [6], transferred into a rigorous mathematical model and analyzed in [3].

SiMRX is available at <https://gitlab.com/foecke/SiMRX/>.

Acknowledgements and Contributions

This toolbox was inspired by earlier work of Peter Hoemmen³, Paul Koenigsberger³ and Daniel Baumgarten^{3,4}. In particular for the simulation of the 3D case, we recycled code fragments originally created by Peter Hoemmen³ and Paul Koenigsberger³. Moreover, the 3D simulation step has been validated using a measured 3D dataset provided by Maik Liebl⁵. The phantoms were created as part of a collaboration with Daniel Baumgarten^{3,4} and Peter Schier⁴. As part of the ongoing collaboration with Daniel Baumgarten^{3,4} and Peter Schier⁴ this code may receive updates and new features in the future.

Maik Liebl has been supported by the German Science Foundation (DFG) within the priority program SPP1681 (WI 4230/1-3).

This work has been supported by the German Science Foundation (DFG) within the priority program CoSIP, project CoS-MRXI (BA 4858/2-1, BU 2327/4-1).

keywords — magnetorelaxometry imaging; magnetic nanoparticles; modeling; *MATLAB* toolbox; *SiMRX*

1 Introduction

Many new and experimental treatment methods in medical applications use magnetic nanoparticles as a contrast agent. These particles allow for multiple different approaches ([1, 5]), however for the named methods the exact knowledge about the particle distribution is crucial. Here, Magnetorelaxometry (*MRX*) can be used to determine the amount of particles in a region of interest as shown in [2, 6]. Based on this approach an imaging technique called Magnetorelaxometry Imaging (*MRXI*) has been proposed.

The *SiMRX* toolbox provides a set of tools to model and simulate such an *MRX* system. It is based on the mathematical model developed in [3].

¹Institute for Analysis and Numerics, Westfälische Wilhelms-Universität Münster (WWU), DE

²Applied Mathematics, Friedrich-Alexander Universität Erlangen-Nürnberg (FAU), DE

³Institute of Biomedical Engineering and Informatics, Technische Universität Ilmenau (TU Ilmenau), DE

⁴Institute of Electrical and Biomedical Engineering, Private University of Health Sciences, Medical Informatics and Technology (UMIT), Hall in Tirol, AT

⁵Physikalisch-Technische Bundesanstalt (PTB), Berlin, DE

1.1 Model

This following subsection (including notation) is part of [3], which, for interested readers, provides an in depth look in the analysis of the following operator. The magnetic field in $w \in \Omega$ induced by a coil $\alpha = (\varphi_\alpha, I_\alpha)$ is given by

$$\mathbf{B}_\alpha^{\text{coil}}: \Omega \rightarrow \mathbb{R}^3, \quad w \mapsto \vartheta \int_0^{L_\alpha} \varphi'_\alpha(s) \times \left(\frac{w - \varphi_\alpha(s)}{|w - \varphi_\alpha(s)|^3} \right) ds, \quad (1)$$

where L_α is the length of the coil. The magnetization of the magnetic nanoparticles (MNP) after the reorientation process in w is described by

$$\mathbf{m}_\alpha: \Omega \rightarrow \mathbb{R}^3, \quad w \mapsto \frac{1}{3} \mathbf{B}_\alpha^{\text{coil}}(w) c(w), \quad (2)$$

where c is the desired particle distribution. The particle induced magnetic response from particles in w measured by a sensor $\sigma = (\sigma_x, \sigma_n)$ is modeled by

$$\mathbf{B}_\alpha^{\text{meas}}: \Omega \times \Sigma \rightarrow \mathbb{R} \\ (w, \sigma) \mapsto \sigma_n \cdot \left(\left(\frac{3(\sigma_x - w) \otimes (\sigma_x - w)}{|\sigma_x - w|^5} - \frac{\mathbb{I}}{|\sigma_x - w|^3} \right) \mathbf{B}_\alpha^{\text{coil}}(w) \right). \quad (3)$$

In the end we receive the following forward operator for a coil α :

$$\mathbf{K}_\alpha: \mathcal{L}^2(\Omega) \rightarrow \mathcal{L}^2(\Sigma), \quad c \mapsto \left[\sigma \mapsto \int_\Omega \mathbf{B}_\alpha^{\text{meas}}(w, \sigma) c(w) d^3 w \right]. \quad (4)$$

1.2 Discretization

First we consider the 3D case: Here the conductor coil φ_α is approximated by a set list of segments, with starting points a_k and ending points b_k for the k -th segment respectively. Then the magnetic field in $w \in \Omega$ is [4]:

$$\mathbf{B}_{\alpha,k}^{\text{coil}}: \Omega \rightarrow \mathbb{R}^3 \\ w \mapsto \vartheta \frac{|a_k - w| + |b_k - w|}{|a_k - w||b_k - w|} \frac{(a_k - w) \times (b_k - w)}{|a_k - w||b_k - w| + (a_k - w) \cdot (b_k - w)}. \quad (5)$$

The MNP response (see equation (3)) still holds in the discrete case.

In the 2D case a coil simplification leads to the usage of variants of (3) for both coil and dipole response (see [3, section 4.2]).

2 Structure

The *SiMRX* toolbox is a modular toolkit that has separate functions which are necessary for a successful simulation of an MRX experiment. *SiMRX* is capable of simulating synthetic or real setups and datasets.

The simulation tool runs a sequence of modular functions that subsequently handle the creation of a voxel grid, the calculation of the coil activation fields and the data acquisition at the sensors.

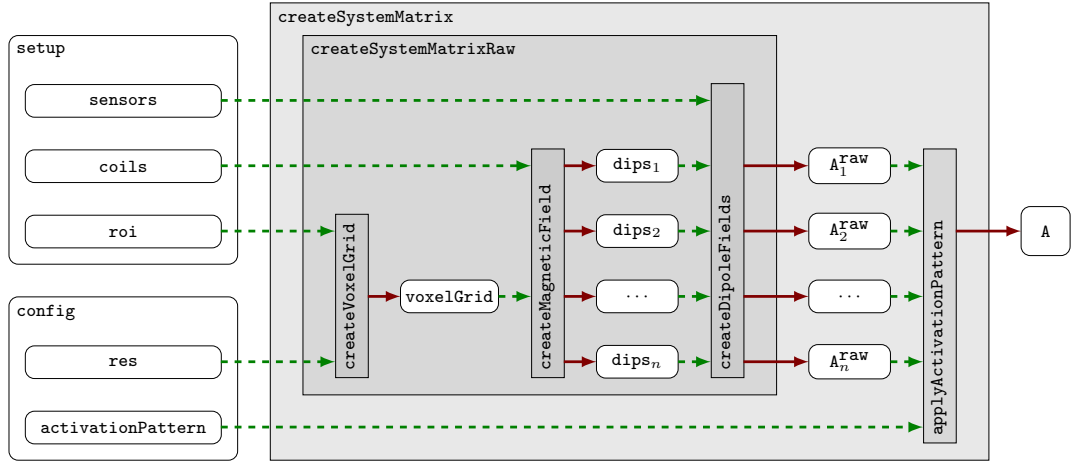


Figure 1: Schematics of the system matrix creation workflow. Variables are marked with a rounded corner box, functions are marked with a gray box. The variable usage is color coded: green (dashed) as input and red (solid) as output argument.

See subsection 3.1 for a detailed description of the simulation step and relate to Figure 1 for an illustration of the simulation process.

For the simulation of an MRX experiment a **setup** and **config** file are required. The **setup** file includes information about the number of dimensions, coil position and shape (and, if necessary, orientation), sensor position and orientation, as well as intervals that define the region of interest. The **config** file includes information about the resolution of the phantom within the region of interest and a coil activation pattern. Both files are forwarded to the simulation script, that return a matrix representation of the given setup and configuration. Detailed information on the creation of **setup** and **config** file can be found in subsection 3.3.

Furthermore *SiMRX* provides useful tools that visualize MRX setups and internal states (subsection 3.2), and includes a tool for the creation of phantoms (subsection 3.4).

3 Features

The *SiMRX* toolbox is separated in the following submodules (each in its own subfolder):

```
./simulation
./visualization
./configuration
./phantom
```

We give a short overview of each module in the upcoming subsections. The syntax to use the specified functions is found in a help section at the beginning of each file. We recommend the MATLAB help function (F1) for more information about features and syntax of any module/function that comes with *SiMRX*.

3.1 Simulation

The simulation module is the core element of the toolbox. All necessary files can be found in the subfolder `./simulation`. The main script is provided by the file `createSystemMatrix.m`.

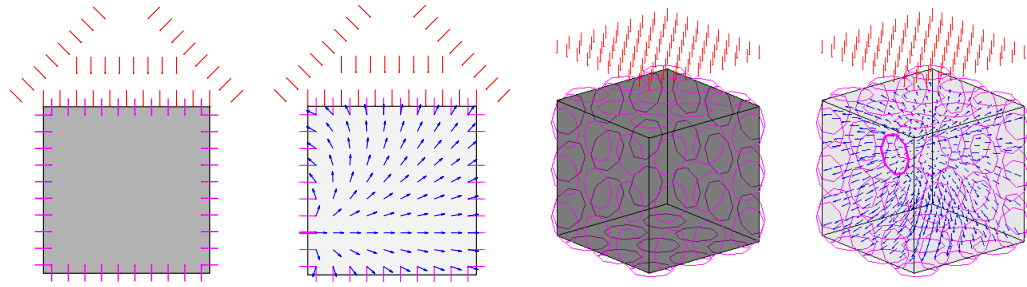


Figure 2: Visualization of a 2D and 3D MRX setup with schematics of coil induced magnetic fields. From left to right: visualization using `visualizeSetup.m` with 2D data, `visualizeCoilActivation.m` with 2D data, `visualizeSetup.m` with 3D data and finally `visualizeCoilActivation.m` with 3D data.

It processes a given MRX setup and a coil configuration into a linear operator, namely a matrix A . It requires a valid `setup` file that provides dimension information, region of interest, coil position and orientation, as well as sensor position and orientation. Furthermore voxel/pixel resolution within the region of interest and coil activation schemes are provided by a `config` file. Internally `createSystemMatrix.m` calls the functions `createSystemMatrixRow.m` and subsequently `applyActivationPattern.m`. The internal processes, variables and function arguments are illustrated in Figure 1.

At first, `createSystemMatrixRow.m` calls `createVoxelGrid.m`, which creates a valid `voxelGrid`. This voxel grid combines the desired resolution (`config.res`) with the demanded region of interest (`setup.roi`). Then `createMagneticFields2D.m` and `createMagneticFields3D.m`, respectively, are called to apply a uniform basic current to each given coil (`setup.coils`). The magnetic fields induced by these coils are derived on the provided `voxelGrid` and are stored for each coil individually. Finally `createDipoleFields.m` translates the fields present on the voxel grid into a magnetization. Then it derives the resulting magnetic response, which is acquired by the sensors (`setup.sensors`), for each coil separately in a temporary system matrix `ARaw`. The set of operators `ARaw` is finally returned by `createSystemMatrixRow.m`.

To this point only a uniform coil activation current is used. Due to the linearity of this forward propagation, we can apply an arbitrary coil activation sequence by using `applyActivationPattern.m`. This derives a linear combination of the temporary system matrices `ARaw` and creates a linear operator A .

It is possible to trigger each step separately, such that one can investigate the effects of different coil activations without repeating the whole simulation for each new activation pattern.

3.2 Visualization

SiMRX provides tools to visualize the region of interest, coils and sensors. The function `visualizeSetup.m` combines named visualization functions to create a representation of a full MRX setup. We recommend the usage during the creation of a new MRX setup, since it uses only the `setup` file and does not require the simulation of a given setup.

Furthermore the function `visualizeField.m` provides a tool to visualize the magnetic fields induced by the activation coils. It uses the magnetic fields created by `createMagneticFields2D.m` and `createMagneticFields3D.m`, respectively, during the simulation process. A combination of `visualizeSetup.m` and `visualizeField.m` is given by `visualizeCoilActivation.m`. This function allows to scroll through each coil activation and activation pattern respectively. A toggle between single 'coil mode' and 'activation pattern mode' as well as a toggle between plotting

Listing 1: Create a new 2D setup

```
1 %% create a new 2D setup
2
3 setup      = [];
4
5 setup.dim   = 2;
6
7 setup.roi.x = [-.05, .05];
8 setup.roi.y = [-.05, .05];
9 setup.roi.z = [ 0, 0];
10
11 setup = addCoilArray(setup, [.055, .045, 0], [.055, -.045, 0], [-1, 0, 0], [ 1, 10, 1]);
12 setup = addCoilArray(setup, [-.055, .045, 0], [-.055, -.045, 0], [ 1, 0, 0], [ 1, 10, 1]);
13 setup = addCoilArray(setup, [.045, .055, 0], [-.045, .055, 0], [ 0, -1, 0], [10, 1, 1]);
14 setup = addCoilArray(setup, [.045, -.055, 0], [-.045, -.055, 0], [ 0, 1, 0], [10, 1, 1]);
15
16 setup = addSensorArray(setup, [.050, .060, 0], [-.050, .060, 0], [ 0, -1, 0], 11);
17 setup = addSensorArray(setup, [.030, .080, 0], [-.030, .080, 0], [ 0, -1, 0], 8);
18 setup = addSensorArray(setup, [-.070, .060, 0], [-.020, .110, 0], [ 1, -1, 0], 8);
19 setup = addSensorArray(setup, [.070, .060, 0], [.020, .110, 0], [-1, -1, 0], 8);
20
21 visualizeSetup(setup);
22
23 %% save setup
24
25 saveSetup('default', setup, 'override', true);
```

unnormalized and normalized fields is available. For more information please read the help section in the function header.

Figure 2 shows `visualizeSetup.m` and `visualizeCoilActivation.m` in a 2D and 3D example. The code of the 2D example is shown in Listing 1.

3.3 Configuration

This module provides a set of functions to create `setup` and `config` files.

3.3.1 Setup file

`setup` files are structs in MATLAB. They hold the following fields

`dim`, `roi`, `coils`, and `sensors`.

SiMRX supports 2D and 3D systems, therefore `setup.dim` is either 2 or 3. The region of interest `setup.roi` is a struct with fields `x`, `y` and `z`, that holds boundary information in an array, e.g. `setup.roi.x = [0,10]`. Yet again `setup.coils` and `setup.sensors` are arrays of structs with fields:

`coils(i).Position`, `sensors(i).Position`,
`coils(i).Normal`, `sensors(i).Normal`,
`coils(i).Segments`,

where i is the i -th coil/sensor. For the fields `Position` and `Normal` a three element vector is used.

The functions `addCoilArray.m` and `addSensorArray.m` can be used to add new coil and sensor entries to the setup. In the current version both functions take two points, a normal and a number of repetition. Then `addCoilArray.m` adds a list of equidistant points, that represent the coil position, as well as the coil normal to the given setup (sensors analogously).

In the 3D case the coil wire is modeled by a list of points, which represent the coil shape. The function `createCoilLoop.m` creates a coil template. This template of a coil now has to be positioned

Listing 2: Create a new 2D config

```
1 %% create a new 2D config
2
3 config      = [];
4
5 numCoils    = 40;
6 config      = addActivationPattern(config, 'sequential', numCoils, 'current', 0.8249);
7
8 config.res   = [10, 10];
9
10 %% save config
11
12 saveConfig('configs/10.10.singleSequential', config, 'override', true);
```

at all coil positions. The function `parseCoils.m` receives a coil struct (with fields `Position` and `Normal`) and adds the `Segments` field in respect to the given coil template. Internally this uses the function `relocateStructure.m` that reorientates a given list of points.

In case a voxel grid is given, the corresponding region of interest can be determined using `getROI.m`. During the creation of a new setup the usage of `visualizeSetup.m` is recommended.

The script in Listing 1 can be used to create the `setup` file for the 2D system shown in Figure 2. Please also examine the examples given in Section 4.1, that make use of the described functionalities.

3.3.2 Config file

`config` files are, similar to `setup` files, structs in MATLAB. They hold the fields

`res`, and `activationPattern`.

The simulated voxel resolution of the region of interest is given by a three element array and stored in `res`.

The coil activation sequence is stored in a matrix with one column for each coil. Each row represents the activation scheme where the entries refer to the respective coil activation current. The function `addActivationPattern.m` provides standard patterns and multiple other presets.

The script in Listing 2 can be used to create a `config` file for the 2D system shown in Figure 2. Again please examine the examples given in Section 4.1, that make use of the described functionalities.

3.3.3 Save and Load

The `setup` and `config` structs can be stored using `saveSetup.m` and `saveConfig.m`. These are stored using a custom `.mrxsetup` and `.mrxcfg` extension, that is based on the MATLAB internal `.mat` file format. Corresponding load functions (`loadSetup.m` and `loadConfig.m`) are available.

3.4 Phantom

The function `createPhantom.m` provides multiple phantom options, including phantoms suited for reconstruction or resolution tests. `createPhantom.m` uses the function `phantom3.m`, which is a 3D reimplementation of the MATLAB given phantom function and able to generate 3D phantoms that are composed of multiple ellipses. For all available phantoms, please check the help section of `createPhantom.m` and `phantom3.m`. See Figure 3 for a small selection of the available phantoms.

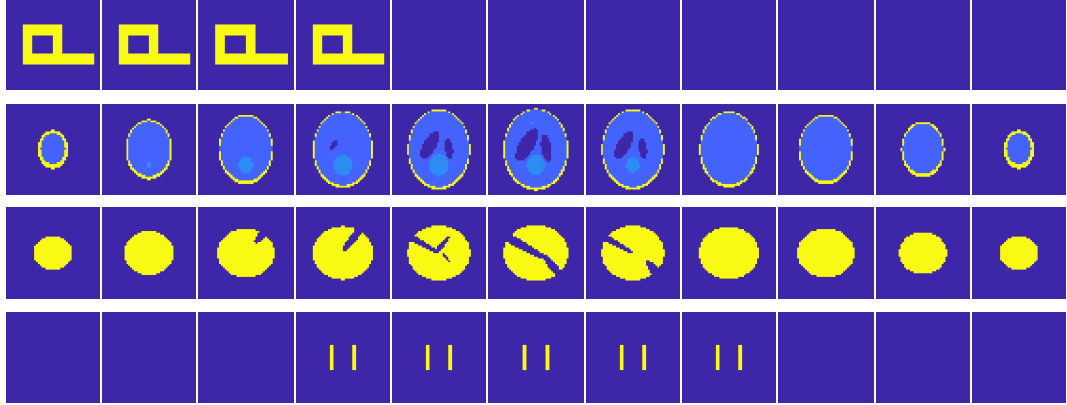


Figure 3: Selection of available 3D phantoms with a resolution of $[50, 50, 15]$. One phantom per row, each column represents a layer. Layers 1, 2, 14 and 15 are cut from illustration, due to clarity. Phantom names from top to bottom: 'P_2', 'shepplogan3d', 'tumor' and 'fwhmdots_0.2'.

4 Examples

The subfolder `example` contains multiple examples and scripts to create synthetic and realistic data.

4.1 Fully synthetic dataset

There are 2D and 3D examples available, that can be created using the respective MATLAB scripts `createSetup.m` and `createConfig.m` (for the 2D case, see listing 1 and 2). The given scripts show the functions described in Section 3.3.1 and 3.3.2 in action. As a result, `.mrxcfg` and `.mrxcfg` files are created respectively.

Each folder contains a script `README.m`, that can be used to execute the scripts in the recommended order.

4.2 A 3D dataset from formatted text files

With *SiMRX* it is possible to load datasets from text files, save in the `.mrxcfg` and `.mrxcfg` data structure, as well as pre-processing for simulation and reconstructions tasks.

In the subfolder `./examples/setups/realistic3D` the script `createRawDataset.m` is used to create the following files in folder `./examples/setups/realistic3D/raw`:

```
sensors.dat
coilGrid.dat
coilTemplate.dat
voxelGrid.dat
dataset.01.currents.dat
dataset.01.relax.dat
```

The file structure of the created data is as follows.

Sensor Information (Table 1a, File `sensors.dat`): The table (see Table 1a) that is used in file `sensors.dat` stores all necessary sensor information. Each row defines a sensor unit with

File: sensors.dat									
	x [m]	y [m]	z [m]	n_x	n_y	n_z	SensorID	ChannelID	GroupID
Sensor 1							1		
\vdots							\vdots		
Sensor N_s							N_s		

(a) sensor data structure

File: coilGrid.dat			
	x [m]	y [m]	z [m]
Coil 1			
\vdots			
Coil N_c			

(b) coil position data structure

File: voxelGrid.dat			
	x [m]	y [m]	z [m]
Voxel 1			
\vdots			
Voxel N_v			

(d) voxel grid data structure

File: coilTemplate.dat			
	x [m]	y [m]	z [m]
Segment 1			
\vdots			
Segment N_l			

(c) template coil data structure

File: dataset.01.currents.dat	
	current [A]
Coil 1	
\vdots	
Coil N_c	

(e) activation currents data structure

File: dataset.01.relax.dat					
	ΔB [fT]	SensorID	ChannelID	GroupID	CoilNo
Sensor 1					1
\vdots					\vdots
Sensor N_s					1
Sensor 1					N_c
\vdots					\vdots
Sensor N_s					N_c

(f) Sensor data table structure

Table 1: Overview of the data structures, that are used for text based datasets. **Note:** physical units are given in the brackets. The total number of sensors, coils, segments and voxel is given by N_s, N_c, N_l and N_v respectively.

properties defined by the columns as follows. Columns 1 – 3 define the x , y and z position as a translation vector. Columns 4 – 6 define the orientation of the sensors measure direction. Columns 7 – 9 are used to identify the given coil: column 7 holds an unique sensorID, column 8 holds information about the used data channel and column 9 is used to defined sensor groups.

Coil Information (Table 1b, File coilGrid.dat and Table 1c, File coilTemplate.dat): The file coilGrid.dat contains positioning information for every activation coil in the system (see Table 1b). Each row defines a coil position with columns 1 – 3 defining the translation vector for direction x , y and z . As described in Sections 1.2 and 3.3.1, the coil is a composition of multiple conductor segments. The coils single segments are stored as a list of points in file coilTemplate.dat (see Table 1c).

Voxel Grid Information (Table 1d, File: voxelGrid.dat): The file voxelGrid.dat contains a list of used voxels in the current setup (see Table 1d). Again columns 1 – 3 define the positions of the voxel midpoints in x , y and z .

Current Information (Table 1e, File: dataset.01.currents.dat): The table 1e is used as data scheme for file `dataset.01.currents.dat` and contains a list of currents in *Ampere* that are applied to the coils. Currently only subsequent coil patterns are supported. This means that the number of the currents has to fit the number of coils as of `coilGrid.dat`.

Measurements Information (Table 1f, File: dataset.01.relax.dat): The data structure defined in Table 1f) is used in file `dataset.01.relax.dat`. The first column contains the change in the magnetic response ΔB in *fTesla* after an coil activation (compare with equation (3)). Column 2 – 5 provide information about the sensorID, channelID, groupID and the coil/activation pattern that was used for that measurement.

The created raw dataset can be loaded and parsed with `createSetup.m` and finally `createConfig.m`. As expected, this creates a `.mrxsetup` and `.mrxcfg` file. With `loadDataset.m` the data can be loaded and cleaned up in regards of faulty or unused sensors. Finally, with `simulateMeasurement.m` a simulated measurement is created based on the given data set. Here the magnetic susceptibility χ and amount of the particles (in *mg*) are required to define the phantom properly.

As for the other examples, a script `README.m` is available, that can be used to execute the individual scripts in the recommended order.

5 Remarks

This simulation toolbox does not guarantee its correctness and closeness to reality. *SiMRX* is not qualified for commercial usage.

References

- [1] Christoph Alexiou et al. “Cancer Therapy with Drug Loaded Magnetic Nanoparticles—Magnetic Drug Targeting”. In: *Journal of Magnetism and Magnetic Materials* 323.10 (2011), pp. 1404–1407 (cit. on p. 1).
- [2] Daniel Baumgarten et al. “Magnetic Nanoparticle Imaging by Means of Minimum Norm Estimates from Remanence Measurements”. In: *Medical & Biological Engineering & Computing* 46.12 (Oct. 2008), p. 1177 (cit. on p. 1).
- [3] Janic Föcke, Daniel Baumgarten, and Martin Burger. “The Inverse Problem of Magnetorelaxometry Imaging”. In: *Inverse Problems* 34.11 (Nov. 1, 2018), p. 115008 (cit. on pp. 1, 2).
- [4] James D. Hanson and Steven P. Hirshman. “Compact Expressions for the Biot–Savart Fields of a Filamentary Segment”. In: *Physics of Plasmas* 9.10 (2002), pp. 4410–4412 (cit. on p. 2).
- [5] R Hiergeist et al. “Application of Magnetite Ferrofluids for Hyperthermia”. In: *Journal of Magnetism and Magnetic Materials* 201 (Issues 1-3 1999), pp. 420–422 (cit. on p. 1).
- [6] M. Liebl et al. “Quantitative Imaging of Magnetic Nanoparticles by Magnetorelaxometry with Multiple Excitation Coils”. In: *Physics in Medicine & Biology* 59.21 (2014), p. 6607 (cit. on p. 1).