

Functional Specification of the RAVENS Neuroprocessor

Adam Z. Foshie James S. Plank Garrett S. Rose
Catherine D. Schuman

EECS Department
University of Tennessee
Knoxville, TN 37996
[afoshie, jplank, garose, cschuman]@utk.edu

July 31, 2023

Abstract

RAVENS is a neuroprocessor that has been developed by the TENNLab research group at the University of Tennessee. Its main focus has been as a vehicle for chip design with memristive elements; however it has also been the vehicle for all-digital CMOS development, plus it has implementations on FPGA's, microcontrollers and software simulation. The software simulation is supported by the TENNLab neuromorphic software framework so that researchers may develop RAVENS solutions for a variety of neuromorphic computing applications. This document provides a functional specification of RAVENS that should apply to all implementations of the RAVENS neuroprocessor.

Keywords: neuromorphic computing, hardware, microcontroller, FPGA, spiking neural network.

1 Introduction

Neuromorphic computing is an active research area, with one of the key activities being the design of brain-based neuroprocessors. Examples are SpiNNaker [5], TrueNorth [1] and Loihi [3]. The TENNLab research group has designed multiple neuroprocessors and implemented them in/on CMOS, FPGA's and/or microcontrollers. This activity started with DANNA [4], and includes DANNA2 [6], mrDANNA [2], Caspian [7] and RISP [10]. Informed by past experience, we have designed the RAVENS (Reconfigurable and Very Efficient Neuromorphic System) neuroprocessor architecture. This neuroprocessor has implementations in CPU simulation, microcontroller, and FPGA, with CMOS and mixed CMOS/memristor implementations in development.

This document provides a functional specification of RAVENS, which applies to all implementations. The RAVENS simulator is part of the TENNLab software framework for neuromorphic computing [9,12], and as such may be trained for a variety of applications. Its FPGA and microcontroller implementations may be used as the neuroprocessors that are central to the Neuromorphic Starter Kit for embedded computing applications [8].

RAVENS is a processor for spiking neural networks. The field of spiking neural networks has had a long history. The reader is referred to articles by Roy *et al* [11] and Schuman *et al* [13] for historical overviews of spiking neural networks and their hardware implementations.

2 Hardware Constants and Network Settings

In all RAVENS implementations, there are parameters that must be set when the neuroprocessor is created, and remain constant for the implementation. We call these *Hardware Constants*. For example, one such parameter is the maximum delay in a synapse. One typically sets these parameters using a JSON specification file or an HDL package file, depending on the implementation platform. Then the software that creates the implementation does so using the values in the relevant file.

For example, when RAVENS is being implemented on FPGA, the maximum synapse delay is read from the HDL package file, and then the neuroprocessor implementation of the FPGA instantiates registers of this width such that it will not change. These values have implications on all facets of the neuroprocessor. For example, larger values of maximum synapse delay consume more processing resources than smaller values, and can result in some of the following implications when implemented:

- Fewer neurons and synapses being implemented on the neuroprocessor.
- Longer processing times.
- Increased power consumption.

Any implementation of RAVENS should be accompanied by a software module that reports the implications of the Hardware Constants. Obviously, the RAVENS software simulator is more flexible with respect to these constants.

Network Settings are values that are set by the neural network which is loaded onto the neuroprocessor. These settings are partitioned into *Neuron Settings*, which apply to individual neurons, *Synapse Settings*, which apply to individual synapses, and *Overall Settings*, which apply to the network as a whole. The Network Settings are defined by a JSON file, typically created with the TENNLab software framework [9,12]. All settings are signed or unsigned integers.

3 Neurons and nCores

At a high level, RAVENS is composed of neurons and synapses like most spiking neural networks. There is an additional concept of a neural core, or *nCore*, each of which contains multiple neurons and synaptic connections. Some of the Hardware Constants apply to nCores rather than neurons and synapses. In the presentation below, we will at times refer to a neuron’s “charge,” which is equivalent to its action potential, and a synapse’s “charge,” which is equivalent to its weight.

3.1 Neuron Characteristics and Settings

Each neuron maintains an *activation potential* over time. This is a discrete value stored in an accumulation register or other memory component. For example, an analog implementation may store the activation potential as an analog voltage across a capacitor in an integrate-and-fire neuron. Here, we generally refer to these storage elements as registers for the sake of simplicity. The register value can be represented as a signed integer whose number of bits is a Hardware Constant. Its value starts at a *standard resting potential*, which is a Neuron Setting. The value may be increased or decreased by spikes on incoming synapses. The magnitude of increase is equal to the synapse’s weight (a Synapse Setting). When the activation potential exceeds the neuron’s *threshold* (another Neuron Setting), then the neuron will fire, which will place spikes on all of its outgoing synapses. The threshold is a signed integer whose number of bits are a hardware constant.

Neurons accumulate and fire on discrete integration cycles. At the beginning of the cycle, the accumulation register’s value is compared to the threshold, and if it exceeds the threshold, the neuron fires. At that point, charge is put into the neuron’s post-synapses and that charge is sent to the synapses’ post-neurons. The neuron may then enter one of the two refractory periods described below. When the refractory periods are over, then the neuron enters *standard operation*, where charge is added to or subtracted from the neuron’s accumulation register. There is a Neuron Setting called the *standard resting potential*. When the neuron enters standard operation, if its threshold is less than its standard resting potential, then it is set to the standard resting potential. While in standard operation, the neuron may not end its integration with its accumulation register less than its standard resting potential. If the value of the register is less than the standard resting potential at the end of the integration cycle, then it is set to the standard resting potential.

We note that a neuron may end its integration cycle with its accumulation register having a value above the neuron’s threshold. In that case, the neuron will spike at the beginning of the next integration cycle.

Refractory Periods. Neurons have two refractory periods after they spike. These are Neuron Settings. The first is an *absolute refractory period*. Its minimum value is zero and its maximum value is a Hardware Constant. It is specified in cycles, and for the given number of cycles after a neuron spikes, it will not accumulate spikes from incoming synapses.

When the absolute refractory period ends, there is a *relative refractory period*, which is another Neuron Setting, whose minimum value is zero and whose maximum value is a Hardware Constant. At the beginning of this refractory period, the activation potential is set to a *refractory resting potential*, which is another Neuron Setting. During this refractory period, spikes are processed normally, but the shift in resting potential adjusts the effective threshold for the duration of the relative refractory period. Typically, the refracting resting potential is lower than the standard resting potential, which means that more spiking stimulus is required to produce a spike during this period. Like the standard operation, during the relative refractory period, the accumulation register may not end an integration cycle with its value below the refractory resting potential. If its value is below the refractory resting potential, then it is set to the refractory resting potential. At the end of the refractory period, if the activation potential is less than the standard resting potential, then it is set to the standard resting potential so that its regular operation is not inhibited.

Leak. Leak is a Neuron Setting whose minimum value is zero and whose maximum value is a Hardware Constant. During standard operation, leak works as follows: If, at the start of a cycle, the action potential’s value is above the standard resting potential, then the value of the leak is subtracted from the action potential. If the result is smaller than the standard resting potential, then it is set to standard resting potential.

During the absolute refractory period, leak is ignored. During the relative refractory period, leak is applied to the action potential only if its value is greater than the refractory resting potential. If the result is smaller than the relative resting potential, then it is set to the refractory resting potential.

Ports. Each neuron has a fixed number of “ports”, which is a Hardware Constant. The ports may be employed either for pre-synapses or for charge injection, which is described below under *Synapses*.

3.2 Synapse Characteristics and Settings

As with all spiking neuroprocessors, RAVENS synapses have delays and weights. Each is a Synapse Setting. Delays are non-negative numbers whose maximum value is a Hardware Constant. Weights are signed integers whose number of bits is a Hardware Constant. When a neuron fires at the beginning of an integration cycle, its synapses start to communicate their spikes. The synapse weights are delivered to their post-neurons on the $d - th$ integration cycle after the fire, where d is the synapse’s delay. We note that delays of zero are possible, which means that a synapse’s weight is delivered to its post neuron on the same integration cycle as the pre neuron’s firing. This is possible because neurons fire at the beginning of the integration cycle.

Each neuron in a RAVENS network has a maximum number of synapses that may be attached to it. This is a Hardware Setting.

STDP: Synapse weights may be modified at run time depending on the relationship between the last synaptic fire time and the last neuron fire time. This modification is specified by a lookup table called the STDP table. The table is a Hardware Constant. Potentiation and depression work in different ways, but they use the same table. We describe them separately.

Potentiation. When a neuron’s action potential exceeds its threshold at the end of an integration cycle, it will fire at the beginning of the next cycle. Before that next cycle begins, each of the neuron’s pre-synapses is checked to see when it last fired into the neuron. Suppose the potential exceeds its threshold at the end of integration cycle y , and one of its pre-synapses last fired into it at integration cycle x . We turn these numbers into a table index with the following equation:

$$index = \left\lfloor \frac{T}{2} \right\rfloor - (y - x), \tag{1}$$

where T is the size of the STDP table. If $index \geq 0$, then we use the value in that index of the STDP table to increase the synapse’s weight (up to its maximum weight). Here is an example. Suppose that the STDP table is [1, 2, 2, 3, 4, -4, -2, -1. And suppose that a neuron n has three pre-synapses, a , b and c . Finally, suppose the following events occur:

- At timestep 7, a fires into n , incrementing its action potential, but not so that it exceeds its threshold.
- At timestep 10, b fires into n , incrementing its action potential, but again, not so that it exceeds its threshold.
- At timestep 12, c fires into n , incrementing its action potential so that it does exceed its threshold.
- At the beginning of timestep 13, n will fire.

At the end of timestep 12, synapses a , b and c are checked for potentiation. Their indices will be -1, 2 and 4 respectively, meaning synapse b 's weight will potentiate by 2, and synapse c 's weight will potentiate by 4.

For depression, at the end of each integration cycle, if a neuron received charge from a synapse, but its potential does not exceed its threshold, then the synapse is a candidate for depression. Suppose we are at cycle y and the neuron last fired at the beginning of cycle x . Then we calculate a table index with the following equation:

$$index = \left\lfloor \frac{T}{2} \right\rfloor + (y - x), \quad (2)$$

If the index is a valid index of the STDP table, then its value is used to decrement the synapse's weight.

Charge Injection: There are two ways to apply external input to a RAVENS network. The first is to simply cause one of the neuron's pre-synapses to spike. The second way is to allocate a number of synapse "ports" for *charge injection*. This number is a Hardware Constant. Then, it is a Neuron Setting to enable the ports. If a neuron's ports are enabled, then input values may be delivered to the neuron using the ports as a signed binary number.

3.3 Minimum Accumulation Register Width

The large amount of configurability regarding the resolution of synapse weights, the use of charge injection, and the number of synapse ports means that some care must be taken when implementing the charge accumulation registers. If these registers are made too small, inputs can inadvertently cause overflows to occur in the calculation of the total charge before a proper comparison is made. To ensure that the width of the accumulation registers is sufficient for any programmed scenario given a set of Hardware Constants, the minimum accumulator width is set by the following equation:

$$A = \lceil \log_2 \left[\max \left\{ \begin{array}{l} ([2^W - 1] \cdot [S - C] + 2^C - 1) \\ ([2^W - 1] \cdot S) \end{array} \right] \right] \rceil \quad (3)$$

Where A is the accumulator width, W is the width of the synapse weights, S is the number of synapses, and C is the number of synapse ports used for charge injection when enabled.


4 Examples

To help illustrate the descriptions above, in the following subsections, we show example networks and how they run on RAVENS. In this presentation, the word "timestep" is equivalent to "integration cycle."

4.1 Simple integrate and fire

We start with the network pictured in Figure 1, and the following RISP settings:

- No absolute refractory period.
- No relative refractory period.
- No leak.
- No STDP.
- Standard resting potential is zero.
- The neurons *Main*, *On* and *Off* have synapses with weights of 16 that may be fired from the external environment. When we say we "apply input" to one of these neurons, what we mean is that we cause the appropriate one of these synapses to fire, which add 16 to the neuron's potential, and causes the neuron to fire at the beginning of the next timestep.

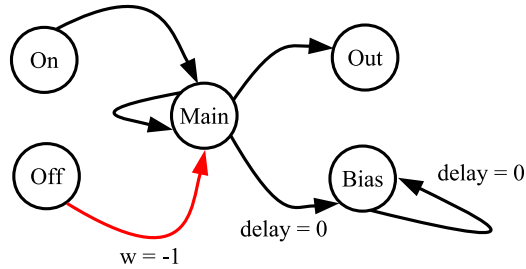

Delays, thresholds and weights are 1 unless otherwise shown.

Figure 1: Simple integrate-and-fire network.

In Table 1, we show the activity of the network over 15 timesteps, when we apply input to *Main* at timestep 0, *On* at timestep 5, and *Off* at timestep 10. It is important to note that neurons spike at the beginning of the timestep, so when charge is applied at timestep t , that raises the appropriate neuron’s charge to 16 at the end of the timestep. This causes the neuron to fire at the beginning of the next timestep. This is why *Main*, *On* and *Off* fire at timesteps 1, 6 and 11 respectively.

Next, if a synapse’s delay is d , and its pre-neuron fires at timestep t , then it will fire into its post-neuron at timestep $t + d$. For example, the synapse from *Main* to *Bias* has a delay of 0, so it fires into *Bias* at timestep 1, increasing *Bias*’ charge to 1. The synapse from *Main* to *Out* has a delay of 1, so it fires into *Out* at timestep 2.

Finally, neurons only spike when their thresholds are exceeded. This is why, for example, *Bias* ends timestep 1 with a charge of 1, but it does not spike at the beginning of timestep 2. When the spike from *On* arrives at *Main* during timestep 7, *Main*’s charge is raised to 2, and accordingly it fires at timestep 8.

The inhibitory synapse from *Off* to *Main* fires at timestep 11, decreasing *Main*’s charge to zero at timestep 12.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>Main</i>	-	-	-	-	-	16	0	0	0	0
1	-	*	-	-	-	-	0	0	0	0	1
2	-	-	-	-	-	-	1	0	0	1	1
3	-	-	-	-	-	-	1	0	0	1	1
4	-	-	-	-	-	-	1	0	0	1	1
5	<i>On</i>	-	-	-	-	-	1	16	0	1	1
6	-	-	*	-	-	-	1	0	0	1	1
7	-	-	-	-	-	-	2	0	0	1	1
8	-	*	-	-	-	-	0	0	0	1	2
9	-	-	-	-	-	*	1	0	0	2	1
10	<i>Off</i>	-	-	-	*	-	1	0	16	0	1
11	-	-	-	*	-	-	1	0	0	0	1
12	-	-	-	-	-	-	0	0	0	0	1
13	-	-	-	-	-	-	0	0	0	0	1
14	-	-	-	-	-	-	0	0	0	0	1

Table 1: Activity of the network in Figure 1.

The network shown in Figure 2 is similar to the network in Figure 1, except the synapse weights have been multiplied by two, and the synapse delays have all been set to zero. The point of this network is to make *Main* fire every timestep when it is turned “on.” You can turn *Main* on and off by applying a spike to the *On* and *Off* neurons. Whenever *Main* spikes, *Out* spikes one timestep later, and when *Main* spikes for the first time, *Bias* will start spiking one timestep later. *Bias* will then continue to spike every timestep,

regardless of what happens to *Main*.

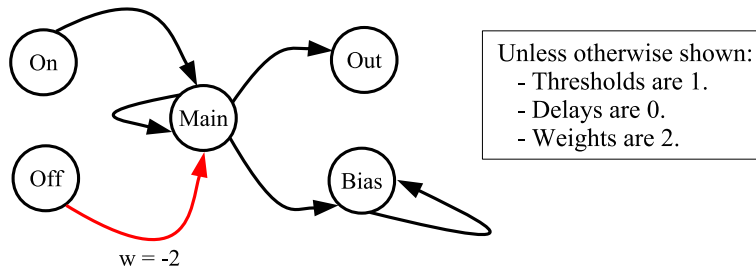


Figure 2: A network set so that *Main* fires every timestep when turned “on.”

In Table 2, we apply spikes to *On* at timesteps 0 and 8, and spikes to *Off* at timesteps 4 and 12. This causes *Main* to start spiking at timesteps 2 and 10, and to stop spiking at timesteps 6 and 14:

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>On</i>	-	-	-	-	-	0	16	0	0	0
1	-	-	*	-	-	-	2	0	0	0	0
2	-	*	-	-	-	-	2	0	0	2	2
3	-	*	-	-	*	*	2	0	0	2	4
4	<i>Off</i>	*	-	-	*	*	2	0	16	2	4
5	-	*	-	*	*	*	0	0	0	2	4
6	-	-	-	-	*	*	0	0	0	0	2
7	-	-	-	-	-	*	0	0	0	0	2
8	<i>On</i>	-	-	-	-	*	0	16	0	0	2
9	-	-	*	-	-	*	2	0	0	0	2
10	-	*	-	-	-	*	2	0	0	2	4
11	-	*	-	-	*	*	2	0	0	2	4
12	<i>Off</i>	*	-	-	*	*	2	0	16	2	4
13	-	*	-	*	*	*	0	0	0	2	4
14	-	-	-	-	*	*	0	0	0	0	2
15	-	-	-	-	-	*	0	0	0	0	2

Table 2: Activity of the network in Figure 2.

4.2 Leak and Standard Resting Potential

We next test the network depicted in Figure 3. This network configures *Out* so that its threshold is 2, its leak is 1 and its standard resting potential is -1.

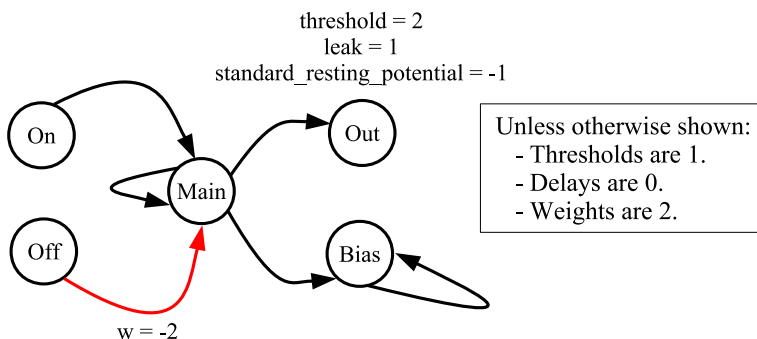


Figure 3: A network to demonstrate leak and the standard resting potential.

In Table 3, we show what happens when we apply a spike to *Main* at timestep 0. *Main* spikes every timestep, adding two units of charge to *Out*. *Out* starts with its potential equal to its standard resting potential, which is -1. At timestep 1, the synapse from *Main* to *Out* increases *Out's* potential to 1. At the beginning of timestep 2, the charge leaks from 1 to 0, and then the synapse from *Main* raises the charge from 0 to 2. Similarly, at the beginning of timestep 3, the charge leaks from 2 to 1, and then the synapse from *Main* raises the charge from 0 to 3. That means *Out* will fire at timestep 4, which it does.

After firing, *Out's* potential is reset to -1, and then the charge from *Main* increments it to 1. The pattern continues, which is why *Out* fires every three timesteps.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>Main</i>	-	-	-	-	-	16	0	0	-1	0
1	-	*	-	-	-	-	2	0	0	1	2
2	-	*	-	-	-	*	2	0	0	2	4
3	-	*	-	-	-	*	2	0	0	3	4
4	-	*	-	-	*	*	2	0	0	1	4
5	-	*	-	-	-	*	2	0	0	2	4
6	-	*	-	-	-	*	2	0	0	3	4
7	-	*	-	-	*	*	2	0	0	1	4
8	-	*	-	-	-	*	2	0	0	2	4
9	-	*	-	-	-	*	2	0	0	3	4
10	-	*	-	-	*	*	2	0	0	1	4

Table 3: Activity of the network in Figure 3. The leak causes *Out* to fire every three timesteps.

To further illustrate leak, we next use the network in Figure 4. This network resets *Out's* threshold to 1, and adds a delay of 1 to the synapse from *Main* back to itself.

When we start *Main* spiking, the delay causes it to spike every other timestep rather than every timestep. As such, *Out* leaks its charge to 0 then -1 every other timestep, at which point the synapse from *Main* increments it to 2. As such, *Out* never fires.

In Table 5 we demonstrate that a neuron's charge cannot go below its standard resting potential. We use the same network as in Table 5, but apply the input spike to *Off*. That causes *Off* to fire at timestep 1, which sends -2 units of charge to *Main*. This is shown as *Main's* charge at the end of timestep 1. It is reset to 0 at the beginning of timestep 2.

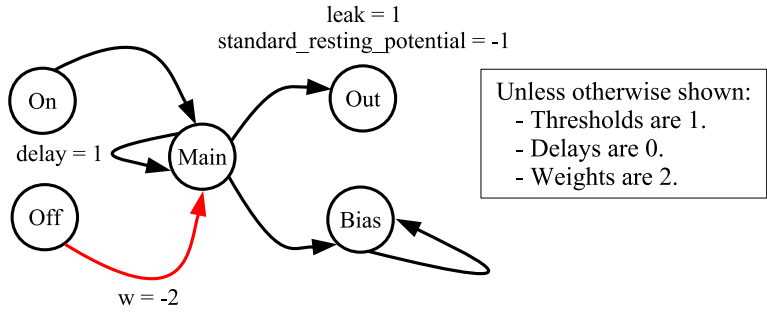


Figure 4: A network to demonstrate leak further.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>Main</i>	-	-	-	-	-	16	0	0	-1	0
1	-	*	-	-	-	-	0	0	0	1	2
2	-	-	-	-	-	*	2	0	0	0	2
3	-	*	-	-	-	*	0	0	0	1	4
4	-	-	-	-	-	*	2	0	0	0	2
5	-	*	-	-	-	*	0	0	0	1	4
6	-	-	-	-	-	*	2	0	0	0	2
7	-	*	-	-	-	*	0	0	0	1	4

Table 4: Activity of the network in Figure 4. The leak causes *Out* to to leak its charge down to -1 every other timestep, and it never fires.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>Off</i>	-	-	-	-	-	0	0	16	-1	0
1	-	-	-	*	-	-	-2	0	0	-1	0
2	-	-	-	-	-	-	0	0	0	-1	0

Table 5: Demonstrating that if charge goes below the standard resting potential, it is reset to the standard resting potential.

4.3 Absolute Refractory Period

The network in Figure 5 demonstrates the absolute refractory period. This network configures *Out* to so that its threshold is 2, and its absolute refractory period is 1.

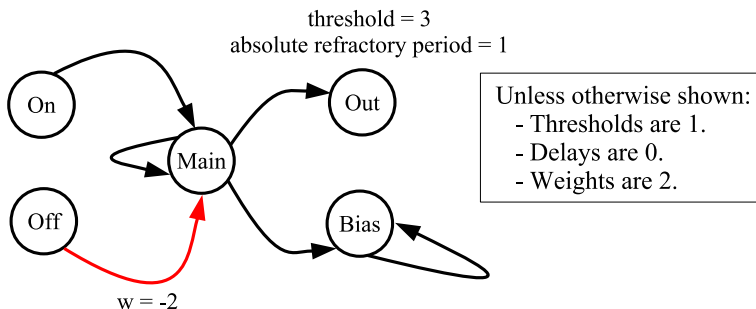


Figure 5: A network to demonstrate the absolute refractory period.

We show the activity in Table 6. We start *Main* spiking, and because *Out's* threshold is 3, it takes two cycles to have *Out's* charge exceed its threshold. In the next timestep, *Out* fires and enters its absolute refractory period. As such, it ignores the spike from *Main* and its charge remains 0. On the next timestep, the absolute refractory period is over, and it starts accumulating charge. It continues in this manner, spiking every three timesteps.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>Main</i>	-	-	-	-	-	16	0	0	0	0
1	-	*	-	-	-	-	2	0	0	2	2
2	-	*	-	-	-	*	2	0	0	4	4
3	-	*	-	-	*	*	2	0	0	0	4
4	-	*	-	-	-	*	2	0	0	2	4
5	-	*	-	-	-	*	2	0	0	4	4
6	-	*	-	-	*	*	2	0	0	0	4
7	-	*	-	-	-	*	2	0	0	2	4
8	-	*	-	-	-	*	2	0	0	4	4
9	-	*	-	-	*	*	2	0	0	0	4

Table 6: Activity of the network in Figure 5. Because of its absolute refractory period of one timestep, *Out* does not accumulate charge from *Main* in timesteps 3, 6 and 9.

4.4 Relative Refractory Period and Refractory Resting Potential

We use the network in Figure 6 to demonstrate the relative refractory period and refractory resting potential. As before, the threshold of *Out* is set to three. Both refractory periods are set to 1, and the refractory resting potential is set to -3.

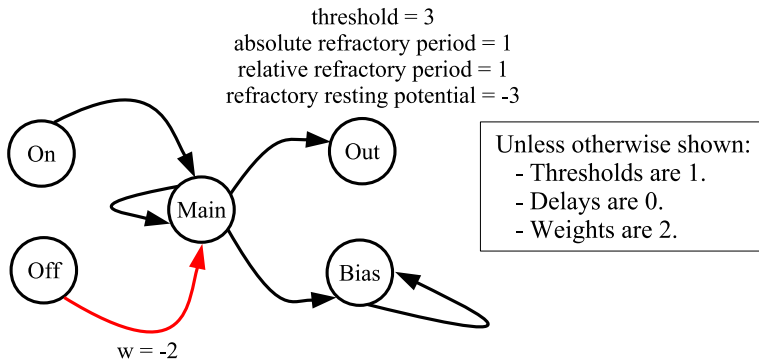


Figure 6: A network to demonstrate the relative refractory period and refractory resting potential.

j

When we start *Main* spiking, *Main's* synapse to *Out* fires twice, causing *Out* to exceed its threshold at timestep 2. It fires on timestep 3, setting its potential to its refractory resting potential, and ignoring the spike from *Main*. On timestep 4, it enters its relative refractory period, and the spike from *Main* increases its charge to -1. On timestep 5, the relative refractory period is over, so the charge is set to the standard resting potential, which is zero. It then receives its spike from *Main*, which increases its charge to two. On timestep 6, its charge exceeds its threshold, so it fires on timestep 7, and repeats the process. spikes to get *Out* to fire again. It repeats this pattern every four timesteps.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>Main</i>	-	-	-	-	-	16	0	0	0	0
1	-	*	-	-	-	-	2	0	0	2	2
2	-	*	-	-	-	*	2	0	0	4	4
3	-	*	-	-	*	*	2	0	0	-3	4
4	-	*	-	-	-	*	2	0	0	-1	4
5	-	*	-	-	-	*	2	0	0	2	4
6	-	*	-	-	-	*	2	0	0	4	4
7	-	*	-	-	*	*	2	0	0	-3	4
8	-	*	-	-	-	*	2	0	0	-1	4
9	-	*	-	-	-	*	2	0	0	2	4
10	-	*	-	-	-	*	2	0	0	4	4
11	-	*	-	-	*	*	2	0	0	-3	4

Table 7: Activity of the network in Figure 6.

4.5 STDP - Potentiation

The network in Figure 7 shows very simple potentiation. The STDP table has just one element - one. Whenever a synapse fires into a neuron, and the neuron's charge exceeds the threshold at the end of the timestep, the synapse will potentiate.

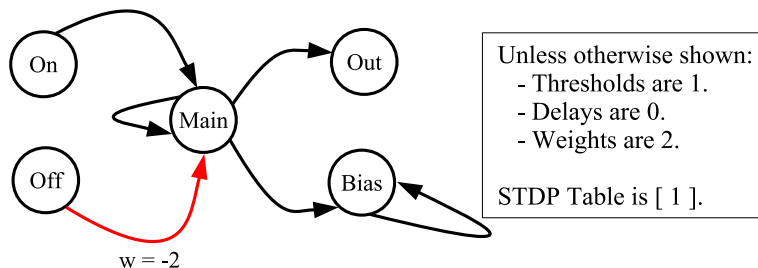


Figure 7: A network to demonstrate simple STDP potentiation.

We apply a spike to *Main* at timestep 0, which causes *Main* to fire at timestep 1. *Main's* three synapses to *Out*, *Bias* and *Main* arrive during timestep 1, setting the charge of all three neurons to two, which exceeds their thresholds. As such, all three synapses potentiate by one. This is reflected in the charges of 3 in *Main* and *Out* in timestep 2. *Bias's* charge is 5, because the synapse from *Main* has potentiated to 3, and it received a charge of 2 from its self-synapse, which also potentiates.

Those four synapses (three from *Main* and one from *Bias*) keep potentiating until they reach their maximum value of 7 (a Hardware Setting).

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>Main</i>	-	-	-	-	-	16	0	0	0	0
1	-	*	-	-	-	-	2	0	0	2	2
2	-	*	-	-	*	*	3	0	0	3	5
3	-	*	-	-	*	*	4	0	0	4	7
4	-	*	-	-	*	*	5	0	0	5	9
5	-	*	-	-	*	*	6	0	0	6	11
6	-	*	-	-	*	*	7	0	0	7	13
7	-	*	-	-	*	*	7	0	0	7	14

Table 8: Activity of the network in Figure 7.

In Figure 8, we make the potentiation table a little more complex. The table size, T , equals 2, so indices 0 and 1 are used for potentiation. There is no depression. We also reduce the weight of the synapse from *On* to one.

For this example, we apply three spikes – one to *On* at timestep 0, one to *On* at timestep 2, and one to *Main* at timestep 2. The spike from *On* arrives at timestep 1, but is not enough to make *Main* fire. When we apply the spike to *Main* at timestep 2, that causes *Main's* charge to exceed its threshold, so *Main* will fire at timestep 3. Accordingly, the synapse from *On* to *Main* potentiates by one to have a weight of two. At timestep 4, *Main* receives two spikes – one from *On* with its new weight of two, and one from *Main*, also with a weight of two. This is shown by *Main's* charge of 4 at timestep 4. The spike causes both synapses to potentiate by two to four.

At timestep four we see that:

- *Main* has a charge of 4, which has come from its self-synapse whose weight has potentiated to 4.
- *Out* has a charge of 4, which has come from its synapse from *Main*, whose weight has potentiated to 4.

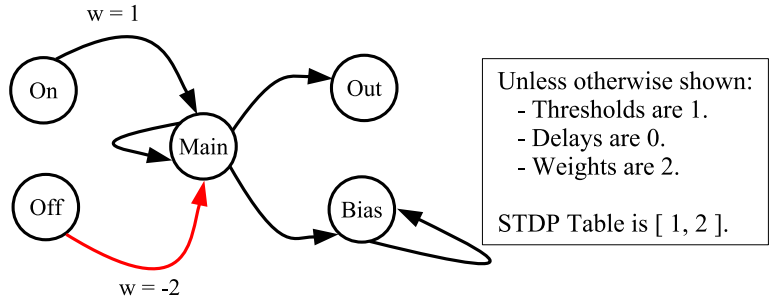


Figure 8: A network to demonstrate a two-element STDP table.

- *Bias* has a charge of 4, which has come from its synapse from *Main*, whose weight has potentiated to 4, and its self-synapse, which has not yet potentiated.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	<i>On</i> -	-	-	-	-	-	0	16	0	0	0
1	-	-	*	-	-	-	1	0	0	0	0
2	<i>On, Main</i>	-	-	-	-	-	17	16	0	0	0
3	-	*	*	-	-	-	4	0	0	2	2
4	-	*	-	-	*	*	4	0	0	4	6

Table 9: Activity of the network in Figure 8.

4.6 STDP - Depression

To demonstrate depression, we add another value to the STDP table, making it $[1, 2, -1]$. Since $T = 3$, the first two elements of the table define potentiation, and the last defines depression. We use the network in Figure 9 to demonstrate the depression. This network is similar to the last network, except the self-synapse from *Main* has a delay of two, instead of zero.

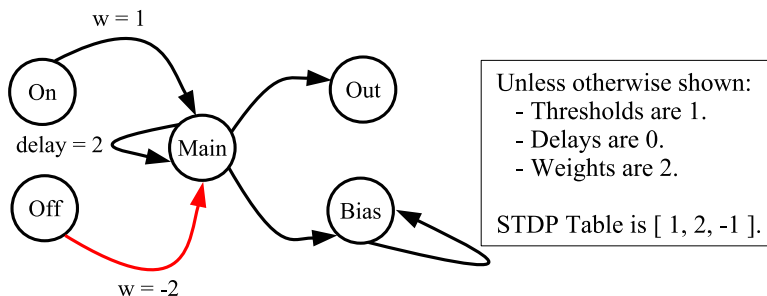


Figure 9: A network to demonstrate simple STDP depression.

To demonstrate depression, we apply spikes to both *Main* and *On* at timestep 0, and to *On* at timestep 3. The first two spikes cause *Main* and *On* to exceed their thresholds at timestep 0, and spike at timestep 1. The spike from *On* arrives at *Main* at timestep 1 and increments *Main*'s potential to 1, which does not cause it to spike. Since *Main* exceeded its potential at timestep 0, *On*'s synapse depresses to zero.

The spike from *Main*'s self-synapse arrives at timestep 3, causing *Main* to exceed its threshold and spike at timestep 4. The spike from *On* arrives at timestep 4, and its charge is zero. That is why *Main*'s charge is zero at the end of timestep 4. *On*'s synapse at this point depresses to -1.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	-	-	-	-	-	-	16	16	0	0	0
1	-	*	*	-	-	-	1	0	0	2	2
2	-	-	-	-	*	*	1	0	0	0	2
3	-	-	-	-	-	*	3	16	0	0	4
4	-	*	*	-	-	*	0	0	0	4	11

Table 10: Activity of the network in Figure 9.

Depression can do things that may see odd. Here's a last example where a synapse depresses its weight despite the fact that its neuron is constantly firing. The network is shown in Figure 10. The STDP table is larger: $[1, 1, 2, -2, -1]$. Since $T = 5$, the first three elements define potentiation, and the last two define depression.

In the network, *Out* has an absolute refractory period of 2.

We start demonstrating the activity by applying a spike to *Main* at time 0. This causes *Main* to continually spike starting at timestep 1. The synapse from *Main* arrives at *Out* in timestamp 1, causing it to spike at timestep 2. This also causes the synapse from *Main* to potentiate its weight by two to four.

In timesteps 2 and 3, *Out* is in its absolute refractory period, which means the two spikes from *Main* are ignored. Moreover, they cause the synapse depress, first by two and then by one, so that its weight is now one. In timestep 4, *Main* goes back to standard operation and receives a spike with weight 1 from main. That is why its charge is one. At timestep 5, it receives another spike, raising its potential to 2. Accordingly, it fires at timestep 6, and the synapse from *Main* potentiates to three.

In timesteps 2 and 3, *Out* is in its absolute refractory period, which means the two spikes from *Main* are ignored, and the synapse depresses to 1 and then to zero. *Out* will never spike again.

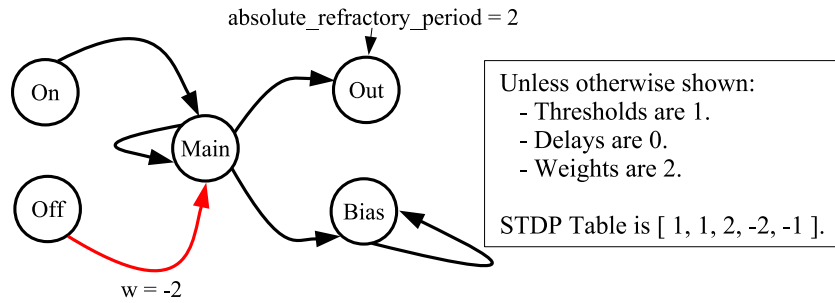


Figure 10: A second network to demonstrate depression.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	-	-	-	-	-	-	16	0	0	0	0
1	-	*	-	-	-	-	2	0	0	2	2
2	-	*	-	-	*	*	4	0	0	0	6
3	-	*	-	-	-	*	6	0	0	0	10
4	-	*	-	-	-	*	7	0	0	1	13
5	-	*	-	-	-	*	7	0	0	2	14
6	-	*	-	-	*	*	7	0	0	0	14
7	-	*	-	-	-	*	7	0	0	0	14
8	-	*	-	-	-	*	7	0	0	0	14
9	-	*	-	-	-	*	7	0	0	0	14
10	-	*	-	-	-	*	7	0	0	0	14

Table 11: Activity of the network in Figure 10.

4.7 STDP - Synapses with Spikes “In Flight”

For this we use a very simple network with a one-element STDP table. It is shown in Figure 11.

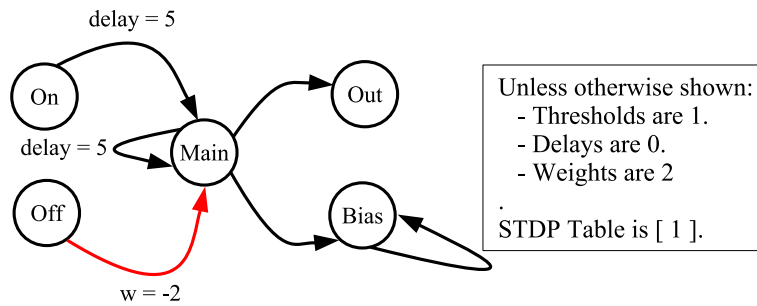


Figure 11: A network to show STDP on synapses with spikes in flight.

When we run this, we’ll apply spikes to *On* at times 0, 2 and 3. That fires the synapse from *On* to *Main* at times 1, 3 and 4, which means that those synapses will fire into *Main* at times 6, 8 and 9. When the first of these arrives at *Main*, you’ll note that the other two spikes are “in flight” on the neuron. However, when charge is added at timestep 6, the synapse potentiates, so when the second spike arrives at time 8, its weight is 3. Similarly, when the third spike arrives at time 9, its weight is 4.

Timestep	Apply spike to	Fire					Charge at end of timestep				
		<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>	<i>Main</i>	<i>On</i>	<i>Off</i>	<i>Out</i>	<i>Bias</i>
0	-	-	-	-	-	-	0	16	0	0	0
1	-	-	*	-	-	-	0	0	0	0	0
2	-	-	-	-	-	-	0	16	0	0	0
3	-	-	*	-	-	-	0	16	0	0	0
4	-	-	*	-	-	-	0	0	0	0	0
5	-	-	-	-	-	-	0	0	0	0	0
6	-	-	-	-	-	-	2	0	0	0	0
7	-	*	-	-	-	-	0	0	0	2	2
8	-	-	-	-	*	*	3	0	0	0	2
9	-	*	-	-	-	*	4	0	0	3	6

Table 12: Activity of the network in Figure 11.

5 Concluding Remarks

All of the tables in this paper were created with the TENNLab software framework and the RAVENS simulator [9, 12]. The README for RAVENS in the framework shows how to create these networks and process them to generate this information.

6 Acknowledgements

This material is based on work supported by the Air Force Research Laboratory, Information Directorate (FA8750-19-1-0025 and FA8750-21-1-1018). The authors thank ChaoHui Zheng for writing the RAVENS simulator, Bryson Gullett for writing the RAVENS-to-microcontroller compiler, and Charlie Rizzo for hand-tooling networks.

References

- [1] F. Akopyan, J. Sawada, A. Cassidy, R. Alvarez-Icaza, J. Arthur, P. Merolla, N. Imam, Y. Nakamura, P. Datta, G. J. Nam, B. Taba, M. Beakes, B. Brezzo, J. B. Kuang, R. Manohar, W. P. Risk, B. Jackson, and D. S. Modha. TrueNorth: Design and tool flow of a 65 mW 1 million neuron programmable neurosynaptic chip. *IEEE Transactions on Computer-Aided Design of Integrated Circuits and Systems*, 34(10):1537–1557, October 2015.
- [2] G. Chakma, Mark E. Dean, G. S. Rose, K. Beckmann, H. Manem, and N. Cady. A hafnium-oxide memristive dynamic adaptive neural network array. In *International Workshop on Post-Moore’s Era Supercomputing (PMES)*, Salt Lake City, UT, November 2016.
- [3] M. Davies, N. Srinivasa, T. H. Lin, G. Chinya, Y. Cao, S. H. Choday, G. Dimou, P. Joshi, N. Imam, S. Jain, Y. Liao, C. K. Lin, A. Lines, R. Liu, D. Mathaikutty, S. McCoy, A. Paul, J. Tse, G. Venkataraman, Y. H. Weng, A. Wild, Y. Yang, and H. Wang. Loihi: A neuromorphic manycore processor with on-chip learning. *IEEE Micro*, 38(1):82–99, 2018.
- [4] A. Disney, J. Reynolds, C. D. Schuman, A. Klibisz, A. Young, and J. S. Plank. DANNA: A neuromorphic software ecosystem. *Biologically Inspired Cognitive Architectures*, 9, July 2016.
- [5] S. B. Furber, F. Galluppi, S. Temple, and L. A. Plana. The SpiNNaker project. *Proceedings of the IEEE*, 102(5):652–665, May 2014.
- [6] J. P. Mitchell, M. E. Dean, G. Bruer, J. S. Plank, and G. S. Rose. DANNA 2: Dynamic adaptive neural network arrays. In *International Conference on Neuromorphic Computing Systems*, Knoxville, TN, July 2018. ACM.
- [7] J. P. Mitchell, C. D. Schuman, R. M. Patton, and T. E. Potok. Caspian: A neuromorphic development platform. In *NICE: Neuro-Inspired Computational Elements Workshop*. ACM, March 2020.
- [8] J. S. Plank, B. Gullett, A. Z. Foshie, G. S. Rose, and C. D. Schuman. Disclosure of a neuromorphic starter kit. arXiv:2211.04526, 2022.
- [9] J. S. Plank, C. D. Schuman, M. E. Dean, and G. S. Rose. Poster: The TENNLab exploratory neuromorphic software framework. In *IEEE International Conference on Rebooting Computing*, Tysons, VA, November 2018.
- [10] J. S. Plank, C. Zheng, B. Gullett, N. Skuda, C. Rizzo, C. D. Schuman, and G. S. Rose. The case for RISP: A reduced instruction spiking processor. arXiv:2206.14016, 2022.
- [11] K. Roy, A. Jaiswal, and P. Panda. Towards spike-based machine intelligence with neuromorphic computing. *Nature*, 575:607 – 617, 2019.
- [12] C. D. Schuman, J. S. Plank, M. Parsa, S. R. Kulkarni, N. Skuda, and J. P. Mitchell. A software framework for comparing training approaches for spiking neuromorphic systems. In *IJCNN: The International Joint Conference on Neural Networks*, pages 1–10, July 2021.

- [13] C. D. Schuman, T. E. Potok, R. M. Patton, J. D. Birdwell, M. E. Dean, G. S. Rose, and J. S. Plank. A survey of neuromorphic computing and neural networks in hardware. arXiv:1705.06963, May 2017.