

Set-up for observation thermal voltage noise and determination of absolute temperature and Boltzmann constant

Todor M Mishonov,^{1,*} Nikola S Serafimov,² Emil G Petkov,³ and Albert M Varonov^{1,†}

¹*Georgi Nadjakov Institute of Solid State Physics, Bulgarian Academy of Sciences,
72 Tzarigradsko Chaussee Blvd., BG-1784 Sofia, Bulgaria*

²*Institute of Nuclear Physics and Nuclear Energy, Bulgarian Academy of Sciences,
72 Tzarigradsko Chaussee Blvd., BG-1784 Sofia, Bulgaria*

³*Union of Physicists in Bulgaria, 5 James Bourchier Blvd., BG-1164 Sofia, Bulgaria*

(Dated: 11 May, 12:15)

We describe a set-up for measurement of the absolute zero by Johnson-Nyquist thermal noise which can be performed within a week in every high-school or university. Necessary electronic components and technical guidelines for the construction of this noise thermometer are given. The operating temperature used is in the tea cup range from ice to boiling water and in this sense the set-up can be given in the hands of every high school and university physics student. The measurement requires a standard multi-meter with thermocouple and voltage probe and gives excellent for education purposes percent accuracy. The explanation is oriented to university level but due to the simplicity of the explanation motivated high-school students can follow the explanation derivation of the used formulas for determination of the absolute zero and the Boltzmann constant. As a by-product our set-up gives a new method for the determination of the spectral density of the voltage e_N and current noise i_N of operational amplifiers.

I. INTRODUCTION

On intuitive level a thermal motion of gas atoms was sensed even in the time of Democritus and Lucretius Carus [1] but even now not in every university Maxwell distribution of the molecules is experimentally demonstrated. The same can be said about the thermal motion of Brownian particles which requires at least a microscope. One dimensional motion of electrons along a wire as a tram on a rail can be observed by electronic measurements but even in this case the standard equipment of the type of TeachSpin [2] is affordable only for the elite faculties of physics. The purpose of the present article is to describe how a experimental simple set-up can be made in every university and even high-school within pocket money budget.

One of the purposes of our work is to suggest a new design of the set-up for measurement of absolute temperature, Boltzmann constant k_B and electron charge q_e which is hundred times cheaper than commercially available laboratory equipment. Hand made set-ups has one additional advantage – the understanding.

To whom is addressed this study, we describe the mixture of levels of the possible readers beginning with the senior one [3, 4]:

1. Starting with “XL” category of readers. they are our colleagues preparing every year lectures on disciplines Statistical or Thermal physics. Our manuscript interpolates between the Einstein [5], Schottky [6], Johnson [7] and Nyquist [8] papers and contemporary textbooks. Touching to the scientific archaeology following the style of McCombie [9] in the excellent collection by Landsberg we give an example how the basic physical laws related to electric fluctuations can be illustrated using contemporary integrated circuits. This category of readers is typical for Eur. J. Phys. The theory corresponds to teaching of thermal physics as a theoretical discipline. Simultaneously, we explain all know-how details corresponding to the typical level of university teachers preparing new-set ups for experimental work. The set-up can be used for complimentary demonstration to the lectures on thermal physics which in many university has different names, for example thermodynamics and statistical physics, or statistical thermodynamics (as chemists call it). The multiplication of the set-up can be used for laboratory work for the initial years of university education.

2. The second “L” auditorium consists of young experimenters typically at assistant professor position which are designing set-ups for the physics laboratories. It is not supposed that these readers can follow the complete theoretical derivation of the used well-known formulae. Those formulae are their starting point of understanding how the set-up works. The detailed description how the set-up can be reproduced is addressed to this auditorium. We give all technical details of the used electronics in order to avoid additional reading of the textbooks on the art of electronics.

* E-mail: mishon@bgphysics.eu

† E-mail: varon@bgphysics.eu

We carefully cite the specification of the used integral circuits and in such a way we build a bridge between the theoretical physics and contemporary electronics; the authors of the present work have overlapping expertise. Using pocket money budget they can reproduce our set-up in a day and to compare its work with the same of the more sophisticated set-ups in terms of equipment.

3. The third (“M”) level are university students which are curious to reproduce something similar on the subject which they study, the mentioned above fundamental constants for example. There are a lot of examples available on Internet and academic journals can improve the standard of the presentation on this direction.

4. Some very motivated high-school students (category “S”) which know that temperature is related to random thermal motions of the particles. Having access to a soldering station and an electronics store they can easily reproduce the set-up and measure 2 fundamental constant at home or at school. This low number category actually contains a many our future colleagues.

5. Last but not least our 5th column are high-school teachers which some time ago were curious and motivated students. Human curiosity like childhood never passes completely. We can send by conventional post free of charge a set-up for the Physics Teachers which indicate any interest and get in touch with us. Demonstration of Maxwell distribution of atoms requires expensive vacuum technique accessible only in high tech universities while demonstration of thermal voltage fluctuations becomes available in the whole world.

Study of electric fluctuations is for decades important laboratory work in good universities, for instance Refs. [2, 10–19], however all those set-ups are difficult to be reproduced or require expensive commercial electronics. The purpose of the present work is to describe and innovation of teaching of electrical noise with a set-up which can be easily reproduced within one week in every school. Moreover, all formulae of the used electronics are elementary and derived as a homework on algebra for undergraduates.

The paper is organized as follows: after the elementary theory given in the next section II we describe our set-up in Sec. III and finally we represent the typical experimental data in Sec. IV. In Sec. V we conclude what can be done in order slightly to improve high-school education related to thermal phenomena.

II. THEORY

A. Classical statistics

We start with recalling the Nyquist theorem [8] for the spectral density of the voltage noise $(\mathcal{E}^2)_f$ of an frequency dependent impedance $Z(\omega)$ at temperature T'

$$(\mathcal{E}^2)_f = 4\mathcal{R}(\omega)T, \quad T = k_{\text{B}}T' \gg \hbar\omega, \quad \mathcal{R} = \Re(Z), \quad \omega = 2\pi f, \quad (1)$$

where k_{B} is the Boltzmann constant and \hbar is the Planck one. The temperature in energy units is denoted by T , while in Kelvins by T' , and f is frequency in Hz.

As a simple illustration of calculation mean squared voltage using this theorem let us analyze parallelly connected capacitor with capacitance C and a resistor with resistance R . The total admittance is

$$\frac{1}{Z} = \frac{1}{R} + j\omega C, \quad j = -i, \quad (2)$$

where i is the imaginary unit which participate in the formula for the amplitude of plane electromagnetic waves $\exp[i(\mathbf{k} \cdot \mathbf{r} - \omega t')]$. In electronics usually $\exp[j(\omega t')] = \exp[i(-\omega t')]$. For the real part of the impedance Eq. (2) we have

$$\mathcal{R}(\omega) = \frac{R}{1 + (\omega\tau)^2}, \quad \tau = RC. \quad (3)$$

The substitution in the Nyquists theorem Eq. (1) gives for the total mean square of the voltage

$$\langle U^2 \rangle = \int_0^\infty (\mathcal{E}^2)_f df = \frac{T}{C}, \quad \frac{1}{2} C \langle U^2 \rangle = \frac{1}{2} T, \quad (4)$$

in agreement with the equipartition theorem. As the frequency independent white noise spectral density $4RT$ is the only one which leads to the equipartition theorem where the dissipation coefficient R does not participate one can conclude that Nyquist theorem is a consequence of the equipartition theorem. Albert Einstein [5] was the first who suggested that Boltzmann constant k_{B} can be measured using this relation if the thermally fluctuating voltage on the capacitor can be significantly amplified. However, our methodological experiment was made quite recently [20] and the set-up was given to the participant of the Experimental Physics Olympiad [3] The drift of the zero was the

obstacle this method [21] to be used hundred years ago, but now the low noise operational amplifiers (OpAmp) allow the construction of a pre-amplifier with amplification $Y = 10^6 = 10^{60/10}$ (million times, 60 decibels in voltage or 120 dB in power) and to measure averaged square of the amplified voltage [3, 20]

$$\langle U_a^2 \rangle = |Y|^2 \langle U^2 \rangle = |Y|^2 \frac{k_B T'}{C}, \quad U_a = Y U. \quad (5)$$

Similar university laboratory set-up was used to determine electron charge q_e [22] and hundred times multiplied set-up was given at the 6th Experimental Physics Olympiad [4]. No doubts this is methodologically instructive but the idea obtained contemporary development and for determination of the absolute temperature T' (i.e. for the new Kelvin) it is quite possible thermal noise to be accepted in the future as a new standard, for the development of the metrology, for example, the recent review Ref. [17] and references therein.

In order to illustrate the metrological idea to use Johnson [7]-Nyquist [8] noise as a thermometer let us analyze a simple consequence: the thermal noise of a resistor with resistance R_N is amplified Y times and then is applied to a Low-Pass Filter (LPF) with is actually a voltage divider with transmission coefficient (transmission function or transmittance)

$$\Upsilon_{\text{LPF}} = \frac{1/j\omega C_L}{R_L + 1/j\omega C_L} = \frac{1}{1 + j\omega\tau_L}, \quad |\Upsilon_{\text{LPF}}|^2 = \frac{1}{1 + (\omega\tau_L)^2}, \quad (6)$$

$$\mathcal{B}_{\text{LPF}} = \int_0^\infty |\Upsilon_{\text{LPF}}|^2 df = \frac{1}{4\tau_L} = \frac{1}{4R_L C_L}, \quad \tau_L \equiv R_L C_L. \quad (7)$$

For the filtered voltage U_f we have in the frequency representation

$$U_f = \Upsilon_{\text{LPF}} U_a, \quad \Upsilon_{\text{LPF}} = \frac{e^{j\varphi_L}}{\sqrt{1 + (\omega\tau_L)^2}}, \quad \tan \varphi_L = -\omega\tau_L. \quad (8)$$

and for its mean square

$$\langle U_f^2 \rangle = 4R_N T \frac{|Y|^2}{4R_L C_L} = 4R_N T B, \quad B \equiv \frac{|Y|^2}{4R_L C_L}. \quad (9)$$

This result differs from the initial one Eq. (5) only with the multiplier R_N/R_L and replacement of C with C_L .

In the general case for arbitrary frequency, for the dependence of the amplification $\Upsilon_a(\omega)$ of the pre-amplifier and the transmission function of the filter $\Upsilon_f(\omega)$ we have to measure the averaged square of the amplified thermal voltage

$$\langle U_f^2 \rangle = 4R_N k_B T' \mathcal{B}, \quad \mathcal{B} \equiv \int_0^\infty |\Upsilon_a \Upsilon_f|^2 df \approx B \quad (10)$$

for the thermal noise thermometry. The calculation or measurement of the so defined pass bandwidth \mathcal{B} is a routine problem of electronic engineering. For a high-frequency pre-amplifier it is often necessary to know only the bandwidth of the filter $\mathcal{B}_{\text{LPF}} \equiv \int_0^\infty |\Upsilon_{\text{LPF}}|^2 df$, and for the total pass-band width to use the approximation of frequency independent amplification $\mathcal{B} \approx Y^2 \mathcal{B}_{\text{LPF}}$. Formally for the exact result we have to substitute $B \rightarrow \mathcal{B}$ and the bandwidths have dimension frequency.

In any case for the measurement of averaged square of the filtered amplified voltage $\langle U_f^2 \rangle$ we have to use analog multipliers for which the output voltage U_W is a product of the two input voltages U_X and U_Y divided to a specific for the product constant U_m

$$U_W = \frac{U_X U_Y}{U_m}, \quad U_X = U_Y = U_f, \quad U_f = \Upsilon_{\text{LPF}} U_a. \quad (11)$$

These input voltages have to be equal to the filtered amplified by the pre-amplifier voltage U_f . The technical details are described in the next section but before that next we describe in short the low temperature and high-frequency asymptotic.

B. General case of thermal fluctuations

The low frequency and high temperature approximation Eq. (1) for the spectral density of the voltage noise is applicable practically for all practical cases of electronics. But for some special cases, imagine mK temperatures and

simultaneously GHz frequencies, we have to take into account quantum effects. In this case the temperature in Eq. (1) has to be substituted by the thermal averaged energy of a quantum oscillator with inductance L and capacitance C

$$T \rightarrow E_{\text{osc}} = \left\langle \frac{1}{2} L \hat{I}^2 + \frac{1}{2} \frac{\hat{Q}^2}{C} \right\rangle = \frac{\hbar\omega_0/2}{\tanh(\hbar\omega_0/2T)}, \quad L \hat{I} \hat{Q} - \hat{Q} L \hat{I} = -i\hbar, \quad \omega_0 \equiv \frac{1}{\sqrt{LC}}, \quad (12)$$

where $\hat{\cdot}$ denotes an operator, \hat{Q} is the quantum operator of the charge and $L \hat{I}$ is the same of the canonical variable analogous to the momentum. For the proof it is necessary to apply the detailed balance principle to the quantum oscillator exchanging energy with a resistor with resistance R immersed in environment with temperature T' . And we arrive at the general result

$$(\mathcal{E}^2)_f = 4\mathcal{R}(\omega_0) \frac{\hbar\omega_0/2}{\tanh(\hbar\omega_0/2T)}. \quad (13)$$

The proof is very simple [23–25], for the total impedance of the sequential resonance circuit we have

$$\mathcal{Z} = R + j\omega L + \frac{1}{j\omega C}, \quad |\mathcal{Z}|^2 = R^2 + \left(\omega L - \frac{1}{j\omega C} \right)^2. \quad (14)$$

Then for the spectral densities for the current and charge on the capacitor we have

$$(I^2)_f = \frac{(\mathcal{E}^2)_f}{|\mathcal{Z}|^2}, \quad (Q^2)_f = \omega^2 (I^2)_f. \quad (15)$$

And finally elementary integration of the spectral densities of the energy gives the averaged energy of the oscillator Eq. (12)

$$E_{\text{osc}} = \int_0^\infty \left(\frac{1}{2} L (I^2)_f + \frac{1}{2C} (Q^2)_f \right) df = \hbar\omega_0 \left(\frac{1}{\exp(\hbar\omega_0/T) - 1} + \frac{1}{2} \right) \quad (16)$$

and in Eq. (13) the auxiliary index “0” from Eq. (13) can be omitted. The general formula for the spectral density of the voltage can be derived using the Einstein approach of the detailed balance principle applied to a quantum oscillator. Further applying casual principle one can derive the fluctuation-dissipation theorem as a consequence of Nyquist theorem [25].

III. EXPERIMENTAL SET-UP

In our set-up drawn schematically in Fig. 1 a multiplier AD633 [26] for which $U_m = 10$ V. It is self-understanding that drawing the schematics the resistance of wires and paths in the printable circuit boards is much smaller than the resistance of the resistors and the capacity of the triaxial cable is much smaller than the capacity of the low-pass filter C_L . Two of voltage inputs are grounded $X_2 = Y_2 = 0$ and the filtered amplified voltage

$$X_1 = Y_1 = U_f, \quad U_f = \Upsilon_{\text{LPF}} U_a \quad (17)$$

is applied to the other two. During measurement $|U_a| < 1$ V to avoid non-linear effects. Let us recall the general formula for this multiplier [26, Eq. 1, Fig. 12 and Fig. 17]

$$W = \frac{(X_1 - X_2)(Y_1 - Y_2)}{U_m} + Z, \quad Z = \frac{R_2}{R_1 + R_2} W, \quad W = \frac{(X_1 - X_2)(Y_1 - Y_2)}{U_m} \frac{R_1 + R_2}{R_1}. \quad (18)$$

Elementary substitution of these formulae from the specification gives

$$W = \frac{U_f^2}{\tilde{U}}, \quad \tilde{U} = \frac{R_1}{R_1 + R_2} U_m = 1 \text{ V}, \quad R_1 = 2 \text{ k}\Omega, \quad R_2 = 18 \text{ k}\Omega. \quad (19)$$

The voltage W directly proportional to the square of the filtered voltage U_f is applied to another averaging LPF with large time constant

$$\tau_{\text{av}} = R_{\text{av}} C_{\text{av}} = 15 \text{ s}, \quad R_{\text{av}} = 1.5 \text{ M}\Omega, \quad C_{\text{av}} = 10 \mu\text{F}.$$

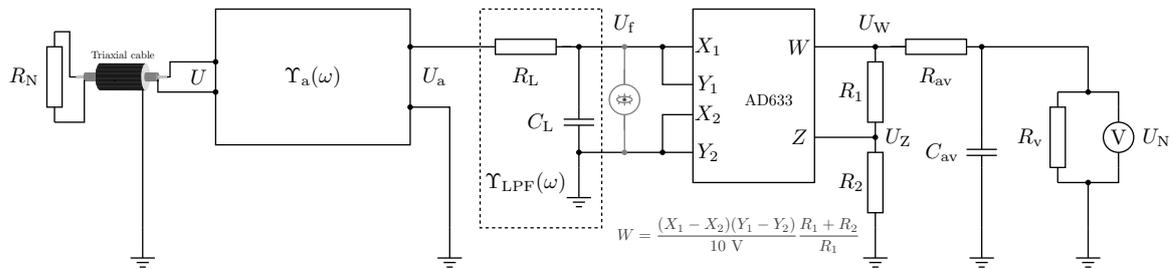


FIG. 1. Schematic representation of the experimental set-up, consisting from left to right of a noise resistor R_N whose thermal voltage fluctuations U are to be measured, a triaxial cable which inner conductor and shield are connected to R_N . The outer shield is grounded to the common point of the pre-amplifier; this is crucial know-how to avoid ringing. Actually the use of a triaxial cable is crucial innovation of the described set-up, without it is extremely difficult to make noise thermometry and cooling and heating of the resistor is significantly more difficult. The pre-amplifier with $\Upsilon_a(\omega)$ amplification shown in detail in Fig. 2, a low-pass filter with $\Upsilon_{\text{LPF}}(\omega)$ response, an AD633 analog multiplier with given formula for multiplication [26, Fig. 17], an averaging filter and a voltmeter. A repeater may be added before to the voltmeter, or else the internal resistance of the voltmeter R_V has to be taken into account in this final voltage divider. For visual illustration of the amplified thermal noise an oscilloscope marked with an eye is necessary to be connected. Tracing the path of the noise signal: the noise resistor R_N creates a thermal noise voltage U which is amplified by the pre-amplifier to U_a and then filtered by a Low Pass Filter (LPF) to U_f . This filtered voltage U_f is further applied to the 2 inputs X_1 and Y_1 of a multiplier as shown in Eq. 17. The output voltage of the multiplier W is divided by the voltage divider with resistors R_1 and R_2 . The divided voltage U_Z is applied to the adding input of the multiplier; in Eq. (18) we use the simplified notations $W \equiv U_W$ and analogously $Z \equiv U_Z$. Finally the voltmeter shows the averaged output voltage of the multiplier passed through a voltage divider $U_N = \langle W \rangle R_V / (R_V + R_{\text{av}})$, see Eq. (19) and Eq. (20). If additionally a shot noise current from a photo-diode is applied through R_N , as it is described in great detail in Refs. [4, 22] this set-up can also be used for determination of the electron charge q_e .

This averaged voltage is measured by a multimeter with an internal resistance R_V of the order of 1 or 10 M Ω depending on the range of application. This DC voltmeter measures the noise created voltage

$$U_N = \frac{R_V \langle W \rangle}{R_V + R_{\text{av}}} = \frac{R_V}{R_V + R_{\text{av}}} \frac{\langle U_f^2 \rangle}{\tilde{U}} = \frac{\langle U_f^2 \rangle}{U^*}, \quad U^* \equiv \frac{R_V + R_{\text{av}}}{R_V} \tilde{U} = \frac{R_V + R_{\text{av}}}{R_V} \frac{R_1}{R_1 + R_2} U_m. \quad (20)$$

Here we take into account another voltage divider. After substitution of $\langle U_f^2 \rangle$ from Eq. (9)

$$U_N = \frac{B}{U^*} 4R_N k_B T', \quad (21)$$

where $k_B T'$ is the interesting for us spectral density of the thermal voltage but it is not the whole truth. To this spectral density we have to add the voltage noise of the first operational amplifier $e_N \approx 0.9 \text{ nV}/\sqrt{\text{Hz}}$ [Table 1][27] and the current noise $i_N \approx 2.4 \text{ pA}/\sqrt{\text{Hz}}$. In such a way the final measurable voltage reads

$$U_N = [e_N^2 + 4R_N k_B T' + R_N^2 i_N^2] / \mathcal{A}, \quad 1/\mathcal{A} \equiv \frac{B}{U^*} = \frac{R_N}{(R_V + R_{\text{av}})} \frac{(R_1 + R_2)}{R_1 U_m} B, \quad B = \frac{|Y|^2}{4R_L C_L} (1 - \varepsilon), \quad (22)$$

where the small correction

$$\varepsilon \equiv 1 - \frac{B}{U^*}, \quad B = (1 - \varepsilon) U^* \quad (23)$$

takes into account more precise numerical integration for the exact bandwidth Eq. (10) of the pre-amplifier depicted in Fig. 2. This pre-amplifier is a sequence of a buffer with a double Non Inverting Amplifiers (NIA) with amplification Υ_{NIA} with a virtual ground between them, followed by a difference amplifier (Δ) with amplification Υ_{Δ} ending with an Inverting Amplifier (IA) with amplification Υ_{IA} . In such a way the total amplification Υ_a is a product of the sequence

$$\Upsilon_a(\omega) = \Upsilon_{\text{NIA}}(\omega) \Upsilon_{\Delta}(\omega) \Upsilon_{\text{IA}}(\omega). \quad (24)$$

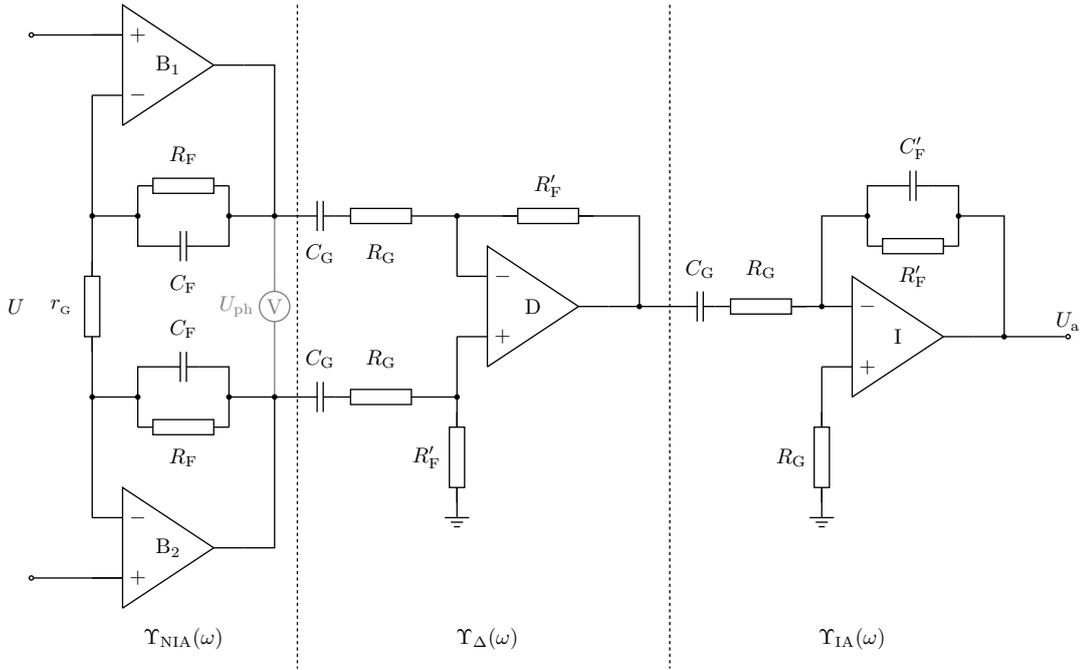


FIG. 2. Circuit representation of the used pre-amplifier in the experimental set-up schematically presented in Fig. 1. The pre-amplifier consists of coupled NIA or buffer with amplification $\Upsilon_{NIA}(\omega)$ to the left of the first dashed vertical, followed by a difference amplifier in the middle between the two verticals with amplification $\Upsilon_{\Delta}(\omega)$ and ending with an IA to the right with amplification $\Upsilon_{IA}(\omega)$. The whole amplification of the pre-amplifier $\Upsilon_a(\omega) = \Upsilon_{NIA}(\omega)\Upsilon_{\Delta}(\omega)\Upsilon_{IA}(\omega)$. The first couple ADA4898-2 [27] OpAmps labeled B1 and B2 are for the buffer or coupled NIA amplifiers, while the second couple are for the difference amplifier with label D and for the IA with label I. The first two amplifiers $\Upsilon_{NIA}(\omega)\Upsilon_{\Delta}(\omega)$ are actually one instrumentation amplifier. The voltage supplies for the OpAmps are omitted here for brevity and given in Fig. 3.

The amplification of these amplifiers is given by the well-known formulas described in many textbooks and specifications; see, for example, Ref. [28, Eq. 4, Eq. 7, Fig. 52 and Fig. 53]

$$\Upsilon_{NIA} = \frac{1}{\frac{1}{\frac{Z_F}{Z_G} + 1} + \tau s}, \quad Z_G = \frac{r_G}{2}, \quad \frac{1}{Z_F} = \frac{1}{R_F} + s C_F, \quad (25)$$

$$\Upsilon_{\Delta} = \frac{1}{\frac{Z'_G}{R'_F} + \left(\frac{Z'_G}{R'_F} + 1\right)\tau s}, \quad Z'_G = R_G + \frac{1}{s C_G}, \quad \tau = \frac{1}{2\pi f_c} \quad (26)$$

$$\Upsilon_{IA} = -\frac{1}{\frac{Z'_G}{Z'_F} + \left(\frac{Z'_G}{Z'_F} + 1\right)\tau s}, \quad \frac{1}{Z'_F} = \frac{1}{R'_F} + s C'_F, \quad (27)$$

where $s \equiv j\omega$ is the purely imaginary at real frequencies ω , and time-constant τ is parameterized by the crossover frequency f_c of the OpAmps. For the used dual low noise OpAmp ADA4898-2 [27] $f_c = 97.73$ MHz [29] In short, the initial signal U is amplified, then filtered, before being squared

$$U_f = \Upsilon_{LPF} U_a, \quad U_a = \Upsilon_a U = \Upsilon_{IA} \Upsilon_{\Delta} \Upsilon_{NIA} U. \quad (28)$$

The numerical integration can be easily performed using software products of the type of Mathematica or Maple, or even by direct programming with languages such as Python or Fortran. It is simpler to use the complex Υ and to calculate corresponding modulus $|\Upsilon|^2$. This calculation of Eq. (10) gives $\mathcal{B} = 55.44$ PHz and from Eq. (23) $\varepsilon = 8.7\%$.

In the broad frequency interval

$$\frac{1}{R_G C_G} \ll \omega \ll \frac{1}{R_F C_F} \quad (29)$$

the amplification is almost frequency independent

$$Y_{\text{NIA}} = \frac{R_{\text{F}}}{r_{\text{G}}/2} + 1, \quad Y_{\Delta} = -Y_{\text{IA}} = \frac{R'_{\text{F}}}{R'_{\text{G}}}, \quad Y = Y_{\text{NIA}}Y_{\Delta}Y_{\text{IA}} = -1.01 \times 10^6. \quad (30)$$

The bandwidth of the filter must be in this interval

$$\frac{1}{R_{\text{G}}C_{\text{G}}} \ll \frac{1}{R_{\text{L}}C_{\text{L}}} \ll \frac{1}{R_{\text{F}}C_{\text{F}}}. \quad (31)$$

We have also to give technical details related to the power supply of the circuit shown in Fig. 3. The large $10 \mu\text{F}$

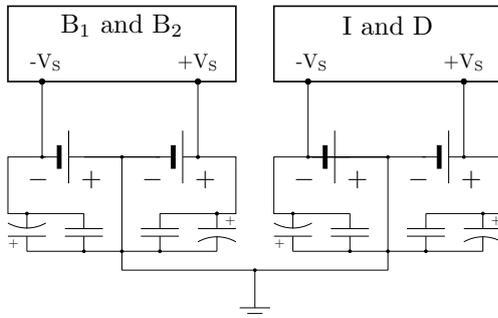


FIG. 3. Power supplies for the both dual ADA4898-2. Every dual OpAmp has different 9 V batteries for its power supply. Left couple of batteries gives voltage supply $+V_{\text{S}} = 9\text{ V}$ and $-V_{\text{S}} = 9\text{ V}$ for the buffer (B_1) and (B_2), see Fig. 2. While the right batteries give voltage supply for the OpAmp of the difference (D) and inverting amplifier (I) from Fig. 2. In parallel to each of the 2 batteries one electrolytic $10 \mu\text{F}$ and one ceramic $0.1 \mu\text{F}$ capacitor are soldered. The ground (common point) is connected also to the most external shield of the triaxial cable. This obligatory screening together with capacitors prevents the self-excitation (ringing) of the amplifier with amplification of 10^6 or 60 dB in voltage. The use of two couple batteries makes the set-up much more stable against the ringing which always appears at big enough noise resistor R_{N} . This self excitation can be easily observed by an oscilloscope, but physical conditions of the stability is an interesting question for further studies of similar set-ups.

capacitors [30, 31] stop the offset voltages of the operational amplifiers ADA4898-2, their floating of the zero, their low frequency $1/f$ noise and the low frequency AC voltages coming from the electric power supply in the lab. We use two sets of 9 V batteries in order to guarantee several hours continuous experimental work with the described set-up, it is also possible to use also a couple of 12 V lead batteries. The electrolytic capacitors parallel to the batteries ensure damping and the fast capacitors short circuit the undesired feedback which could create self-excitation (ringing) via the voltage supply probes of the operational amplifiers. These capacitors are suggested in the specification of the used ADA4898-2 [27] and AD633 [26] integral circuits. Finally as the time constant of the final voltage averaging filter is 15 seconds and it is necessary to wait at least 1 minute (4 time constants) in order initial voltage to be “forgotten” and measured voltage to be established; $\exp(-4) < 2\%$. This 1 minute does not include the thermalization time of R_{N} that is typically several minutes in case the resistor is being heated or cooled.

We wish to emphasize that the described set-up does not require specialized commercial electronic equipment like Butterworth filters, oscilloscopes, computers, preamplifiers and laboratory power supplies used in many educational noise thermometry experiments [10–12, 18, 19, 32]; see also the references therein. The electronic circuit is so stable that it does not even require screening metallic boxes and BNC cables between them. It is pedagogically instructive that all details are visible and the only grounding is the connection of the outer shield of the triaxial cable to the common point of the pre-amplifier. The used triaxial cable is Multicomp Pro RG403, practically a coaxial cable with a second additional shield. In such a way the small noise signal is transmitted reliably to the inner coaxial cable and the parasitic capacitive feed between the amplified signal and input probes of the buffer is reliably minimized and the ringing is avoided.

Summarizing, all values of the circuit elements of the set-up are given in Table I.

Before measuring electric fluctuations, it is necessary to determine the “eigen”-noise of the amplifier, terminating the triaxial cable with a short circuit, i.e. $R_{\text{N}} = 0$. Rewriting the final result Eq. (22) for experimental data processing is convenient to use the variable and its polynomial regressions

$$S \equiv \mathcal{A}U_{\text{N}} = e_{\text{N}}^2 + 4R_{\text{N}}k_{\text{B}}T' + R_{\text{N}}^2i_{\text{N}}^2, \quad \mathcal{A} \equiv \frac{U^*}{\mathcal{B}} = \frac{(R_{\text{V}} + R_{\text{av}})R_1U_{\text{m}}}{R_{\text{V}}(R_1 + R_2)\mathcal{B}} = 45 \text{ aV/Hz}. \quad (32)$$

TABLE I. Table of the numerical values of the circuit elements from Fig. 1 and Fig. 2.

Circuit element or parameter	Value
R_N	100 Ω
R_L	100 Ω
C_L	42 nF
$1/2\pi R_L C_L$	37.9 kHz
C_{cable}	96.5 pF/m
r_{cable}	0.8 Ω /m
r_G	20 Ω
R_F	1 k Ω
C_F	10 pF
C_G	10 μ F
R_G	100 Ω
$1/2\pi R_G C_G$	159 Hz
R'_F	10 k Ω
C'_F	10 pF
R_1	2 k Ω
R_2	18 k Ω
U_0	10 V
R_{av}	1.5 M Ω
C_{av}	10 μ F
$R_{\text{av}} C_{\text{av}}$	15 s
R_V	1 M Ω
$+V_S$	+9 V [26, 27]
$-V_S$	-9 V [26, 27]
e_N	0.9 nV/ $\sqrt{\text{Hz}}$ [27, Table 1]
i_N	2.4 pA/ $\sqrt{\text{Hz}}$ [27, Table 1]

The variable \mathcal{S} has dimension V^2/Hz ; this is actually the total low frequency spectral density of the voltage noise. The noise-meter calibration constant \mathcal{A} is the most important parameter of the device giving the connection between the measured voltage U_N and the spectral density of the voltage noise \mathcal{S} . The quantity $q_e \mathcal{A}$ has dimension of action (energy times time as Planck constant \hbar). Our set-up is a device for measurement of the low frequency spectral density of the voltage noise. The constant voltage measured by a DC voltmeter U_N is proportional to the low frequency spectral density of the noise \mathcal{S} , and \mathcal{A} is a constant specific for the noise-meter which can be expressed by the parameters of the circuit.

Here we have to make a special clarification. Administrators related to education could say that spectral density is a sophisticated notion belonging to final courses of university education. However, spectral density in sense of energy per unit frequency is used in every high-school textbook in which black body radiation is described. Omitting units of the ordinate intensity of black-body radiation as function of frequency or wavelength is drawn in textbooks for a century. Let us introduce dimensionless frequency

$$w = \frac{\hbar\omega}{T} = \frac{hf}{k_B T'}, \quad \omega = 2\pi f, \quad h = 2\pi\hbar, \quad T = k_B T'. \quad (33)$$

In space dimension D the intensity of the black-body radiation is proportional to the function

$$I(\omega; D) \propto \frac{w^D}{\exp(w) - 1}; \quad (34)$$

theoretical explanation and experimental observation of this universal spectral density in $D = 3$ has been awarded by 4 Nobel prizes (Planck 1918, Penzias & Wilson 1978, Mather & Smooth 2006, Peebles 2019). The original consideration of thermal voltage fluctuations Eq. (1) by Nyquist [8] is based on the 1 dimensional black-body radiation and its low frequency limit

$$I(\omega \ll 1; D = 1) \propto \frac{w}{\exp(w) - 1} \approx 1. \quad (35)$$

This low frequency spectral density \mathcal{S} is measured by our set-up.

For short circuit in the input (front-end) we obtain a new method for determination of the voltage noise of the OpAmp

$$e_N = \sqrt{\mathcal{S}_0}, \quad \mathcal{S}_0 \equiv \mathcal{S}(R_N = 0). \quad (36)$$

At fixed temperature T' we can perform measurement of \mathcal{S}_i for a set of noise resistors R_N, i for $i = 1, 2, \dots, N$. The parabolic fit of the data \mathcal{S} versus R_N

$$\mathcal{S} = a_0 + a_1 R_N + a_2 R_N^2 \quad (37)$$

gives a by product a new method for determination of the current noise and Boltzmann constant

$$e_N = \sqrt{\mathcal{S}_0} = \sqrt{a_0}, \quad a_1 = \left. \frac{d\mathcal{S}}{dR_N} \right|_{R_N=0}, \quad k_B = \frac{a_1}{4T'}, \quad a_2 = \left. \frac{d^2\mathcal{S}}{2dR_N^2} \right|_{R_N=0}, \quad i_N = \sqrt{a_2}. \quad (38)$$

The derivatives here are related to the parabolic fit of the dependence $\mathcal{S}(R_N)$. Here we hypocritically suppose that we know the absolute temperature. However, studying thermal noise it is most interesting to perform temperature measurements and to try to determine the absolute zero. If we use small noise resistor $R_N = 50 \Omega$ the quadratic term $\propto a_2$ has negligible influence. For a set of temperatures t'_j (measured in Celsius degrees) we can measure \mathcal{S}_j and additionally the of-sets $\mathcal{S}_{0,j}$ for short circuits $R_N = 0 \Omega$. Then we can perform the linear regression and to extrapolate the absolute zero temperature t'_0

$$\mathcal{S} - \mathcal{S}_0 = b_0 + b_1 t' = (t' - t'_0) b_1, \quad t'_0 = -b_0/b_1. \quad (39)$$

At this subtraction cancels the offset of the U_W voltage which actually has to be written in the right side of Eq. (11). The temperature range between ice cold and boiling water is enough for a reliable measurement meaning that liquid nitrogen or dry ice are not required but their inclusion would of course dramatically improve the accuracy. Operating with tea cup temperatures $t' \in (0, 80)^\circ\text{C}$, even for a teenager is safe to make the experiment in the kitchen. The higher temperature can be used is limited by the insulation of the triaxial cable 190°C . But in principle using platinum 100 resistors much higher temperatures can be used in an appropriate laboratory. For low temperatures however there is no limitation but the accuracy becomes smaller. The accuracy is however not essential the purpose is understanding.

Here we have to mention the applicability of the linear regression analysis since Eq. (37) requires parabolic regression with respect to R_N . In order to be able to analyze linearly this equation, we need the quadratic term to be negligible leading to the condition $R_N \ll e_N/i_N = 375 \Omega$ according to the parameters from Table I. On the other hand according to Eq. (1) the voltage noise of the ADA4898-2 operational amplifier, $e_N = 0.9 \text{ nV}$ corresponds to the thermal noise of a resistor of $e_N^2/4k_B T'_{\text{room}} = 53.8 \text{ K}$ at $T'_{\text{room}} = 273 + 25 = 297 \text{ K}$. The geometric mean ($\sqrt{53.8 \times 373} = 142$) Ω shows that a noise resistor $R_N = 100 \Omega$ is close to the optimal value if we wish to study temperature dependence if the Johnson noise with our set-up. As a resistor it is possible to use platinum 100Ω resistance temperature detectors or similar realizations [33]. In this case temperature dependence of the noise resistor $R_N(t')$ can be used as a good reference thermometer well calibrated in 1 kK interval $t' \in (-200, 800)^\circ\text{C}$. And simultaneously in the same interval we can observe thermal fluctuations of the voltage. In such a way contemporary technology of low noise operational amplifiers can be optimally used for educational purposes. More detailed analysis of the influence of the quadratic term comes from the input current noise i_N is given in Sec. B

A. Additional determination of k_B and q_e

The described device can be used also for determination of the electron charge q_e by Schottky [6, 34] noise. In this case to the spectral density of the voltage and current we have to add the contribution by the Schottky shot noise created by the averaged photo-current

$$\mathcal{S}_+ = R_N^2 i_{N,+}^2 = 2q_e I_{\text{ph}} R_N^2, \quad i_{N,+}^2 = 2q_e I_{\text{ph}}. \quad (40)$$

For a methodological derivation [22] and application for high-school students see Ref. [4] The electron charge can be determined as derivative of the noise spectral density $\propto U_N$ with respect of the averaged photo voltage measured after the amplification by the buffer

$$U_{\text{ph}} = Y_{\text{NIA}} R_N I_{\text{ph}} \quad (41)$$

proportional to averaged photo-current I_{ph} (see schematics in Fig. 2). The story is well-known, a young post-doc of Planck (Walter Schottky) attended in a lecture given by Einstein and impressed by the consideration of fluctuation he suggested that electron charge q_e can be also determined by examining of current fluctuations. The electron charge can be expressed from the Schottky formula for the current noise $i_{N,+}^2$ and averaged photo-current I_{ph} Eq. (40). The excess spectral current density $i_{N,+}^2$ have to be expressed by the excess voltage noise density \mathcal{S} . According Eq. (32) the voltage spectral density \mathcal{S} can be expressed by the DC voltage of the voltmeter U_N . In this formula the device constant of the noise meter \mathcal{A} can be expressed by the pass-bandwidth \mathcal{B} . The pass-bandwidth can be expressed from Eq. (22) by the maximal amplification Y from Eq. (30) and the bandwidth of the filter. For educational illustrations the small correction ε defined by Eq. (23) can be neglected. Its evaluation requires numerical integration Eq. (10). Performing this chain of substitutions we finally obtain [22]

$$q_e = \frac{di_{N,+}^2}{2dI_{\text{ph}}} = \frac{Y_{\text{NIA}}\mathcal{A}}{2R_N} \frac{dU_N}{dU_{\text{ph}}} = \frac{2r_G}{2R_F + r_G} \left(\frac{R_G}{R'_F}\right)^4 \frac{R_L C_L U_m}{(1-\varepsilon)R_N} \frac{R_1}{R_1 + R_2} \frac{R_V + R_{\text{av}}}{R_V} \frac{dU_N}{dU_{\text{ph}}}, \quad (42)$$

cf. Ref. [35, Eq. 17]. The photo voltage U_{ph} has to be measured by a voltmeter switched after the buffer before the first capacitors in Fig. 2. Analogously to Eq. (38) derivative means the slope of the linear regression in the plot U_N versus U_{ph} . In such a way the electron charge can be expressed by the parameters of the circuit and two voltages. The experiment consists of the linear regression in the plot U_N versus U_{ph} when the intensity of light is changed [4, 22]. Analogously to this formula for the electron charge we can rewrite the derived formula for the Boltzmann constant Eq. (38) as [3, 20]

$$k_B = \frac{\mathcal{A}}{4T'} \left. \frac{dU_N}{dR_N} \right|_{R_N=0} = \frac{1}{T'} \left(\frac{r_G}{2R_F + r_G}\right)^2 \left(\frac{R_G}{R'_F}\right)^4 \frac{R_L C_L U_m}{(1-\varepsilon)} \frac{R_1}{R_1 + R_2} \frac{R_V + R_{\text{av}}}{R_V} \left. \frac{dU_N}{dR_N} \right|_{R_N=0}, \quad (43)$$

cf. Ref. [20, Eq. 17], where we suppose that absolute temperature is already determined in the used units.

Starting from the fundamental physics and state of the art electronics we give comprehensive description of the set-up and the theory of its work. This description is not addressed to the students but we give it only because it is new and cannot be found in the literature.

Let us make a comparison. Every electronic calculator is a sophisticated device. The description of all its element is understandable to professionals but not for the students which take the calculator only to calculate. The same is for our set-up for determination of the absolute zero. Imagine it is given to a high-school student. What should be the instruction which we have to give in order after some measurements of temperature and voltage by multimeter students to be able to determine the absolute temperature zero.

IV. DETERMINATION OF THE ABSOLUTE ZERO

Imagine that on the table we have several vessels with water in different temperatures. If they are of order of 1 liter the change of the temperature will be negligible during the time of the measurements. In the left, for example, we can put cold water with flowing ice $t' = 0^\circ\text{C}$, and on the right a thermos with almost boiling water $t' = 90^\circ\text{C}$. Between 1-3 vessels which interpolate different temperatures in the tea cup interval. On the table you have to have a towel as well.

Let us switch the first multi-meter as a thermometer and put the thermocouple sensor in the cold water. Put 4 batteries at the clips and carefully switch them on the set-up. Be careful not to inverse the polarity because the OpAmps will be burnt. Then switch on the second multi-meter as a voltmeter no measure to measure voltage output.

Immerse the resistor at the end of the triaxial cable in the same water cup. First measurement is using the short circuit and to write the voltmeter indication U_0 . For brevity in this section we omit index V in the notation of the voltage measured by the DC voltmeter in Fig. 1. Switch the voltmeter in 200 mV range and work with mV. Then remove the short-circuit and measure again the voltage U which is now influenced by the thermal voltage noise. The difference $\Delta U_N \equiv U - U_0$ can be ascribed to the thermal noise and it is proportional to the absolute temperature

$$\Delta U = \mathcal{D}T', \quad T' = t' - t'_0, \quad \mathcal{D} \equiv \frac{4R_N k_B}{\mathcal{A}} = k_B \left(\frac{2R_F + r_G}{r_G}\right)^2 \left(\frac{R'_F}{R_G}\right)^4 \frac{(1-\varepsilon)R_N}{R_L C_L U_m} \frac{R_1 + R_2}{R_1} \frac{R_V}{R_V + R_{\text{av}}}. \quad (44)$$

Here the index N of the voltages U_N and $U_{N,0}$ is for brevity omitted. Introducing the reciprocal value $\mathcal{C} \equiv 1/\mathcal{D}$ we can express the absolute temperature by the measurable voltage difference $T' = \mathcal{C}\Delta U$. The offset of the multiplier is canceled by the described procedure of subtraction from the measured signal the voltage at short circuit input. For the determination of the absolute zero the calculation of the coefficient of the proportionality \mathcal{D} is not necessary.

However, determining the slope of this proportionality after a linear regression, we can determine the Boltzmann constant at calculated parameter \mathcal{A}

$$\mathcal{D} \equiv \frac{d(U - U_0)}{dt'}, \quad k_B = \frac{\mathcal{A}}{4R_N} \mathcal{D} = \frac{1}{R_N} \left(\frac{r_G}{2R_F + r_G} \right)^2 \left(\frac{R_G}{R'_F} \right)^4 \frac{R_L C_L U_m}{(1 - \varepsilon) R_N} \frac{R_1}{R_1 + R_2} \frac{R_V + R_{av}}{R_V} \frac{d(U - U_0)}{dt'}, \quad (45)$$

this is a new result of the present study. We use again the “ \equiv ” sign because the Eq. (45) is the experimental definition of \mathcal{D} as a slope of a linear regression while Eq. (44) was the theoretical definition for the coefficient of the proportionality \mathcal{D} . We have to mention also that $dt' = dT'$ the temperature difference of Kelvin and Celsius degrees is equal. The difference is only in the initial of the scales.

It should be mentioned that described method is not the first simple estimate of the determination of the absolute zero temperature. From a long time simple demonstration is to use the ideal gas relationship for the pressure P and volume $P\tilde{V} = \nu\tilde{R}T'$ in many cases [36], for the definition of the new Kelvin, for example. However, the purpose of the present study is not to design a thermometer but to demonstrate thermal fluctuations. To determine the Boltzmann constant k_B it is necessary to study fluctuations or to count atoms (not moles ν), i.e. Avogadro number \tilde{R}/k_B .

In such a way the Boltzmann constant can be determined by a measurable slope of the linear regression ΔU versus thermometer temperature t' and the parameters of the set-up. We wish to emphasize that all formulas (except small correction ε) can be derived by elementary calculation accessible for high-school students. Mathematician David Hilbert used a simple criterion for understanding a theorem – you understand the theorem if you consider that the proof is trivial. In this sense the theoretical physics is also trivial. The theoretician Lev Landau used to say something in the sense “I am the biggest trivialiser”. Following this line, our derivation of the proportionality coefficient \mathcal{D} from Eq. (44) is also trivial. It contains several multipliers, for each of them we have simple algebraic derivation. The total number of letters necessary for re-derivation does not exceed the averaged high-school homework on math. Only a careful exercise on calligraphy. The corresponding numerical calculations are better to be done with a computer, the calculated parameters are given in Table II.

TABLE II. Table of the calculated parameters of the experimental set-up.

Calculated or measured parameter	Value
U^*	2.50 V
\tilde{U}	1.00 V
\mathcal{A}	45 aV/Hz
B	60.72 PHz
\mathcal{B}	55.44 PHz
ε	8.7%
$\tau_L \equiv R_L C_L$	4.2 μ s
$ Y $	1.01×10^6
\mathcal{C}	2.09 K/mV
\mathcal{D}	479 μ V/K
$\mathcal{A}/4(T' = 296 \text{ K})$	38 zV/(Hz K)
$Y_{NIA}\mathcal{A}/2R_N$	22.73 aC
$q_e\mathcal{A}/\hbar$	0.068
P, peta	10^{15}
a, atto	10^{-18}
z, zepto	10^{-21}

Returning to the determination only the absolute temperature we describe the first row of Table III Then we can

TABLE III. Exemplary table for the measurements.

i	U	ΔU	t'
1
2

pass to the next vessel and again determine ΔU_2 and t'_2 . The purpose of the experiment is to have several points ΔU_i , t'_i , and to present this table in a plot ΔU [mV] versus t' [°C]. Draw a line passing near all experimental points

in the (ΔU versus t') plot. This procedure is called a linear regression but you can use millimeter paper without knowing the corresponding math. An example of graphical representation of experimental data is given in Fig. 4.

Now you have to make the extrapolation. This extrapolation represents the accuracy of the measurement using this set-up. Extrapolating the line far from the experimental points in order to cross the new abscissa $\Delta U = 0$. Determine at which temperature t'_0 is this crossing. Finally evaluate the accuracy in percents of our measurement

$$\epsilon = 100 \times \frac{|t'_0 + 273|}{273}. \quad (46)$$

In order to demonstrate properties of the setup we make one experiment with laboratory conditions using thermal chamber and good voltmeter with very large R_V . The results are represented in Fig. 4. The interception of the line of linear regression $\Delta U \propto (t' - t'_0)$ with the abscissa gives $t_0 = -234^\circ\text{C}$ giving 14% accuracy which is quite acceptable for high-school and undergraduate result which is the purpose of our work, see for comparison the educational experiment in MIT [12]; cf. also unpublished guides [13–15]. By performing linear regression using a computer, we easily obtain

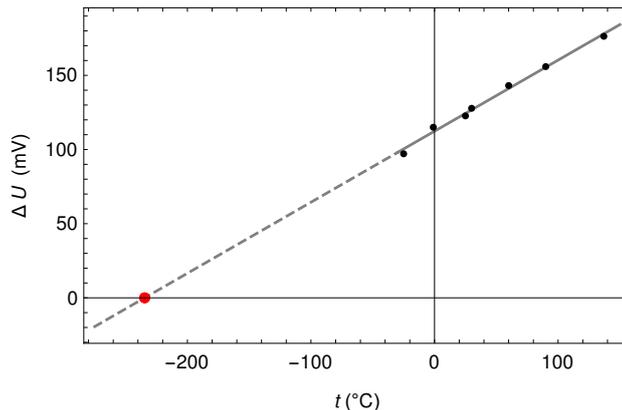


FIG. 4. The voltage ΔU_V [mV] measured by voltmeter from Fig. 1 versus temperature t' [$^\circ\text{C}$] of the noise resistor $R_N = 100 \Omega$. This is a graphical representation of a table similar to Table III. The extrapolated interception of $\Delta U = 0$ marked by small circle gives estimation $t'_0 = -234^\circ\text{C}$. This figure reveals that described set-up measured the spectral density of the thermal voltage noise of a resistor $4Rk_B T'$. The achieved accuracy is of order of $\epsilon \approx 14\%$, but with a better statistics the accuracy can be increased.

the uncertainties of the coefficients. The evaluation of the experimental errors is as a rule tedious for the students, but our observation is that Jack-knife [37] method they easily accept and the corresponding programming can be easily performed.

With very careful measurements it is possible to reach percent accuracy, especially if we include liquid nitrogen to the tea cup temperatures. Theoretical formulae where only accessories how our set-up completes its precursors following the story of the physics in the last 115 years.

As a whole due to the careful choice of integral circuits, the accuracy of the described set-up is comparable with ones of university physics laboratories. As additional advance we have given state-of-the-art description of the electronics at the level of standard university courses and the budget of remake of the set-up is in pocket range order.

V. DISCUSSION

Let us summarize what the ingredients to make this oversimplified experiment which gives satisfactory accuracy and can be performed in high-schools are. First of all, the appearance of low noise OpAmps with $e_N < 1 \text{ nV}/\sqrt{\text{Hz}}$ and simultaneously with crossover frequency $f_c > 10 \text{ MHz}$ gives the opportunity to construct very cheap pre-amplifiers with huge maximal amplification $Y \gtrsim 10^6$. Only highly optimized device can reach such amplification even without screening boxes. The instrumental amplifier is less sensitive with respect of self-excitation (ringing), but here we have to emphasize the fundamental importance of the triaxial cable. The most dangerous parasitic feed-back is the electrostatic coupling of the amplified signal to the voltage input of the pre-amplifier. The triaxial cable substitutes the screening metallic boxes and BNC cables which connect the different amplifiers, filters, oscilloscopes. This simplification gives the possibility the experiment for thermal voltage fluctuations to gain a virulent mutation in order to infect the high schools physics labs from the university ones. The linear dependence Eq. (44) and Fig. 4 describes

actually a self-made absolute thermometer

$$T' = C \Delta U, \quad C = 1/\mathcal{D}. \quad (47)$$

The operational range is limited to the temperatures of use of the triaxial cable -40°C to 200°C . The cable, resistor and soldering of the resistor R_N to cable wires can survive in immersing in liquid nitrogen, but when is cooled the cable must not be bent. Moreover, there is a contemporary tendency the new Kelvin to be performed by measurements of electric fluctuations and it is nice and useful high-school students to become familiar with what actually temperature is and the world in which they will live. From methodical point of view it will be nice together with electric demonstration of absolute temperature to be performed a demonstration with ideal gasses, see for example Ref. [36]. At fixed density n of the particles the pressure p of an ideal gas is proportional to the temperature $p = nT$. This is known for ages. However, thermal physics is incompressible. Many physical variables and phenomena, for instance Ref. [38], depend on the absolute temperature T and in the simplest possible case of classical statistics the dependence is just proportionality. Relatively more recent example, only a half century ago is the observation by Timko [39] a fundamental property of the silicon transistors that: “if two identical transistors are operated at a constant ratio of collector current densities, r , then the difference in their base-emitter voltage is $(k_B T/q_e)(\ln r)$. Because both k_B (Boltzman’s constant) and q_e (the charge of an electron) are constant, the resulting voltage is directly Proportional To Absolute Temperature (PTAT).” This article by Timko is the basis for understanding the specification of a 2-Terminal Integral circuit (IC) Temperature Transducer. This IC has really excellent properties as an absolute thermometer: “Linear current output: $1 \mu\text{A}/\text{K}$, wide temperature range: -55°C to $+150^{\circ}\text{C}$. Probe-compatible ceramic sensor package 2-terminal device: voltage in/current out Laser trimmed to $\pm 0.5^{\circ}\text{C}$ calibration accuracy (AD590M). Excellent linearity: $\pm 0.3^{\circ}\text{C}$ over full range (AD590M). Wide power supply range: 4 V to 30 V . Sensor isolation from case.” If the current passes through $1 \text{ k}\Omega$ resistor the calibration gives $\mathcal{D}_{\text{AD590}} = 1 \text{ mV}/\text{K}$, a value comparable with our device. The quoted passages are taken from the AD590 specification [40]. However, using only an absolute temperature thermometer it is impossible to determine neither Boltzmann constant k_B nor electron charge q_e which are byproducts of study of the described noise-meter. The purpose of our work is not only to design an absolute thermometer but also to demonstrate fluctuations of the electric potential due to thermal or shot noise. Roughly speaking, we are making fluctoscopy of the moving electrons analyzing basic notion of the though in thermal physics.

Returning to the evolution, the ideas in physics of Langevin random forces are a convenient tool to study thermal fluctuations. But when an idea is born we can return to the Democritus and its popularization by Lucretius Carus. The thermal fluctuations of the voltage at the end of a resistor can be considered as Lucretius Carus *exegium clinamen principiorum* [1, Sec. 7.1].

Often a critique can be heard that high-school physics hardly accepts new ideas for innovation and modernization. The world condition in the next years will not be very favorable but at least we can try our best at the present times.

Perhaps not every physics teacher can make a cover version of the described set-up but definitely everyone of them can use it. Low price gives the unique possibility set-ups to be made in a town and send by post to the whole world. The present article is addressed to the teachers, but it can be the basis of the guide for the high-school students how to measure the absolute temperature zero. In short, the described set-up is a part of modernization of the teaching of fundamental physics, a modernization which became possible by the emergence of low price high-tech active electronic components. Upon request authors can provide the drawings of the PCB, the list of components and even the purchase orders.

We believe that our simple set-up and accompanying theoretical consideration will be interesting and accessible to reproduce by a diverse audience of physics students, educators and researchers. The level of our description is oriented to universities, but due to simplicity set-up can be reproduced and used even in high schools. The only device necessary to be added is an affordable multimeter which is easily acceptable within pocket money budget. And who knows maybe some of the ignited students can find career in the physics and even in the metrology.

ACKNOWLEDGMENTS

The authors are grateful to Peter Todorov, Genka Dinekova, Pancho Cholakov and Hassan Chamati, for the support and interest in the study, and the creative atmosphere. This work was supported by the Joint Institute for Nuclear Research, Dubna, RF THEME 01-3-1137-2019/2023 and Grant D01-229/27.10.2021 of the Ministry of Education and Science of Bulgaria.

REFERENCES

- [1] M. Jammer, *The conceptual development of quantum mechanics* (McGraw-Hill, New York, 1967).

- [2] G. Herold and D. V. Baak, Noise Fundamentals, where noise is the signal, <https://www.compadre.org/advlabs/tcal/Detail.cfm?id=2604> (2009), contributed Poster in 2009 Topical Conference on Advanced Laboratories.
- [3] T. M. Mishonov, E. G. Petkov, A. A. Stefanov, A. P. Petkov, I. M. Dimitrova, S. G. Manolev, S. I. Ilieva, and A. M. Varonov, Measurement of the Boltzmann constant by Einstein. Problem of the 5-th Experimental Physics Olympiad. Sofia 9 December 2017 (2017), arXiv:<https://arxiv.org/abs/1801.00022> [physics.ed-ph].
- [4] T. M. Mishonov, E. G. Petkov, A. A. Stefanov, A. P. Petkov, V. I. Danchev, Z. O. Abdrahim, Z. D. Dimitrov, I. M. Dimitrova, R. Popeski-Dimovski, M. Poposka, S. Nikolić, S. Mitić, R. Rosenauer, F. Schwarzfischer, V. N. Gourev, V. G. Jordanov, and A. M. Varonov, Measurement of the electron charge q_e using Schottky noise. Problem of the 6-th Experimental Physics Olympiad. Sofia 8 December 2018 (2017), ver. 2, arXiv:<https://arxiv.org/abs/1703.05224v2> [physics.ed-ph].
- [5] A. Einstein, Über die Gültigkeitsgrenze des Satzes vom thermodynamischen Gleichgewicht und über die Möglichkeit einer neuen Bestimmung der Elementarquanten, *Ann. Phys.* **327**, 569 (1907).
- [6] W. Schottky, Über spontane Stromschwankungen in verschiedenen Elektrizitätsleitern, *Ann. Phys.* **362**, 541 (1918).
- [7] J. B. Johnson, Thermal Agitation of Electricity in Conductors, *Phys. Rev.* **32**, 97 (1928).
- [8] H. Nyquist, Thermal Agitation of Electric Charge in Conductors, *Phys. Rev.* **32**, 110 (1928).
- [9] C. W. McCombie, Nyquist's theorem and its generalisations, in *Problems in thermodynamics and statistical physics*, edited by P. T. Landsberg (Pion, London, 1971) Chap. 24.
- [10] J. A. Earl, Undergraduate Experiment on Thermal and Shot Noise, *Am. J. Phys.* **34**, 575 (1966).
- [11] P. Kittel, W. R. Hackleman, and R. J. Donnelly, Undergraduate experiment on noise thermometry, *Am. J. Phys.* **46**, 94 (1978).
- [12] D. V. Perepelitsa, Johnson Noise and Shot Noise (2006).
- [13] N. A. Romero, Johnson Noise (1998).
- [14] Johnson Noise and Shot Noise: The Determination of the Boltzmann Constant, Absolute Zero Temperature and the Charge of the Electron (2016).
- [15] A. Kerr, B. Youngblood, and Z. Espley, Johnson Noise And the Derivation of Absolute Temperatures and Boltzmann's Constant (2017).
- [16] N. E. Flowers-Jacobs, A. Pollarolo, K. J. Coakley, A. E. Fox, H. Rogalla, W. L. Tew, and S. P. Benz, A Boltzmann constant determination based on Johnson noise thermometry, *Metrologia* **54**, 730 (2017).
- [17] J. F. Qu, S. P. Benz, H. Rogalla, W. L. Tew, D. R. White, and K. L. Zhou, Johnson noise thermometry, *Meas. Sci. Technol.* **30**, 112001 (2019).
- [18] T. Pruttivarasin, A robust experimental setup for Johnson noise measurement suitable for advanced undergraduate students, *Eur. J. Phys.* **39**, 065102 (2018).
- [19] T. Pruttivarasin, Determination of absolute zero temperature from thermistor voltage noise, *Eur. J. Phys.* **41**, 035101 (2020).
- [20] T. M. Mishonov, V. N. Gourev, I. M. Dimitrova, N. S. Serafimov, A. A. Stefanov, E. G. Petkov, and A. M. Varonov, Determination of the Boltzmann constant by the equipartition theorem for capacitors, *Eur. J. Phys.* **40**, 065202 (2019).
- [21] C. Habicht and P. Habicht, Elektrostatischer Potentialmultiplikator nach A. Einstein, *Phys. Ztschr.* **11**, 532–547 (1910), in German.
- [22] T. M. Mishonov, E. G. Petkov, N. Z. Mihailova, A. A. Stefanov, I. M. Dimitrova, V. N. Gourev, N. S. Serafimov, V. I. Danchev, and A. M. Varonov, Simple do-it-yourself experimental set-up for electron charge q_e measurement, *Eur. J. Phys.* **39**, 035102 (2018).
- [23] L. Reggiani and E. Alfinito, Fluctuation Dissipation Theorem and Electrical Noise Revisited, *Fluct. Noise Lett.* **18**, 1930001 (2019).
- [24] L. Reggiani and E. Alfinito, Beyond the Formulations of the Fluctuation Dissipation Theorem Given by Callen and Welton (1951) and Expanded by Kubo (1966), *Front. Phys.* **8**, 238 (2020).
- [25] T. Mishonov, I. Dimitrova, and A. Varonov, Callen–Welton fluctuation dissipation theorem and Nyquist theorem as a consequence of detailed balance principle applied to an oscillator, *Physica A* **530**, 121577 (2019).
- [26] *Low Cost Analog Multiplier AD633*, datasheet Rev. K (Analog Devices Inc., 2015).
- [27] *High Voltage, Low Noise, Low Distortion, Unity-Gain Stable, High Speed Op Amp ADA4898-1/ADA4898-2*, datasheet Rev. E (Analog Devices Inc., 2015).
- [28] *Low Noise, 1 GHz, FastFET Op Amps ADA4817-1/ADA4817-2*, datasheet Rev. G (Analog Devices Inc., 2019).
- [29] T. M. Mishonov, E. G. Petkov, I. M. Dimitrova, N. S. Serafimov, and A. M. Varonov, Probability distribution function of crossover frequency of operational amplifiers, *Measurement* **179**, 109509 (2021).
- [30] *WIMA MKS 2 Metallized Polyester (PET) Capacitors in PCM 5 mm.*, datasheet 01.19 (WIMA GmbH & Co. KG).
- [31] *R60, Radial, 10.0-37.5 mm Lead Spacing, 50-1,000 VDC (Automotive Grade)*, datasheet (KEMET Electronics Corporation, 2020).
- [32] Y. Kraftmakher, Two student experiments on electrical fluctuations, *Am. J. Phys.* **63**, 932 (1995).
- [33] S. Mitra, A. Mishra, and S. Barua, Arduino based temperature controlled sample holder using a power transistor and its application to measure the band gap of a silicon p–n diode, *Eur. J. Phys.* **43**, 015804 (2021).
- [34] W. Schottky, Zur Berechnung und Beurteilung des Schroteffektes, *Ann. Phys.* **373**, 157 (1922).
- [35] T. M. Mishonov, E. G. Petkov, N. Z. Mihailova, A. A. Stefanov, I. M. Dimitrova, V. N. Gourev, N. S. Serafimov, V. I. Danchev, and A. M. Varonov, Corrigendum: Simple do-it-yourself experimental set-up for electron charge q_e measurement (2018 *Eur. J. Phys.* **39** 065202), *Eur. J. Phys.* **43**, 029501 (2021).
- [36] D. T. Ivanov, Experimental Determination of Absolute Zero Temperature, *Phys. Teach.* **41**, 172 (2003).

- [37] B. Efron, *The Jackknife, the Bootstrap and Other Resampling Plans* (SIAM, Philadelphia, 1982).
- [38] S. Chatterjee, R. S. Bisht, V. R. Reddy, and A. K. Raychaudhuri, Emergence of large thermal noise close to a temperature-driven metal-insulator transition, *Phys. Rev. B* **104**, 155101 (2021).
- [39] M. Timko, A two-terminal IC temperature transducer, *IEEE J. Solid-St. Circ.* **11**, 784 (1976).
- [40] *2-Terminal IC Temperature Transducer*, datasheet Rev. G (Analog Devices Inc., 2013).
- [41] J. R. Ragazzini, R. H. Randall, and F. A. Russell, Analysis of problems in dynamics by electronic circuits, *Proc. IRE* **35**, 444 (1947).
- [42] T. M. Mishonov, V. I. Danchev, E. G. Petkov, V. N. Gourev, I. M. Dimitrova, N. S. Serafimov, A. A. Stefanov, and A. M. Varonov, Master equation for operational amplifiers: stability of negative differential converters, crossover frequency and pass-bandwidth, *J. Phys. Comm.* **3**, 035004 (2019).
- [43] T. M. Mishonov, A. A. Stefanov, E. G. Petkov, I. M. Dimitrova, V. I. Danchev, V. N. Gourev, and A. M. Varonov, Manhattan equation for the operational amplifier, *AIP CP* **2075**, 160002 (2019).
- [44] L. Bruton, Network Transfer Functions Using the Concept of Frequency-Dependent Negative Resistance, *IEEE T. Circ. Theory* **16**, 406 (1969).
- [45] L. Bruton, Nonideal performance of two-amplifier positive-impedance converters, *IEEE T. Circ. Theory* **17**, 541 (1970).
- [46] T. M. Mishonov, I. M. Dimitrova, N. S. Serafimov, E. G. Petkov, and A. M. Varonov, Q-factor of the resonators with frequency dependent negative resistor, *IEEE Trans. Circ. Syst. II*, 1 (2021).
- [47] G. Brisebois, Chapter 422 - Op amp selection guide for optimum noise performance, in *Analog Circuit Design*, edited by B. Dobkin and J. Hamburger (Newnes, Oxford, 2015) pp. 907–908.
- [48] B. Parks, Research-inspired problems for electricity and magnetism, *Am. J. Phys.* **74**, 351 (2006).
- [49] T. M. Mishonov and A. M. Varonov, Nanotechnological structure for observation of current induced contact potential difference and creation of effective Cooper pair mass-Spectroscopy, *Physica C* **577**, 1353712 (2020).

Appendix A: Simple derivation for the formulas for amplification

We use well-known formulas for the amplification of the used basic amplifiers but instead to cite textbooks, we give a simple re-derivation compatible with the used notations following Ref. [20]. Formally such material is part of the university education but simple algebra can be reproduced by a teenager. This supplementary material reveals the close relation between the basic physics and electronics and we are trying to build a bridge with unique education between the theoretical analysis of the thermal fluctuations and the contemporary electronics. As a rule students of thermal physics are not familiar with the necessary for our understanding electronics.

1. Basic equation of operational amplifiers (OpAmp)

We recall the basic equation for the operational amplifiers (OpAmp) giving the relation between output voltage U_0 and the voltages at plus U_+ and minus U_- inputs

$$U_0 = (U_+ - U_-) G(\omega), \quad |G(\omega)| \gg 1. \quad (\text{A1})$$

In short, an operational amplifier has two voltage inputs U_+ and minus U_- with very small input current. And one voltage output U_0 which can give significant output current so the equation above to be satisfied in linear regime. In the schematics of the circuits voltage supply terminals for plus $+V_S$ and minus voltage supply $-V_S$. The used by us dual OpAmp ADA4898 has dual (U_+, U_-, U_0) probes denoted at Fig. 2 of Ref. [27] as $+IN1, -IN1, V_{OUT1}$ and $+IN2, -IN2, V_{OUT2}$.

The OpAmp consists of sophisticated electronic components: transistors, resistors and capacitors hidden in a commercially applicable black box shown in scale in Fig. 49 Ref. [27] as in scale 8-Lead Standard Small Outline Package with Exposed Pad. In the first approximation Op Amp is just a high gain amplifier $\alpha = 1/G \approx 0$ and we have to take into account only the first real and imaginary correction. The implementation of the described set-up become doable after recent appearance of cheap, low-noise and high-speed Op Amps. In such a way this which was doable in Bell laboratories a century ago now can be in the hand in every student on physics in every school in the world. Last but not least existence minimum of electronics is important ingredient of teaching of physics. Young Richard Feynman used to repair nonworking radios in the beginning.

As open loop gain in modulus is a big number is useful to introduce its reciprocal value

$$\alpha(\omega) \equiv \frac{1}{G(\omega)} \approx \frac{1}{G_0} + \tau s = \frac{1}{G_0} + j \frac{f}{f_c} \approx j\tau\omega, \quad |\alpha(\omega)| \ll 1, \quad f_c \equiv \frac{1}{2\pi\tau}, \quad \omega = 2\pi f, \quad (\text{A2})$$

which is small in modulus and linear function from frequency ω . For an order of evaluation one can choose $G_0 \approx 10^6$

and $f_c \approx 100$ MHz. The last approximation is applicable in the interval

$$\frac{f_c}{G_0} \ll f \ll f_c, \quad (\text{A3})$$

i.e, in kHz to MHz range which is just our case. Further we use the basic equation of Op amps in the form [41–43]

$$\alpha U_o = U_+ - U_-, \quad \alpha \approx \tau s, \quad s = j\omega, \quad \tau = \frac{1}{2\pi f_c}. \quad (\text{A4})$$

Our first problem is the amplification of noninverting amplifier.

2. Non-inverting amplifier (NIA)

The non-inverting amplifier is drawn in Fig. 5. One can see that input voltage of the amplifier is just the plus

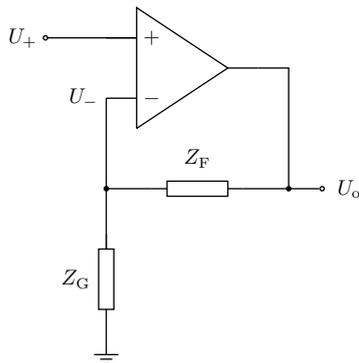


FIG. 5. High impedance non inverting amplifier $U_i = U_+$. The well-known result for the amplification is given by Eq. (A7).

voltage of the OpAmp

$$U_+ = U_i, \quad U_- = \frac{Z_G}{Z_G + Z_F} U_o, \quad (\text{A5})$$

while minus voltage can be expressed as a voltage divider of output voltage and sequentially connected gain Z_G and feedback Z_F impedances. The substitution of Eq. (A5) in Eq. (A4) gives

$$U_i - \frac{Z_G}{Z_G + Z_F} U_o = \alpha U_i, \quad (\text{A6})$$

or

$$\Upsilon_{\text{NIA}} \equiv \frac{U_o}{U_i} = \frac{1}{\frac{1}{\frac{Z_F}{Z_G} + 1} + \frac{s}{2\pi f_c}} \quad (\text{A7})$$

in agreement with the cited well-known formula which we used. The derivation of the amplification for inverting amplifier (IA) which we re-derive in the next section also requires elementary high-school algebra which is easy to trace.

The formula for the amplification of the multiplier Eq. (18) can also be understood considering a voltage divider.

3. Inverting amplifier (IA)

In the schematics of the Inverting Amplifier (IA) shown in Fig. 6 the plus input voltage is grounded

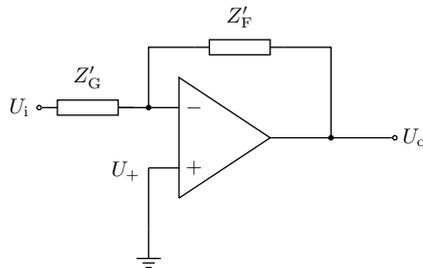


FIG. 6. Low impedance inverting amplifier with grounded $U_+ = 0$. The amplification given by Eq. (A9) also can be derived by consideration of the elementary algebra of a voltage divider Eq. (A8).

$$U_+ = 0, \quad U_- = U_o + (U_i - U_o) \frac{Z'_F}{Z'_F + Z'_G}, \quad (\text{A8})$$

while for consideration of minus input one can start from output voltage and to add the difference between the input voltage and output voltage which passes through a voltage divider of sequentially connected feedback and gain impedances. The substitution of these formulas for U_+ and U_- in the basic equation Eq. (A4) after some elementary calculation gives the well-known result we have cited

$$\Upsilon_{\text{IA}} \equiv \frac{U_o}{U_i} = - \frac{1}{\frac{Z'_G}{Z'_F} + \left(\frac{Z'_G}{Z'_F} + 1\right) \frac{s}{2\pi f_c}}. \quad (\text{A9})$$

It is not necessary to repeat analogous calculations which gives almost the same result for the difference amplifier

$$\Upsilon_{\Delta} = -\Upsilon_{\text{IA}}. \quad (\text{A10})$$

4. The set-up as lock-in voltmeter

We derived the formula for the averaged square of the voltage Eq. (20) supposing that filtered signal is applied to both the input probes of the multiplier. However if amplified and filtered time dependent signal $U_f(t)$ is applied to the first input probe

$$X_1 = U_f(t), \quad Y_1 = U_b(t) \quad (\text{A11})$$

and to other input is applied some basic time dependent signal $U_b(t)$ for the time averaged signal measured by the voltmeter U_N instead of Eq. (20) now reads

$$\langle U_f U_b \rangle = U^* U_N. \quad (\text{A12})$$

As a rule the basic signal is sinusoidal voltage

$$U_b(t) = U_b \cos(\omega t) \quad (\text{A13})$$

which creates some subtle response

$$U(t) = U_0 \cos(\omega t + \theta) = \Re \{U_0 \exp[j(\omega t + \theta)]\} \quad (\text{A14})$$

in the studied subject. This signal is then amplified and filtered

$$U_f(t) = U_f \cos(\omega t + \theta + \varphi + \varphi_L) = \Re (\Upsilon_{\text{LPF}} \Upsilon U_0 \exp(j(\omega t + \theta))), \quad U_f = |\Upsilon_{\text{LPF}}| \times |\Upsilon| \times U_0. \quad (\text{A15})$$

The substitution of those voltages in the main equation of the lock-in Eq. (A12) gives

$$U_N = \cos(\varphi + \varphi_L + \varphi_{\text{rot}} - \theta) |\Upsilon_{\text{LPF}} \Upsilon| \frac{U_b U_0}{2U^*}, \quad (\text{A16})$$

where φ_{rot} is an additional tunable phase shift applied before the basis signal to be applied to the lock-in. Let us take an example. For $f = \omega/2\pi = 10$ kHz we have $|\Upsilon_{\text{LPF}}| \approx 1$, $|\Upsilon| \approx Y = 10^6$. Additionally for $R_V \gg R_{\text{av}}$ the multiplication voltage constant is $U^* = 1$, and with a tunable phase shifter we can get $\cos \approx 1$. In this case let us apply the maximal possible for the AD633 multiplier voltage $U_b = 10$ V and to analyze can we measure a nanovolt signal of $U = 10$ nV. The estimation obtained from the above formula gives an additional output voltage $\Delta U_N \approx 50$ mV. This is comparable with the own noise of the device measured at short circuit input $U_N \approx 80$ mV. In such a way if we measure for one minute the output voltages obtained with switched on and off small signals the evaluated voltage difference can be measured by an affordable multi-meter. Actually even 5 mV one minute modulation can be also detected and in this sense the considered device is actually an affordable lock-in voltmeter which every body can do himself to measure nV signals. The sensitivity can be significantly improved by replacement of the low pass filter with a resonance one. The simplest idea is to substitute the C_L with a frequency dependent negative resistor (D-element) [44–46], i.e. $1/(j\omega C_L) \rightarrow -1/(\omega^2 D)$ and simultaneously to add for stability against ringing a big capacitor $R_L \rightarrow R_L + 1/(j\omega C_G)$. In the next subsection we will try to analyze some typical obstacles which prevent progress in the basic physics education.

5. Apology of the formulas

Let us emphasize again that noise thermometry, and determination of k_B and q_e are included in the university study education for decades. What is obligatory to all those experimental set-ups. First of all a good low-noise pre-amplifier. Many universities can allow to buy it without troubles. The problem is actually not completely financial. The commercial amplifier has a clearly written manual and within one or every student can use it.

What is our alternative – to make oneself the amplifier which requires one day soldering of electronic components on a printable circuit board. The corresponding theory is elementary and the total derivation does not exceed the volume of a college homework on algebra. The first crack is however obvious for many students and even for teachers electronics is a handicraft and on the other side the derivation of formulas is a tedious math similar to those required to pass corresponding exams to obtain a diploma.

Actually some electronics is obligatory for all physics students but even in the textbook on the “art of electronics” one can read jokes like “the generators amplify and the amplifiers generate”. In any case a commercial amplifier is a box for the students which is opened only in the services. Our device is actually an open circuit at the screening is reduced only to the third most external shield of the triaxial cable.

In short our purpose is to provoke teachers and students to design their amplifier, to make necessary calculations and to perform the assembling. In short our purpose is to stimulate creativity.

Let us continue further. From the amplified signal $U_a(t)$ it is necessary to evaluate the mean square in some time period. The simplest way is to record the signal by a digital oscilloscope and further to calculate the corresponding mean values and fluctuations by a computer. No doubt physics students have to be able to use oscilloscopes and computers. What is the purpose of our article to stimulate students to design something which is working passing several times the non-existing boundary between physics and engineering. But for the derivation of the corresponding formulas is necessary to analyze how the numerical multiplication can be performed analogously by an integral circuit of an analogous multiplier. The multiplication, squaring and proportion are ingredients even in the initial school education. However the chain of elementary formulas looks for many students already as a tedious collection. A motivated student or teacher has to pass and assimilate some new notions. Perhaps the simplest one is the amplification Υ of the amplifier followed by a filter which can be frequency dependent. The next already new notion is the pass-bandwidth \mathcal{B} . With the multiplication and analogous squaring of the signal is related the voltage multiplication constant of the device U^* .

Most aggressive resistance in our explanation meets the spectral density of the voltage \mathcal{S} having dimension V^2/Hz . Most of the university teachers consider that this is a notion belonging to advanced electronics. This is because the change of the terminology. Spectral density in the sense of intensity per unit frequency is accepted in physics education since more than a century with explanation of the black-body radiation. We can refer to Rayleigh, Jeans, Wien, Planck and Einstein and even before implicitly this notion was used by Herschel discovering infra-red light. In conclusion nothing new if we use square voltages per unit frequency.

A motivated young man can use even new for him notions. In our case they are calibration constants for the noise-meter \mathcal{A} , and the thermometer \mathcal{C} or \mathcal{D} . In order to explain our result and the ability of the described set-up we have to use some notions and notations. In such a way we have addressed to a little bit philosophical problem: Whether accumulation of many trivial ingredients leads to a non-trivial result and what is the crucial dose?

The people involved with administration of education are as a rule against every innovation. In some sense their duties are to conserve the status-quo and to stop the development. The places where music is learned are called Conservatories and as a jocular etymology the mission of the ministry of science is to conserve the present level of education and even to worsen it using the polite-correct word to alleviate it. Even the youngest coauthors of the

present article express disagreement: Why the final result for the Boltzmann constant k_B Eq. (45) and Eq. (43) and electron charge q_e Eq. (42) are written in a doubled manner with short and long notations. The answer is related with the double purpose of the article. On one side we have to express the final fundamental results using universal notions as amplification, bandwidth, or constant relating spectral density of the voltage fluctuations with the measured by voltmeter DC voltage. Those notions or their equivalents or synonyms indispensable will be used in the other implementation of the same idea to organize university lab-work to measure T , k_B and q_e . On the other side for detailed description of every set-up it is obligatory the final result to be expressed by the parameters of the used components and the measurable physical variables. The relation between these two final goals is one of the main purposes of our methodological study.

Now let us consider what total dose of efforts is acceptable for a self-made set-up for a student lab. We made many experiments with smart white mice. The prototypes of the described set-up was used for illustrative experiments to the courses of statistical physics for more then then years. It was an alternative method students to pass the exam – to made from scratch the set-up for determination of a fundamental constant k_B and q_e . It was an advantage that they used most recent integral circuits which was not used at those time in the commercial electronic devices as amplifiers and filters.

Developing some modification of the set-ups we attracted as co-collaborators even high-school students and as a medical experiment we can confirm that one week honest work is not a lethal dose for a motivated student. A a by product our co-collaborators obtained additional initial speed in their professional career.

Performing experiments with hundreds high-school student we observed that most of them reading the tutorial to the set-up can further to perform the experiment and to determine T , k_B and q_e . It was necessary to switch the batteries, integral circuits and changing resistors or light intensity to measure some voltages by DC voltmeters used in their high-schools. Some person of them was able even to reproduce the derivation of the used formulas and to understand completely the used electronics. The youngest one was able to make some simple test measurements with the set-up which was also a significant success.

Concerning the eldest potential readers of the present article which are in the position to design new set-ups for the physics education their peers are climbing to Mount Everest and even K2 and with this comparison to make the described set-up in one day is like to make a safety weekend trip to Mont Blanc.

Finally looking only to the formulas which have to be re-derived in order to have comprehensive understanding of the described set-up in the level to design much better device is necessary to use several pieces A4 paper and one your. If we compare theoretical description of our set-up with complete description of the electronics theory of a Butterworth filter, commercial amplifier and a oscilloscope the criterion for simplicity will be obvious. It is very instructive for the students to understand and feel all details of the set-up. For the beginning is even better to use self-made ugly set-up instead a good looking device. Professional use later will not escape.

Of course the present manuscript is not in the style of the papers written for carrier, but it is matter already to a social discussion

Appendix B: Bilinearity of the thermal noise $(\mathcal{E}^2)_f = 4R_N T$

The purpose of the present work is to demonstrate determination of the absolute temperature and to construct an absolute thermometer. But the linearity of the thermal noise with respect of the resistance is an important initial test for the work of the setup. The thermal noise however cannot be observed separately. To the measured noise the voltage noise of the first operational amplifier is added and for big enough noise resistors we have to take into account the current noise of the OpAmp as well. According to Eq. (32) and Eq. (37) referred to input is given by the quadratic polynomial

$$U_N = \frac{\mathcal{B}S}{U^*} = \frac{R_V}{(R_V + R_{av})} \frac{(R_1 + R_2)}{R_1 U_m} \mathcal{B}S, \quad S = e_N^2 + 4k_B T' R_N + i_N^2 R_N^2. \quad (\text{B1})$$

Our device is actually a noisemeter of the spectral density, U_N is measured with an ordinary DC voltmeter. Experimental data is represented in Fig. 7 together with a polynomial fit and a linear extrapolation of the first 5 points, up to $R = 1 \text{ k}\Omega$ including. As a byproduct of our consideration of fundamental physics we obtained a new method for measurement the spectral density of the voltage e_N^2 and current noise i_N^2 of operational amplifiers. Addressing to the problem to make an absolute thermometer, we had to develop a new method for determination of current i_N and voltage e_N noise of the operational amplifiers. Our parameters agree with the numerical values given in the specification of the used op amp [27, Table 1] and in this sense our work can be considered as a research work in electronics which is however far beyond our methodical purposes. We give this appendix only to alleviate the work of colleagues constructing similar noise meters.

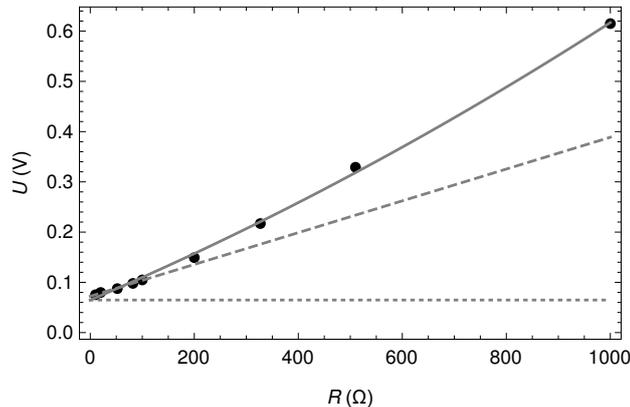


FIG. 7. Resistance R_N dependence of the voltage output U_N of the noise-meter which is proportional to the spectral density according Eq. (B1). The horizontal dotted line describes the voltage noise of the OpAmp e_N , the dashed line describe the linear extrapolation, its slope represents the thermal noise. The continuous line represents the parabolic fit which takes into account the current noise of the used OpAmp ADA4898-2. The fit with high correlation ($> 99\%$) gives $\tilde{e}_N = 2.76 \text{ nV}/\sqrt{2} \text{ Hz}$ and $\tilde{i}_N = 3.64 \text{ pA}/\sqrt{2} \text{ Hz}$ in excellent correspondence with Ref. [27, Table 1]. Tilde means our measurement and $\sqrt{2}$ denotes that two operational amplifiers in the dual OpAmp in the buffer.

The analysis of Fig. 7 reveals that it is ignorant to use noise resistors bigger than 100Ω . The instruction of the choice of resistors and OpAmps are described in Ref. [47] for instance. Actually this is well described by the manufacturers Analog Devices, Texas Instruments and Linear Technology. Op amps with low voltage noise have to be used only with small enough resistors. The voltage noise of ADA4898-2 corresponds to thermal noise of say 50Ω resistor and that is why we recommend maximum 100Ω for the described thermometer. The methodological works are actually the most complicated scientific genre of research inspired student problems [48]. Before suggesting some innovation in the physics teaching a lot of engineering and scientific work has to be done.

Actually our set-up is a part of a device for measurement of the Bernoulli effect in superconductors [49] but *it is another opera*, as the saying goes in some languages.

Appendix C: Measurements with specialised equipment for education

We have also performed measurements with specialised educational equipment from Vernier. This equipment consists of LabQuest 3 data-collection platform with platinum 100 wide range temperature probe sensor and differential voltage probe sensor with $R_V = 20 \text{ M}\Omega$ therefore $U^* = 1.05 \text{ V}$. The experiment was performed on a relatively warm February evening with $R_N = 54 \Omega$ with thermalization both in increasing and decreasing temperature. The resistor R_N was put in a cigar tubos together with the temperature sensor. This tubos was put in a box and after the first measurement at ambient outside temperature, the box was filled with boiling water and a measurement per 15 s was recorded, this is Run 1, see additional data file. The second set of measurements Run 2 was performed after reach of maximal temperature on cooling back to outside temperature, a measurement per 1 minute . Occasionally, cold water was added to speed up a little bit the decrease rate to ambient temperature. The results from both sets of measurements are given in Table IV without taking into account the last measurement in Run 2, which was accidentally made upon switching to short circuit for which $U_0 = 130 \text{ mV}$.

TABLE IV. Table of the results from the measurements with the Vernier equipment, data is given as a supplementary file.

Parameter	Run 1	Run 2
t' [$^{\circ}\text{C}$]	-253.86	-273.1
corr. coeff. [%]	92.0	76.97

If one looks carefully at the experimental data or reproduce the linear regression, will notice the “quantization” of the experimental data. This is no surprise since for our set-up $\mathcal{D} = 479 \mu\text{V}/\text{K}$, while the best resolution at analog to digital conversion of the voltage probe sensor is 1.6 mV . This voltage step gives for the temperature quantum $\Delta t' = 3.34 \text{ K}$, revealing the meaning of the introduced parameters \mathcal{C} and \mathcal{D} . They show the requirements for the temperature and voltage measurement apparatus for our experimental set-up. If at the output of the set-up a DC

amplifier with amplification $\times 10$ is added, the temperature step will decrease to the more precise value of 0.34 K. Another solution is to extend the temperature interval between each successive measurement. Every technical device can be successfully upgraded.