

Technion – Israel Institute of Technology

Electrical Engineering Department Communication Laboratory

GNSS Differential Interferometer

December 2010

Supervisors: Mr. Avner Kaidar Dr. Gilad Even-Tzur

<u>Students</u>: Igor Slutsker Boris Katsman

Contents

1	Abstract	
2	Project Goal	4
3	Introduction	
4	Theoretical Background	5
5	Board Design	
6	Problems and Solutions	
7	Field Tests	
8	Abbreviations	
9	References & Bibliography	
Appei	ndix A - BOM	
	ndix B – Board Design Details	
	ndix C – RINEX protocol	
	ndix D - iTalk to RINEX conversion	

Figure 2 - Single Difference	Figure 1 – propagation path from SV	5
Figure 4 - Circuit Block Diagram10Figure 5 - Final PCB photo11Figure 6 - iTrax03 (left), iTrax03-S (right)12Figure 7 - Calculated Phase - 5 SVs13Figure 8 - Converging Measurement15Figure 9 - Converging Measurement #216Figure 10 - Non Converging Measurement16Figure 11 - Wrong Converging Measurement17Figure 12 - VDDDIG circuit21Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 2 – Single Difference	6
Figure 5 - Final PCB photo.11Figure 6 - iTrax03 (left), iTrax03-S (right)12Figure 7 - Calculated Phase - 5 SVs.13Figure 8 - Converging Measurement15Figure 9 - Converging Measurement #216Figure 10 - Non Converging Measurement16Figure 11 - Wrong Converging Measurement17Figure 12 - VDDDIG circuit21Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 3 -System Flow Chart	9
Figure 6 - iTrax03 (left), iTrax03-S (right)12Figure 7 - Calculated Phase - 5 SVs13Figure 8 - Converging Measurement15Figure 9 - Converging Measurement #216Figure 10 - Non Converging Measurement16Figure 11 - Wrong Converging Measurement17Figure 12 - VDDDIG circuit21Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 4 - Circuit Block Diagram	10
Figure 7 - Calculated Phase - 5 SVs.13Figure 8 - Converging Measurement15Figure 9 - Converging Measurement #216Figure 10 - Non Converging Measurement16Figure 11 - Wrong Converging Measurement17Figure 12 - VDDDIG circuit.21Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 5 - Final PCB photo	11
Figure 8 - Converging Measurement15Figure 9 - Converging Measurement #216Figure 10 - Non Converging Measurement16Figure 11 - Wrong Converging Measurement17Figure 12 - VDDDIG circuit21Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 6 – iTrax03 (left), iTrax03-S (right)	12
Figure 9 - Converging Measurement #2	Figure 7 - Calculated Phase – 5 SVs	13
Figure 10 - Non Converging Measurement16Figure 11 - Wrong Converging Measurement17Figure 12 - VDDDIG circuit21Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 17 - iTrax03 peripherals24Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 8 - Converging Measurement	15
Figure 11 - Wrong Converging Measurement17Figure 12 - VDDDIG circuit21Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 17 - iTrax03 peripherals24Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 9 - Converging Measurement #2	16
Figure 12 - VDDDIG circuit21Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 17 - iTrax03 peripherals24Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 10 - Non Converging Measurement	16
Figure 13 - VDDRF circuit21Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 17 - iTrax03 peripherals24Figure 18 - 1PPS driver24Figure 19 - original PCB layout25		
Figure 14 - CP2102 USB to UART bridge22Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 17 - iTrax03 peripherals24Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 12 - VDDDIG circuit	21
Figure 15 - iTrax03 Block Diagram23Figure 16 - Reset & Boot Switches23Figure 17 - iTrax03 peripherals24Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 13 - VDDRF circuit	21
Figure 16 - Reset & Boot Switches23Figure 17 - iTrax03 peripherals24Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 14 - CP2102 USB to UART bridge	22
Figure 17 - iTrax03 peripherals24Figure 18 - 1PPS driver24Figure 19 - original PCB layout25	Figure 15 - iTrax03 Block Diagram	23
Figure 18 - 1PPS driver	Figure 16 - Reset & Boot Switches	23
Figure 19 - original PCB layout25		
Figure 19 - original PCB layout25	Figure 18 - 1PPS driver	24
Figure 20 – ITK2RNX GUI	Figure 19 - original PCB layout	25
	Figure 20 – ITK2RNX GUI	29

1 Abstract

The Global Positioning System (GPS) is a global navigation satellite system that provides reliable location and time information on or near the Earth, given an unobstructed line of sight to four or more GPS satellites. It is composed of 24 to 32 Satellite Vehicles (SVs) in medium Earth orbit (~22,000 Km above earth). The GPS network was established in 1973 by the United States government and is freely accessible by anyone with a GPS receiver.

Baseline azimuth calculation using GPS carrier phase data can be achieved in a classic way by using two or more geodetic synchronized GPS receivers. Such system includes dedicated expensive components and thus is not applicable to many uses.

The development of low cost GPS receivers have come to a point where good quality carrier phase measurements are available and double differencing systems utilizing these receivers have proven feasible. Inexpensive receivers like this, combined with attitude determination algorithm, can make accurate attitude determination using GPS accessible to everyone.

Our project consisted of developing a low cost attitude determination system utilizing 2 Fastrax off-the-shelf receivers. Phase and code data from the receivers is processed, filtered and used for attitude determination using double-difference algorithm.

Possible applications for such systems are for example:

- Civilian Search and rescue gear
- Industrial Low cost geodetic measurement
- Military Inexpensive weapon guidance

2 Project Goal

The goal of the project was to design and manufacture a low cost offline GPS based differential compass capable of measuring accurate directional vector baseline between distinctive GPS receivers.

3 Introduction

In order to build a GPS differential compass, we've chosen Fastrax© IT03 GPS receiver based on the RF chip uN8021 and the base-band Atheros© uN8130 chip. This receiver was chosen for its ability to store carrier phase measurements and its low cost.



Our Project was composed of 2 major parts:

- 1. Design and production of an IT03 receiver board:
 - a. Theoretical study and understanding of receiver peripheral requirements.
 - b. Board design, PCB layout.
 - c. Physical assembly of elements after production.
 - d. Integration with SDK software
 - e. Testing of the board.
- 2. MATLAB algorithms:
 - a. Offline conversion of the recorded iTalk protocol binary files into RINEX protocol files.
 - b. Interfacing the RINEX files into Double Differential calculation algorithm $^{[6]}$.
 - c. Field tests
 - d. Analysis of results.

4 Theoretical Background

4.1 Length of propagation path

Let \mathbf{k} , \mathbf{m} be the locations of two GPS receiver antennas, \mathbf{b} – baseline vector between them. The length of the propagation paths between SV \mathbf{p} and receiver \mathbf{k} , or SV \mathbf{p} and receiver \mathbf{m} in terms of fractional and integer carrier cycles are:

$$\Phi_{k}^{p}(t) = \phi_{k}^{p}(t) - \phi^{p}(t) + N_{k}^{p} + S_{k}^{p} + f\tau_{p} + f\tau_{k} - \beta_{iono} + \delta_{trop}$$

$$\Phi_{m}^{p}(t) = \phi_{m}^{p}(t) - \phi^{p}(t) + N_{m}^{p} + S_{m}^{p} + f\tau_{p} + f\tau_{m} - \beta_{iono} + \delta_{trop}$$

Where:

- **k** and **m** refer to the receiver antennas phase centers.
- **p** is the satellite vehicle (SV) signal source.
- $\phi^{p}(t)$ is the transmitted satellite signal phase as a function of time.
- $\Phi_k^p(t)$ and $\Phi_m^p(t)$ are the receiver-measured satellite signal phase as a function of time.
- N is the unknown integer number of carrier cycles from SV p to k or SV p to m.
- **S** is the phase noise due to all noise sources (e.g receiver, multipath...)
- **f** is the carrier frequency
- τ is the associated satellite or receiver clock bias
- β_{iono} is the advance of the carrier (cycles) due to the ionosphere.
- δ_{tropo} is the advance of the carrier (cycles) due to the troposphere.

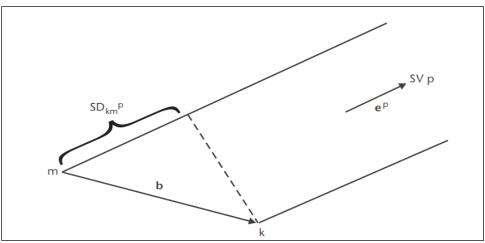


Figure 1 – propagation path from SV p

4.2 Single difference

By differencing the propagation paths from receivers **k** and **m** to SV **p** we create the **S**ingle **D**ifference (SD) equation for SV **p**:

$$SD_{km}^{p} = \phi_{km}^{p}(t) + N_{km}^{p} + S_{km}^{p} + f\tau_{km}$$

And by differencing the propagation path from receivers ${\bf k}$ and ${\bf m}$ to SV ${\bf q}$ we create the SD equation for SV ${\bf q}$:

 $SD_{km}^{q} = \phi_{km}^{q}(t) + N_{km}^{q} + S_{km}^{q} + f\tau_{km}$

Using SD equations we are able to:

- 1) Cancel the effect of SV clock phase bias
- 2) Merge Receiver phase biases to a single bias $\phi_{km}^{q}(t)$
- 3) Cancel the delay effect through Troposphere and Ionosphere

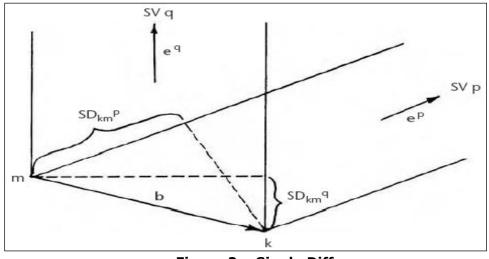


Figure 2 – Single Difference

The projection of **b** on the Line **O**f **S**ight (LOS) between **p** and **m** can also be written as the inner (dot) product of **b** with a unit vector in the direction of SV **p** (same for SV **q**), and by converting to wavelengths we get the following SD equations:

$$SD_{km}^{p} = (b \bullet e^{p})\lambda^{-1} = \phi_{km}^{p}(t) + N_{km}^{p} + S_{km}^{p} + f\tau_{km}$$
$$SD_{km}^{q} = (b \bullet e^{q})\lambda^{-1} = \phi_{km}^{q}(t) + N_{km}^{q} + S_{km}^{q} + f\tau_{km}$$

4.3 Double difference

Now we difference the two SD equations for SV \mathbf{p} and SV \mathbf{q} and we get the **D**ouble **D**ifference (DD):

 $DD_{km}^{pq} = (b \bullet e^{pq})\lambda^{-1} = \phi_{km}^{pq} + N_{km}^{pk} + S_{km}^{pk}$

Using the DD calculation we cancel out the receivers clock bias, since it can be assumed that it remains (almost) the same while measuring for both SVs. Forming the same set of equations for 5 different SVs we can fill in the following matrix:

$$\begin{bmatrix} DD_{cp1} \\ DD_{cp2} \\ DD_{cp3} \\ DD_{cp4} \end{bmatrix} = \begin{bmatrix} e_{12x} & e_{12y} & e_{12z} \\ e_{13x} & e_{13y} & e_{13z} \\ e_{14x} & e_{14y} & e_{14z} \\ e_{15x} & e_{15y} & e_{15z} \end{bmatrix} \begin{bmatrix} b_x \\ b_y \\ b_z \end{bmatrix} + \begin{bmatrix} N_1 \\ N_2 \\ N_3 \\ N_4 \end{bmatrix} \lambda$$

Where (1st line explained):

- 1) DD_{cp1} represents the first DD measurement
- 2) e_{12} represents the differenced unit vector between the two satellites under consideration (here SV1, SV2).
- 3) b is the baseline vector we are searching.
- 4) N is the associated integer carrier cycles ambiguity.
- 5) The wavelength λ is used to provide consistency with DD_{cp1} and b that are here in meters.

4.4 System Description

The project setup is composed of 2 identical GPS receiver boards, connected to USB ports, one is defined as "Master" and the other as a "Slave". The data from the boards is sent in iTalk^[5] protocol to a PC. The iTalk messages are archived into .itk binary files. The data is then processed in 2 steps:

<u>The first step</u> is converting the raw data files from iTalk to RINEX^[4] format. This process is initiated with a user-friendly GUI (where the user edits setup and conversion parameters). The data files are then processed - reading iTalk files, synchronizing between them and finding mutual measurement epochs of master and slave receivers.

Further we apply a search algorithm that finds the longest available sequence of stable SV (Available throughout the whole period selected for conversion), that are present in both the master and the slave receivers (at this stage we neglect the sequences where non-valid data was received).

Next we convert the chosen sequence to RINEX data files (See <u>Appendix C</u> for details).

This step is described in <u>Appendix D</u>.

<u>The second step</u> is determination algorithm for the baseline vector in the following order:

- 1. Smoothing of the code data using carrier phase data.
- 2. Single point positioning calculation for master antenna.
- 3. Differential positioning baseline magnitude and error calculation.
- 4. 3D attitude determination using direct computation method.

The result of this process is the displayed azimuth value and baseline calculated error.


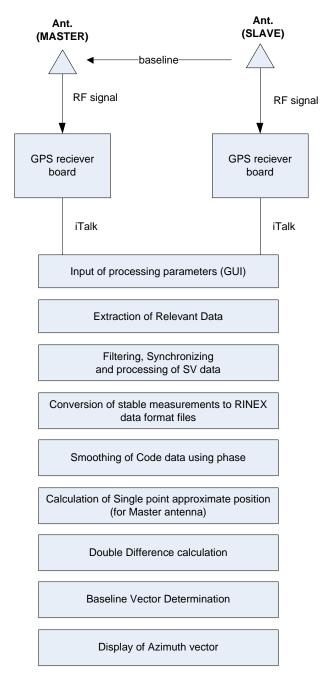


Figure 3 - System Flow Chart

5 Board Design

Each circuit board provides peripherals for a single Fastrax 03 receiver. The peripherals include:

- A. 2 ultra-stable DC-DC regulators fed from 1 or 2 USB supply lines.
- B. 2 USB-UART converters.
- C. ESD protection for both USB ports.
- D. 1 buffer for external 1PPS drive.
- E. 3 LEDs for receiver status indications.
- F. 3 LEDs for Power regulators and 1PPS status.
- G. SMA RF connector for GPS antenna input (Active or Passive antenna)

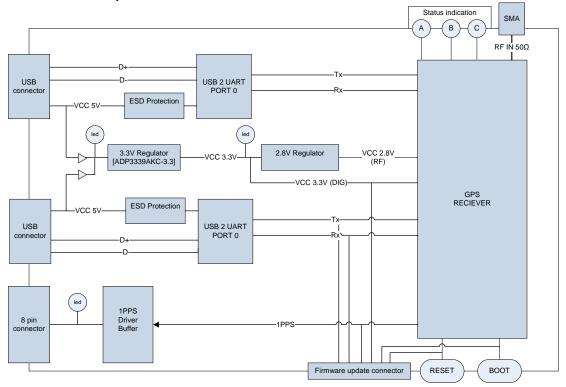



For further description of the board design, see Appendix B

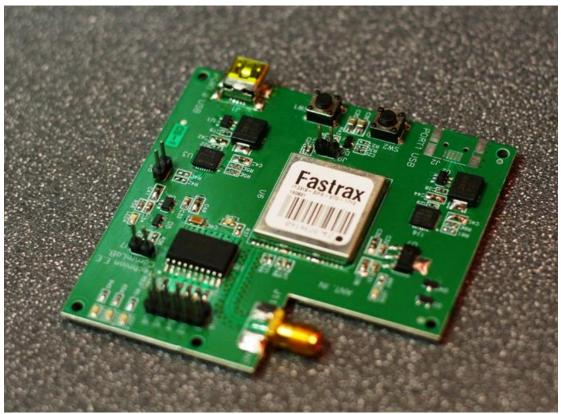


Figure 5 - Final PCB photo

6 Problems and Resolutions

Problems and resolutions in board design

Problem: In the first prototype board the iTrax03-S receiver didn't fit the physical layout on the board. The purchased receiver was actually iTrax03, it was designed for iTrax03-S. Those two receivers have different physical dimensions and pin-out:

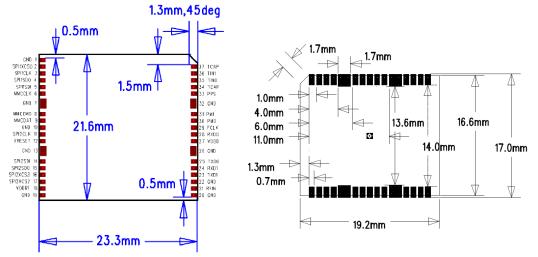


Figure 6 – iTrax03 (left), iTrax03-S (right)

Solution:

- 1. We've build an interface board, matching the I/O of both packages, and connected the iTrax03 receiver to the board using wire-up in order to proceed with the tests.
- 2. The PCB layout was changed to fit the correct receiver version (iTrax03) and sent the new layout to production.

Problem: LED_B was not connected properly on the board. **Solution:** Wired-up for testing and changed in the final layout.

Problems and resolutions in attitude determination <u>Problem:</u>

The main data used for baseline determination of the carrier phase is calculated by the following formula:

 Φ (cycles) = dwCarrCount + wCarrPhase / 256^[8]

By using the above formula, we get the following results (below), that don't meet our expectations. We expect continuous rising/falling behavior of the phase. Instead, the formula generates raising chainsaw type graph, with \sim 400 epoch interval for every SV.

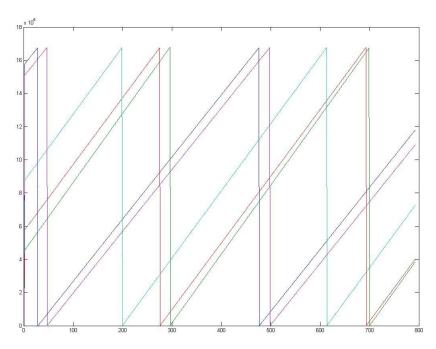


Figure 7 - Calculated Phase – 5 SVs

Solution: After consulting our supervisors and Fastrax technical support, We found out that that the phase processing in Fastrax receivers is performed at IF frequency of 38596.34 Hz and the time between epochs is actually 1.000648 sec (instead of 1sec.) Both issues are not documented. Therefore we need to integrate the phase over epochs and subtract between each 2 consecutive epochs in order to get the correct result for Phase measurement.

Problem: Non consistent results – sometimes the algorithm converged to the correct results, and sometimes it converged to wrong results or didn't converge at all.

Solution: We performed a few steps in order to find the cause of the matter:

- Comparing RINEX navigation file generated by our code from received .itk files to the Geodetic accurate Ashtec receivers' navigation file for the same time and position – <u>The files were</u> <u>identical</u>.
- Comparing .itk pseudo-range measurements provided directly by our receiver to simulated environment measurements provided by iGalileo simulator – The files were not identical, but the <u>differences in distances were very similar (up to 500 m)</u>.

Conclusion

- After extensive investigation of the cause for inconsistency, , we could not find a direct cause apart from an assumption that the pseudo-range value provided by the iTrax03 receiver is not a raw measurement, but rather some undocumented corrections were applied.
- This could cause a double-correction and therefore create an unstable single point positioning for the Master antenna, eventually causing a wrong attitude calculation.

7 Field Tests

Several field tests were performed.

All tests were performed on the same location – Carmel beach, Haifa, Israel, in order to eliminate possible location-based error factors. Different baseline angles and different baseline length were tried in order to understand the implications of baseline length on calculation accuracy – 0.5,1,2,5,10 m.

The tests were performed using the following equipment:

- 2 x IT03 receiver board
- 2 x Laptop computer with Fastrax GPS workbench 4 software
- 2 x USB cable
- 2 x Active GPS L1 antenna with 2m cable and an SMA connector

At the end of the measurement phase the results were recorded and processed using our algorithm. RINEX files were generated and fed into the Double Difference ^[6] processing algorithm.

Results were compared to the mean value of the baseline vector azimuth that was recorded for each of the performed tests, using external magnetic compasses (after magnetic anomaly correction).

7.1 Converging Measurement #1

Date : 2010/1	0/18
# of SVs :	5
Baseline :	2m
Bearing :	~0°

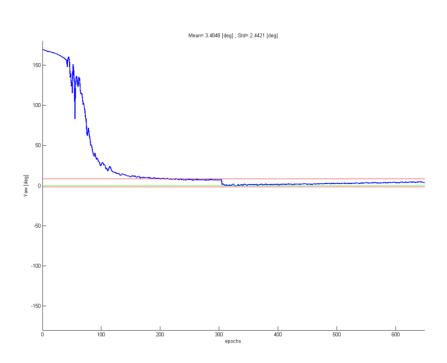


Figure 8 - Converging Measurement

7.2 Converging Measurement #2

Date : 2010/10/18 # of SVs : 7 Baseline : 2m Bearing : ~45°

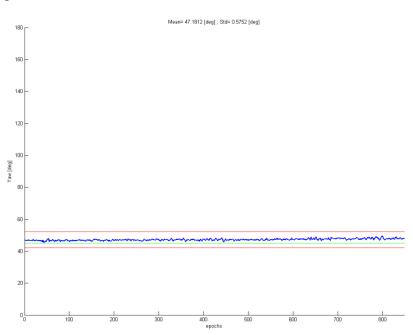


Figure 9 - Converging Measurement #2

7.3 Non-Converging Measurement

Date : 2010/1	1/13
# of SVs :	6
Baseline :	2m
Bearing :	~020°

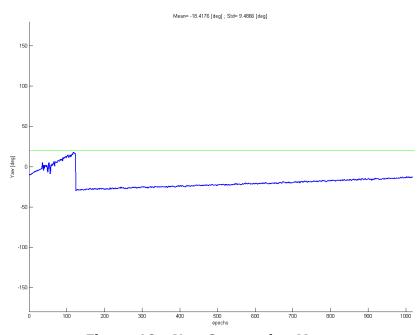


Figure 10 - Non Converging Measurement

7.4 Wrong Converging Measurement

Date : 2010/11/21 # of SVs : 6 Baseline : 5m Bearing : ~016°

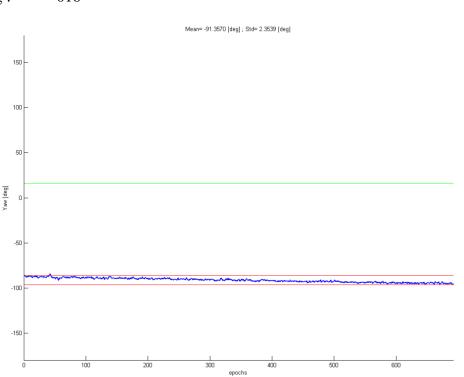


Figure 11 - Wrong Converging Measurement

8 Abbreviations

BOM SD DD ESD GPS LED NMEA PCB PPS RINEX RF SD SDK SDK SMA SV	Bill Of Materials Single Difference Double Difference Electro Static Discharge Global Positioning System Light Emitting Diode National Marine Electronics Association Printed Circuit Board Pulse Per Second Receiver Independent Exchange Format Radio Frequency Single Difference Software Development Kit Sub Miniature version A (connector type) Satellite Vehicle
SV UART USB	Satellite Vehicle Universal Asynchronous Receiver Transmitter Universal Serial Bus
0.50	

9 References & Bibliography

[1] iTrax03 OEM GPS Receiver – Technical Description.

[2] AAT3221/2 Linear Regulator Datasheet.

[3] ADP3339AKC-3.3 Regulator Datasheet.

[4] RINEX - The Receiver Independent Exchange Format 2.11.

[5] iTalk protocol on Fastrax website-

http://isuite.fastrax.fi/sdk/341/protocols/pro_msgformats.html

[6] Toolbox for attitude determination with a multiple-antenna system using GPS (Center for Sensor Systems (ZESS), University of Siegen, Germany).

[7] CP2102 – Single-Chip USB to UART bridge Datasheet

[8] 'GPS L1 Carrier Phase Double Difference Solution Using Low Cost Receivers', Stefan Söderholm, CRO, Fastrax Ltd, Vantaa, FINLAND
[9] Understanding GPS - Principles and Applications (Second Edition) by

Elliott D. Kaplan & Christopher J. Hegarty

Appendix A - BOM

The following list describes the	Bill Of Materials	used in the	GPS board:
----------------------------------	--------------------------	-------------	------------

Item	Quantity	Reference	Part	PCB
				footprint
1	1	C15	18pF	CC0402(M)
2	1	C16	10nF	CC0402(M)
3	4	C19,C25,C26,C28	100nF	CC0402(M)
4	4	C31,C32,C33,C34	100nF	CC0603(M)
5	2	C35,C36	4.7uF	CC0805
6	8	C38,C39,C40,C41,C42 ,C43,C44,C45	luF	CC0805
7	1	C46	220nF	CC0805
8	2	D1,D2	B320A	CASE D
9	4	D3, D4, D5, D6	BAT54/PLP	SOT-23(1-3)
10	2	J1, J2	MOLEX675031020	
11	8	J3,J4,J5,J6,J7,J8,J9,J10	1PPS	JUMPER
12	1	J11	SMA 5 PIN	BNC-SIDE5
13	1	LED1	GREEN A	CC0603 (M)
14	1	LED2	GREEN B	CC0603 (M)
15	1	LED3	GREEN C	CC0603(M)
16	1	LED4	BLUE A	CC0603(M)
17	1	LED5	BLUE B	CC0603(M)
18	1	LED6	YELLOW A	CC0603(M)
19	1	R21	10k	CC0402(M)
20	2	R22,R29	4.7K	CC0402(M)
21	4	R31,R47,R48,R49	330	CC0402(M)
22	1	R36	2.2K	CC0402(M)
23	4	R37,R45,R50,R51	470	CC0603(M)
24	11	R38,R39,R40,R41,R42,R43, R44,R52,R53,R54,R55	47	CC0603 (M)
25	1	R56	150	CC0603 (M)
26	1	R57	330	CC0603 (M)
27	4	R58,R59,R60,R61	100	CC0603(M)
28	2	SW1, SW2	EVQ-PAD04M	EVQ-PAD04M
29	2	U1,U2	ESDA6V1BC6	SOT-23-6L
30	2	U3,U4	CP2102-GM	QFN28
31	1	U5	74HCT373D	SO(20)
32	1	U6	iTRAX03	iTrax03
33	1	U7	ADP3339AKC-3.3	SOT-223 1
34	1	U8	AAT3221IGV-2.8	SOT25

Appendix B – Board Design Details

VDDDIG regulator

The ADP3339AKC-3.3^[3] Regulator was selected as the main power supply for the iTRAX-03 receiver and for the VDDRF regulator.

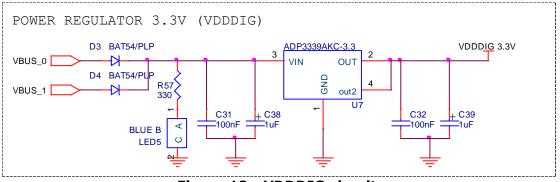


Figure 12 - VDDDIG circuit

A Led indicator was added to indicate proper power supply from one of the USB inputs.

VDDRF regulator

The iTRAX-03 receiver RF modules are fed by a low ripple linear regulator. The regulator we selected is the AAT3221IGV-2.8-T1 150mA Low Dropout Linear Regulators by Analog Tech ^[2]. (One of the design constraints for the receiver was to limit VDDRF supply to 150mA). This device features extremely low quiescent current which is typically 1.1 μ A.

The AAT3221 type regulator has output short circuit and over current protection. In addition, the device also has an over temperature protection circuit, which will shutdown the LDO regulator during extended over-current events. We selected the 2.8V version of the AAT3221 regulator as recommended in ^[1].

In our application we've shortened the enable pin to the input and added a LED indicator for input voltage. The input is provided by VDDDIG.

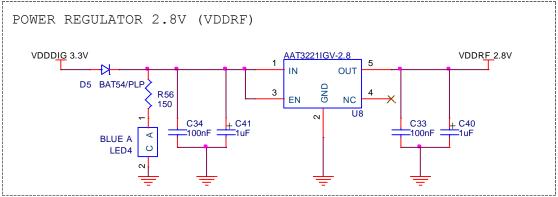


Figure 13 - VDDRF circuit

USB to UART bridge CP2102

The CP2102^[Z] is a highly-integrated USB-to-UART Bridge Controller providing a simple solution for updating RS-232 designs to USB using a minimum of components and PCB space. The CP2102 includes a USB 2.0 full-speed function controller, USB transceiver, oscillator, EEPROM, and asynchronous serial data bus (UART) with full modem control signals in a compact 5 x 5 mm QFN-28 package.

In our design both CP2102 controllers are protected by ESD protectors. The controllers are fed by 5V USB supply and are connected to mini-USB connectors.

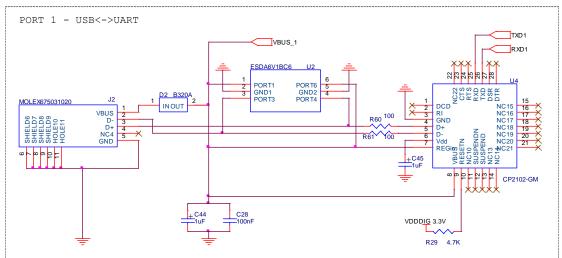


Figure 14 - CP2102 USB to UART bridge

iTrax03

The core of the circuit is the iTrax03 receiver module. The receiver integrates the GPS chip set: RF down-converter uN8021 and uN8130 processor. The processor includes all base band functions needed for GPS signal acquisition, tracking and navigation. Dedicated high-performance search engine architecture enables a rapid search of visible satellites. 12 channel tracking unit insures that positioning is possible even in severe conditions.

The antenna input supports passive and active antennas and provides also an internal antenna bias supply.

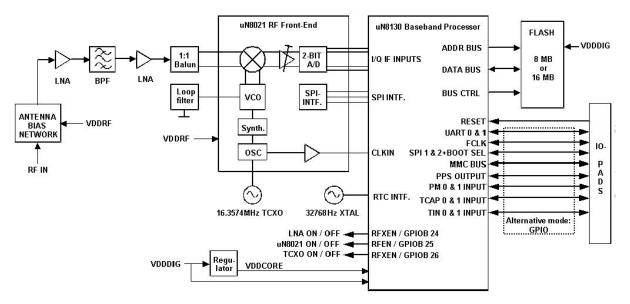


Figure 15 - iTrax03 Block Diagram

iTrax03 Specifications:	
Receiver	GPS L1 C/A code
Channels	12
Update rate	1 Hz
Supply voltage (VDDRF)	+2.7+3.3V, low ripple 2mV RMS
Supply voltage (VDDDIG)	+2.7+3.3V
Antenna bias voltage	Same as VDDRF
Serial Port Configuration	Port 0 : NMEA (iTalk optional)
	Port 1 : iTalk
Serial data speed	NMEA: 4800 Baud, iTalk: 115200 Baud.
Power dissipation	500mW max
Current output on antenna	0-100mA
input	

In our integration of the iTrax03 into the board, we've added reset and boot switches as described in the following circuit:

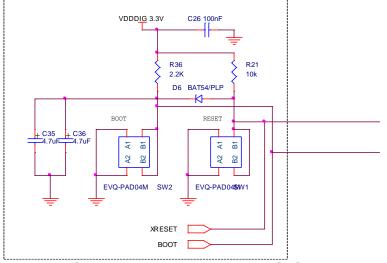


Figure 16 - Reset & Boot Switches

The receiver was connected to SMA connector for antenna input, VDDDIG and VDDRF inputs, RX and TX channels from the USB-UART converters, Reset and Boot switches and led indications:

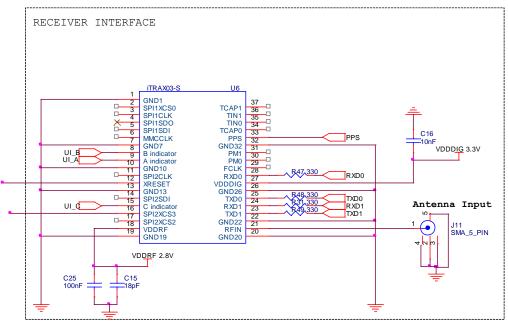


Figure 17 - iTrax03 peripherals

1PPS driver

The iTrax03-S receiver raises 1PPS output every 1 second, synchronized to the transfer of the data messages to the UART output. This signal may be used in future applications.

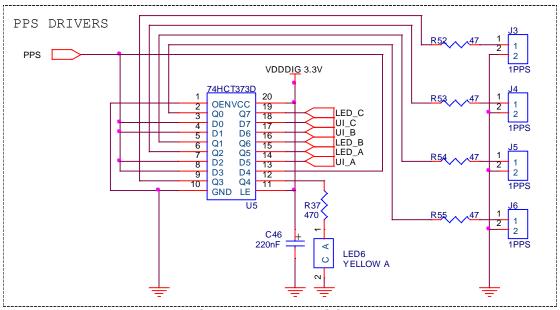


Figure 18 - 1PPS driver

Our implementation uses the 8 outputs of the 74HCT373D buffer in order to drive 4 1PPS outputs, 3 indication LEDs of the receiver operation status and an additional LED indicating proper output of the 1PPS.

PCB layout

The PCB layout was designed by an external contractor and tested to meet the design. The **B**ill **O**f **M**aterials (BOM) is attached to this document (See Appendix A).

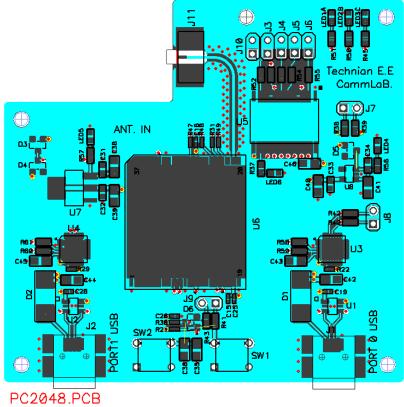


Figure 19 - original PCB layout

Appendix C – RINEX protocol

One of the major problems with the iTrax03 receiver is the lack of standard RINEX^[4] protocol output. The RINEX (**R**eceiver **In**dependent **Ex**change Format) protocol is used mainly in expensive geodesic receivers as it contains data irrelevant to most commercial receivers. Instead, the iTrax03 provides the output data in commercial NMEA protocol and also in advanced iTalk^[5] binary protocol, suitable to more advances applications such as ours.

Therefore we were required to produce a Matlab code, responsible for translation of the relevant data from the iTalk messages to the relevant RINEX files. The MATLAB algorithm responsible for calculation of the DD (**D**ouble **D**ifference) is based on input of geodesic receivers with 2 types of files used: Navigation and Observation.

Each file type consists of a header section and a data section. The header section contains global information for the entire file and is placed at the beginning of the file.

RINEX structure

This paragraph describes each data element required for the RINEX navigation and observation files, and its' source in the iTalk messages (Some of the values should be multiplied by a constant as described below):

Navigation file

The header contains only the time of the conversion and name of the converting software. The body contains the following data, duplicated for each SV detected during the last update:

RINEX	Source – iTalk	Description
SV number	(RawEph.wPRN)	
Year	(nav.UTC.wYear)	
Month	(nav.UTC.Month)	
Day	(nav.UTC.Day)	
Hour	(nav.UTC.Hour)	
Minute	(nav.UTC.Minute)	
Second	(nav.UTC)	
dAf0	(RawEph.Clock.IAf0)* 2 ⁻³¹	SV clock bias (seconds)
dAf1	(RawEph.Clock.iAf1)*2 ⁻⁴³	SV clock drift (sec/sec)
dAf2	(RawEph.Clock.iAf2)*2 ⁻⁵⁵	SV clock drift rate (sec/sec ²)
IODE	(RawEph.Orbit.wIODE)	IODE Issue of Data
Crs	(RawEph.Orbit.iCrs)*2 ⁻⁵	Amplitude of the sine correction
		term to the orbit radius (meters)
Delta n	Pi*(RawEph.Orbit.iDeltan)*2 ⁻⁴³	Mean motion diff (radians/sec)
MO	Pi*(RawEph.Orbit.IMO)*2 ⁻³¹	Mean anomaly at reference time
		(radians)
Cuc	(RawEph.Orbit.iCuc)*2 ⁻²⁹	Amplitude of the cosine correction
Cuc	(namephilorbinineae) 2	to the argument of latitude(radians)
е	(RawEph.Orbit.IEcc)*2 ⁻³³	Eccentricity
Cus	(RawEph.Orbit.iCus)*2 ⁻²⁹	Amplitude of the sine correction to
645	(namephilorbinineas) 2	the argument of latitude (radians)
sqrt(A)	(RawEph.Orbit.ISqrta)*2 ⁻¹⁹	Square of semi-major axis $(m^{0.5})$
Toe	(RawEph.Orbit.dwToe)	Time of Ephemeris (sec GPS time)
Cic	(RawEph.Orbit.iCic)*2 ⁻²⁹	Amplitude of the cosine correction
	(nanzpinorbienele) z	to the angle of inclination (radians)
OMEGA	Pi*(RawEph.Orbit.IOmega0)*2 ⁻³¹	Long. of the ascending node of orbit
		plane at weekly epoch (radians)
CIS	(RawEph.Orbit.iCis)*2 ⁻²⁹	Amplitude of the sine correction to
		the angle of inclination (radians)
i0	Pi* (RawEph.Orbit.II0) * 2 ⁻³¹	Inclination at ref time (radians)
Crc	RawEph.Orbit.iCrc * 2^-5	Amplitude of the cosine correction
		to the orbit radius (meters)
omega	Pi*(RawEph.Orbit.IOmega)*2 ⁻³¹	Argument of perigee (radians)
OMEGA DOT	Pi*(RawEph.Orbit.IOmegaDot)*2 ⁻⁴³	The derivation of Ω (radians/sec)
IDOT	Pi*(RawEph.Orbit.iIdot)*2 ⁻⁴³	Inclination derivation (radians/sec)
Codes on L2	0	N/A
GPS Week #	(RawEph.Clock.wWeek)	
Spare	0	N/A
L2 P flag	0	N/A
SV accuracy	32	[m]
SV health	(RawEph.wHealth)	
TGD	(RawEph.Clock.iGroupDelay)*2 ⁻³¹	Time group delay (seconds)
IODC	RawEph.Clock.wIODC	Issue of Data, Clock
Trans. time	RawEph.Clock.dwTowMs/1000	Time of Week (ms)
Fit interval	RawEph.wFitPeriod	(hours)
Spare	0	N/A
Spare	0	N/A
(C. 2 2		

Observation file

The header contains the following data:

RINEX	Source – iTalk	Description
Х	nav.WGS.IX (first epoch in file)	APPROX POSITION X (WGS84)
Υ	nav.WGS.IY (first epoch in file)	APPROX POSITION Y (WGS84)
Z	nav.WGS.IZ (first epoch in file)	APPROX POSITION Z (WGS84)
Types of	N/A	C1 – Pseudo range from L1
observation		L1 - Carrier phase from L1
		D1 – Doppler frequency from L1
Time of first	nav.UTC (first epoch)	
observation		
Time of last	nav.UTC (last epoch)	
observation		

The Body contains the following data for each epoch:

RINEX	Source – iTalk	Description
SV number	(RawEph.wPRN)	
Year	(nav.UTC.wYear)	
Month	(nav.UTC.Month)	
Day	(nav.UTC.Day)	
Hour	(nav.UTC.Hour)	
Minute	(nav.UTC.Minute)	
Second	(nav.UTC)	
Active SV list	track.swLockedChInfo (8 low bits)	List of active GPS SVs, preceded by 'G' symbol.
Pseudo Range	pseudo.dPseudoRange	PR = distance + c * (receiver clock offset - satellite clock offset + other biases) (meters)
Carrier phase	<pre>track.dwCarrCount(ep,idx) + bitand(abs(track.wCarrPhase(ep,idx)), 255)/256.0</pre>	The phase is the carrier-phase measured in whole cycles
Doppler Frequency	pseudo.dDoppler	(Hz)

Appendix D - iTalk to RINEX conversion

MATLAB GUI

We've created user-friendly interface for converting the iTalk archive files to standard RINEX files and processing the RINEX files. The following options are available through our GUI interface:

- 1. Conversion mode:
 - a. Manual Select User is given the option to select one of the calculated sequences (# of SVs and Number of epochs).
 - b. All All calculated sequences will be converted to multiple RINEX files.
- 2. Print Options (available only in manual conversion mode):
 - a. SV vs. Epoch graphs are displayed for selected sequence.
 - b. Elevation vs. Epoch graphs are displayed for selected sequence.
- 3. Parameters:
 - a. Minimum SV elevation to process (as calculated from iTalk archive files)
 - b. Baseline length in meters.
- 4. Working directory source of the iTalk files and destination of the RINEX directory.

The user can select whether to only convert the iTalk files to RINEX or to also determinate the baseline using the DD calculation algorithm ^[6]. (The latter is available in 'Manual Select' mode).

Working directory U/OPSproject/Wattab/Boris_Igor/2010-05-24 Roof WE U/OPSproject/Wattab/Boris_Igor/2010-05-24 Roof WE CONVERT & RU Parameters Filter SVs elevated below 10 [deg] Master <> Slave baseline 2 [m]	ITK	2RNX	Exit
Working directory UVPSprojectMatlab/Boris_gor/2010-05-24 Roof WE CONVERT & RU Parameters Filter SVs elevated below 10 [deg] Master <> Slave baseline 2 [m] MASTER - Processing RNEX observation file Start loading ITK files Annel NewFick & donel Proved Mananac & - donel Proved Mananac & - donel RewKeptements & - donel RewKeptements & - donel Proved Mananac & - donel RewKeptements & - donel RewKeptements & - donel Proved Mananac & - donel Start loading ITK files Start loading ITK files Start loading ITK files Start loading ITK files Nonel Proved Mananac Manana	SV vs. Epoch [Time consuming]	Manual select	
Parameters Filter SVs elevated below 10 [deg] MASTER - Processing RNEX observation file Start loading ITK files NVFF.Kt donel Persudo It donel Persudo It donel Rewdphemeris At donel Rowdphemeris At donel Rowdphemeris At donel Start loading ITK files Start loading ITK files Nowfielt donel	Working directory		CONVERT to ITH
Filter SVs elevated below 10 [deg] Master <> Slave baseline 2 [m] MASTER - Processing RNEX observation file	J:\GPSproject\Matlab\Boris_Igor\201	0-05-24 Roof WE	CONVERT & RUI
Master <> Slave baseline 2 MASTER - Processing RNEX observation file Start loading ITK files NavFic.kt - donel Trock kt - donel Pseudo kk - donel RewEghements kt - donel Privited loading ITK files Start loading ITK files SLAYE1 - Processing RNEX observation file Start loading ITK files NavFic.kt - donel Privated loading ITK files NavFic.kt - donel	Parameters		
MASTER - Processing RNEX observation file Start loading ITK files NovFic it: - donel Profit - donel Profit - donel Raw-Ephemeris It: - donel UctoroModel IK: - donel Raw-Ephemeris It: - donel Start loading ITK files SLAVE1 - Processing RNEX observation file Start loading ITK files NovFic it: - donel	Filter SVs elevated below 10	[deg]	
Start backing ITK files NavFic.IX - donel Frack.IX - donel Kaw-Explanmac.IX - donel Kaw-Explanmac.IX - donel Start backing ITK files SLAVE1 - Processing RRMEX closervation file Start backing ITK files NavFic.IX - donel	Master <-> Slave baseilne 2	[m]	
Start loading ITK files NavFix.itk - done!	Start loading TIK files NavFikt & donel Track & donel Prostatus & donel Pesudo & donel Reweightemetric & donel Reweightemetric & donel Reweightemetric & donel Finished loading TIK files. SLAVET - Processing RNEX observation file		
	Start loading ITK files		

Figure 20 – ITK2RNX GUI

Reading iTalk files

Our next mission was to load the data elements (described in chapter 6) into convenient database that contains all relevant data from the receivers. This was accomplished using **ITK2RNX_LoadITK.m**. This Matlab file utilizes loading relevant data from .itk binary files into matrices containing relevant data. The file uses the following functions provided by Fastrax as part of the SDK (some of the functions were modified from the original in order to minimize processing time):

File name	Contains
read03nav.m	Navigation data
read03track.m	Track process data
read03prnstatus.m	PRN (SV) status data
read03pseudo.m	Pseudo process data
read03RawEph.m	Raw Ephemeris data
read03ionotropo.m	Ionotropic information
read03rawalm.m	Raw almanac data

Synchronization of ITK data

Problem: We've discovered that the dwTick field (responsible for synchronization of the data in different files) in pseudo.itk and track.itk files is not always synchronized. For some of the readings, a shift of ± 1 tick (1 sec) is found.

Solution: ITK2RNX_AlignTick.m solves this problem by taking the common parts of the files.

Processing SV data

The iTalk protocol provides the SV information in processing channels. Each receiver has 12 channels, containing the SV data. In order to process data from different receivers, we had to transfer the data from 'channel' to 'SV number' axis. This process is performed by **ITK2RNX_SVstats.m**. This functions returns the following data elements:

- 1. Data containing SV availability along epochs
- 2. **Elev -** containing SV elevation along epochs
- 3. **TimeStamp** Start and end time values in GPS Time of Week ms format.
- 4. **NonValVec** Vector containing the epochs declared as non-valid by the receiver.
- 5. **JumpVec** Vector containing the epochs where time jumps are found (After neglecting the non-valid epochs).

Mutual time and elevation synchronization

The measurements from the 2 receivers can be taken in different time periods. Therefore we need to select only the mutual time periods

according to the timestamps calculated in SVstats. In addition the data is filtered by the minimum elevation criteria, as defined by user in the GUI.

Due to atmospheric conditions and various other environmental influences (physical obstacles, clouds and so on), different SVs may be tracked by the 2 receivers at the same time. Our algorithm generates one data structure (OverlapAll2) which contains the common SVs logical AND in order to find overlapping sequences.

Calculation of longest sequence

In order to achieve the best results from the DD calculation algorithm ^[6], we must find the longest non-interrupted sequence for each number of SVs above 4. This action is performed for each epoch by

ITK2RNX_SV_filter_perm.m. This function goes epoch by epoch, takes list of SVs available at this epoch and searches the longest uninterrupted sequence for all available permutations of this SVs.

<u>For example:</u> if SVs 1,2,3,4,5,6 are available the following permutations are checked for longest sequence:

[1,2,3,4,5], [2,3,4,5,6], [1,3,4,5,6], [1,2,4,5,6], [1,2,3,4,6], [1,2,3,4,6], [1,2,3,4,6], [1,2,3,4,5,6]

Generation of RINEX files

Our code generates 2 types of RINEX files as described in chapter 6: Observation and Navigation.

The navigation file is generated mainly using data received from *RawEph.itk* file, after correction by constants.

The observation files (one for each receiver) are generated mainly using data received from *pseudo.itk* and *track.itk* files after being processed as described in the paragraphs above. The main data used for baseline determination is the carrier phase calculated by the following formula:

 Φ (cycles) = dwCarrCount + wCarrPhase / 256^[8]