

Removing krypton from xenon by cryogenic distillation to the ppq level

E. Aprile¹, J. Aalbers², F. Agostini^{3,4}, M. Alfonsi⁵, F. D. Amaro⁶,
M. Anthony¹, F. Arneodo⁷, P. Barrow⁸, L. Baudis⁸, B. Bauermeister^{9,5},
M. L. Benabderrahmane⁷, T. Berger¹⁰, P. A. Breur², A. Brown²,
E. Brown¹⁰, S. Bruenner¹¹, G. Bruno³, R. Budnik¹², L. Bütikofer¹³,
J. Calvén⁹, J. M. R. Cardoso⁶, M. Cervantes¹⁴, D. Cichon¹¹, D. Coderre¹³,
A. P. Colijn², J. Conrad^{9,a}, J. P. Cussonneau¹⁵, M. P. Decowski²,
P. de Perio¹, P. Di Gangi⁴, A. Di Giovanni⁸, S. Diglio¹⁵, E. Duchovni¹²,
G. Eurin¹¹, J. Fei¹⁶, A. D. Ferella⁹, A. Fieguth¹⁷, D. Franco⁸,
W. Fulgione^{3,18}, A. Gallo Rosso³, M. Galloway⁸, F. Gao¹, M. Garbini⁴,
C. Geis⁵, L. W. Goetzke¹, L. Grandi¹⁹, Z. Greene¹, C. Grignon⁵,
C. Hasterok¹¹, E. Hogenbirk², R. Itay¹², B. Kaminsky¹³, G. Kessler⁸,
A. Kish⁸, H. Landsman¹², R. F. Lang¹⁴, D. Lellouch¹², L. Levinson¹²,
M. Le Calloch¹⁵, Q. Lin¹, S. Lindemann¹¹, M. Lindner¹¹, J. A. M. Lopes^{6,b},
A. Manfredini¹², I. Maris⁷, T. Marrodán Undagoitia¹¹, J. Masbou¹⁵,
F. V. Massoli⁴, D. Masson¹⁴, D. Mayani⁸, Y. Meng²⁰, M. Messina¹,
K. Micheneau¹⁵, B. Miguez¹⁸, A. Molinario³, M. Murra^{17,c}, J. Naganoma²¹,
K. Ni¹⁶, U. Oberlack⁵, S. E. A. Orrigo^{6,d}, P. Pakarha⁸, B. Pelssers⁹,
R. Persiani¹⁵, F. Piastra⁸, J. Pienaar¹⁴, M.-C. Piro¹⁰, V. Pizzella¹¹,
G. Plante¹, N. Priel¹², L. Rauch¹¹, S. Reichard¹⁴, C. Reuter¹⁴, A. Rizzo¹,
S. Rosendahl^{17,e,f}, N. Rupp¹¹, R. Saldanha¹⁹, J. M. F. dos Santos⁶,
G. Sartorelli⁴, M. Scheibelhut⁵, S. Schindler⁵, J. Schreiner¹¹,
M. Schumann^{13,g}, L. Scotto Lavina¹⁵, M. Selvi⁴, P. Shagin²¹, E. Shockley¹⁹,
M. Silva⁶, H. Simgen¹¹, M. v. Sivers¹³, A. Stein²⁰, D. Thers¹⁵, A. Tiseni²,
G. Trincherio¹⁸, C. Tunnell^{2,19}, N. Upole¹⁹, H. Wang²⁰, Y. Wei⁸,
C. Weinheimer¹⁷, J. Wulf⁸, J. Ye¹⁶, Y. Zhang¹ (XENON Collaboration)^h,
and I. Cristescu²²

¹Physics Department, Columbia University, New York, NY, USA

²Nikhef and the University of Amsterdam, Science Park, Amsterdam, Netherlands

³INFN-Laboratori Nazionali del Gran Sasso and Gran Sasso Science Institute, L'Aquila, Italy

⁴Department of Physics and Astrophysics, University of Bologna and INFN-Bologna, Bologna, Italy

⁵Institut für Physik & Exzellenzcluster PRISMA, Johannes Gutenberg-Universität Mainz, Mainz, Germany

⁶Department of Physics, University of Coimbra, Coimbra, Portugal

⁷New York University Abu Dhabi, Abu Dhabi, United Arab Emirates

⁸Physik-Institut, University of Zurich, Zurich, Switzerland

⁹Oskar Klein Centre, Department of Physics, Stockholm University, AlbaNova, Stockholm, Sweden

¹⁰Department of Physics, Applied Physics and Astronomy, Rensselaer Polytechnic Institute, Troy, NY, USA

¹¹Max-Planck-Institut für Kernphysik, Heidelberg, Germany

¹²Department of Particle Physics and Astrophysics, Weizmann Institute of Science, Rehovot, Israel

¹³Albert Einstein Center for Fundamental Physics, University of Bern, Bern, Switzerland

¹⁴Department of Physics and Astronomy, Purdue University, West Lafayette, IN, USA

¹⁵SUBATECH, Ecole des Mines de Nantes, CNRS/In2p3, Université de Nantes, Nantes, France

¹⁶Department of Physics, University of California, San Diego, CA, USA

¹⁷Institut für Kernphysik, Wilhelms-Universität Münster, Münster, Germany

¹⁸INFN-Torino and Osservatorio Astrofisico di Torino, Torino, Italy

¹⁹Department of Physics & Kavli Institute of Cosmological Physics, University of Chicago, Chicago, IL, USA

²⁰Physics & Astronomy Department, University of California, Los Angeles, CA, USA

²¹Department of Physics and Astronomy, Rice University, Houston, TX, USA

²²Tritium Laboratory Karlsruhe, Karlsruhe Institute of Technology, Eggenstein-Leopoldshafen, Germany

Received: date / Accepted: date

Abstract The XENON1T experiment aims for the direct detection of dark matter in a cryostat filled with 3.3 tons of liquid xenon. In order to achieve the desired sensitivity, the background induced by radioactive decays inside the detector has to be sufficiently low. One major contributor is the β -emitter ^{85}Kr which is an intrinsic contamination of the xenon. For the XENON1T experiment a concentration of natural krypton in xenon $^{\text{nat}}\text{Kr}/\text{Xe} < 200$ ppq (parts per quadrillion, $1 \text{ ppq} = 10^{-15} \text{ mol/mol}$) is required. In this work, the design of a novel cryogenic distillation column using the common McCabe-Thiele approach is described. The system demonstrated a krypton reduction factor of $6.4 \cdot 10^5$ with thermodynamic stability at process speeds above 3 kg/h. The resulting concentration of $^{\text{nat}}\text{Kr}/\text{Xe} < 26$ ppq is the lowest ever achieved, almost one order of magnitude below the requirements for XENON1T and even sufficient for future dark matter experiments using liquid xenon, such as XENONnT and DARWIN.

Keywords Cryogenic Distillation · Xenon · Krypton removal

1 Introduction

With a view to discover a possible candidate of the elusive dark matter — namely, the Weakly Interacting Massive Particle (WIMP) [1,2,3] — the XENON dark matter project for direct WIMP detection has been launched. Using a xenon dual-phase time projection chamber (TPC), it searches for an energy deposition in the detector by the elastic scattering of WIMPs off xenon nuclei. The XENON1T detector with a total amount of liquid xenon of 3.3 tons has started data taking and is designed to reach a sensitivity more than an order of magnitude beyond the current limits with a two ton-year exposure, probing new dark matter parameter space [4].

The intrinsic background contamination of the xenon itself is one of the most critical contributors to the total background for large detector masses, and thus

for the sensitivity of the detector. In the calculation of the projected sensitivity, the ER background was assumed to be equal to $1.80 \cdot 10^{-4} (\text{kg} \cdot \text{day} \cdot \text{keV})^{-1}$, mainly due to radon intrinsic to the liquid xenon [4]. Another key contaminant is ^{85}Kr , a β -emitter with a half-life of 10.76 y and an endpoint energy of 687 keV. Although background reduction techniques are applied at the analysis level to discriminate these beta decays from WIMP-induced nuclear recoils, active removal of krypton is needed before starting the dark matter search to reduce the remaining background to a tolerable level. For the XENON1T experiment, a concentration of natural krypton in xenon $^{\text{nat}}\text{Kr}/\text{Xe} < 200$ ppq¹, assuming a ratio of $^{85}\text{Kr}/^{\text{nat}}\text{Kr} = 2 \cdot 10^{-11}$, is necessary to keep the background from krypton subdominant with respect to the one from radon, and so to meet the background requirements [4]. In future experiments, using multiple tonnes of liquid xenon as fiducial target, the purity constraints are even more stringent, e.g., for the XENONnT [4], LZ [5] and DARWIN [6] experiments, where concentrations of well below 100 ppq have to be achieved. Commercially available xenon gas can be delivered with krypton concentrations in the range from 1 ppm² to 10 ppb³, which is generally not clean enough for dark matter experiments using liquid xenon detectors.

Separation of krypton from xenon can be achieved thanks to the different physical properties of xenon and krypton, such as the difference in vapour pressures or their different mobilities in porous media. The former property is exploited in cryogenic distillation while the latter is used in chromatographic systems. The LUX experiment uses gas chromatography to achieve a krypton concentration in xenon down to 4 ppt⁴ after a single-pass through the removal system and below 200 ppq after two passes [7]. Cryogenic distillation has first been utilized by the XMASS collaboration, reaching a concentration of 3 ppt [8]. The same type of column was used in XENON100 to produce a purified output concentration of 19 ppt at a purification speed of 0.6 kg/h [9]. After several cycles of distillation, even lower concentrations of about 1 ppt were obtained in XENON100 [10] and PandaX [11].

In this paper, we present a new distillation column, designed and built with an increased purification speed of 3 kg/h (8.3 standard liters per minute (slpm)). It features a minimal loss of krypton-enriched xenon of 1% and a higher separation performance. Starting with a concentration in the ppb range, a reduction factor of

^aWallenberg Academy Fellow

^bAlso with Coimbra Engineering Institute, Coimbra, Portugal

^ce-mail: michaelmurra@wwu.de

^dNow at IFIC, CSIC-Universidad de Valencia, Valencia, Spain

^eNow at Physikalisch-Technische Bundesanstalt (PTB), Braunschweig, Germany

^fe-mail: stephan.rosendahl@ptb.de

^gNow at Physikalisches Institut, Universität Freiburg, Freiburg, Germany

^he-mail: xenon@lngs.infn.it

¹Parts per quadrillion, $1 \text{ ppq} = 1 \cdot 10^{-15} \text{ mol/mol}$

²Parts per million, $1 \text{ ppm} = 1 \cdot 10^{-6} \text{ mol/mol}$

³Parts per billion, $1 \text{ ppb} = 1 \cdot 10^{-9} \text{ mol/mol}$

⁴Parts per trillion, $1 \text{ ppt} = 1 \cdot 10^{-12} \text{ mol/mol}$

$F_{\text{red}} \approx 10^4 - 10^5$ is needed to achieve the purity required for XENON1T. The reduction factor is defined as the ratio of the krypton concentration in the in-gas c_F divided by the concentration in the purified liquid-out sample c_B

$$F_{\text{red}} = \frac{\text{natKr}/\text{Xe}_{(\text{in-gas})}}{\text{natKr}/\text{Xe}_{(\text{liquid-out})}} \equiv \frac{c_F}{c_B}. \quad (1)$$

Section 2 introduces the conceptional design of the new system based on the commonly used McCabe-Thiele method [12]. The detection of krypton in xenon is an important aspect when characterizing distillation systems, which is treated in section 3. The development of the distillation column was divided into three phases. It started with a single stage distillation setup (Phase-0), already presented in [13], before starting the construction of a multi-stage test setup (Phase-1) to investigate different aspects of the separation, summarized in section 4. The final, and improved, setup for the XENON1T experiment (Phase-2) was commissioned at the Laboratori Nazionali del Gran Sasso (LNGS) in Italy and is presented in section 5.

2 Design of the cryogenic distillation column

The distillation process as described in [12, 14] is based on the difference of vapour pressures of the two components in an ideal binary mixture, in our case krypton and xenon. Assuming a static liquid xenon reservoir in equilibrium with the gaseous phase above, the more volatile component (krypton) is enriched in the gaseous phase. The enhancement in concentration can be described by the relative volatility α , which is deduced by using Raoult's law to be the ratio between the vapour pressures of the two components:

$$\alpha = \frac{P_{\text{Kr}}}{P_{\text{Xe}}} = 10.8 \quad (\text{at } T = -98^\circ\text{C}) \quad [15]. \quad (2)$$

The volatility can also be interpreted as a measure of the probability for krypton to migrate into the gaseous phase at liquid xenon temperatures.

In Phase-0, a single stage distillation system was realized, containing liquid xenon with a gaseous phase above. Such a system allowed the investigation of the dynamics of a distillation process in a volume with a single liquid-gas interface and steady state mass flow at very low concentrations of krypton in xenon in the ppq range [13]. This allowed the first measurement of the relative volatility at such low concentrations of krypton in xenon, finding that $\alpha \approx 10$, consistent with Raoult's law even in this regime. The measurements also confirmed the general prediction that a single distillation stage is not enough to achieve separation of

$10^4 - 10^5$ [14]. Therefore, the distillation column presented here employs the techniques commonly used in distillation plants, where a series of distillation stages is used to successively reduce the krypton concentration to the desired level of purity.

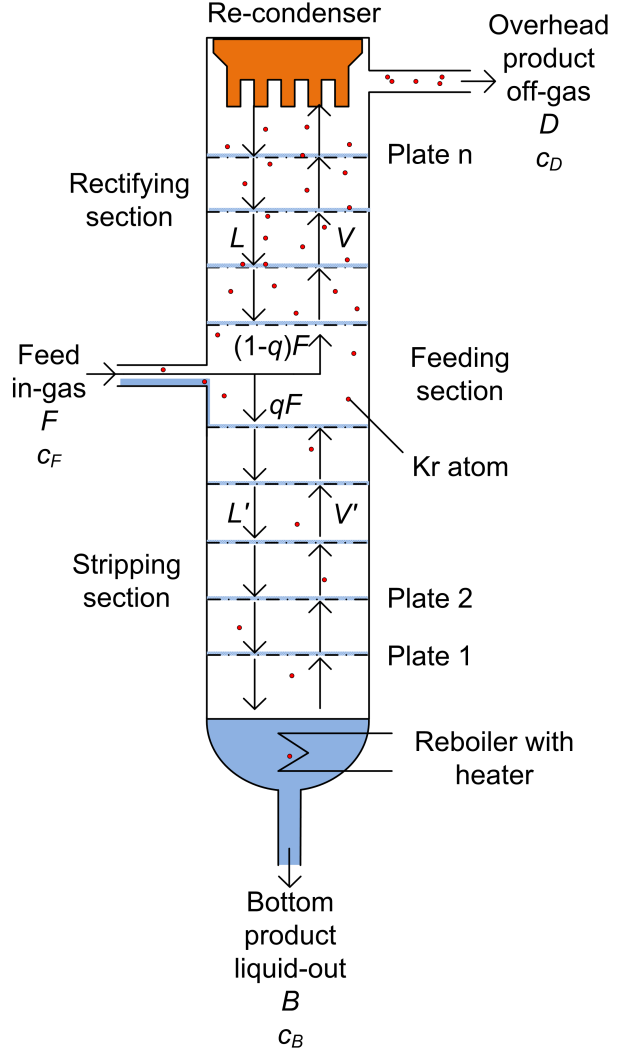


Fig. 1 Schematics of a distillation column with partial reflux. In this diagram, the typical construction of a distillation column using several distillation plates and partial reflux is shown. It consists of three parts, the stripping section, the feeding section and the rectifying section. L and L' are the down-going liquid streams while V and V' are the up-going gaseous streams in the different parts. Both are connected to the feeding stream F . The krypton enriched off-gas stream D is extracted from the top while the purified xenon is extracted from the bottom with a flow rate B . The krypton in xenon concentrations of the feed and the two extraction flows are given by c_F , c_D and c_B , while q defines the state of matter of the injected xenon.

In the simplest configuration, the distillation column is treated as a system with three sections as shown

in figure 1. The feeding section where the xenon is injected to the distillation tower, the rectifying section above where the more volatile component is enriched, and the stripping section below the feeding section where the more volatile component is depleted. Setting the reboiler stage in the stripping section as the starting point, the binary mixture is evaporated and a gaseous stream flows upwards at a flow rate of V' . Assuming that the vapour will condense on the next stage (Plate 1), the generated liquid phase on this stage will have the same composition as the vapour from the reboiler stage, and will therefore have a higher concentration of krypton compared to the starting mixture. By repeating this procedure for several stages, the fraction of krypton in xenon will successively increase. On top of the tower, the vapour is partially liquefied with the help of the re-condenser and fed back to the column with a flow rate L . A small fraction of the gas is taken out as krypton enriched off-gas at a flow rate D , while the purified xenon is extracted at the bottom with a flow rate B . Such an operation with a partial reflux is called rectification.

The xenon, injected at the feeding section at a flow rate F , is added to either the up-streaming vapour V in the rectifying section or to the down-streaming liquid flow L' . This depends on the state of the injected matter (gaseous or liquid), which is described by the caloric factor q . Depending on the requested krypton in xenon concentration at the bottom (purified xenon, liquid-out) and at the top (krypton enriched xenon, off-gas) the number of distillation stages can be calculated using the McCabe-Thiele method [12]. In this method, described in the following paragraphs, the concentration of krypton in the gaseous and liquid phase can be calculated to derive an equilibrium diagram, which is shown in figure 2.

Based on the vapour pressures and the relative volatility α , the relation between the krypton concentration in the gaseous phase y_{Kr} and the liquid phase x_{Kr} for very low concentrations ($x_{Kr} \cdot (\alpha - 1) \ll 1$) in equilibrium is defined as

$$y_{Kr} = \frac{P_{Kr} \cdot x_{Kr}}{P_{Kr} \cdot x_{Kr} + P_{Xe} \cdot x_{Xe}} \quad (3)$$

$$= \frac{\alpha \cdot x_{Kr}}{1 + (\alpha - 1) \cdot x_{Kr}} \quad (4)$$

$$\approx \alpha \cdot x_{Kr}. \quad (5)$$

This relation is called the equilibrium line and is shown in red in figure 2.

By heating from the bottom and cooling from the top, the equilibrium inside the column is disturbed by the upward gaseous and downward liquid flows introduced in the column. The actual concentration of krypton in the gaseous phase related to the concentration in

the liquid phase can be described, due to the mass flow, by operating lines, defined below. For each section, an operation line for the diagram is determined, shown in figure 2 marked as gray, blue and green lines respectively. A forcing concentration gradient is ensured between the equilibrium line and operating lines, driving the system towards the equilibrium via mass transfer between the ascending gaseous stream and the descending liquid stream.

The determination of the operation lines [12,14] is briefly reviewed here. The total mass balance depends on the design specifications as introduced in section 1. The incoming flow $F = 3 \text{ kg/h}$ (in-gas) is equal to the outgoing flows at the reboiler $B = 2.97 \text{ kg/h}$ (purified xenon, liquid-out) and at the condenser $D = 0.03 \text{ kg/h}$ (krypton enriched xenon, off-gas, fixed by design to 1% of in-gas) during stable operation, giving the total mass-balance,

$$F = D + B. \quad (6)$$

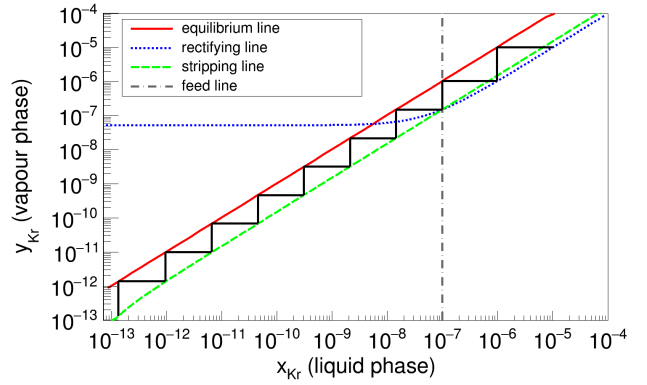


Fig. 2 McCabe-Thiele diagram for the XENON1T requirements. The concentration of the krypton in the gas phase y_{Kr} in relation to the concentration in the liquid phase x_{Kr} . The operation lines for the different sections of the column are drawn and allow for the determination of the number of theoretical stages needed to meet the XENON1T requirements (black line). The definitions of the equilibrium and operation lines are taken from [12,14].

This can also be written in terms of krypton particles, using the different concentrations of krypton in the feed c_F , in the off-gas c_D and in the liquid-out c_B ,

$$F \cdot c_F = D \cdot c_D + B \cdot c_B. \quad (7)$$

For an input concentration of $c_F = 100 \text{ ppb}$ and the pre-defined purified output concentration for XENON1T, $c_B = 200 \text{ ppq}$, the concentration in the off-gas can be calculated as $c_D = 10 \text{ ppm}$ for the given flows.

In the rectifying section, the krypton concentration on a distillation stage y_{Kr} in the vapour stream V can

be calculated using the krypton particle balance to get the operating line (rectifying line)

$$V \cdot y_{Kr} = L \cdot x_{Kr} + D \cdot c_D \quad (8)$$

$$\rightarrow y_{Kr} = \frac{R}{R+1} \cdot x_{Kr} + \frac{c_D}{R+1}, \quad (9)$$

where L is the liquid xenon flux in the rectifying section. R is called the reflux ratio and describes the amount of xenon that is fed back as liquid (L) from the top, related to the flow of extracted off-gas D

$$R = \frac{L}{D}. \quad (10)$$

For good separation performance, a high reflux ratio R is mandatory [12,14]. Since $R = 191$ worked well for the XENON100 column [8] and was not the limiting factor in terms of separation efficiency, the same value for the XENON1T system was used in the initial design.

The liquid xenon flux is calculated as $L = R \cdot D = 5.73 \text{ kg/h}$, which directly defines the amount of cooling power needed at the top condenser to be $P_{Top} = 147.4 \text{ W}$ in order to liquefy the xenon. The operation line for the stripping section is determined by the liquid and gaseous flow rates L' and V' , respectively

$$L' \cdot x_{Kr} = V' \cdot y_{Kr} + B \cdot c_B \quad (11)$$

$$\rightarrow y_{Kr} = \frac{R'}{R'-1} \cdot x_{Kr} + \frac{c_B}{R'-1}, \quad (12)$$

with R' being the reflux ratio of gas evaporated from the reboiler, defined as

$$R' = \frac{L'}{B}. \quad (13)$$

For the determination of R' , the flow rate of down-streaming liquid L' has to be calculated, which is a combination of liquid flows from the rectifying section and also from the feeding section,

$$L' = L + q \cdot F. \quad (14)$$

In the feeding section, the down-streaming liquid flow and the up-streaming gaseous flow depend on the thermal state of the feed. Different feed configurations are possible, drastically influencing the mass flow along the column. The caloric factor

$$q = \frac{L' - L}{F} \quad (15)$$

describes the feeding condition in the mass balance. The design for the XENON1T column foresees the usage of a saturated liquid feed at the boiling point ($q = 1$). This does not affect the vapour stream and is directly added to L . Taking this into account, $L' = L + F = 8.73 \text{ kg/h}$ and $R' = 2.94$ are used for the calculation of the stripping line.

The McCabe-Thiele diagram, shown in figure 2, was drawn for a saturated liquid feed ($q = 1$), indicated by

the intersection line (in this case vertical) of the two operation lines and a starting concentration of $c_F = 100 \text{ ppb}$. The number of black steps in the diagram indicates the number of theoretical stages and can be determined by taking the liquefaction processes and the related vapour compositions into account. A liquid mixture with the krypton content x_{Kr} has a vapour phase with an enhanced krypton concentration y_{Kr} , which is streaming up to the next stage (vertical line) where it gets liquefied again (horizontal line).

In total 9 theoretical distillation stages are needed to reach a reduction factor of $F_{red} \sim 10^{-4} - 10^{-5}$. This allows commercial xenon to be purified in a single pass through the column. For a saturated vapour feed ($q = 0$), the diagram changes slightly and 10 stages are needed in order to achieve the same separation.

In practice, multiple single distillation stages are not practical. However, by utilizing a structured package material (Sulzer AG, laboratory package, type EX) inside the column, featuring a large surface area for good liquid-gas exchange through the full height of the column, the effective exchange is equivalent to a certain number of theoretical single distillation stages. The height-equivalent of one theoretical plate⁵ (HETP) denotes the amount of required package material to realize one distillation stage. Together with the number of predicted plates N_{TP} derived from the McCabe-Thiele diagram, the total height h of the package tube can be calculated:

$$h = \text{HETP} \cdot N_{TP}. \quad (16)$$

The HETP value is determined empirically and varies for different compositions and system parameters. Typical values for the package type used here are (2 – 8) cm [16], but it has not been measured for a krypton-xenon mixture so far. Furthermore, the partial pressure of krypton in the injected krypton-xenon mixture is already very low, due to its low feed concentration $c_F \sim 10 \text{ ppb}$. The investigations on the single stage distillation setup confirmed the separation process on the ppq scale for krypton and xenon to be in agreement with the expectations from the relative volatility [13]. However, for this concentration regime the McCabe-Thiele approach has not been validated for larger distillation plants. Due to these uncertainties it was decided to first realize a smaller distillation column, using 1 m of package material (Phase-1 column) and increase the amount of material afterwards, if needed (Phase-2 column). The components of the Phase-1 column were designed to allow an easy upgrade from Phase-1 to Phase-2.

⁵One theoretical plate equals one distillation stage.

3 Diagnostics of krypton in xenon

The measurement of trace amounts of krypton in xenon is important for the characterization of the cryogenic distillation column. The XENON collaboration developed several techniques for trace gas measurements to detect natural krypton in xenon to the sub-ppt level [10, 17, 18].

A $^{83\text{m}}\text{Kr}$ tracer method was developed by Westfälische Wilhelms-Universität (WWU) Münster, where $^{83\text{m}}\text{Kr}$ is injected to the feed gas. The measurement of the decay of $^{83\text{m}}\text{Kr}$, which chemically behaves as natural krypton, at the inlet and the two outlets of the column allows investigating the stability of the distillation process as well as its dynamics over time. The method has been successfully used for the single stage system as well as for the Phase-1 and Phase-2 columns. It is presented in more detail in [13, 19].

3.1 RGA with coldtrap enhanced sensitivity

For an online measurement of the absolute concentration of natural krypton in xenon, a system based on [20, 21] was developed at WWU Münster. By using a residual gas analyzer (RGA) behind a LN_2 -cooled coldtrap, an enhanced sensitivity for concentrations down to the sub-ppb level was achieved. The xenon gas sample (≈ 90 ml) was introduced into a spiral gas routing pipe, which was cooled to 77 K by submerging it in liquid nitrogen. This provides an artificial enhancement of the krypton concentration as most of the xenon is frozen at this part whereas the krypton remains gaseous due to its higher vapour pressure and low partial pressure. The sample was injected into a measurement chamber equipped with a commercial quadrupole mass-filter (Inficon, Transpector 2 H200M) and an oil-free turbomolecular pumping system. A custom-made butterfly valve was mounted before the pump, which allowed the control of the gas load inside the measurement chamber by adjusting the effective pumping speed. This increased the dynamic range and provided higher sensitivity. A similar version described in [18] was constructed with a sensitivity limit of (206 ± 36) ppt, obtained from calibration with different known krypton concentrations.

Since the expected concentration of the distilled xenon is at the ppq level, only a lower limit for the separation efficiency can be given. However, this setup provides valuable online feedback on the performance of the distillation column.

3.2 GC-RGMS - Gas chromatography in combination with residual gas mass spectrometry

The most sensitive device used to characterize the Kr-removal capability of the distillation columns is the rare gas mass spectrometer (RGMS), developed at the Max-Planck-Institut für Kernphysik in Heidelberg. It detects trace amounts of natural krypton in xenon down to the ppq level. The projected detection limit was determined to be $^{\text{nat}}\text{Kr}/\text{Xe} = 8$ ppq [10]. Similar to the cold-trap RGA technique, a separation of the bulk of xenon from the krypton component has to be done before the sample is injected into the analyzer. This separation is realized by gas-chromatography.

4 The Phase-1 distillation column

4.1 Design and assembly

The Phase-1 distillation column has a total height of 3.5 m and uses 1.1 m of package material in the distillation tower. Figure 3 shows the P&I Diagram of the system as well as the infrastructure which allows different performance studies. The column consists of four main components, the input condenser, the package tube, the top condenser and the reboiler. At the input condenser, equipped with a cryo-cooler (Leybold CP-50), the injected xenon is liquefied with a maximum cooling power of 100 W at -98°C , before it is passed to the package tube where the distillation process takes place. The tube is filled with structured package material made from stainless steel (Sulzer EX, diameter 45 mm) as shown in figure 4 and is equipped with different feeding ports (labeled LF1-LF3 for liquid feed injected from the bottom and GF1 for gaseous feed injected from the top of the input condenser) in order to allow for different feeding conditions. The top condenser is equipped with a cryo-cooler (Leybold CP-140T) providing 200 W of cooling power at -98°C . The reboiler at the bottom stores and evaporates the liquid xenon using heater cartridges with a maximum of 300 W heating power available. The entire setup is housed inside a vacuum insulation vessel, pumped to 10^{-5} mbar in order to minimize thermal losses.

Both condensers are equipped with calibrated silicon diodes (Lakeshore DT-670D-CU) providing accurate temperature monitoring, while additional Pt-1000 sensors at different locations complete the overall temperature supervision (not shown in figure 3). The most important system parameter is the pressure inside the package tube, measured with a capacitive manometer (MKS Baratron 121A, labeled as PI23) while the inlet and the outlet pressures PI21 and PI22 are mea-

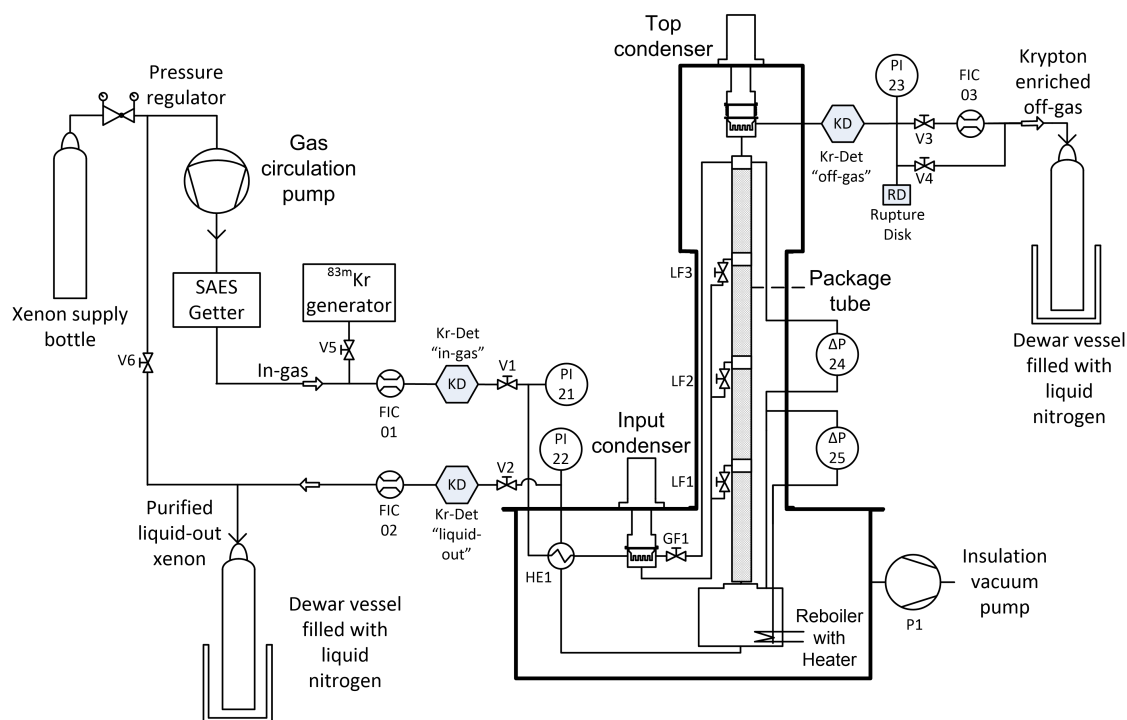


Fig. 3 P&I Diagram of the Phase-1 distillation setup. The xenon is injected from storage bottles to the distillation plant, while the purified xenon as well as the krypton enriched off-gas are collected into separate gas bottles by cryo-pumping. The scheme is simplified and shows only the most important sensors for pressure and flow rates which are required for the regulation.

sured with a capacitive manometer with lower precision (Swagelok PTU series). The differential pressure along the package tube is also measured (MKS Baratron 221B; $\Delta P24$). The same type of differential pressure sensor ($\Delta P25$) is used to obtain the height of the liquid xenon level inside the reboiler by measuring the hydrostatic pressure of the liquid in relation to the column pressure.

The mass-balance inside the system is controlled by three mass-flow controllers (MKS 1479B) labeled as FIC01 for the in-gas, FIC02 for the purified liquid-out and FIC03 for the krypton enriched off-gas. The liquid-out and the in-gas flows are thermodynamically coupled by a plate-heat exchanger (GEA GBS 100M-200R; HE1). A rupture disc (RD) was added for the release of accidental overpressures greater than 4 bar. Three ^{83m}Kr decay detectors (KD) are implemented at the in-gas, as well as at the liquid-out and the off-gas lines.

In order to guarantee a high xenon purity, all parts were either made from electro-polished stainless steel (alloy 316L and 316LN) or from oxygen-free, high thermal conductivity (OFHC) copper. All connections were either made by metal sealed VCR connections or CF flanges, while the fittings for the VCR connection were orbitally welded to the pipes to achieve optimal leak-



Fig. 4 Package tube. After a cleaning procedure, the structured package material is filled into the package tube inside a clean-room.

tightness and clean weld seams. All components were very carefully cleaned and the assembled system was baked, evacuated and xenon gas was circulated through a hot getter (SAES PS4-MT15-R-2) in a closed loop via V6 to further reduce remaining impurities.

4.2 Commissioning

Before starting the distillation process, the column is cooled down and filled with xenon in order to achieve

a certain liquid level inside the reboiler vessel, (2-3) cm corresponding to (3-4) kg, and the input condenser (1 kg) to realize the liquid feed condition. The regulation circuit stabilizes the pressure inside the system to about 2.0 bar absolute by adjusting the heater power in the reboiler and by keeping the applied cooling power at the top condenser constant, thereby establishing a stable xenon flux along the package tube. The distillation run is performed by flushing xenon from the storage bottle, through the getter purification stage, and into the distillation column. For the storage of purified liquid-out gas, and also for krypton enriched off-gas, two aluminum gas bottles are cooled in a liquid nitrogen bath.

4.3 Thermodynamic stability

For an optimal separation of krypton and xenon, the distillation process needs to be thermodynamically stable such that the mass exchange between liquid and gas streams are guaranteed. Thus, it is working ideally after the pressure in the system has been stabilized and mass balance is achieved. This means that the amount of xenon gas that is fed into the column equals to the extracted xenon gas. Thus, the flows are adjusted until the balance $F=B+D$ is reached. Figure 5 presents relevant parameters of an 11 hour distillation run, using a liquid feed condition ($q = 1$), injected at port LF2 (see figure 3). The first diagram shows the absolute pressure inside the distillation column (PI23), which was set to 1.9 bar. After five hours of regulation time, the measured pressure at the sensor was $PI23 = 1.90$ bar, matching the set-point with a standard deviation of $\sigma_{PI23} = 0.006$ bar. The differential pressure along the package tube ($\Delta P24$) is an important parameter in order to avoid flooding of the package with liquid xenon which can reduce the performance. The differential pressure was measured to be $\Delta P24 = (1.0 \pm 0.1)$ mbar leading to a pressure drop of about 0.91 mbar/m of package material, slightly below the recommended value of 1 mbar/m [16]. Consequently, there is no flooding of the package during this run.

The differential pressure in the reboiler indicates that the mass-balance and the feeding is working properly. When the distillation is started, the liquid level changes due to feeding, liquid extraction at the bottom, and turbulences due to the regulation. After some time it stabilizes at $\Delta P25 = (6.0 \pm 0.1)$ mbar (equivalent to a height of 22 mm). The relative change in the liquid level during the last 5 hours of the distillation was only -0.2% , indicating very good mass-balance stability. Finally, the third panel shows the different flow rates at the in-gas and the purified liquid-out lines. The run was

performed at an average flow rate of $FIC01 = 8.5$ slpm, with a fraction of 1.1 % going into the off-gas. The reflux ratio was measured to be $R_{Meas} = 183$, slightly smaller than foreseen from section 2. This can be explained by heat-input to the system from the outside, by thermal radiation or heat bridges, leading to a reduced effective cooling power at the top condenser and thus a smaller reflux. Nevertheless, the effect on the performance is expected to be small according to McCabe-Thiele diagram calculations.

Additional performance studies were carried out at increased process speeds of up to 16 slpm which turned out to be thermodynamically stable. These rates could only be achieved with the heat exchanger HE1, working at an efficiency of $> 90\%$, in agreement with measurements in [22]. Without the heat exchanger, the cooling power provided by the input condenser would not be sufficient to guarantee a saturated liquid feed. The final limit on the process speed for the Phase-1 system is given by the flow controllers which are capable of a maximum speed of 20 slpm ($= 7.2$ kg/h).

4.4 Separation efficiency

Since the purified output was well below the sensitivity limit of the coldtrap RGA system, the RGMS technique was used to measure the reduction factor of the distillation column. A xenon gas sample was extracted into a transport container and shipped to MPIK Heidelberg. In order to avoid any contamination of the sample, the container consisted of four metal-sealed $1/2"$ VCR valves, welded together in series to enclose three volumes of a total of about 10 cm^3 which were filled with sample gas. The main advantage of three volumes is the separation of the central volume by the two adjacent ones from ambient air which contains a 1.1 ppm fraction of natural krypton. Even minute contamination due to leakage of the valves are thus avoided. Finally, two containers were used to draw samples from the in-gas and the purified liquid-out lines. They were mounted to the Phase-1 column, baked and evacuated for two days to establish a clean environment inside the storage container before the samples were taken.

The distillation was performed at a process speed of $FIC01 = 8.5$ slpm, with 1.1% off-gas flow-rate and a reflux ratio of $R = 180$. The samples were drawn after the system was stable for six hours. The off-line analysis showed a concentration in the in-gas line of

$$c_F = (136 \pm 22) \text{ ppt}, \quad (17)$$

which was calculated from the average over three measurements. For the liquid-out sample each of the three storage volumes was measured two times, for a total of

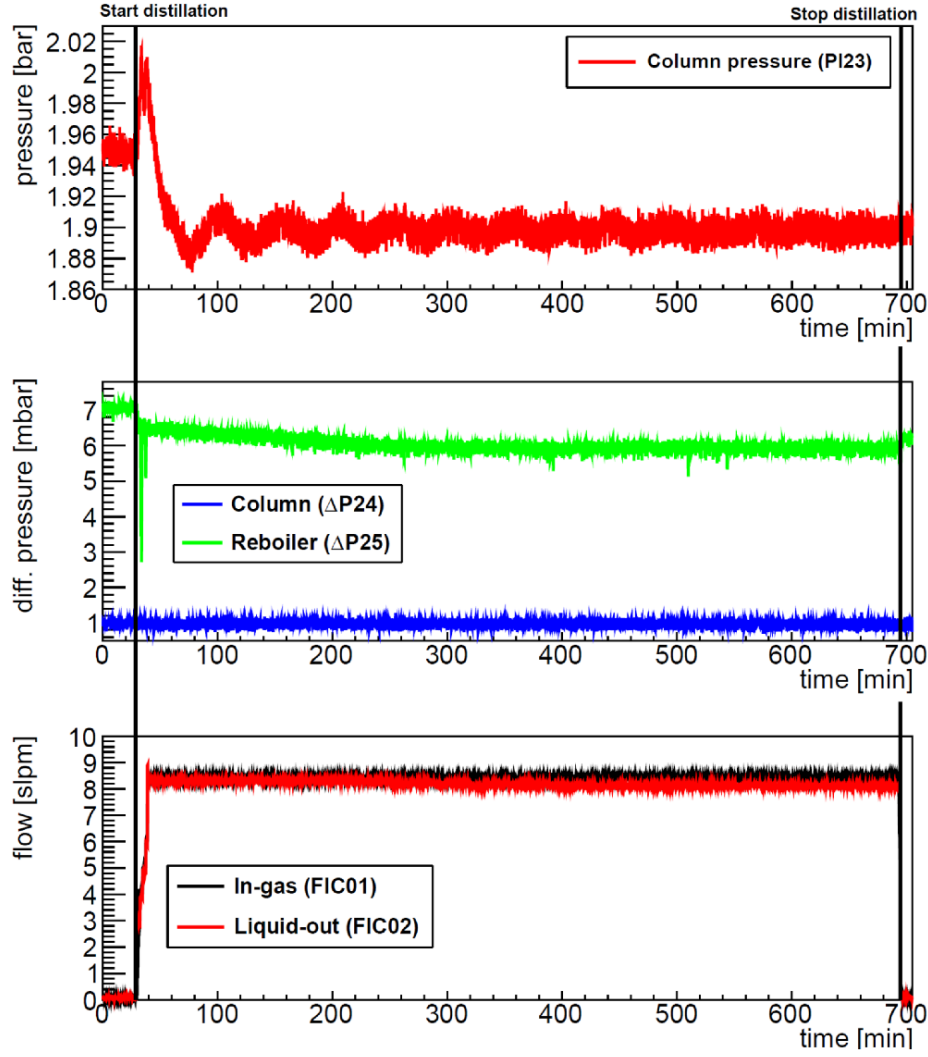


Fig. 5 Thermodynamic stability of the distillation process. Shown are the key parameters during a distillation run of about 11 hours. The width and small spikes of the measurements are created by sensor inaccuracy and do not reflect the actual performance. Middle: Pressure drop along the package tube ($\Delta P24$) and hydrostatic pressure of the liquid xenon reservoir in the reboiler ($\Delta P25$). Bottom: Flow rates in the in-gas line (FIC01) and in the liquid-out line (FIC02).

six measurements. The results are shown in Table 1. The concentration of krypton in the purified liquid-out line is thus

$$c_B < 26 \text{ ppq} \quad \text{at 90\% confidence level (CL)}. \quad (18)$$

This is the first demonstration that cryogenic distillation is capable of producing impurities on the ppq-level. The krypton concentration is more than a factor 30 lower than ever achieved with the XENON100 column. Furthermore, it fulfills the requirements for XENON1T ($^{\text{nat}}\text{Kr}/\text{Xe} < 200 \text{ ppq}$) and for future multi-ton experiments like XENONnT, LZ or DARWIN, requiring a krypton content below 100 ppq [4, 5, 6]. Although the RGMS system is sensitive down to 8 ppq [10], only a limit on the purified concentration is given due to the spread in the different measurements. The actual output of the distillation plant might be

Table 1 Results from the concentration measurement of the purified liquid-out sample. Six measurements using the RGMS system were performed on the three volumes containing the liquid-out sample. Each of the three sample volumes was measured twice. The sample was drawn during the commissioning of the Phase-1 column.

Volume	Xe [cm^3]	$^{\text{nat}}\text{Kr}/\text{Xe}$ [ppq]
1st	2.24	8 ± 5
1st	2.09	24 ± 6
2nd	2.85	15 ± 4
2nd	1.22	13 ± 7
3rd	0.23	< 50
3rd	1.73	28 ± 5

even purer, but uncertainties in sample retrieval, storage and transport might lead to an increase of the krypton content over time. The reduction factor is conservatively estimated to be

$$\frac{c_F}{c_B} = F_{\text{red}} > 5.6 \cdot 10^3 \quad (90\% \text{ CL}). \quad (19)$$

5 Performance of the final distillation column

It turned out that the Phase-1 column was not able to purify xenon with high concentrations of $\mathcal{O}(10 \text{ ppm})$ of helium, argon and krypton, or electronegative impurities like oxygen and water, due to thermodynamic instability. Thus, further improvements were made. Both condensers (input and top) were modified to improve the gas collection for the processing of highly contaminated xenon. Compared to the Phase-1 system, the improved setup was extended to 2.8 m of package material, reaching a total height of about 5.5 m as shown in figure 6. A third differential pressure gauge was implemented to measure the liquid level inside the input condenser, to allow for a more precise monitoring of the xenon feed. After the successful construction and com-

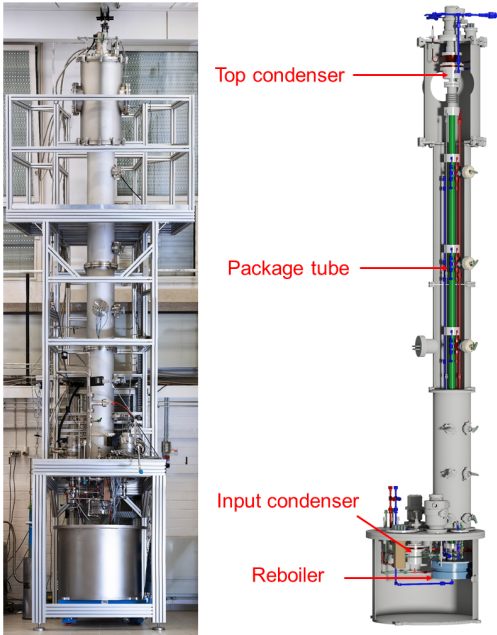


Fig. 6 Phase-2 setup during commissioning at WWU Münster. The final height is about 5.5 m. The system was transferred and remounted at the underground laboratory LNGS in Italy.

missioning of the Phase-2 column at WWU Münster, the system was dismantled, shipped to the Gran Sasso underground laboratory LNGS and re-assembled underground.

5.1 Thermodynamic stability

Figure 7 shows the key parameters of the first long-term distillation run over several days at the Gran Sasso lab. About 212 kg of xenon were distilled at a flow rate of $\text{FIC01} = 8.5 \text{ slpm}$ (Figure 7, bottom) with 1% off-gas flow rate. The pressure stabilization works as efficiently as for the Phase-1 setup, stabilizing a few hours after starting the process, as shown in the top panel of figure 7. However, achieving a stable mass-balance is more complex since the final Phase-2 setup has a longer package tube and the position of the feeding port, where the xenon is injected to the package tube, was also moved upwards. The overpressure inside the input condenser is therefore required to be much higher, to push the liquid upwards compared to the Phase-1 system. After about 24 hours, the optimal settings were found and the liquid level inside the reboiler vessel (ΔP_{25} , figure 7, middle) remained constant at 6.2 mbar. The differential pressure along the package tube was measured to be about 2.4 mbar, corresponding to a pressure drop of about 0.86 mbar/m, similar to the Phase-1 system.

In further distillation studies at LNGS, higher flow rates of up to 16.5 slpm were tested by processing xenon with a krypton concentration of $\mathcal{O}(1 \text{ ppm})$. Stable performance was achieved, verifying the results from the commissioning in Münster, using flow rates of up to 18 slpm. Furthermore, highly contaminated xenon with $\text{O}_2/\text{Xe} \approx 1300 \text{ ppm}$ and $\text{N}_2/\text{Xe} \approx 2600 \text{ ppm}$ was successfully processed. The studies indicate that the modifications of the gas collection in both input and top condenser were successful and allow processing xenon with a high content of impurities other than krypton.

5.2 Separation efficiency

During the commissioning run at WWU Münster, xenon artificially doped to a krypton concentration of $\mathcal{O}(10 \text{ ppm})$ was used to estimate the reduction factor of the Phase-2 column with the coldtrap-RGA method. Both the in-gas sample and the purified liquid-out gas were measured during the distillation process with 8.0 slpm. The concentration of natural krypton in the purified xenon was found to be below the sensitivity limit of the coldtrap-RGA system of $(206 \pm 36) \text{ ppt}$. The concentration in the supply bottle was determined to be $(20.2 \pm 5.4) \text{ ppm}$. This gives a reduction factor of

$$F_{\text{red}} > 9.4 \cdot 10^4 \quad (90\% \text{ CL}), \quad (20)$$

almost reaching the design value of $10^4 - 10^5$.

During the commissioning run at LNGS, 212 kg of xenon were processed (see figure 7), and several samples for measurements with the RGMS system were drawn.

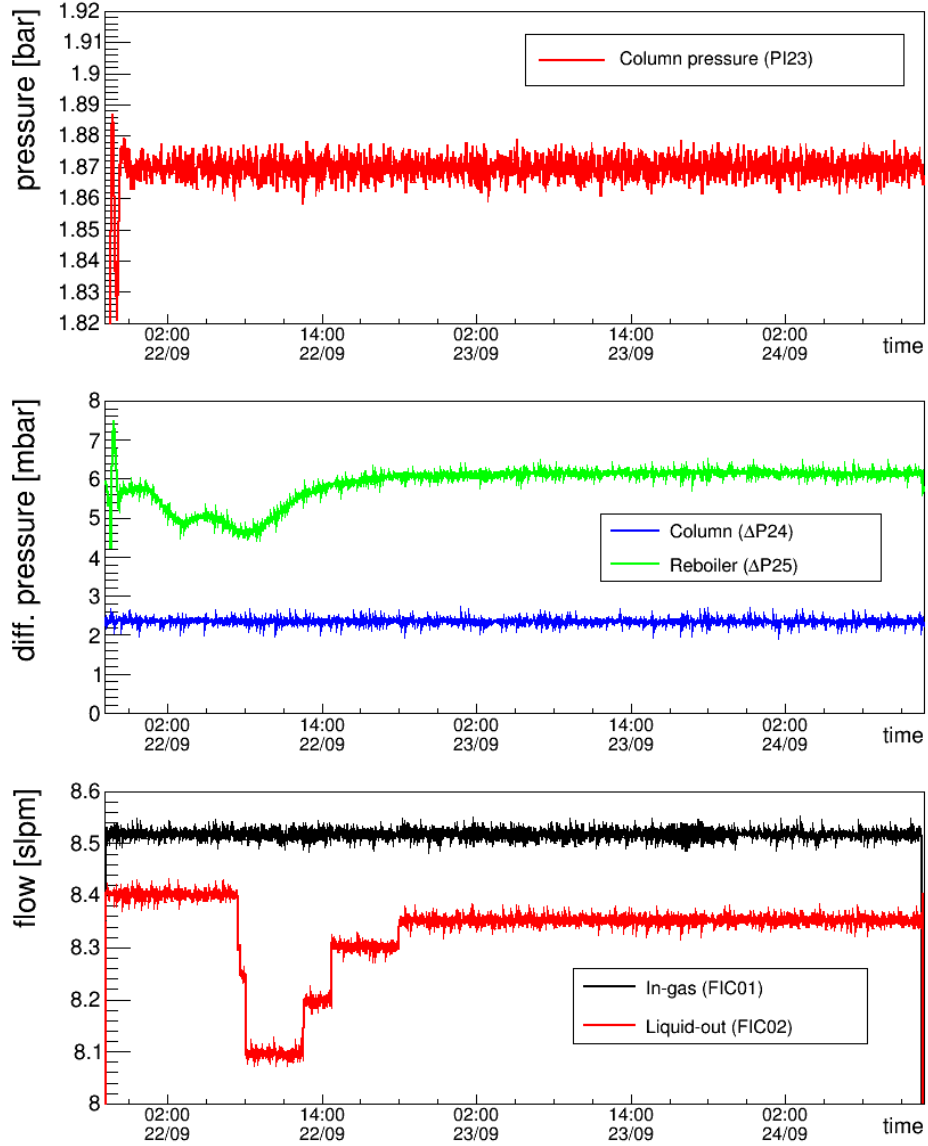


Fig. 7 Thermodynamic stability of the final XENON1T distillation setup. The plots show the key parameters for a distillation test at LNGS over several days. The width and small spikes of the measurements are created by sensor inaccuracy and do not reflect the actual performance. Top: Pressure PI23 inside the package material. Middle: Pressure drop along the package tube ($\Delta P24$) and hydrostatic pressure of the liquid xenon reservoir in the reboiler ($\Delta P25$). Bottom: Flow rates in the in-gas line (FIC01) and in the liquid-out line (FIC02). Thermodynamic stability is reached after about 24 hours.

The in-gas was stored in four gas bottles. Three of them were measured with a commercial gas-chromatograph and have an average concentration of (453 ± 53) ppb. For the fourth bottle a certificate from the delivering company stated a concentration of less than 1000 ppb of krypton.

The sample container for the purified xenon was connected to the XENON1T purification system, which is designed as a gas manifold and allows extraction of samples. The purified liquid-out sample was measured to have a concentration of (730 ± 140) ppq. Assuming a uniform distribution for the unknown concentration

of the fourth bottle between 0 ppb and 1000 ppb, the reduction factor is

$$F_{\text{red}} = (6.4^{+1.9}_{-1.4}) \cdot 10^5. \quad (21)$$

Systematic effects affecting sample collection, transport and preparation potentially contaminate the liquid-out sample. The absolute concentration in the liquid-out line during the distillation process may be lower and thus the reduction might be even higher.

Absolute concentrations below 48 ppq (90% CL) were achieved with the final system when distilling xenon with input concentrations of about 50 ppb during further distillation runs.

The achieved krypton concentrations are compared with other LXe-based dark matter experiments in Table 2.

Table 2 Results on the krypton concentration measurements of different experiments.

Experiment	Technique	$^{\text{nat}}\text{Kr}/\text{Xe}$ [ppq]
XENON100	Distillation	950 [10]
PandaX	Distillation	1000 [11]
XMASS	Distillation	2700 [23]
LUX	Chromatography	< 200 [7]
XENON1T Phase-1	Distillation	< 26
XENON1T final	Distillation	< 48

6 Conclusion

A novel distillation column was designed and constructed for a process speed of 8.3 slpm ($= 3 \text{ kg/h}$) and a krypton reduction factor of more than 10^5 to reach natural krypton in xenon concentrations on the ppq level. The development was done in two phases, starting with a first setup using 1.1 m of package material (Phase-1). It was followed by the improved final setup (Phase-2), using 2.8 m of package material, currently installed in the underground laboratory LNGS as a subsystem of the XENON1T experiment. Both systems are thermodynamically stable at the design values. Higher process speeds of up to 18 slpm ($= 6.5 \text{ kg/h}$) were also shown to be stable.

The separation performance was investigated using different coldtrap RGA and RGMS techniques and the reduction factor of the final setup at LNGS has been measured to be $F_{\text{red}} = 6.4 \cdot 10^5$. The krypton concentrations delivered by the final system were measured to be below 48 ppq, fulfilling the XENON1T requirement of < 200 ppq. The lowest concentration so far was below 26 ppq, obtained with the Phase-1 column, and is almost an order of magnitude lower than needed for XENON1T. The cryogenic distillation column is being operated at the XENON1T experiment and allows for processing 3.3 tons of xenon to produce an ultra-low krypton contamination at the ppq-level.

Acknowledgements We gratefully acknowledge support from the National Science Foundation, Swiss National Science Foundation, Deutsche Forschungsgemeinschaft, Max Planck Gesellschaft, German Ministry for Education and Research, Foundation for Fundamental Research on Matter, Weizmann Institute of Science, I-CORE, Initial Training Network Invisibles (Marie Curie Actions, PITNGA-2011-289442), Fundacao

para a Ciencia e a Tecnologia, Region des Pays de la Loire, Knut and Alice Wallenberg Foundation, Kavli Foundation, and Istituto Nazionale di Fisica Nucleare. We are grateful to Laboratori Nazionali del Gran Sasso for hosting and supporting the XENON project. The Helmholtz Alliance for Astroparticle Physics supported S.R. and travel for I.C..

References

1. G. Steigman and M.S. Turner, *Cosmological Constraints on the Properties of Weakly Interacting Massive Particles*, Nucl. Phys. B 253, 375-386 (1985).
2. G. Jungman, M. Kamionkowski and K. Griest, *Supersymmetric dark matter*, Phys. Rept. 267, 195-373 (1996). arXiv:hep-ph/9506380.
3. G. Bertone et al., *Particle Dark Matter - Observations, Models and Searches*, Cambridge University Press (2010).
4. E. Aprile et al. (XENON Collaboration), *Physics reach of the XENON1T dark matter experiment*, JCAP 04, 027 (2016), arXiv:1512.07501 [physics.ins-det].
5. LZ collaboration, *LUX-ZEPLIN (LZ) Conceptual Design Report*, arXiv:1509.02910 [physics.ins-det].
6. DARWIN collaboration, *DARWIN: towards the ultimate dark matter detector*, Prepared for submission to JCAP, arXiv:1606.07001 [astro-ph.IM].
7. D.S. Akerib et al. (LUX Collaboration), *Chromatographic separation of radioactive noble gases from xenon*, arXiv:1605.03844v1 [physics.ins-det].
8. K. Abe et al. (XMASS Collaboration), *Distillation of liquid xenon to remove krypton*, Astropart. Phys. 31, 290296 (2009), arXiv:0809.4413 [physics.ins-det].
9. E. Aprile et al. (XENON Collaboration), *Dark matter results from 225 live days of XENON100 data*, Phys. Rev. Lett. 109, 181301 (2012). arXiv:1207.5988 [astro-ph.CO].
10. S. Lindemann and H. Simgen, *Krypton assay in xenon at the ppq level using a gas chromatographic system and mass spectrometer*, Eur. Phys. J. C 74, 2746 (2014), arXiv:1308.4806 [physics.ins-det].
11. Z. Wang, L. Bao, X. Hao and Y. Ju, *Design and construction of a cryogenic distillation device for removal of krypton for liquid xenon dark matter detectors*, Rev. Sci. Instrum. 85, 015116 (2014).
12. W. McCabe, J. Smith, P. Harriott, *Unit operations of chemical engineering 7. edition (McGraw-Hill International Edition)*, 665 (2005).
13. S. Rosendahl et al., *Determination of the separation efficiencies of a single-stage cryogenic distillation setup to remove krypton out of xenon by using a Kr-83m tracer method*, Rev. Sci. Instrum. 86, 115104 (2015).
14. L. Lohrenegel, *Einführung in die thermischen Trennverfahren (Oldenbourg Verlag München Wien)*, 47 (2007).
15. National Institute of Standards and Technology, www.nist.gov
16. Sulzer Chemtech Ltd, *Structured Packings: Energy-efficient, innovative and profitable version: 22.13.06.40 V.15* (2015)
17. E. Aprile, T. Yoon, A. Loose, L. W. Goetzke, and T. Zeevinsky, *An atom trap trace analysis system for measuring krypton contamination in xenon dark matter detectors*, Rev. Sci. Instrum. 84, 093105 (2013), arXiv:1305.6510 [physics.atom-ph].
18. E. Brown, S. Rosendahl, C. Huhmann, C. Weinheimer and H. Kettling, *In situ measurements of krypton in xenon gas with a quadrupole mass spectrometer following a cold-trap at a temporarily reduced pumping speed*, JINST 8, P02011 (2013), arXiv:1212.5136v1 [physics.ins-det].

-
19. S. Rosendahl et al., *A novel Kr-83m tracer method for characterizing xenon gas and cryogenic distillation systems*, JINST 9, P10010 (2014), arXiv:1407.3981 [astro-ph.IM].
 20. D. Leonard et al., *A simple high-sensitivity technique for purity analysis of xenon gas*, Nucl. Instrum. Meth. A 621, 678 (2010), arXiv:1002.2742v2 [physics.ins-det].
 21. A. Dobi et al., *Detection of krypton in xenon for dark matter applications*, Nucl. Instrum. Meth. A 665, 1-6 (2011), arXiv:1103.2714v4 [astro-ph.IM].
 22. K. L. Giboni et al., *Xenon recirculation-purification with a heat exchanger*, JINST 6, P03002 (2011).
 23. K. Abe et al. (XMASS collaboration), *XMASS detector*, Nucl. Instr. Meth. A 716, 7885 (2013), arXiv:1301.2815 [physics.ins-det].