

# Effects of Radiation Damage on the Optical Properties of Glass

Federica Simonetto<sup>a</sup>, Matteo Marmonti<sup>b</sup>, Marco AC Potenza<sup>a,c</sup>

<sup>a</sup>University of Milan, Physics Department, via Celoria 16, Milan, Italy, 20133

<sup>b</sup>Optec S.p.A., via Mantegna 34, Parabiago, Italy, 20015

<sup>c</sup>CIMAINA, University of Milan, via Celoria, 16 I-20133 Milan, Italy

**Abstract.** We study the optical properties of glass exposed to ionizing radiation, as it occurs in the space environment. 24 glass types have been considered, both space qualified and not space qualified. 72 samples (3 for each glass type) have been irradiated to simulate a total dose of 10krad and 30krad, imposed by a proton beam at KVI- Centre of Advanced Radiation Technology (Groningen). Combining the information about stopping power and proton fluence, the time required to reproduce any given total dose in the real environment can be easily obtained. The optical properties, such as spectral transmission and light scattering have been measured before and after irradiation for each sample. Transmission has been characterized within the wavelength range 200 nm – 1100 nm. Indications that systematical issues depend on the dopant or composition are found and described. This work aims at extending the existing list of space-compliant glasses in terms of radiation damage.

**Keywords:** optics, radiation, space missions, transmission, scattering.

\*Federica Simonetto, [federica.simonetto@unimi.it](mailto:federica.simonetto@unimi.it) \*Matteo Marmonti, [mmarmonti@optec.eu](mailto:mmarmonti@optec.eu) \*Marco Potenza, [marco.potenza@unimi.it](mailto:marco.potenza@unimi.it)

## 1 Introduction

Space-born optical components require a well-characterized stability upon radiation damage in the space environment overall the expected lifetime of the instrument. Ionizing space radiation appreciably reduces optical transmission in many optical materials. The transmission loss can be severe depending on the material and the radiation dose.<sup>1</sup>

Nowadays, a list of space-compliant glasses is available and dedicated measurements have been done to understand the expected degradation in space,<sup>2,3</sup> These materials are stabilized against transmittance losses by adding cerium (Ce) or other types of dopants,<sup>4,5</sup> Although Cerium doping can affect the color of glass, it provides good stabilization against ionizing radiation damage.

Unfortunately, the stock availability of radiation hardened glasses is not always guaranteed. Moreover, their limited number is not enough to guarantee the optical designer to reach the high performances and tight tolerances required for new space optical systems. On the other hand, we also

noticed that the orbit of many satellites (e.g. in Low Earth Observation orbits) can maintain the optical system within a limited radiation level where a conventional, non-radiation hard, glass could be safely adopted. However, Space Agencies are unwilling to use these materials due to missing experimental evidence.

In this work we study the influence of ionizing radiation on the optical properties of glass by reproducing the space conditions on ground, through a proper proton beam produced at the KVI- Centre of Advanced Radiation Technology (Groningen). Furthermore, numerical simulations about radiation absorption and the role of given chemical elements have been studied. The ultimate aim of this work is i) to expand the current list of usable materials and ii) to create a detailed test procedure as described below.

We analyze the changes in the spectral transmission and light scattering as a function of the proton fluency, Linear Energy Transfer (L.E.T.) and dose. Here we first-define and describe the approach to characterize the samples and we give a detailed description of the samples and physical quantities adopted. Then we describe the experiments performed and discuss the corresponding results.

## **2 Methods**

### *2.1 Transmittance*

Glass is usually transparent to visible light and some regions of the UV and IR ranges. Losses in transmittance occur due to internal absorption and reflection. The so-called internal transmittance  $\tau_i$  can be modified by adding oxides of transition elements or small colloidal particles in the

glass,<sup>6,7</sup> The internal transmittance  $\tau_i$ <sup>8</sup> is a function of the sample thickness  $d$ :

$$\tau_i = e^{-\alpha(\lambda)d} \quad (1)$$

where  $\alpha(\lambda)$  is the spectral absorption coefficient. The relation between spectral transmittance  $\tau$  and spectral internal transmittance  $\tau_i$  is:

$$\tau(\lambda) = \left( \frac{2n(\lambda)}{n^2(\lambda) + 1} \right) \tau_i(\lambda) \quad (2)$$

Glass spectral transmission has been measured with DU800 Spectrophotometer.<sup>9</sup> Before and after irradiation, transmission have been measured six times for each sample, placed at six different positions in the spectrophotometer in order to estimate inhomogeneities. Results are averaged and, besides the spectral Transmission is given by integrating all over the spectrum.

## 2.2 Scattering

Light scattering spreads light from the incoming direction. It can be caused by inhomogeneities in the propagation medium, the presence of particles or defects within the medium as well as at the interface between two media,<sup>10,11</sup> In principle, light scattering from an ideal, defect-free crystalline bulk material is ultimately due to effects of anharmonicity within the lattice. Light wave transmission will be highly directional due to the typical optical anisotropy of crystalline substances, which depends on their symmetry group.<sup>12</sup> For example, the seven different crystalline forms of quartz silica (silicon dioxide,  $SiO_2$ ) are clear, transparent. Hence the importance to qualify the effects induced by radiation within the glass in terms of light scattering in order to better inspect the structural changes.

Light scattering has been measured by means of a Reflect 180S Goniophotometer.<sup>13</sup> More precisely, we measured the Bidirectional Scattering Distribution Function (BSDF). It is commonly adopted to provide the surface characterization of materials. Scattering is characterized in both reflection and transmission. The Bidirectional Reflectance Distribution Function (BRDF) is a function of four real variables that describes how much light power is reflected by an opaque surface. For a given incoming light direction,  $\omega_i$ , and outgoing direction,  $\omega_r$ , BRDF returns the ratio between the radiance reflected in direction  $\omega_r$  and the irradiance incident on the surface in direction  $\omega_i$ . Units are, therefore,  $1/sr$ . BTDF (Bidirectional Transmission Distribution Function) is similarly defined on the basis of the transmission properties.

### 2.3 Fluence, L.E.T. and dose

In order to evaluate quantitatively the damage caused by radiation passing through a material, we introduce fluence, L.E.T. and absorbed dose.

Fluence is defined as the average number of particles impinging onto a unit surface (usually  $1\text{ cm}^2$ ). L.E.T. describes the effects of radiation as the energy transferred by the ionizing particles to the material per unit distance. The absorbed dose,<sup>1415</sup> represents the average energy released into matter per unit mass. Both L.E.T. and dose depend on the nature of the radiation and the material. In the International System of units, SI, dose is expressed in J/kg, or *gray* (Gy). The common *rad* corresponding to  $10^{-2}$  Gy, is in CGS units. A closure exists for the relation between these quantities: if fluence, L.E.T. and exposure time are known, the total dose can be evaluated for different environments and conditions. We simulate the total dose using an open source tool called SPENVIS (4). Moreover, we chose to consider only total dose according ESA specification.<sup>16</sup>

## 2.4 Samples and corresponding L.E.T. analysis

The multitude of technical glasses can be roughly arranged in the following six groups, accordingly to their oxide composition (in weight fraction): Borosilicate (Non-Alkaline, Alkaline and High-Borate); Aluminosilicate (Alkaline and Alkali); Aluminoborosilicate; Alkali-lead silicate; Alkali alkaline earth silicate (soda-lime glasses); LAS-glass-ceramics. 24 kinds of glass have been considered and studied with different setups that will be described later. For each material, three identical, cylindrical, flat slabs (20mm diameter and 5mm thickness) were used. 24 additional glasses have been used in one setup only.

Chemical composition is not known in details for all the samples. Weigh proportions about glasses known are reported in Tabs. 1, 2, 3 and 4.


For our purpose, we use the chemical composition of 11 types of glasses from literature.<sup>17</sup> L.E.T. has been evaluated through the open-source software called "Stopping and Range of Ions in Matter" (SRIM). It allows to estimate the L.E.T. for different proton energies by introducing the composition of the material.<sup>18</sup> In this way we can analyze the dependence between L.E.T., density and proton energy and to attempt to understand the effect of a specific chemical element.

We report the results of simulation for particular doses, such those typically encountered in space missions. L.E.T. values and times have been combined according to:

$$time = \frac{Fluence}{Flux} = \frac{Dose}{L.E.T.} \cdot \frac{1}{Flux} \quad (3)$$

We performed a preliminary analysis to extract the influence on the L.E.T. of given chemical elements composing a glass. The mass fraction of a given element, the L.E.T. value and the glass average density have been considered. In Fig.1 L.E.T. is plotted against the mass fraction of the


most common elements. Glasses with high fraction of Lead mainly correspond to low L.E.T. values, therefore small radiation damage. On the other hand, glasses containing Silicon and Oxygen show higher L.E.T. values, that implies higher damage levels. thus, L.E.T. appears to be correlated to the presence of Silicon and Oxygen, anti-correlated to Lead.

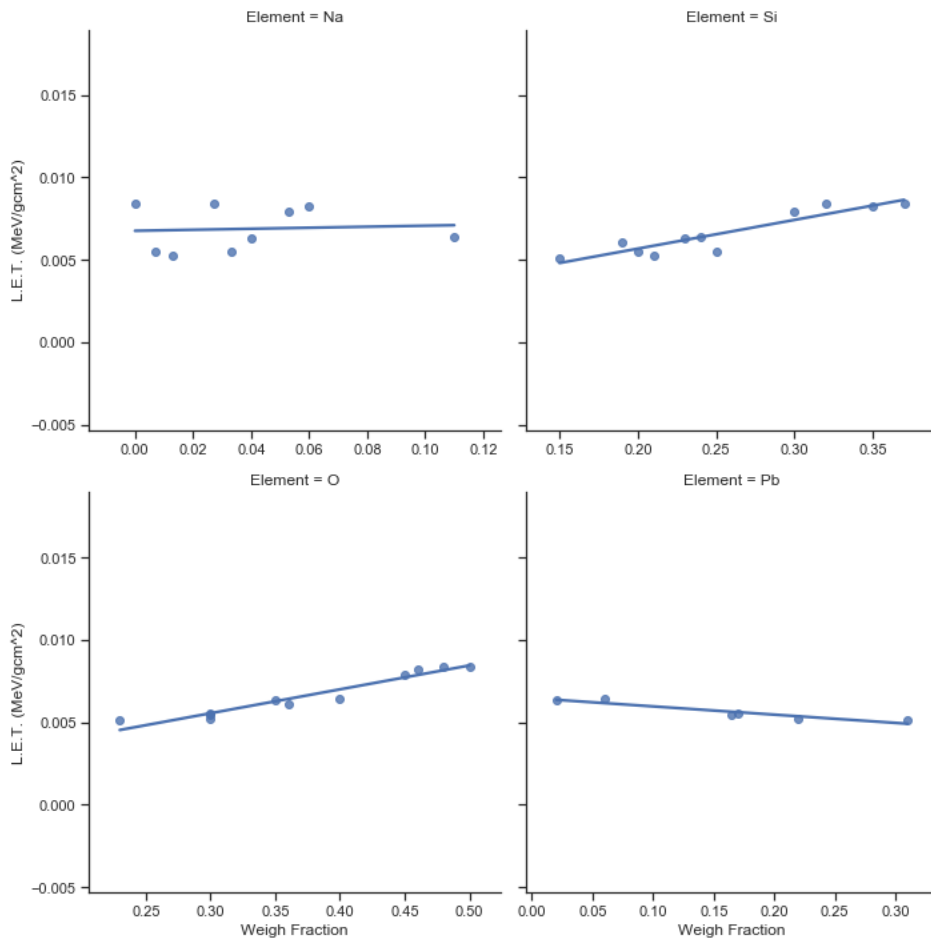

**Fig 1** L.E.T. plotted against the weight fraction of four elements: Sodium, Silicon, Oxygen, Lead. Each glass is represented by a circle in this plot, the line just shows the best linear fit as a guide to the eye.

In Fig 2 L.E.T./density trend is reported. The higher the density, the lower the L.E.T. This leads to the conclusion that lower density glasses will be damage more by ionizing energy.

Finally, when fluence is known it is possible to evaluate irradiation time to impose a given dose. Assuming a fluence of  $10^8$  particles/s  $cm^2$ , to give a dose of 10krad and 30krad we need irradiation

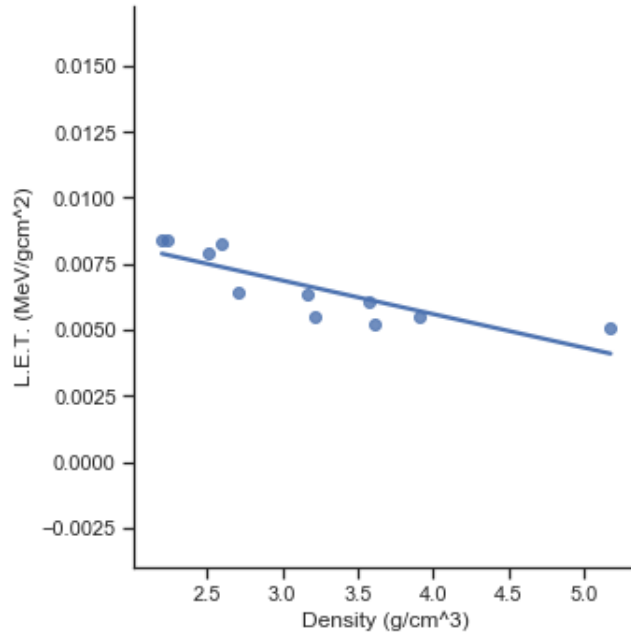

**Fig 2** L.E.T. is expressed in  $MeV/gcm^2$ , density in  $g/cm^3$ . Each glass is represented by a circle in this plot, the line just shows the best linear fit as a guide to the eye.

times given by equation 3.

The corresponding results are reported in Tab 5 for 10krad, in Tab 6 for 30krad.

Irradiation took place at KVI-CART in Groningen.<sup>19</sup> The standard irradiation section has a diameter of 70 mm and homogeneity of better than  $\pm 3\%$ . Larger fields (up to 110 to 140mm in diameter) can be realized with homogeneities better than  $\pm 10\%$  and  $\pm 25\%$ , respectively. The samples have been fixed on aluminum holders with adhesive tape. Three different setups have been arranged for the tests:

- Setup a: one sample for each type of glass, irradiated with a dose of 30krad;
- Setup b: two samples, one for each type of glasses and an additional one (825a), irradiated with a dose of 30krad;
- Setup c: one sample for each type of glass, irradiated with a dose of 10krad. .

To impose the same dose at different glasses, samples have been divided into groups, with proper given irradiation times. Glasses have also been divided in two categories: simil-Flint and simil-Crown. In this way, different times of irradiation have been evaluated. Results are reported in Tab. 7.

### **3 Experimental data and analysis**

#### *3.1 Transmission analysis*

Hereinafter some plots are reported as examples of the experimental results obtained with our transmission analysis. Four plots are shown for each sample: three of them show transmission before and after irradiation for cases a, b and c; the last shows the ratio between two transmission values for the same wavelength (transmission after irradiation /transmission before irradiation). Sample 806 (Fig.3) is an example of results obtained with a space compliant glass; 802 (Fig.4) is an example of no-space compliant glass with transmission changing less than 5%; 820 (Fig.6) shows a transmission change larger than 5%; 810 (Fig.5) is an example of Lantanium glass.

As a general conclusion of our analysis, we preliminarily catch the reader's attention to the following results:

- even before irradiation, transmission is not 100% because our glasses are not coated;
- if the transmission changes are less than 5%, the glass is considered as acceptable. For the present study a tolerance of 5% has been considered acceptable since the optical telescopes this study has been conducted for had the following requirements:
  - Transmission BOL (Begin of Life) is greater than 90%
  - Transmission EOL (End of Life) is greater than 40%



Assuming the optical system is composed by 10 lenses, a decrease of 5% for each lens, means that the overall transmission EOL (i.e. once the total radiation dose has been applied) is still on spec (over 55%). Space projects require a minimum EOL transmission due to glass coating and optical surface. For space missions taken into account in this work, the transmission change accepted is 8%, so we decided to decrease that percentage to 5 in order to expand the analysis to a wider projects range.

- The samples that show a transmission change smaller than 5% are: 802, 805 (limited to wavelengths larger than  $\lambda = 500nm$ ) and 807.
- For glass 806, a slight increase seems to be there, as we have verified by repeating the measurements many times: transmission measurements always show an increase after irradiation. We can reasonably exclude experimental errors.
- Other glasses show a transmission change smaller than 5% only for one setup, for example 812, 813, 814, 823 (only above  $\lambda = 600nm$ ) and 827 (only above  $\lambda = 500nm$ ) are acceptable only for setup c. 804 is acceptable for setup c and is acceptable only between  $\lambda = 500nm$  and  $\lambda = 1100nm$  for setup a and b;
- Glasses with transmission changes larger than 5% are: 816, 818, 820 and 822. These glasses are considered not suitable for space applications;
- Two glasses present non-monotonic behavior: 819 and 828. Both contain Fluorine, presenting low refractive index and high Abbe number;
- 808, 810 and 811 present the same trend for transmission data before and after irradiation. They contain Lanthanum.

Finally, three tables are presented, one for each experimental setup *a* (Tables 9 and 10), *b* (Tables 11 and 12) and *c* (Tables 13 and 14). Tables show transmission variation at certain wavelength, chosen among glasses catalog standard wavelengths. For each value, an error of 0,00001 is considered, due to instrumental limitations.

### 3.2 Scattering analysis

Scattering measurements have been performed before and after irradiation at LightTec, France, for the glasses irradiated in the setup for 30krad. Measurements have been taken by illuminating the samples with collimated white light at an incidence angle of  $10^\circ$  and  $30^\circ$ . A step of 0.1 degrees has been used and data have been processed to extrapolate the scattering function in reflection (BRDF) and in transmission (BTDF).

Data have been normalized at the intensity of the incoming light beam. The peaks of both the scattering functions before and after irradiation have been overlapped to compare the widths. Finally, the ratio between the two functions has been calculated to evidence the changes.

The small shift of the curves along the horizontal axis (angle) is due to an instrumental error. Results are presented for each glass: plots show BRDF, BTDF and FWHM, at  $30^\circ$ , before and after irradiation (Figures at page 36 and thereafter).

Comparing the information obtained from the scattering analysis, the following conclusions can be drawn:

- generally speaking, the scattering of both transmitted and reflected light increases after irradiation. This could be due to the increase of either surface roughness or internal inhomogeneities, or both. This brings to an increase of the angular spread of the scattered light.

- Lead glass presents moderate changes in terms of light scattering.
- glass containing Zinc or Boron exhibits remarkable increase of light scattering.

Finally, the following table summarizes all the results obtained for the light scattering analysis. The percentage variation between FWHM evaluated before and after irradiation is reported for BRDF and BTDF. Errors are evaluated in terms of the standard deviation.

#### **4 Discussion and Conclusions**

We have introduced a method and reported experimental results aimed at characterizing the changes in the optical properties of glass due to radiation damage under conditions similar to those expected during space missions. Experimental results can be synthesized as follows:

- The optical properties considered here are transmission and light scattering. Combining optical properties and chemical composition, it is possible to simulate collisions and damage for the glass samples. L.E.T. is a decreasing function of energy and it is not correlated with density. On the other hand, L.E.T. seems to be anti-correlated to the Lead fraction. Analyzing the energy absorbed for each chemical element, Lead appears to play a fundamental role, Calcium and Barium less but not negligible.
- Experimentation at KVI laboratories allowed to measure transmission before and after irradiation. By comparing transmission changes of space-compliant and no space-compliant glasses, it is possible to assess whether or not a glass can be used in space missions. We obtain the following results: 802, 805 and 807 are reliable in the whole range of wavelength; 804, 812, 813 and 814 only for space mission with an expected total dose of 10 krad.

- Some chemical elements influence transmission. With Lanthanum issues appear in the wavelength range below 700 nm, as demonstrated by samples 808, 810 and 811. Fluorine seems to produce oscillating spectral trends, as demonstrated by samples 819 and 828.
- Light scattered increases after irradiation for all samples. This suggests that radiation might affect the micro-roughness of the glass or even the internal structure. We have no insight into this issue. In any case, the angular spread of the scattered light increases with the absorbed dose.

To achieve a better insight into several open points further measurements and simulations shall be done. Following the method proposed here, measurements could be extended to other glasses and transmission measurements could be done immediately after irradiation, in order to evaluate the effects of elastic properties, if any. Scattering measurements could be done also for glasses irradiated with 10 krad of total dose. This work then opens the way to different kinds of analyses, related to several issues encountered in this work:

- chemical composition analysis through X-diffraction before and after irradiation;
- thermal effects analysis due to radiation and scattering;
- study of the ultimate origin of scattering, that could be done through speckles analysis.

## **Appendix**

Dose levels were computed considering specific orbits and mission length. The properties of these orbits are simulated using SPENVIS that is ESA's Space ENVironment Information System: a web interface to model the space environment and its effects including cosmic rays, natural radiation

belts, solar energetic particles, plasmas, gases, and "micro-particles". Three different orbits were considered: Geosynchronous orbits (GEO) are circular orbits around the Earth having a period of 24 hours. A geosynchronous orbit with an inclination of zero degrees is called a geostationary orbit. A spacecraft in an inclined geosynchronous orbit will appear to follow a regular figure-8 pattern in the sky. The covering area of a geostationary satellite ideally extends up to an angle of 81 deg from the ground point directly under the satellite, that corresponds to something more than 40% of the Earth's surface. In order to estimate the total dose for this kind of mission, protons and electrons' fluxes and fluences are evaluated following this model:

- AP-8 MAX and AE-8 MAX for Trapped Protons and Electrons respectively;
- CRME-86 for the short-term solar particle flux considering from H to U;
- KING solar proton model for the long-term solar particle fluence;
- CRME-86 for GCR with 90% worst case cosmic ray level.

Thanks to this type of simulation, it is possible to estimate the total dose for this type of orbit. Including a safety factor, a geostationary mission shows a total dose of about 10 krad. Translunar orbit is a particular orbit around Earth and Moon, highly eccentric with an apogee around 360.000 km and a perigee close to 7.000 km from the Earth. This is due to particles (electrons in particular) trapped in the Van Hallen Belts for geostationary orbit. Thanks to this simulation, it is possible to estimate the total dose for this orbit. Including a safety factor, this mission shows a total dose of 10krad. The last orbit we examined is a solar orbit. In particular, the orbit we considered has a minimum perihelion within 0.3 AU.<sup>20</sup> Another driver to go close to the Sun is the measurement of energetic particles, which should be made within one or two scattering mean free paths (typi-

cally 0.2 AU; Palmer 1982<sup>21</sup>) of their source in order to minimize propagation effects. Using, for example, the simulations of other scientific teams<sup>22</sup>, an analysis of L.E.T. and total dose can be done. The total dose analysis requires an assessment of the shielding provided by the spacecraft and equipment chassis. The L.E.T. spectrum is evaluated with CRME-96 model. The dose depth curve used in this analysis is taken from data<sup>23</sup> and is the worst case at 0.28 AU. Using this type of simulation, it is possible to estimate the total dose for this orbit. Including a safety factor, this mission shows a total dose of 150 krad. This is the dose for the whole mission. Nevertheless, since the research was connected to a particular system integrated into the satellite, the glasses used in that instrument were analyzed for a limited total dose of 30 krad.

## References

- 1 F. M. et al., “Measuring space radiation impact on the characteristics of optical glasses; measurement results and recommendations from testing a selected set of materials,” *Proceedings of SPIE - The International Society for Optical Engineering* (2002).
- 2 T. D. Henson and G. K. Torrington, “Space radiation testing of radiation resistant glasses and crystals,” *Proceedings of SPIE The International Society for Optical Engineering* (2001).
- 3 J.-L. B. e. a. Ilias Manolis, “The esa radglass activity: a radiation study of non rad-hard glasses,” *ICSO 2016, International Conference on Space Optics* (2016).
- 4 N. Kreidl. and J. R. Hensler, “Formation of color centers in glasses exposed to gamma radiation,” *J. Am. Ceram. Soc.* **38(12)**, 423–432 (1955).
- 5 J. S. Stroud, “Color centers in a ceriumcontaining silicate glass,” *J. Chem. Phys.* **37(4)**, 836–841 (1962).
- 6 I. D. A. Jas Sanghera, *Infrared Fiber Optics* (1998).
- 7 R. J. Potter, “Transmission properties of optical fibers\*,” *J. Opt. Soc. Am.* **51(10)**, 1079–1089 (1961).
- 8 M. Born and E. Wolf, *Principles of optics: electromagnetic theory of propagation, interference and diffraction of light*, Elsevier (2013).
- 9 B. Coulter, “Beckman coulter, du 800 spectrophotometer installation and operating instructions,” (1987).
- 10 J. D. Jackson, “Classical electrodynamics,” (1999).
- 11 H. C. Van de Hulst, *Light scattering by small particles*, Courier Corporation (1981).

- 12 C. F. Bohren and D. R. Huffman, *Absorption and scattering of light by small particles*, John Wiley & Sons (2008).
- 13 L. Tech, “Description of reflect 180s goniophotometer,” (2004).
- 14 F. Attix, *Introduction to Radiological Physics and Radiation Dosimetry*, Wiley (1986).
- 15 J. Greening, *Fundamentals of Radiation Dosimetry*, Adam Hilger (1981).
- 16 R. V. R. M. Ilias Manolis, Jean-Loup Bezy, “THE ESA RADGLASS ACTIVITY: A RADIATION STUDY OF NON RAD-HARD GLASSES,” *International Conference on Space Optics* (2016).
- 17 M. Bass, *Handbook of optics: device, measurements and properties vol.2*, McGraw Hill (1978).
- 18 D. J. Edwards AA, “The calculation of charged particle fluence and let spectra for the irradiation of biologically significant materials by neutrons,” *Phys Med Biol.* (1975).
- 19 K. V. Instituut, “Description of kvi-cart facility,” (1975).
- 20 SOL-S-ASTR-RS-00005, “Solar orbiter general design and interface requirements,” (2005).
- 21 I. D. Palmer, “Transport coefficients of lowenergy cosmic rays in interplanetary space,” *Rev. Geophys. Space Phys.* **20(335)** (1982).
- 22 E. J. et al., “Charge composition and energy spectra of cosmic-ray nuclei for elements from be to ni,” *Astron. and Astrophys.* **233**, 96–111 (1990).
- 23 E. S. Agency, “Ecsc-e-st-10-04c,” (2005).



## List of Figures

- 1 L.E.T. plotted against the weight fraction of four elements: Sodium, Silicon, Oxygen, Lead. Each glass is represented by a circle in this plot, the line just shows the best linear fit as a guide to the eye.
- 2 L.E.T. is expressed in  $MeV/gcm^2$ , density in  $g/cm^3$ . Each glass is represented by a circle in this plot, the line just shows the best linear fit as a guide to the eye.
- 3 **Glass 806:** transmission before and after irradiation. (a): Glass type *a*: irradiation setup for 30krad. (b): Glass type *b*: irradiation setup for 30krad, with glass 825a. (c): Glass type *c*: irradiation setup for 10krad. (d): Ratio between transmission after irradiation and before irradiation.
- 4 **Glass 802:** transmission before and after irradiation. (a): Glass type *a*: irradiation setup for 30krad. (b): Glass type *b*: irradiation setup for 30krad, with glass 825a. (c): Glass type *c*: irradiation setup for 10krad. (d): Ratio between transmission after irradiation and before irradiation.
- 5 **Glass 810:** transmission before and after irradiation. (a): Glass type *a*: irradiation setup for 30krad. (b): Glass type *b*: irradiation setup for 30krad, with glass 825a. (c): Glass type *c*: irradiation setup for 10krad. (d): Ratio between transmission after irradiation and before irradiation.
- 6 **Glass 820:** transmission before and after irradiation. (a): Glass type *a*: irradiation setup for 30krad. (b): Glass type *b*: irradiation setup for 30krad, with glass 825a. (c): Glass type *c*: irradiation setup for 10krad. (d): Ratio between transmission after irradiation and before irradiation.
- 7 **Glasses 802 and 806:** scattering before and after irradiation. (a): 802 BRDF functions, before and after irradiation. (b): 802 BTDF functions, before and after irradiation. (c): 806 BRDF functions, before and after irradiation. (d): 806 BTDF functions, before and after irradiation.


- 8 **Glasses 810 and 820:** scattering before and after irradiation. (a): 810 BRDF functions, before and after irradiation. (b): 810 BTDF functions, before and after irradiation. (c): 820 BRDF functions, before and after irradiation. (d): 820 BTDF functions, before and after irradiation.

**Federica Simonetto** is PhD student at Universit degli Studi di Milano. She received her BS and MS degrees in physics from the Universit degli Studi di Milano in 2014 and 2017, respectively. Her current research interests include optical system, space procedures, hypergravity effect on proteins.

**Matteo Marmonti** is Senior Optical Engineer at Optec S.p.A. He received his BS and MS degrees in physics from the Universit degli Studi di Milano in 2007 and 2010, respectively. As optical engineer and expert in stray light analysis, he is constantly in contact with space agencies and centers operating in space field. He is also responsible of optical testing of telescopes and satellites and optical laboratory manager at Optec S.p.A.

**Marco AC Potenza** leads the Instrumental Optics Laboratory at the Physics Department of the University of Milan and CIMAINA. His activity is focused at conceiving and developing novel optical techniques and instrumentation based on light scattering. Since 2003 he works for developing space instrumentation for ESA. He graduated in astroparticle physics in 1996. He got a Ph.D. In 1999 in non-linear optics, optical instrumentation and holography with the late Prof. Yury Denisyuk from St. Petersburg.

**Fig 3 Glass 806:** transmission before and after irradiation. (a): Glass type *a*: irradiation setup for 30krad. (b): Glass type *b*: irradiation setup for 30krad, with glass 825a. (c): Glass type *c*: irradiation setup for 10krad. (d): Ratio between transmission after irradiation and before irradiation.

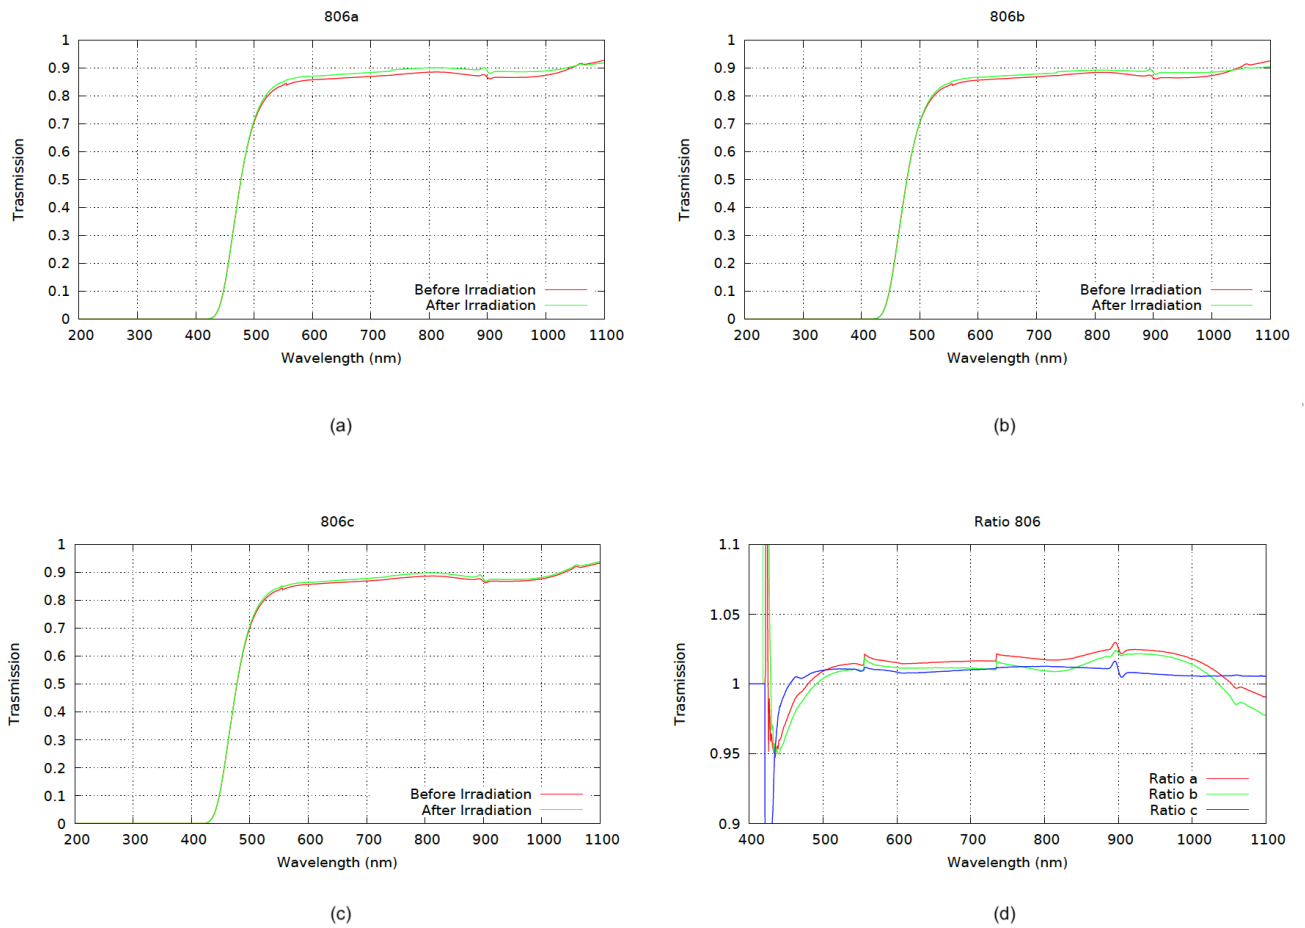

Glass Code	Chemical Name	Chemical Formula	Weight (%)
802	Phosphorus pentoxide	$P_2O_5$	20 – 30
	Titanium dioxide	$TiO_2$	10 – 20
	Barium oxide	$BaO$	2 – 10
	Silicon dioxide	$SiO_2$	0 – 2
	Boron trioxide	$B_2O_3$	0 – 2
	Antimony trioxide	$Sb_2O_3$	0 – 2
804	Arsenic trioxide	$As_2O_3$	< 1
	Potassium oxide	$K_2O$	< 1
	Sodium oxide	$Na_2O$	< 1
	Lead oxide	$PbO$	70 – 80
	Silicon dioxide	$SiO_2$	20 – 30
805	Titanium dioxide	$TiO_2$	20 – 30
	Silicon dioxide	$SiO_2$	20 – 30
	Barium oxide	$BaO$	10 – 20
	Zirconium oxide	$ZrO_2$	0 – 2
	Antimony trioxide	$Sb_2O_3$	0 – 2
806	Cerium oxide	$CeO_2$	< 1
	Potassium oxide	$K_2O$	1 – 10
	Sodium oxide	$Na_2O$	< 1
	Lead oxide	$PbO$	70 – 80
	Silicon dioxide	$SiO_2$	20 – 30
807	Barium oxide	$BaO$	10 – 20
	Calcium oxide	$CaO$	< 1
	Potassium oxide	$K_2O$	1 – 10
	Sodium oxide	$Na_2O$	1 – 10
	Niobium pentoxide	$Nb_2O_5$	10 – 20
	Antimony trioxide	$Sb_2O_3$	< 0.01
	Silicon dioxide	$SiO_2$	20 – 30
	Titanium dioxide	$TiO_2$	20 – 30
808	Boron trioxide	$B_2O_3$	20 – 30
	Barium oxide	$BaO$	< 1
	Lanthanum oxide	$La_2O_3$	40 – 50
	Niobium pentoxide	$Nb_2O_5$	1 – 10
	Antimony trioxide	$Sb_2O_3$	< 0.01
	Silicon dioxide	$SiO_2$	1 – 10
	Yttrium oxide	$Y_2O_3$	1 – 10
	Zinc oxide	$ZnO$	1 – 10
	Zirconium oxide	$ZrO_2$	1 – 10
810	Boron trioxide	$B_2O_3$	20 – 30
	Zirconium oxide	$ZrO_2$	2 – 10
	Silicon dioxide	$SiO_2$	2 – 10
	Zinc oxide	$ZnO$	0 – 2
	Antimony trioxide	$Sb_2O_3$	0 – 2

**Table 1** Chemical weight in percentage about glasses from 802 to 810.

Glass Code	Chemical Name	Chemical Formula	Weight (%)
812	Silicon dioxide	$SiO_2$	30 – 40
	Boron trioxide	$B_2O_3$	10 – 20
	Zirconium oxide	$ZrO_2$	2 – 10
	Zinc oxide	$ZnO$	2 – 10
	Calcium oxide	$CaO$	2 – 10
	Barium oxide	$BaO$	0 – 2
	Antimony trioxide	$Sb_2O_3$	0 – 2
813	Boron trioxide	$B_2O_3$	< 1
	Calcium oxide	$CaO$	1 – 10
	Potassium oxide	$K_2O$	1 – 10
	Sodium oxide	$Na_2O$	1 – 10
	Antimony trioxide	$Sb_2O_3$	< 1
	Silicon dioxide	$SiO_2$	50 – 60
	Strontium oxide	$SrO$	1 – 10
Titanium dioxide	$TiO_2$	20 – 30	
814	Boron trioxide	$B_2O_3$	1 – 10
	Calcium oxide	$CaO$	< 1
	Potassium oxide	$K_2O$	1 – 10
	Sodium oxide	$Na_2O$	1 – 10
	Antimony trioxide	$Sb_2O_3$	< 1
	Silicon dioxide	$SiO_2$	50 – 60
	Titanium dioxide	$TiO_2$	10 – 20
815	Cerium oxide	$CeO_2$	1 – 10
	Potassium oxide	$K_2O$	1 – 10
	Sodium oxide	$Na_2O$	1 – 10
	Lead oxide	$PbO$	40 – 50
	Silicon dioxide	$SiO_2$	40 – 50
816	Silicon dioxide	$SiO_2$	30 – 40
	Boron trioxide	$B_2O_3$	10 – 20
	Zirconium oxide	$ZrO_2$	2 – 10
	Barium oxide	$BaO$	2 – 10
	Tantalum oxide	$Ta_2O_5$	2 – 10
	Zinc oxide	$ZnO$	2 – 10
	Calcium oxide	$CaO$	0 – 2
	Antimony trioxide	$Sb_2O_3$	0 – 2

**Table 2** Chemical weight in percentage about glasses from 812 to 816.

Glass Code	Chemical Name	Chemical Formula	Weight (%)
817	Boron trioxide	$B_2O_3$	30 – 40
	Barium oxide	$BaO$	1 – 10
	Calcium oxide	$CaO$	10 – 20
	Cerium oxide	$CeO_2$	1 – 10
	Lanthanum oxide	$La_2O_3$	20 – 30
	Magnesium oxide	$MgO$	1 – 10
	Silicon dioxide	$SiO_2$	1 – 10
	Zinc oxide	$ZnO$	1 – 10
	Zirconium oxide	$ZrO_2$	1 – 10
818	Barium oxide	$BaO$	40 – 50
	Boron trioxide	$B_2O_3$	20 – 30
	Silicon dioxide	$SiO_2$	10 – 20
	Zirconium oxide	$ZrO_2$	2 – 10
	Aluminium oxide	$Al_2O_3$	0 – 2
	Antimony trioxide	$Sb_2O_3$	0 – 2
819	Barium fluoride	$BaF_2$	30 – 40
	Phosphorus pentoxide	$P_2O_5$	20 – 30
	Barium oxide	$BaO$	20 – 30
	Aluminium oxide	$Al_2O_3$	2 – 10
	Aluminum fluoride	$AlF_3$	2 – 10
	Calcium fluoride	$CaF_2$	0 – 2
820	Phosphorus pentoxide	$P_2O_5$	40 – 50
	Barium oxide	$BaO$	30 – 40
	Calcium oxide	$CaO$	2 – 10
	Boron trioxide	$B_2O_3$	2 – 10
	Zinc oxide	$ZnO$	0 – 2
	Tungsten oxide	$WO_3$	0 – 2
	Antimony trioxide	$Sb_2O_3$	0 – 2
821	Boron trioxide	$B_2O_3$	1 – 10
	Calcium oxide	$CaO$	1 – 10
	Cerium oxide	$CeO_2$	1 – 10
	Potassium oxide	$K_2O$	10 – 20
	Sodium oxide	$Na_2O$	1 – 10
	Lead oxide	$PbO$	1 – 10
	Silicon dioxide	$SiO_2$	60 – 70
	Zinc oxide	$ZnO$	1 – 10

**Table 3** Chemical weight in percentage about glasses from 817 to 821.

Glass Code	Chemical Name	Chemical Formula	Weight (%)
822	Barium oxide	$BaO$	40 – 50
	Silicon dioxide	$SiO_2$	30 – 40
	Boron trioxide	$B_2O_3$	10 – 20
	Aluminium oxide	$Al_2O_3$	2 – 10
	Antimony trioxide	$Sb_2O_3$	0 – 2
	Titanium dioxide	$TiO_2$	0 – 2
823	Aluminium oxide	$Al_2O_3$	1 – 10
	Boron trioxide	$B_2O_3$	40 – 50
	Calcium oxide	$CaO$	1 – 10
	Potassium oxide	$K_2O$	< 1
	Lithium oxide	$Li_2O$	1 – 10
	Sodium oxide	$Na_2O$	1 – 10
	Niobium pentoxide	$Nb_2O_5$	< 1
	Antimony trioxide	$Sb_2O_3$	< 1
	Silicon dioxide	$SiO_2$	10 – 20
	Tantalum oxide	$Ta_2O_5$	10 – 20
	Zinc oxide	$ZnO$	1 – 10
	Zirconium oxide	$ZrO_2$	1 – 10
	826	Boron trioxide	$B_2O_3$
Barium oxide		$BaO$	1 – 10
Cerium oxide		$CeO_2$	1 – 10
Potassium oxide		$K_2O$	1 – 10
Sodium oxide		$Na_2O$	1 – 10
Silicon dioxide		$SiO_2$	60 – 70
Zinc oxide		$ZnO$	< 1
827	Boron trioxide	$B_2O_3$	10 – 20
	Barium oxide	$BaO$	1 – 10
	Calcium oxide	$CaO$	< 1
	Chlorine	$Cl$	< 1
	Potassium oxide	$K_2O$	1 – 10
	Sodium oxide	$Na_2O$	10 – 20
	Antimony trioxide	$Sb_2O_3$	< 1
	Silicon dioxide	$SiO_2$	60 – 70
	Titanium dioxide	$TiO_2$	< 1
828	Strontium fluoride	$SrF_2$	20 – 30
	Phosphorus pentoxide	$P_2O_5$	20 – 30
	Barium fluoride	$BaF_2$	10 – 20
	Calcium fluoride	$CaF_2$	10 – 20
	Aluminum fluoride	$AlF_3$	10 – 20
	Magnesium fluoride	$MgF_2$	2 – 10
	Aluminium oxide	$Al_2O_3$	2 – 10
	Barium oxide	$BaO$	0 – 2

**Table 4** Chemical weight in percentage about glasses from 822 to 828.

<b>Glass</b>	Fluence at 65MeV $p/cm^2$	Fluence at 100MeV $p/cm^2$	Fluence at 150MeV $p/cm^2$	Time for 65MeV s	Time for 100MeV s	Time for 150MeV s
Fused Silica	7,45E+10	1,02E+11	1,36E+11	744,71	1018,14	1359,36
Borosilicate	7,89E+10	1,09E+11	1,45E+11	789,35	1089,96	1452,35
Crown	7,57E+10	1,05E+11	1,40E+11	757,27	1046,82	1395,84
Crown Flint	9,74E+10	1,54E+11	2,03E+11	973,67	1540,90	2028,00
Dense Ba Crown	1,03E+11	1,61E+11	2,12E+11	1027,52	1614,64	2121,03
Dense Ba Flint	1,14E+11	1,55E+11	2,04E+11	1139,71	1549,32	2039,27
Dense Flint	1,22E+11	1,66E+11	2,17E+11	1223,48	1656,63	2174,22
Flint	1,19E+11	1,61E+11	2,12E+11	1190,80	1614,64	2121,03
Light Flint	1,13E+11	1,54E+11	2,03E+11	1133,30	1540,90	2028,00
Light Flint Ba	9,87E+10	1,35E+11	1,79E+11	987,22	1351,12	1788,08
Pyrex	7,44E+10	1,03E+11	1,37E+11	744,18	1029,73	1374,33

**Table 5** Irradiation time needed to impose a dose of 10 krad, supposing a flux of  $10^8$  particles/s  $cm^2$  and L.E.T. estimated for three energies.

<b>Glass</b>	Fluence at 65MeV $p/cm^2$	Fluence at 100MeV $p/cm^2$	Fluence at 150MeV $p/cm^2$	Time for 65MeV s	Time for 100MeV s	Time for 150MeV s
Fused Silica	2,23E+11	3,05E+11	4,08E+11	2234,14	3054,41	4078,09
Borosilicate	2,37E+11	3,27E+11	4,36E+11	2368,06	3269,88	4357,05
Crown	2,27E+11	3,14E+11	4,19E+11	2271,82	3140,46	4187,52
Crown Flint	2,92E+11	4,62E+11	6,08E+11	2921,01	4622,71	6084,01
Dense Ba Crown	3,08E+11	4,84E+11	6,36E+11	3082,57	4843,92	6363,10
Dense Ba Flint	3,42E+11	4,65E+11	6,12E+11	3419,13	4647,95	6117,80
Dense Flint	3,67E+11	4,97E+11	6,52E+11	3670,44	4969,90	6522,67
Flint	3,57E+11	4,84E+11	6,36E+11	3572,41	4843,92	6363,10
Light Flint	3,40E+11	4,62E+11	6,08E+11	3399,89	4622,71	6084,01
Light Flint Ba	2,96E+11	4,05E+11	5,36E+11	2961,66	4053,37	5364,25
Pyrex	2,23E+11	3,09E+11	4,12E+11	2232,55	3089,18	4122,98

**Table 6** Irradiation time needed to impose a dose of 30 krad with a flux of  $10^8$  particles/s  $cm^2$  and L.E.T. estimated for three energies.



Setup a		Setup b		Setup c	
3400 s	2300 s	3400 s	2300 s	1100 s	800 s
802a	817a	802b	817b	802c	817c
804a	818a	804b	818b	804c	818c
805a	819a	805b	819b	805c	819c
806a	820a	806b	820b	806c	820c
807a	821a	807b	821b	807c	821c
808a	822a	808b	822b	808c	822c
810a	823a	810b	823b	810c	823c
811a	826a	811b	826b	811c	826c
812a	827a	812b	827b	812c	827c
813a	828a	813b	828b	813c	828c
814a		814b		814c	
815a		815b		815c	
816a		816b		816c	
825a		825b		825c	

**Table 7** Irradiation times for different types of glass. For each setup, the right column contains the flint glasses and the left column contains crown glasses. Notice that the letter indicates the adopted setup.

Glass Code	BRDF	Dev	BTDF	Dev
	$\Delta$ FWHM	STD	$\Delta$ FWHM	STD
802	0,26	0,03	0,25	0,03
804	0,24	0,02	0,23	0,02
805	0,22	0,02	0,23	0,02
806	0,23	0,02	0,23	0,02
807	0,27	0,03	0,23	0,02
808	0,26	0,03	0,26	0,03
810	0,23	0,02	0,23	0,02
811	0,23	0,02	0,22	0,02
812	0,22	0,02	0,22	0,02
813	0,22	0,02	0,22	0,02
814	0,24	0,02	0,22	0,02
815	0,23	0,02	0,23	0,02
816	0,29	0,03	0,28	0,03
817	0,26	0,03	0,23	0,02
818	0,24	0,02	0,23	0,02
819	0,25	0,03	0,23	0,02
820	0,23	0,02	0,22	0,02
821	0,22	0,02	0,22	0,02
822	0,24	0,02	0,23	0,02
823	0,28	0,03	0,24	0,02
825	0,20	0,02	0,23	0,02
826	0,22	0,02	0,22	0,02
827	0,21	0,02	0,22	0,02
828	0,21	0,02	0,22	0,02

**Table 8** Changes of the FWHM (%) evaluated before and after irradiation for BRDF and BTDF.

Glass Code	$n_h$ 405	$n_g$ 436	$n_{F'}$ 480	$n_F$ 486	$n_e$ 546	$n_D$ 589
802	1,00849	1,00465	1,00393	1,00363	1,00205	1,00261
804	0,89999	0,91894	0,93803	0,94033	0,95946	0,97175
805	0,92051	0,93705	0,95747	0,96029	0,98297	0,99352
806	1	0,95168	1,00065	1,00385	1,01435	1,01607
807	0,94286	0,95886	0,97669	0,97902	0,99398	1,0014
808	0,70147	0,7269	0,77138	0,77768	0,83345	0,86563
810	0,69102	0,71935	0,76867	0,77559	0,83704	0,87155
811	0,71456	0,73124	0,76913	0,77497	0,83297	0,86922
812	0,8492	0,87148	0,89855	0,9015	0,92109	0,92869
813	0,50002	0,54263	0,62899	0,6423	0,76578	0,84212
814	0,82814	0,87067	0,91467	0,92014	0,95876	0,97572
815	1,0033	1,02346	1,02573	1,0264	1,02675	1,02746
816	0,78742	0,81114	0,82838	0,83017	0,83239	0,83365
817	0,92895	0,9964	1,01778	1,0194	1,02427	1,02644
818	0,78782	0,82335	0,85222	0,85543	0,87263	0,88464
819	0,78134	0,75569	0,73241	0,73303	0,78738	0,86602
820	0,78745	0,82131	0,85397	0,85843	0,907	0,94821
821	0,99681	0,99993	0,99997	0,99987	0,99813	0,99657
822	0,78996	0,84311	0,8871	0,89047	0,90459	0,90921
823	0,74898	0,76881	0,79671	0,80005	0,83509	0,86281
825	0,92895	0,87067	1,02573	0,77559	1,02427	0,84212
826	1,00014	1,00825	1,00902	1,00911	1,00915	1,00999
827	0,80101	0,86669	0,91862	0,92312	0,95356	0,96343
828	0,64645	0,61811	0,60485	0,60588	0,67596	0,78476

**Table 9** Transmission variation evaluated before and after irradiation. Values about setup a. The second line contains wavelength values expressed in nanometer. Part 1.

Glass Code	$n_{632}$ 632	$n_C$ 656	$n_r$ 706	$n_s$ 852	$n_t$ 1014	$n_{1060}$ 1060
802	1,00142	1,00136	1,00117	1,00487	1,00515	0,98299
804	0,981	0,98514	0,99101	1,00206	1,00003	0,9737
805	1,00006	1,00374	1,01031	1,01871	1,01503	1,02245
806	1,01503	1,01558	1,01649	1,02019	1,01491	0,99686
807	1,00474	1,00724	1,01107	1,01551	1,00939	0,99168
808	0,89491	0,91025	0,93823	0,98279	0,99542	1,00305
810	0,9009	0,91573	0,94147	0,97951	0,99073	0,98847
811	0,89832	0,91307	0,93845	0,9797	0,99467	0,98625
812	0,93579	0,94087	0,95145	0,97503	0,98762	0,98357
813	0,88553	0,89748	0,91124	0,97788	1,01532	1,05461
814	0,98647	0,99393	1,00791	1,02897	1,02781	1,06212
815	1,02689	1,02939	1,03535	1,04072	1,03103	1,06497
816	0,84177	0,85163	0,87704	0,94079	0,98493	1,02724
817	1,02658	1,02911	1,03542	1,04202	1,03171	1,06453
818	0,90219	0,91731	0,95285	1,02147	1,02929	1,06753
819	0,93592	0,96539	1,00323	1,03098	1,02567	1,06307
820	0,98096	0,99479	1,01248	1,02664	1,02639	1,05786
821	0,99553	0,99582	0,99722	0,9994	0,99925	1,01028
822	0,91884	0,92753	0,94845	0,99032	0,99946	1,00115
823	0,88774	0,90128	0,92614	0,9691	0,98802	0,9896
825	0,88553	0,89748	0,91124	0,97788	1,01532	1,05461
826	1,00946	1,01045	1,01388	1,01952	1,01878	1,05454
827	0,97006	0,9741	0,98392	0,99409	0,99578	1,00882
828	0,88354	0,92025	0,96113	0,98967	0,9957	0,99876

**Table 10** Transmission variation evaluated before and after irradiation. Values about setup a. The second line contains wavelength values expressed in nanometer. Part 2.

Glass Code	$n_h$ 405	$n_g$ 436	$n_{F'}$ 480	$n_F$ 486	$n_e$ 546	$n_D$ 589
802	0,99321	0,98298	0,9821	0,98162	0,98028	0,98007
804	0,88512	0,90709	0,93007	0,93259	0,95308	0,96557
805	0,90997	0,92341	0,94455	0,94744	0,97063	0,98163
806	1	0,95141	0,99371	0,99751	1,01032	1,01238
807	0,93562	0,95163	0,97058	0,97299	0,98858	0,99649
808	0,65169	0,67836	0,7282	0,7353	0,79872	0,83563
810	0,63189	0,66421	0,72147	0,72948	0,80179	0,84236
811	0,66325	0,68403	0,72014	0,7258	0,77883	0,80897
812	0,80316	0,8426	0,88442	0,88969	0,93024	0,94758
813	0,85056	0,87261	0,90267	0,90662	0,92775	0,93292
814	0,79978	0,84715	0,89754	0,9039	0,94797	0,96604
815	1,00044	1,02231	1,02539	1,02622	1,02691	1,02757
816	0,75369	0,77975	0,79922	0,80129	0,8033	0,80402
817	0,90199	0,98328	1,0113	1,01337	1,02066	1,02335
818	0,74144	0,78093	0,81486	0,81861	0,8387	0,85177
819	0,72887	0,70101	0,67703	0,67794	0,74061	0,83161
820	0,73203	0,76762	0,80561	0,81056	0,86667	0,91348
821	0,99142	0,9952	0,99652	0,9965	0,99563	0,99473
822	0,7407	0,80318	0,8563	0,86047	0,87899	0,88577
823	0,70138	0,7228	0,75396	0,75781	0,79797	0,83
825	1,00044	1,02231	1,02539	1,02622	1,02691	1,02757
826	0,99575	1,00132	1,00151	1,00145	1,00013	0,99929
827	0,72775	0,79726	0,86356	0,87011	0,91219	0,92736
828	0,58081	0,5494	0,53544	0,53668	0,61537	0,74058

**Table 11** Transmission variation evaluated before and after irradiation. Values about setup b. The second line contains wavelength values expressed in nanometer. Part 1.

Glass Code	$n_{632}$ 632	$n_C$ 656	$n_r$ 706	$n_s$ 852	$n_t$ 1014	$n_{1060}$ 1060
802	0,98018	0,9793	0,97696	0,97612	0,97996	0,94497
804	0,97508	0,97877	0,98355	0,99386	0,99357	0,96275
805	0,9891	0,99191	0,99624	1,00394	1,00353	0,99046
806	1,01149	1,01158	1,0112	1,0136	1,00955	0,98539
807	0,99999	1,002	1,00425	1,00564	0,99804	0,97431
808	0,86931	0,88635	0,91598	0,95688	0,96682	0,96369
810	0,87522	0,89081	0,91567	0,94606	0,95252	0,9443
811	0,83124	0,84145	0,85592	0,8713	0,87527	0,86526
812	0,95867	0,96451	0,97413	0,99236	1,00089	0,99154
813	0,93379	0,93579	0,93791	0,93038	0,92145	0,95171
814	0,97612	0,98239	0,9923	1,0005	0,99337	1,0246
815	1,02697	1,02931	1,03479	1,04066	1,03163	1,06334
816	0,81294	0,82361	0,85055	0,91746	0,96663	1,00874
817	1,02401	1,02691	1,03314	1,0392	1,02974	1,06416
818	0,8725	0,89003	0,93104	1,00893	1,01808	1,05438
819	0,91385	0,94863	0,9925	1,02814	1,02478	1,06166
820	0,95206	0,9675	0,98656	1,00073	1,00173	1,02267
821	0,99384	0,99431	0,99535	0,99825	0,9989	1,00527
822	0,89811	0,90869	0,93379	0,98574	0,99765	1,00012
823	0,85944	0,87547	0,90469	0,95663	0,9815	0,98566
825	1,02697	1,02931	1,03479	1,04066	1,03163	1,06334
826	0,99847	0,99906	1,00142	1,00588	1,00629	1,02708
827	0,93988	0,94837	0,96754	0,99051	0,99454	1,00348
828	0,85809	0,90263	0,95217	0,98619	0,99385	0,99907

**Table 12** Transmission variation evaluated before and after irradiation. Values about setup b. The second line contains wavelength values expressed in nanometer. Part 2.

Glass Code	$n_h$ 405	$n_g$ 436	$n_{F'}$ 480	$n_F$ 486	$n_e$ 546	$n_D$ 589
802	1,00155	1,002	1,00034	1,00031	0,99743	0,99596
804	0,95289	0,96358	0,97311	0,97463	0,98411	0,98998
805	0,94383	0,95596	0,96966	0,97179	0,9855	0,99161
806	1	0,95995	1,00645	1,00803	1,01003	1,00951
807	0,95361	0,97098	0,98407	0,98582	0,9962	1,00038
808	0,87303	0,8861	0,90596	0,90872	0,93096	0,94318
810	0,87143	0,88601	0,9077	0,91068	0,93492	0,94786
811	0,87256	0,88246	0,90051	0,90329	0,92836	0,9436
812	0,93616	0,95479	0,96907	0,97121	0,98304	0,98779
813	0,94094	0,96016	0,97539	0,97811	0,99321	0,99957
814	0,92704	0,95147	0,97137	0,97409	0,99154	0,99914
815	0,99689	1,01391	1,01655	1,01745	1,01894	1,02017
816	0,9132	0,92919	0,93779	0,93909	0,94098	0,94229
817	0,96986	1,00369	1,01316	1,01431	1,01761	1,01891
818	0,92186	0,9415	0,95292	0,95461	0,96126	0,96564
819	0,91435	0,90773	0,8973	0,89813	0,92272	0,95586
820	0,90126	0,91612	0,93049	0,93228	0,95062	0,96456
821	0,99344	0,99548	0,99559	0,9956	0,99318	0,99159
822	0,91558	0,9365	0,95282	0,95408	0,95719	0,95706
823	0,90196	0,91154	0,92373	0,92527	0,93813	0,94754
825	0,9132	0,92919	0,93779	0,93909	0,94098	0,94229
826	0,98925	0,99421	0,99476	0,99476	0,99362	0,99284
827	0,90649	0,93284	0,95496	0,95705	0,96918	0,97328
828	0,85053	0,83862	0,83246	0,83288	0,86498	0,91174


**Table 13** Transmission variation evaluated before and after irradiation. Values about setup c. The second line contains wavelength values expressed in nanometer. Part 1.

Glass Code	$n_{632}$ 632	$n_C$ 656	$n_r$ 706	$n_s$ 852	$n_t$ 1014	$n_{1060}$ 1060
802	0,99452	0,99489	0,9958	0,9954	0,99516	0,99643
804	0,99409	0,99709	1,00212	1,00936	1,00548	1,00754
805	0,99563	0,99802	1,00272	1,00936	1,00657	1,01878
806	1,00817	1,00886	1,01027	1,01169	1,00547	1,00646
807	1,00285	1,00529	1,0099	1,0188	1,01883	1,05452
808	0,95462	0,96082	0,97223	0,99236	0,99853	1,01218
810	0,95896	0,96477	0,97492	0,99118	0,99578	1,00412
811	0,95432	0,95963	0,9677	0,97577	0,97872	0,98635
812	0,99141	0,99608	1,00627	1,01971	1,01728	1,06721
813	1,00353	1,00799	1,01693	1,02708	1,02145	1,06731
814	1,00383	1,00841	1,01782	1,02967	1,02562	1,07482
815	1,02038	1,02298	1,02892	1,03608	1,02894	1,07512
816	0,94592	0,95163	0,96571	0,99609	1,00963	1,05907
817	1,01942	1,02215	1,02837	1,03294	1,02459	1,07217
818	0,97225	0,97958	0,99671	1,0239	1,0218	1,07055
819	0,98407	0,99713	1,0153	1,0279	1,02158	1,07008
820	0,97658	0,98159	0,98867	0,99472	0,99665	1,02081
821	0,99053	0,99085	0,99159	0,99305	0,9944	1,00557
822	0,95967	0,96307	0,97117	0,98478	0,98829	0,99736
823	0,95623	0,96143	0,97085	0,98458	0,991	1,00028
825	0,94592	0,95163	0,96571	0,99609	1,00963	1,05907
826	0,9923	0,99248	0,9944	0,99857	1,00116	1,02394
827	0,97647	0,9791	0,98564	0,99441	0,99764	1,01053
828	0,95096	0,9653	0,98135	0,99278	0,99801	1,01011


**Table 14** Transmission variation evaluated before and after irradiation. Values about setup c. The second line contains wavelength values expressed in nanometer. Part 2.




**Fig 4 Glass 802:** transmission before and after irradiation. (a): Glass type *a*: irradiation setup for 30krad. (b): Glass type *b*: irradiation setup for 30krad, with glass 825a. (c): Glass type *c*: irradiation setup for 10krad. (d): Ratio between transmission after irradiation and before irradiation.

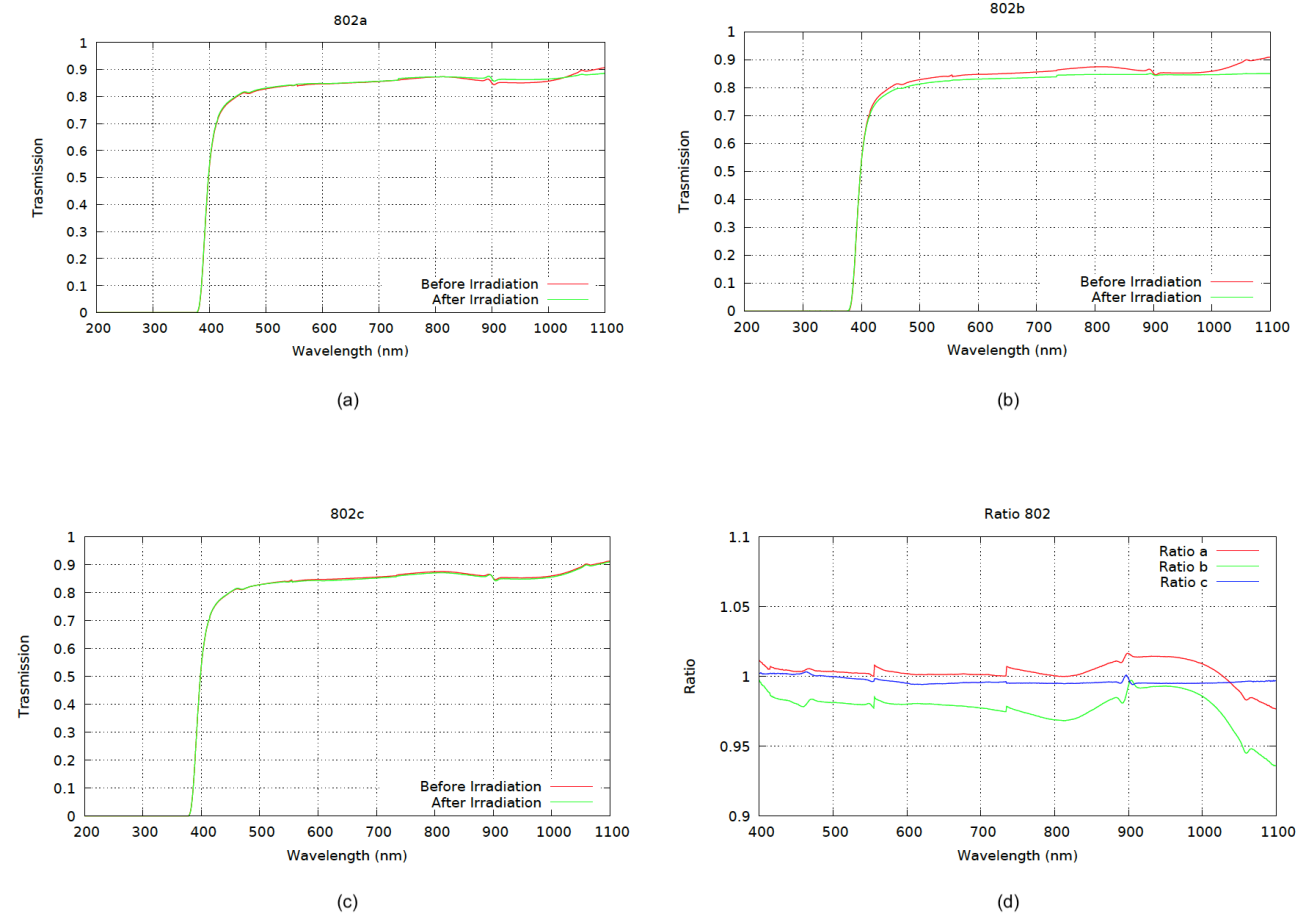


**Fig 5 Glass 810:** transmission before and after irradiation. (a): Glass type *a*: irradiation setup for 30krad. (b): Glass type *b*: irradiation setup for 30krad, with glass 825a. (c): Glass type *c*: irradiation setup for 10krad. (d): Ratio between transmission after irradiation and before irradiation.

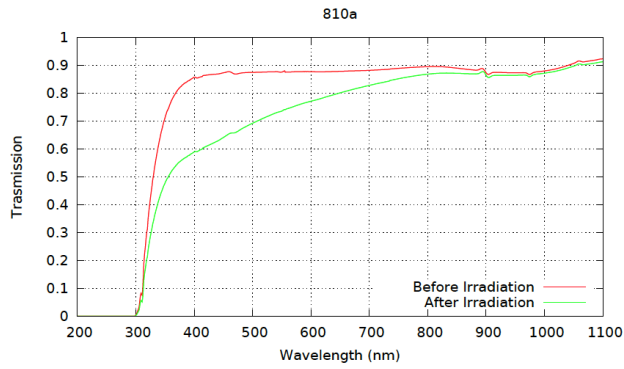


(a)

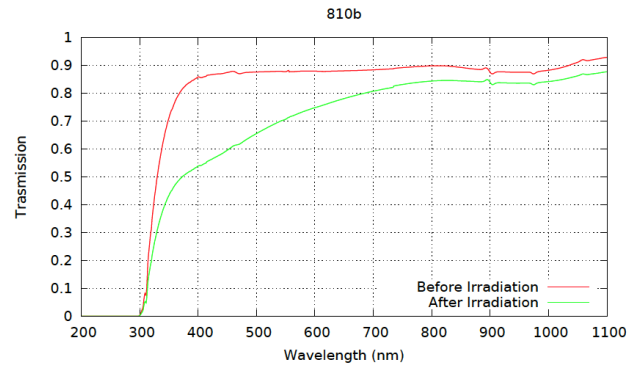

(b)

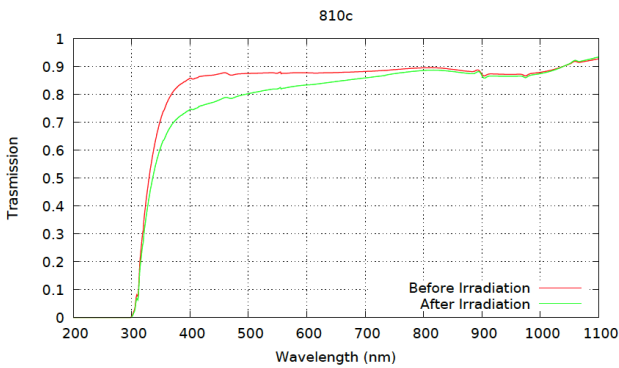


(c)

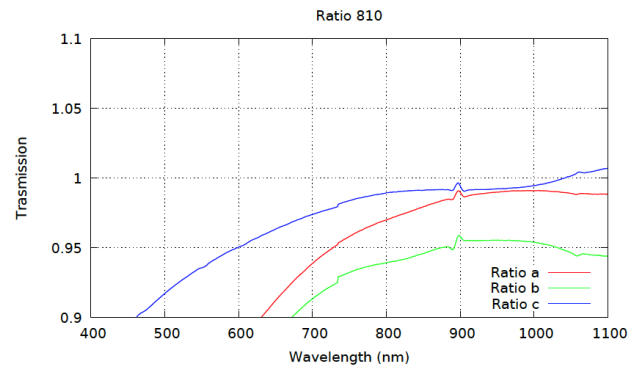


(d)


**Fig 6 Glass 820:** transmission before and after irradiation. (a): Glass type *a*: irradiation setup for 30krad. (b): Glass type *b*: irradiation setup for 30krad, with glass 825a. (c): Glass type *c*: irradiation setup for 10krad. (d): Ratio between transmission after irradiation and before irradiation.

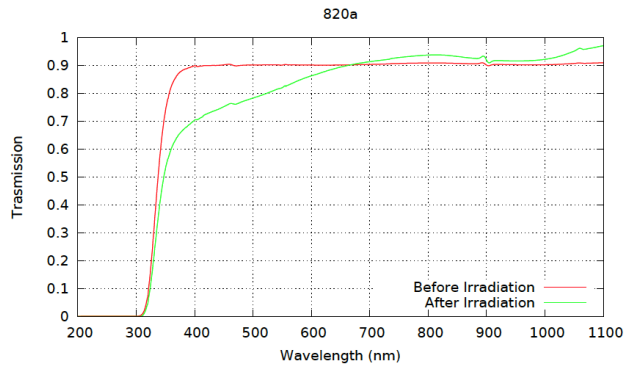


(a)

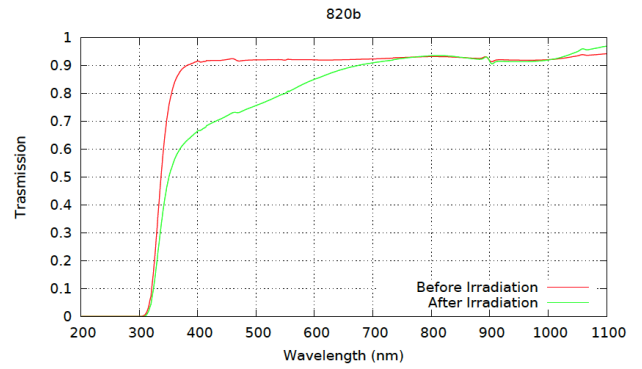

(b)

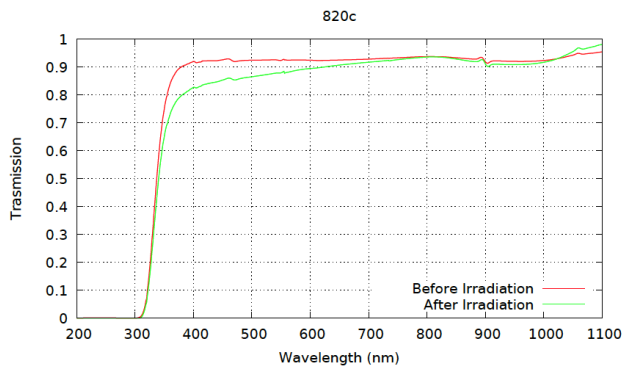


(c)

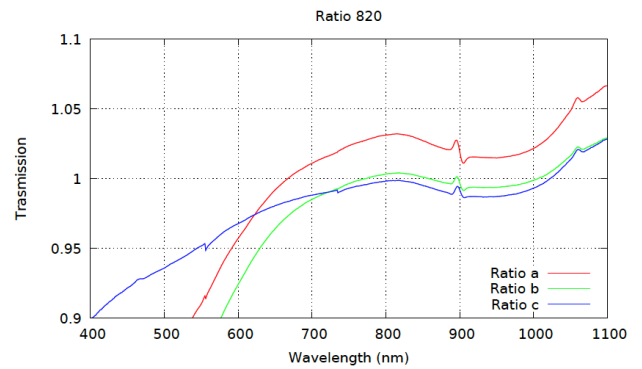


(d)


**Fig 7 Glasses 802 and 806:** scattering before and after irradiation. (a): 802 BRDF functions, before and after irradiation. (b): 802 BTDF functions, before and after irradiation. (c): 806 BRDF functions, before and after irradiation. (d): 806 BTDF functions, before and after irradiation.

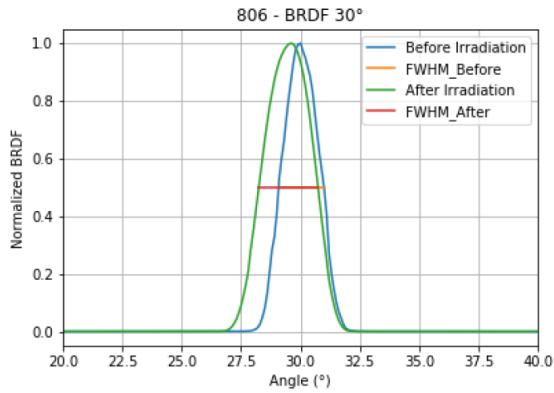


(a)

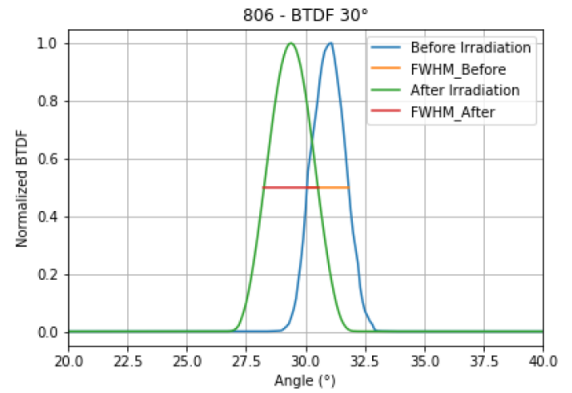

(b)

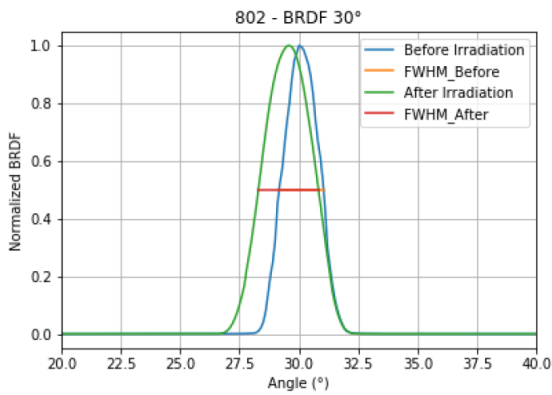


(c)

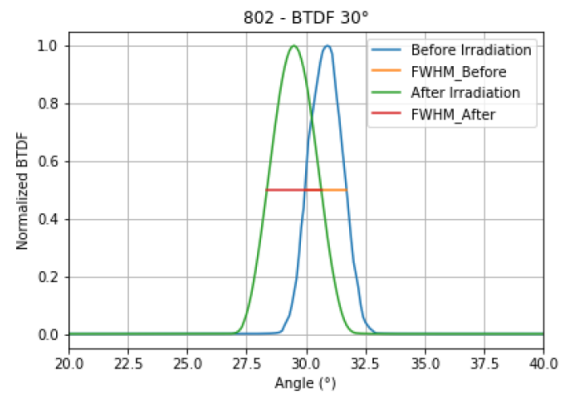


(d)


**Fig 8 Glasses 810 and 820:** scattering before and after irradiation. (a): 810 BRDF functions, before and after irradiation. (b): 810 BTDF functions, before and after irradiation. (c): 820 BRDF functions, before and after irradiation. (d): 820 BTDF functions, before and after irradiation.

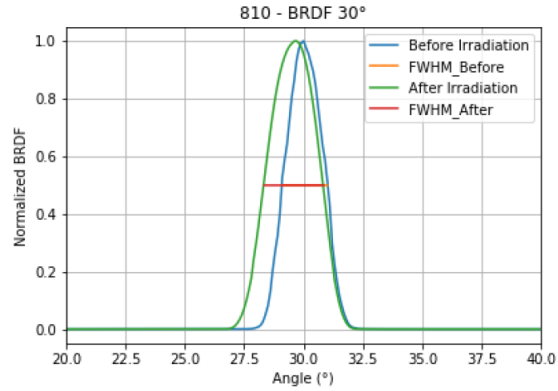


(a)

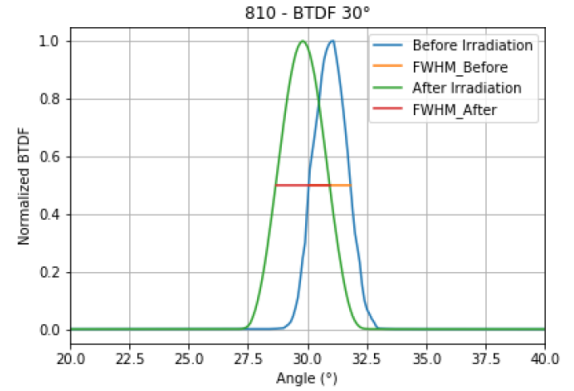

(b)

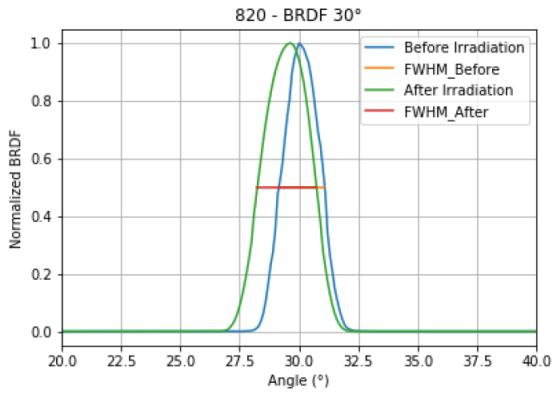

(c)

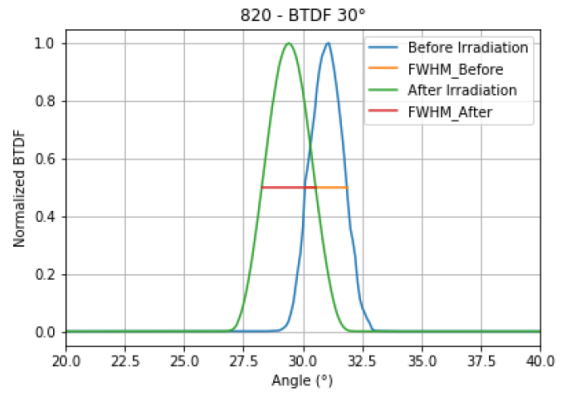

(d)