

# UWB Array Design Using *Variable* $Z_0$ Technology and Central Force Optimization (ver. 2)

## Richard A. Formato

Registered Patent Attorney & Consulting Engineer  
Cataldo & Fisher, LLC, 400 TradeCenter, Suite 5900  
Woburn, MA 01801 USA  
rf2@ieee.org, rformato@cataldofisher.com

**Abstract** — This note applies *Variable*  $Z_0$  technology to the design of an Ultra Wideband (UWB) Yagi-Uda array optimized using Central Force Optimization. *Variable*  $Z_0$  is a novel and proprietary approach to antenna design and optimization that treats the feed system characteristic impedance,  $Z_0$ , as a design *variable* instead of a *fixed* design parameter as is traditionally done. *Variable*  $Z_0$  is applicable to any antenna design or optimization methodology, and using it will generally produce better antenna designs across any user-specified set of performance objectives.

**Keywords** — Variable  $Z_0$ ,  $Z_0$ , characteristic impedance, feed system, antenna, antenna design, antenna optimization, design objectives, performance objectives, bandwidth, impedance bandwidth, broadband, ultra wideband, UWB, Yagi, Yagi-Uda, Central Force Optimization, CFO, numerical optimization, optimization algorithm, metaheuristic

## 1. Introduction

*Variable*  $Z_0$  [1] is a new antenna design and optimization methodology that produces better antennas than traditional methodology. *Variable*  $Z_0$  is a proprietary approach that appears to have been heretofore overlooked. As used herein, *design* refers to the process of specifying a complete set of parameters defining an antenna meeting specific performance objectives, while *optimization* refers to specifying a complete set of parameters defining the antenna that *best* meets specific performance objectives. Following standard usage,  $Z_0$  is the antenna feed system characteristic impedance. This new technology should be especially useful for increasing impedance bandwidth (IBW), but *Variable*  $Z_0$  can be used to achieve any performance objectives, including those that do not consider IBW at all.

Traditional antenna design and optimization methods, techniques, processes, or procedures (“methodology”) treat  $Z_0$  as a *fixed* design *parameter* with a constant value specified at the start of the methodology. In traditional methodology  $Z_0$  is not a *variable* quantity whose value is determined *by* the methodology. This distinction is fundamental and quite important, because traditional methodology excludes from the outset *all* designs that could provide better performance by using some other value of  $Z_0$ . *Variable*  $Z_0$  improves on traditional methodology by treating  $Z_0$  as another design *variable* in the set of variable antenna system parameters to be determined by the methodology. This note illustrates its use by applying it to the design of a numerically optimized ultra wideband (UWB) Yagi-Uda array with excellent results.

## 2. Typical performance objectives and $Z_0$ as a design *variable*

The term “bandwidth” refers generally to the range of frequencies over which some specific antenna performance measure is met. For example, “gain bandwidth” is the frequency range over which a mini-


imum power gain is achieved; and so on with respect to other performance measures. IBW is defined as the frequency band or bands within which the antenna input impedance,  $Z_{in} = R_{in} + jX_{in}$ ,  $j = \sqrt{-1}$ , is matched to the feed system characteristic impedance,  $Z_0$ , within specified limits. The required degree of matching can be specified in terms of the antenna's actual input impedance (resistance,  $R_{in}$ , and reactance,  $X_{in}$ ) as a function of frequency, or, as is more often the case, in terms of a maximum voltage standing wave ratio (VSWR). IBW typically is specified as  $VSWR // Z_0 \leq 2:1$  ( $//$  denoting "relative to"), which is equivalent to a return loss (scattering parameter  $S_{11}$ ) approximately less than  $-10$  dB. Other VSWR thresholds can be used instead, and frequently are. Zehforoosh *et al.* [2] describe the design of an UWB microstrip antenna and provide a good summary of  $Z_0$ 's significance as a design parameter in the context of IBW.

Following the traditional methodology,  $Z_0$  in [2] is a fixed parameter, not a variable quantity as it is in *Variable*  $Z_0$ . While *Variable*  $Z_0$  is useful in any antenna design, its widest range of applicability likely will be in improving IBW, which consequently is emphasized in the design example considered here. The current state-of-the-art, which fixes  $Z_0$ 's value, limits achievable IBW (as well as meeting other performance objectives) because better results are obtainable when  $Z_0$  is considered to be a design *variable* whose value is determined *by* the design or optimization methodology, instead of being a user-supplied constant at the outset of that methodology.

### 3. Design example: UWB Yagi-Uda array

Two 6-element Yagi-Uda ("Yagi") arrays are described. The arrays comprise a driven element (DE) excited by the radio-frequency (RF) source flanked by a parasitic reflector (REF) on one side and four parasitic directors ( $D_k$ ,  $k = 1, \dots, 4$ ) on the other. All elements are PEC (Perfectly Electrically Conducting). One Yagi is designed using *Variable*  $Z_0$ , which treats  $Z_0$  as an unknown variable whose value is to be determined by an optimization algorithm. The second Yagi array is designed following traditional methodology in which  $Z_0$  is assigned the fixed value, in this case  $50 \Omega$  resistive. Each antenna was optimized using Central Force Optimization (CFO), a deterministic metaheuristic that has performed well against recognized benchmark functions and problems in applied electromagnetics [3-10]. The Yagis' performance was computed by NEC-4D (Numerical Electromagnetics Code ver. 4 double precision) [11,12]. NEC is a widely used Method of Moments (MoM) wire structure modeling program developed at Lawrence Livermore National Laboratory (LLNL). A freeware version of NEC-2 is available online (source code and executables) [13].

The optimized antennas are shown in **Figure 1** (as visualized using 4nec2 [13], the red circle indicating the RF source). Interestingly, the *Variable*  $Z_0$  design looks more "normal" than the fixed  $Z_0$  design. Its REF element is longer than DE, and the directors are spaced closer together with increasing distance along the boom (+X-axis), which are typical Yagi characteristics. By comparison, the fixed  $Z_0$  design has a short reflector and directors whose spacing increases with distance from DE, which is somewhat unusual.

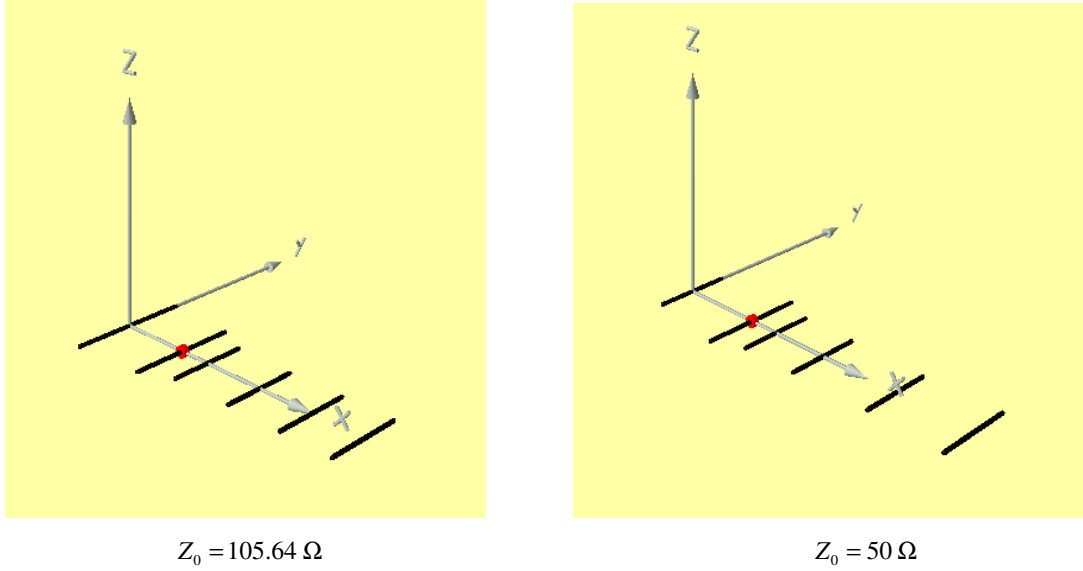

**Figure 1.** CFO-optimized *Variable*  $Z_0$  (left) and fixed  $Z_0$  (right) Yagis.

The following fitness (or “objective”) function was employed (to be maximized by CFO):

$$F(Z_0, L_i, S_j) = c_1 \cdot G_{fwd}(f_L) - c_2 \cdot VSWR(f_L) + c_3 \cdot G_{fwd}(f_C) - c_4 \cdot VSWR(f_C) + c_5 \cdot G_{fwd}(f_U) - c_6 \cdot VSWR(f_U)$$

$L_i, i = 1, \dots, 6$  and  $S_j, j = 1, \dots, 5$  are the element lengths and spacings, respectively. There are twelve decision variables in the optimization problem: six element lengths, five element spacings, and, very importantly,  $Z_0$ .  $VSWR$  is the voltage standing wave ratio *relative to*  $Z_0$ . The optimization problem thus is 12-dimensional (12-D). The constants  $c_i$  are the empirically determined weighting coefficients shown in **Table 1**.  $G_{fwd}(f)$  the Yagi’s forward directivity (along the +X-axis; that is,  $\theta = 90^\circ, \phi = 0^\circ$  in NEC’s right-handed spherical polar coordinate system [11,12]).  $f_L, f_C$ , and  $f_U$ , respectively, the lower, center, and upper frequencies defining the symmet-rical band within which the Yagi is optimized. In this case, the band center was  $f_C = 299.8$  MHz with  $f_{L,U} = f_C \mp 50$  MHz, so that the wavelength at  $f_C$  is  $\lambda_C = 1$  meter [note that NEC requires coordinates input in meters, not wavelengths]. In post processing, the array performance was computed from 200-400 MHz every 0.1 MHz (computed data are tabulated in **Appendices II & III**).

Of course, the antenna designer is free to specify any desired fitness function, and its specific form will produce different antenna designs as a consequence of the different decision space landscape. Some objective functions may introduce  $Z_0$  as a variable indirectly, as is done here through the  $VSWR$ ; or it may be introduced explicitly as, for example, in the second and third objective functions used in [8].

**Table 1.** Yagi fitness coefficients.

$c_1$	$c_2$	$c_3$	$c_4$	$c_5$	$c_6$
0.2	4	1	8	1	0.8

A parameter-free CFO implementation was used as described in [5] with  $N_d = 12$ ,  $\frac{N_p}{N_d} = 4$  (no stepping),  $N_t = 250$ ,  $N_\gamma = 11$ ,  $F_{rep}^{init} = 0.5$ ,  $\Delta F_{rep} = 0.1$ ,  $F_{rep}^{min} = 0.05$ ,  $\alpha = 1$ ,  $\beta = 1$ ,  $G = 2$ ,  $\Delta t = 0.5$ . Decision space adaptation was applied every 20<sup>th</sup> time step with an early termination criterion of fitness saturation for 25 consecutive steps (variation  $\leq 10^{-6}$ ). Note that in [1] a 6-element Yagi was modeled as a 13-dimensional problem as a matter of programming convenience in dealing with how data arrays in CFO legacy code were dimensioned. In this case, the CFO program's data arrays were re-dimensioned for the Yagi problem to reflect the actual 12-D decision space dimensionality. **Appendix I** contains the complete source code listing for the program that was used to compute the data reported here.

The decision space geometry variables were  $0.2 \leq L_i \leq 0.6\lambda_c$  and  $0.1 \leq S_j \leq 0.5\lambda_c$ . The *variable* feed system impedance was bounded by  $25 \leq Z_0 \leq 250 \Omega$  (purely resistive).  $Z_0$  was held constant for the fixed  $Z_0$  case by setting  $50 \leq Z_0 \leq 50 \Omega$  (of course, the designer is free to specify any desired range of values for  $Z_0$ , which is a useful attribute of *Variable*  $Z_0$  because it allows complete flexibility in matching “standard” impedance values if this is an important consideration). All array elements had the same radius  $0.00635\lambda_c$  (0.5-inch diameter elements at 299.8 MHz). Lengths were rounded to three decimal places in the NEC4 model (except radius) and  $Z_0$  to two places. For the *Variable*  $Z_0$  Yagi, CFO's best returned fitness was  $-1.189\dots$  (CFO probe #48) with  $\gamma = 0.9$  at step 210 (90,528 function evaluations). The corresponding values for the fixed  $Z_0$  array are  $-13.645\dots$  (probe #44) with  $\gamma = 0.6$  at step 49 (39,072 function evaluations). The computed CFO probe coordinates appear in **Figure 2**.

Using *Variable*  $Z_0$ , the optimum feed system impedance computed by CFO was  $Z_0 = 105.64 \Omega$ . Although Yagi arrays are generally considered “low” impedance antennas (typically  $|Z_{in}| \approx 10 - 30 \Omega$ ), this optimized feed system  $Z_0$  is relatively high. This value, however, is more readily matched to the “standard” values of  $50 - 75 \Omega$ , which is a fortuitous outcome. The optimized arrays' NEC input files appear in **Figure 3**, and their geometries are tabulated in **Table 2**. The spacings have been added to specify each element's position ( $X$  - coordinate, "boom dist") along the Yagi's boom ( $+X$  - axis). Because  $\lambda_c = 1$  meter, the entries in **Table 2** are also in wavelengths at  $f_c$ , so that these results can be used to scale the CFO-optimized UWB Yagi to any other frequency.

**Figures 4-6**, respectively, show the evolution of CFO's best fitness,  $D_{avg}$ , and best probe number.  $D_{avg}$  is the average distance between the probe returning the best fitness and all other probes, step-by-step. As CFO's probes converge on an optimum,  $D_{avg}$  decreases, thus serving as a measure of how tightly the probes have clustered. These plots are characteristic of CFO's behavior both on antenna problems [6,9] and on standard benchmark functions [5,10]. CFO was selected because of the author's familiarity with the algorithm and its deterministic nature. But any number of other commonly employed algorithms, such as Particle Swarm (PSO) [14], Ant Colony (ACO) [15], Group Search Optimizer (GSO) [16], Differential Evolution (DE) [17-19], or Genetic Algorithm (GA) [20] could be used instead. This “product by process” approach applies to any methodology, deterministic ones like CFO; stochastic metaheuristics like PSO, ACO, GSO DE, or GA; analytic approaches such as extended Wu-King impedance loading [4]; or even “seat of the pants” design or optimization based on experience, intuition, or a “best guess.” The specific design or optimization methodology is *entirely irrelevant* to the novelty of treating  $Z_0$  as a design variable instead of a fixed parameter. Thus, *Variable*  $Z_0$  can be used advantageously with *any* design or optimization methodology.

<p>YAGI Best Fitness = -1.18919692392253 returned by Probe # 48 at Time Step 210</p> <p>P48 coordinates:</p> <p>1 .31883055 2 .14047133 3 .27812909 4 .25622996 5 .23761514 6 .56163747 7 .50718407 8 .36523335 9 .35859015 10 .35989697 11 .35959582 12 105.64385547</p>	<p>YAGI Best Fitness = -13.6452736240978 returned by Probe # 44 at Time Step 49</p> <p>P44 coordinates:</p> <p>1 .37022425 2 .13786736 3 .25716011 4 .36513622 5 .35287928 6 .35716011 7 .48852411 8 .35716011 9 .35266668 10 .33530139 11 .36045709 12 50</p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Figure 2. CFO results for Variable  $Z_0$  (left) and fixed  $Z_0$  (right) Yagis.


<pre> CM File: YAGI.NEC CM YAGI ARRAY IN FREE SPACE CM Band center frequency, Fc = 299.8 MHz CM Freq step = 50 MHz +/- Fc CM Run ID: 07282011_001156 CM Fitness function: CM .2*Gfwd(L)-4*VSWR(L)+1*Gfwd(M)-8*VSWR(M)+ CM 1*Gfwd(U)-.8*VSWR(U) CM where L,M,U are lower/mid/upper frequencies CM Zo=105.64 ohms CM Note: All dimensions are in METERS. CM File ID 07282011122236 CM Nd= 12, p= 48, j= 210 CE GW1,9,0,-.281,0,.0,.281,0,.00635 GW2,9,.319,-.254,0,.319,.254,0,.00635 GW3,9,.459,-.183,0,.459,.183,0,.00635 GW4,9,.737,-.179,0,.737,.179,0,.00635 GW5,9,.993,-.18,0,.993,.18,0,.00635 GW6,9,1.231,-.18,0,1.231,.18,0,.00635 GE FR 0,3,0,0,249.8,50. EX 0,2,5,1,1,.0. RP 0,2,2,1001,0,.0,.90.,180.,100000. EN </pre>	<pre> CM File: YAGI.NEC CM YAGI ARRAY IN FREE SPACE CM Band center frequency, Fc = 299.8 MHz CM Freq step = 50 MHz +/- Fc CM Run ID: 07282011_124011 CM Fitness function: CM .2*Gfwd(L)-4*VSWR(L)+1*Gfwd(M)-8*VSWR(M)+ CM 1*Gfwd(U)-.8*VSWR(U) CM where L,M,U are lower/mid/upper frequencies CM Zo=50 ohms CM Note: All dimensions are in METERS. CM File ID 07282011180440 CM Nd= 12, p= 44, j= 49 CE GW1,9,0,-.179,0,.0,.179,0,.00635 GW2,9,.37,-.244,0,.37,.244,0,.00635 GW3,9,.508,-.179,0,.508,.179,0,.00635 GW4,9,.765,-.176,0,.765,.176,0,.00635 GW5,9,1.13,-.168,0,1.13,.168,0,.00635 GW6,9,1.483,-.18,0,1.483,.18,0,.00635 GE FR 0,3,0,0,249.8,50. EX 0,2,5,1,1,.0. RP 0,2,2,1001,0,.0,.90.,180.,100000. EN </pre>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Figure 3. NEC input files for CFO-optimized Variable  $Z_0$  (left) and fixed  $Z_0$  (right) Yagis.


Figure 7 plots the Variable  $Z_0$  and fixed  $Z_0$  array VSWR curves from 225 to 350 MHz, and Table 3 summarizes the bandwidth data for three different VSWR thresholds (2:1, 2.5:1, and 3:1). In the table,  $f_1$  and  $f_2$  are the lower and upper frequency limits (MHz) corresponding to VSWRs below the specified

**Table 2.** Geometry of Variable  $Z_0$  and fixed  $Z_0$  CFO-optimized Yagi arrays.


element #	Variable $Z_0$ ( $Z_0 = 105.64 \Omega$ )		Fixed $Z_0$ ( $Z_0 = 50 \Omega$ )	
	length ( $\lambda_c$ )	boom dist ( $\lambda_c$ )	length ( $\lambda_c$ )	boom dist ( $\lambda_c$ )
1 (REF)	0.562	0	0.358	0
2 (DE)	0.508	0.319	0.488	0.370
3 ( $D_1$ )	0.366	0.459	0.358	0.508
4 ( $D_2$ )	0.358	0.737	0.352	0.765
5 ( $D_3$ )	0.360	0.993	0.336	1.130
6 ( $D_4$ )	0.360	1.231	0.360	1.483

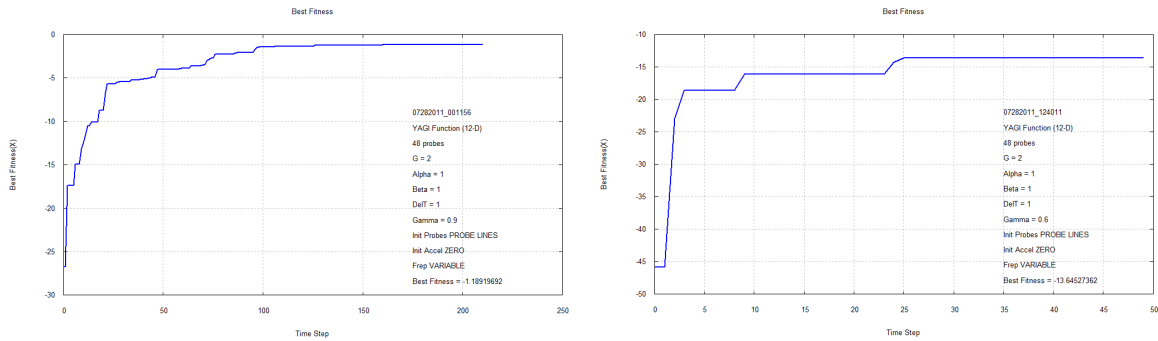

**Figure 4.** Evolution of CFO's best fitness, Variable  $Z_0$  (left) and fixed  $Z_0$  (right).

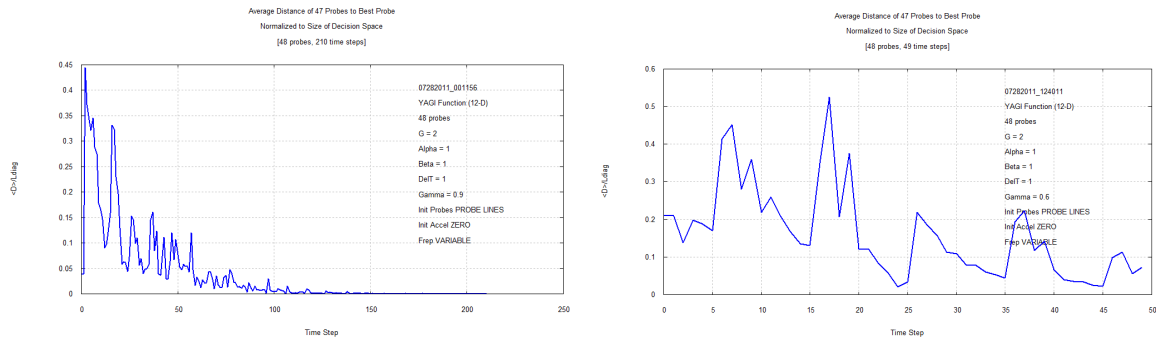


**Figure 5.** Evolution of CFO's  $D_{avg}$ , Variable  $Z_0$  (left) and fixed  $Z_0$  (right).

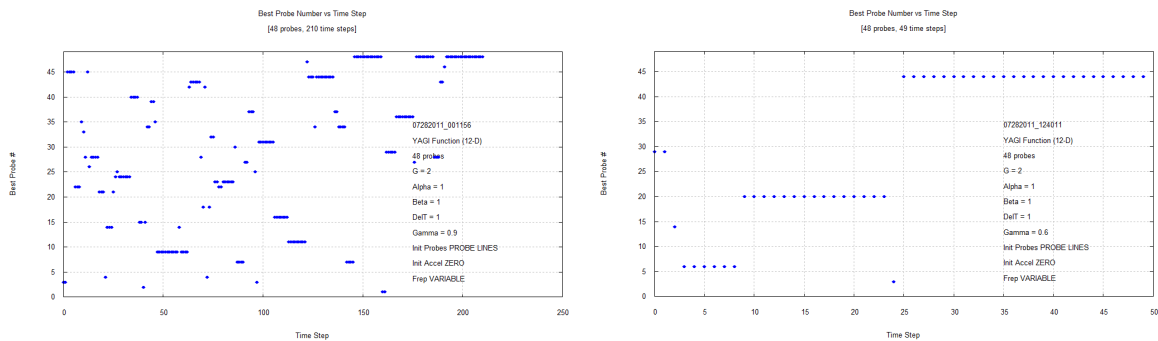

**Figure 6.** Evolution of CFO's best probe, Variable  $Z_0$  (left) and fixed  $Z_0$  (right).

threshold, and  $\Delta f = f_2 - f_1$  is the bandwidth in MHz. The fractional bandwidth in percent (relative to the band center frequency) is computed as  $BW(\%) = \frac{200\Delta f}{f_1 + f_2}$ . The *Variable*  $Z_0$  Yagi exhibits UWB performance (fractional bandwidth  $\geq 25\%$ ) at all VSWR thresholds, whereas the fixed  $Z_0$  antenna is not UWB at any threshold. *Variable*  $Z_0$  methodology resulted in nearly doubling the Yagi's  $VSWR \leq 2:1$  bandwidth from 13.43% at  $Z_0 = 50 \Omega$  to 26.34% at  $Z_0 = 105.64 \Omega$ . This improvement is dramatic, and directly attributable to *Variable*  $Z_0$  because CFO is a deterministic metaheuristic (the improvement thus cannot be a consequence of an optimizer's stochasticity). With respect to matching this array to a "standard"  $50 \Omega$  feed system impedance, a 2.113:1 impedance ratio broadband transformer or other suitable matching network is required, which easily is accomplished with state-of-the-art matching techniques. By injecting an additional degree of freedom in the traditional antenna design or optimization methodology, *Variable*  $Z_0$  technology has produced a substantially better antenna design.

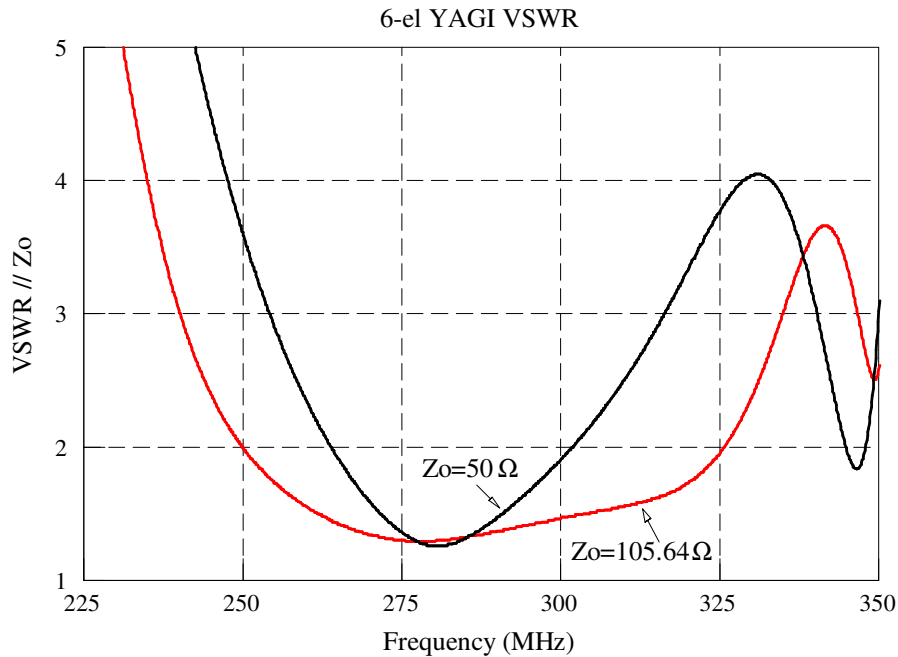


**Figure 7.** VSWR //  $Z_0$

**Table 3.** Bandwidth as a function of VSWR threshold (frequencies in MHz).

VSWR // $Z_0$ Threshold	<i>Variable</i> $Z_0 = 105.64 \Omega$				<i>Fixed</i> $Z_0 = 50 \Omega$			
	$f_1$	$f_2$	$\Delta f$	$BW(\%)$	$f_1$	$f_2$	$\Delta f$	$BW(\%)$
2.0 : 1	249.9	325.7	75.8	26.34	263.9	301.9	38.0	13.43
2.5 : 1	244.0	331.1	87.1	30.29	258.5	310.0	51.5	18.12
3.0 : 1	240.2	334.9	94.7	32.93	254.2	316.3	62.1	21.77




**Figure 8** plots the *Variable*  $Z_0$  and fixed  $Z_0$  Yagis' forward gain and front-to-back ratio (FBR) [note that in this case directivity power gain are equal because the PEC array elements result in 100% radiation efficiency]. The *Variable*  $Z_0$  array has a generally flatter gain curve with better values. Both arrays exhibit a sharp drop in gain at the high end of the band, with the *Variable*  $Z_0$  array's fall-off being very rapid. As to FBR, the *Variable*  $Z_0$  array performs better across the entire band, with values generally above 10 dB beyond 250 MHz. The fixed  $Z_0$  Yagi's performance generally is several dB worse at all frequencies.

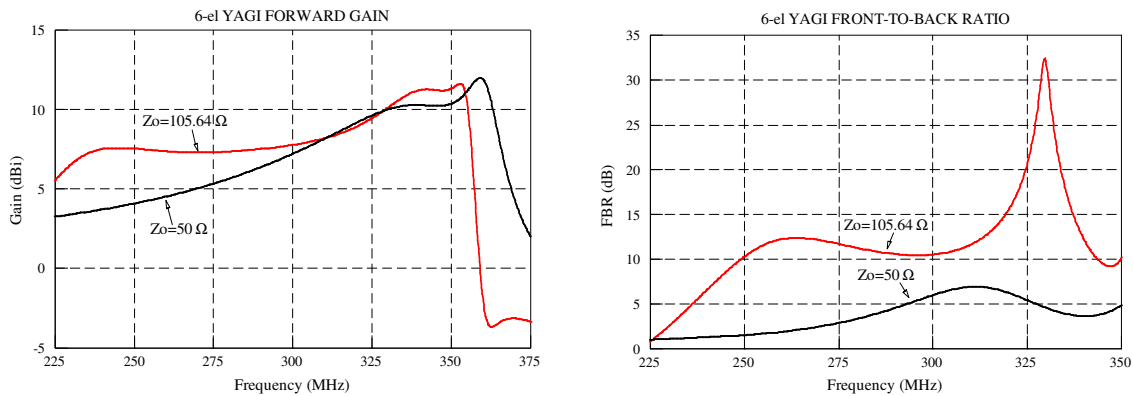

**Figure 8.** Forward gain (left) and FBR (right).

**Figure 9** shows the input resistance and reactance. For both the *Variable*  $Z_0$  and fixed  $Z_0$  designs, the variation of  $R_{in}$  and  $X_{in}$  is moderate across the band. For the *Variable*  $Z_0$  array, for example,  $R_{in}$  is between about 26 and 120 ohms at all frequencies from 225 to 350 MHz, while  $X_{in}$  varies from about -90 to +140 ohms. The ranges are similar for the fixed  $Z_0$  array. Each antenna exhibits a single resonance ( $X_{in} = 0$ ), the *Variable*  $Z_0$  array's near 270 MHz and the fixed  $Z_0$ 's near 280 MHz. The moderate variations in input impedance and absence of strong resonances are what account for each antenna's significant IBW, although it is evident that *Variable*  $Z_0$  technology was able to substantially extend the Yagi's IBW into the UWB range, whereas the traditional methodology in which  $Z_0$  is a fixed design parameter could not.



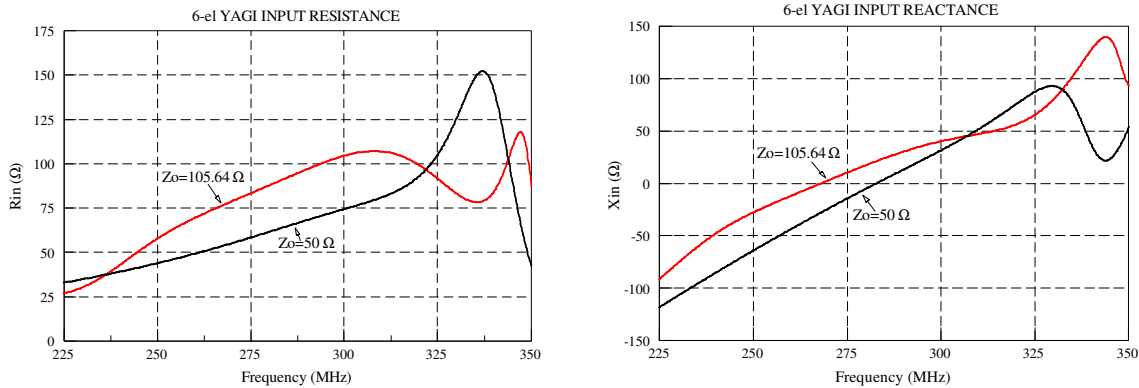

**Figure 9.** Yagi input resistance (left) and reactance (right).

#### 4. Conclusion

This paper provides an example of applying *Variable*  $Z_0$  technology to the design of an Ultra Wideband Yagi-Uda array. Even though Yagis are generally considered “narrowband” antennas, *Variable*  $Z_0$  technology produced a UWB Yagi design with good gain and FBR over a fractional bandwidth greater than 26% (nearly twice the bandwidth of the CFO-optimized fixed  $Z_0$  array). *Variable*  $Z_0$  is a new approach to antenna design in which the feed system characteristic impedance,  $Z_0$ , is treated as a *variable* quantity whose value is determined by the design or optimization methodology. *Variable*  $Z_0$  is a heretofore overlooked and fundamentally different antenna design methodology because it departs from the traditional methodology of treating  $Z_0$  as a *fixed* design *parameter* whose value is specified at the outset and never changes. *Variable*  $Z_0$  introduces into the antenna design space an additional degree of freedom that makes it easier to achieve specific performance goals, as the design example shows. *Variable*  $Z_0$  should be especially useful for improving IBW, but it will be helpful in achieving any desired antenna performance objectives, even objectives that do not involve IBW directly.

13 August 2011  
Brewster, Massachusetts

*Variable*  $Z_0$  is a registered Service Mark.

© 2011 Richard A. Formato  
All rights reserved worldwide.

\* \* \* \* \*

#### References

1. Formato, R. A., “A Novel Methodology for Antenna Design and Optimization: *Variable*  $Z_0$  (ver. 2),” <http://arXiv.org/abs/1107.1437>, July 2011.
2. Zehforoosh, Y., Ghobadi, C., and Nourinia, J., “Antenna Design for Ultra Wideband Application Using a New Multilayer Structure,” *PIERS Online*, vol. 2, no. 6, 2006, pp. 544-549.
3. Formato, R. A., “Central Force Optimization: A New Metaheuristic with Applications in Applied Electromagnetics,” *Prog. Electromagnetics Research*, vol. PIER 77, pp. 425-491, 2007: <http://www.jpier.org/pier/pier.php?paper=07082403> (doi:10.2528/PIER07082403).
4. Formato, R. A., “New Techniques for Increasing Antenna Bandwidth with Impedance Loading,” *Progress in Electromagnetics Research B*, Vol. 29, 269-288, 2011.

5. Formato, R. A., "Parameter-Free Deterministic Global Search with Simplified Central Force Optimization," in **Advanced Intelligent Computing Theories and Applications (ICIC2010)**, Lecture Notes in Computer Science (D.-S. Huang, Z. Zhao, V. Bevilacqua and J. C. Figueroa, Eds.), LNCS 6215, pp. 309–318, Springer-Verlag Berlin Heidelberg, 2010.
6. Formato, R. A., "Improved CFO Algorithm for Antenna Optimization," *Prog. Electromagnetics Research B*, pp. 405-425, 2010. <http://www.jpier.org/pierb/pier.php?paper=09112309> (doi:10.2528/PIERB09112309).
7. Formato, R. A., "Central Force Optimization with Variable Initial Probes and Adaptive Decision Space," *Applied Mathematics and Computation*, Vol. 217, 2011, pp. 8866-8872.
8. Formato, R. A., "Issues in Antenna Optimization – A Monopole Case Study," March, 2011. <http://arXiv.org/abs/1103.5629>.
9. Formato, R. A., "Central Force Optimization Applied to the PBM Suite of Antenna Benchmarks," Feb., 2010. <http://arXiv.org/abs/1003.0221>.
10. Formato, R. A., "Comparative Results: Group Search Optimizer and Central Force Optimization," Feb., 2010. <http://arXiv.org/abs/1002.2798>.
11. Burke, G. J., and Poggio, A. J., "Numerical Electromagnetics Code (NEC) – Method of Moments," Parts I, II and III, January 1981, UCID-19934, Lawrence Livermore National Laboratory, Livermore, California, USA
12. Burke, G. J., "Numerical Electromagnetics Code – NEC-4, Method of Moments, Part I: User's Manual and Part II: Program Description – Theory," January 1992, UCRL-MA-109338, Lawrence Livermore National Laboratory, Livermore, California, USA (<https://ipo.llnl.gov/technology/software/softwaretitles/nec.php>).
13. (i) "4nec2" antenna modeling freeware by Arie Voors, available online at <http://home.ict.nl/~arivoors/>. (ii) Unofficial Numerical Electromagnetic Code (NEC) Archives, online at <http://www.si-list.net/swindex.html>
14. Kennedy, J., and Eberhart, R., "Particle Swarm Optimization," *Proc. IEEE Conf. On Neural Networks*, 4 (Nov/Dec), 1942-1948, 1995.
15. Dorigo, M., Maniezzo, V., and Coloni, A., "Positive feedback as a search strategy," Dipartimento di Elettronica, Politecnico di Milano, Italy, Tech. Rep. 91-016, 1991: [http://iridia.ulb.ac.be/~mdorigo/pub\\_x\\_subj.html](http://iridia.ulb.ac.be/~mdorigo/pub_x_subj.html)
16. He, S., Wu, Q. H., Saunders, J. R., "Group Search Optimizer: An Optimization Algorithm Inspired by Animal Searching Behavior," *IEEE Trans. Evol. Computation*, vol. 13, no. 5, pp. 973-990, Oct. 2009.
17. Storn, R., and K. V. Price, "Differential evolution: A simple and efficient adaptive scheme for global optimization over continuous spaces," Technical Report TR-95-012, ICSI (Univ. of California, Berkeley), 1995. <http://www.icsi.berkeley.edu/~storn/litera.html>.
18. Storn, R., and K. V. Price, "Minimizing the real functions of the ICEC 1996 contest by differential evolution," *Proc. of the 1996 IEEE International Conference on Evolutionary Computation*, 842-844, Nagoya, Japan, 1996.
19. A. Chowdhury, A. Ghosh, R. Giri, and S. Das, "Optimization of Antenna Configuration with a Fitness-adaptive Differential Evolution Algorithm," *Progress In Electromagnetics Research B*, Vol. 26, 291-319, 2010.
20. Jones, E. A., and Joines, W. T., "Design of Yagi-Uda Antennas Using Genetic Algorithms," *IEEE Trans. Antennas and Propagation*, vol. 45, no. 9, September 1997, pp. 1386-1392.

## Appendix I. CFO Source Code Listing

```
'Program 'CFO_YAGI_07-27-2011.BAS'  
'Compiled with Power Basic/Windows Compiler 9.04.0122 (www.PowerBasic.com).  
  
'CFO-OPTIMIZED R-LOADED (1 RESISTOR) BOWTIE IN FREE SPACE AND  
'YAGI-UDA ARRAY IN FREE SPACE WITH Zo AS AN OPTIMIZATION PARAMETER.  
  
'CFO ARRAY DIMENSIONING CHANGED FROM PREVIOUS VERSION, TO AVOID  
'ASSIGNING A FIXED "SPACING" OF ZERO TO ELEMENT "REF."  
'DIMENSIONALITY OF YAGI PROBLEM IS NOW 2*#elements WHEREAS  
'IN THE PREVIOUS VERSION IT WAS 2*#elements+1.  
  
'LAST MOD 07-28-2011 ~1240 HRS EDT  
  
***** YAGI FITNESS FUNCTION *****  
'THE USER CAN USE THE FOLLOWING FITNESS FUNCTION:  
F=[A*Fwdgain(Db1)-B*|Zo-Max(Rin)|-  
C*Max|Xin|-D*(MaxVSWR-MinVSWR)]/(A+B+C+D)  
'WHERE THE COEFFICIENTS A, B, C AND D ARE USER-SPECIFIED IN THE  
'FILE YagiCoeff.TXT. THIS FILE MUST CONTAIN FOUR LINES WITH A,  
'B, C, AND D, RESPECTIVELY, ON ONE LINE EACH. IF THE FILE DOES  
'NOT EXIST, A DEFAULT FILE IS CREATED WITH A=20, B=2, C=3, D=4.  
'OR, SOME OTHER FITNESS MAY BE HARDWIRED IN THE YAGI FUNCTION.  
'CHECK THE SOURCE LISTING TO SEE WHICH IS BEING USED.  
  
***** YAGI CFO SETUP PARAMETERS *****  
'THE TEXT FILE YAGI_CFO.CFG CONTAINS THREE CFO SETUP PARAMETERS:  
' NT& (# time steps)  
' Numgammas(# gamma values)  
' MinProbesPerDimension% (min # probes/dim on probe lines)  
' MaxProbesPerDimension% (max # probes/dim on probe lines)  
'EACH ONE MUST BE ENTERED AS A NUMBER ON A SEPARATE LINE. IF THE  
'FILE YAGI_CFO.CFG DOES NOT EXIST, A DEFAULT VERSION IS CREATED.  
'THIS APPLIES ONLY TO THE YAGI MODEL. OTHER BUILT-IN BENCHMARK  
'FUNCTIONS USE THE HARDWIRED INTERNAL VALUES FOR THESE PARAMETERS.  
  
***** IMPORTANT MODELING NOTE *****  
'THE YAGI ELEMENT SEGMENT LENGTH IN NEC CAN BE VARIABLE OR FIXED.  
'IF FIXED, THEN THE NUMBER OF SEGMENTS VARIES FROM ONE ELEMENT TO  
'THE NEXT, BUT ALL SEGMENTS ARE PERFECTLY ALIGNED, WHICH, AS A  
'GENERAL RULE IS RECOMMENDED IN THE NEC MODELING GUIDELINES. BUT  
'EXPERIENCE SUGGESTS THAT THIS IS NOT NECESSARILY THE BEST  
'APPROACH UNDER ALL CIRCUMSTANCES, SO VARIABLE LENGTH SEGMENTS  
'ARE ALLOWED AS WELL. THE SETUP FILE 'YagiSeg.TXT' CONTAINS TWO  
'LINES. THE FIRST IS EITHER THE WORD 'VARIABLE' (NO QUOTES) OR  
'THE WORD 'FIXED', WHICH DETERMINES WHETHER VARIABLE LENGTH OR  
'FIXED LENGTH SEGMENTS ARE USED. THE NEXT LINE IS THE SEGMENT  
'LENGTH IN WAVELENGTHS (RANGE 0.02-0.2). THIS FILE WILL BE  
'CREATED IF IT DOES NOT EXIST USING VARIABLE SEGMENT LENGTH AS  
'THE DEFAULT WITH 9 SEGMENTS PER ARRAY ELEMENT. NOTE THAT IF  
'FIXED SEGMENT LENGTH IS USED, EACH ELEMENT'S PHYSICAL LENGTH  
'IS ADJUSTED TO BE AN INTEGER NUMBER OF SEGMENTS IN ORDER TO  
'ALIGN EVERY SEGMENT.  
  
***** BOWTIE FITNESS FUNCTION *****  
'THE HARDWIRED BOWTIE FITNESS FUNCTION IS:  
F=[Min(EFF)+5*Min(Gmax)]*{|Zo-Max(Rin)|}*[Max(VSWR)-Min(VSWR)]*  
[Max(Xin)-Min(Xin)]  
  
***** BOWTIE CFO SETUP PARAMETERS *****  
'THE TEXT FILE BOWTIE_CFO.CFG CONTAINS THREE CFO SETUP PARAMETERS:  
' NT& (# time steps)  
' Numgammas(# gamma values)  
' MinProbesPerDimension% (min # probes/dim on probe lines)  
' MaxProbesPerDimension% (max # probes/dim on probe lines)  
'EACH ONE MUST BE ENTERED AS A NUMBER ON A SEPARATE LINE. IF THE  
'FILE BOWTIE_CFO.CFG DOES NOT EXIST, A DEFAULT VERSION IS CREATED.  
'THIS APPLIES ONLY TO THE BOWTIE MODEL. OTHER BUILT-IN BENCHMARK  
'FUNCTIONS USE THE HARDWIRED INTERNAL VALUES FOR THESE PARAMETERS.  
  
=====
```

NOTE: ALL PBM FUNCTIONS HAVE WIRE RADIUS SET TO 0.00001 LAMBDA

```
=====
```

'THIS PROGRAM IMPLEMENTS A SIMPLE VERSION OF "CENTRAL  
'FORCE OPTIMIZATION." IT IS DISTRIBUTED FREE OF CHARGE  
'TO INCREASE AWARENESS OF CFO AND TO ENCOURAGE EXPERI-  
'MENTATION WITH THE ALGORITHM.

'CFO IS A MULTIDIMENSIONAL SEARCH AND OPTIMIZATION  
'ALGORITHM THAT LOCATES THE GLOBAL MAXIMA OF A FUNCTION.  
'UNLIKE MOST OTHER ALGORITHMS, CFO IS COMPLETELY DETERMIN-  
'ISTIC, SO THAT EVERY RUN WITH THE SAME SETUP PRODUCES  
'THE SAME RESULTS.

'(c) 2006-2011 Richard A. Formato

'ALL RIGHTS RESERVED WORLDWIDE

'THIS PROGRAM IS FREWARE. IT MAY BE COPIED AND  
'DISTRIBUTED WITHOUT LIMITATION AS LONG AS THIS  
'COPYRIGHT NOTICE AND THE GNPLOT AND REFERENCE  
'INFORMATION BELOW ARE INCLUDED WITHOUT MODIFICATION,  
'AND AS LONG AS NO FEE OR COMPENSATION IS CHARGED,  
'INCLUDING "TIE-IN" OR "BUNDLING" FEES CHARGED FOR  
'OTHER PRODUCTS.

```
=====
```

'THIS PROGRAM REQUIRES wgnuplot.exe TO DISPLAY PLOTS.  
'Gnuplot is a copyrighted freeware plotting program  
'available at <http://www.gnuplot.info/index.html>.

'IT ALSO REQUIRES A VERSION OF THE Numerical Electromagnetics  
'Code (NEC) IN ORDER TO RUN THE PBM BENCHMARKS, Bowtie and Yagi  
'antenna models. If this file is not present, a runtime error  
'occurs. Remove the code that checks for the NEC EXE IS THERE  
'IS NO INTEREST IN THESE FUNCTIONS.

```
=====
```

'CFO REFERENCES (author: Richard A. Formato unless otherwise noted)

```
-----
```

'"A Novel Methodology for Antenna Design and Optimization: Variable Zo," July 2011, <http://arxiv.org/abs/1107.1437>.

'"Central Force Optimization with Variable Initial Probes and Adaptive Decision Space," Applied Mathematics and Computation,  
'Vol. 217, 2011, pp. 8866-8872, 2011.

'"New Techniques for Increasing Antenna Bandwidth with Impedance Loading," Progress In Electromagnetics Research B, vol. 29, pp. 269-288, 2011,  
'<http://www.jpier.org/pierb/pier.php?paper=11021904>.

'"Parameter-Free Deterministic Global Search with Simplified Central Force Optimization," in Advanced Intelligent Computing Theories and  
'Applications (ICITC2010) Lecture Notes in Computer Science (D.-S. Huang, Z. Zhao, V. Bevilacqua and J. C. Figueroa, Eds.), LNCS 6215, pp. 309-318,  
'Springer-Verlag Berlin Heidelberg, 2010 [book chapter].

'"Antenna Benchmark Performance and Array Synthesis using Central Force Optimization," IET (U.K.) Microwaves, Antennas & Propagation vol. 4, no. 5,

'pp. 583-592, 2010. (doi: 10.1049/iet-map.2009.0147). [with G. M. Qubati and N. I. Dib].

"Improved CFO Algorithm for Antenna Optimization," Prog. Electromagnetics Research B, pp. 405-425, 2010  
 'http://www.jpier.org/pierb/pier.php?paper=09112309 (doi:10.2528/PIERB09112309).

"Central Force Optimization and NEOs - First Cousins?," Journal of Multiple-valued Logic and Soft Computing, vol. 16, pp. 547-565, 2010.

"Convergence Analysis and Performance of the Extended Artificial Physics Optimization Algorithm," Applied Mathematics and Computation (in press)  
 '[with L. Xie and J. zeng].

"Central Force Optimization with Variable Initial Probes and Adaptive Decision Space," Applied Mathematics and Computation, July 2011.

"High-Performance Indoor VHF-UHF Antennas: Technology Update Report," National Association of Broadcasters (NAB), FASTROAD (Flexible Advanced Services for Television and Radio on All Devices), Technology Advocacy Program, 15 May 2010 [with M. W. Cross and E. Merulla]  
 'http://www.nabfastroad.org/NABHighPerformanceIndoorTVAntennaRpt.pdf

"Central Force Optimisation: a New Gradient-Like Metaheuristic for Multidimensional Search and Optimisation," Int. J. Bio-Inspired Computation, 'vol. 1, no. 4, pp. 217-238, 2009. (doi: 10.1504/IJBIC.2009.024721).

"Central Force Optimization: A New Deterministic Gradient-Like Optimization Metaheuristic," OPSEARCH, Journal of the Operations Research Society of India, 'vol. 46, no. 1, pp. 25-51, 2009. (doi: 10.1007/s12597-009-0003-4).

"Central Force Optimization: A New Computational Framework for Multidimensional Search and Optimization," in Nature Inspired Cooperative Strategies for Optimization (NICSO 2007), Studies in Computational Intelligence 129 (N. Krasnogor, G. Nicosia, M. Pavone, and D. Pelta, Eds.), vol. 129, Springer-Verlag, Heidelberg, 2008 [book chapter].

"Central Force Optimization: A New Metaheuristic with Applications in Applied Electromagnetics," Prog. Electromagnetics Research, vol. PIER 77, 'pp. 425-491, 2007: http://www.jpier.org/pier/pier.php?paper=07082403 (doi:10.2528/PIER07082403).

"Are Near Earth Objects the Key to Optimization Theory?," Dec., 2009. http://arxiv.org/abs/0912.1394.

"Pseudorandomness in Central Force Optimization," Jan., 2010. http://arxiv.org/abs/1001.0317.

"Central Force Optimization Applied to the PBM Suite of Antenna Benchmarks," Feb., 2010, http://arxiv.org/abs/1003.0221.

"On the Utility of Directional Information for Repositioning Errant Probes in Central Force Optimization," May, 2010, http://arxiv.org/abs/1005.5490.

"Issues in Antenna Optimization - A Monopole Case Study," Mar., 2011. http://arxiv.org/abs/1103.5629.

```

=====
#COMPILE EXE
#DIM ALL
%USEMACROS = 1
#INCLUDE "win32API.inc"
DEFEXT A-Z
'----- EQUATES -----
%IDC_FRAME1 = 101
%IDC_FRAME2 = 102
%IDC_Function_Number1 = 121
%IDC_Function_Number2 = 122
%IDC_Function_Number3 = 123
%IDC_Function_Number4 = 124
%IDC_Function_Number5 = 125
%IDC_Function_Number6 = 126
%IDC_Function_Number7 = 127
%IDC_Function_Number8 = 128
%IDC_Function_Number9 = 129
%IDC_Function_Number10 = 130
%IDC_Function_Number11 = 131
%IDC_Function_Number12 = 132
%IDC_Function_Number13 = 133
%IDC_Function_Number14 = 134
%IDC_Function_Number15 = 135
%IDC_Function_Number16 = 136
%IDC_Function_Number17 = 137
%IDC_Function_Number18 = 138
%IDC_Function_Number19 = 139
%IDC_Function_Number20 = 140
%IDC_Function_Number21 = 141
%IDC_Function_Number22 = 142
%IDC_Function_Number23 = 143
%IDC_Function_Number24 = 144
%IDC_Function_Number25 = 145
%IDC_Function_Number26 = 146
%IDC_Function_Number27 = 147
%IDC_Function_Number28 = 148
%IDC_Function_Number29 = 149
%IDC_Function_Number30 = 150
%IDC_Function_Number31 = 151
%IDC_Function_Number32 = 152
%IDC_Function_Number33 = 153
%IDC_Function_Number34 = 154
%IDC_Function_Number35 = 155
%IDC_Function_Number36 = 156
%IDC_Function_Number37 = 157
%IDC_Function_Number38 = 158
%IDC_Function_Number39 = 159
%IDC_Function_Number40 = 160
%IDC_Function_Number41 = 161
%IDC_Function_Number42 = 162
%IDC_Function_Number43 = 163
%IDC_Function_Number44 = 164
%IDC_Function_Number45 = 165
%IDC_Function_Number46 = 166
%IDC_Function_Number47 = 167
%IDC_Function_Number48 = 168
%IDC_Function_Number49 = 169
%IDC_Function_Number50 = 170
'----- GLOBAL CONSTANTS & SYMBOLS -----
GLOBAL c1, c2, c3, c4, c5, c6 AS EXT 'YAGI fitness function coefficients
GLOBAL Fit1$, Fit2$
GLOBAL NumRadPattAngles%
GLOBAL YagiSegmentLength$, YagiCoefficients$
GLOBAL NumYagiElements% 'added 05/12/2011 instead of passing in function call
GLOBAL YAGIsecsPerRun, YagiSegmentLengthwIn, YagiFitnessCoefficients() AS EXT
GLOBAL BowtieSegmentLength$, BowtieCoefficients$
GLOBAL NumBowtieElements% 'added 05/12/2011 instead of passing in function call
GLOBAL BOWTIEsecsPerRun, BowtieSegmentLengthwIn, BowtieFitnessCoefficients() AS EXT
GLOBAL Xioffset() AS EXT 'offset array for Rosenbrock F6 function

```

```

GLOBAL xiMin(), xiMax(), DiagLength, StartingxiMin(), StartingxiMax() AS EXT 'decision space boundaries, Length of diagonal
GLOBAL Aij() AS EXT 'array for Shekel's Foxholes function
GLOBAL EulerConst, Pi, Pi2, Pi4, TwoPi, FourPi, e, Root2 AS EXT 'mathematical constants
GLOBAL Alphabet$, Digits$, RunID$ 'upper/lower case alphabet, digits 0-9 & Run ID
GLOBAL Quote$, SpecialCharacters$ 'quotation mark & special symbols
GLOBAL Mu0, Eps0, c, eta0 AS EXT 'E&M constants
GLOBAL Rad2Deg, Deg2Rad, Feet2Meters, Meters2Feet, Inches2Meters, Meters2Inches AS EXT 'conversion factors
GLOBAL Miles2Meters, Meters2Miles, NautMi2Meters, Meters2NautMi AS EXT 'conversion factors
GLOBAL Screenwidth&, ScreenHeight& 'screen width & height
GLOBAL xOffset&, yOffset& 'offsets for probe plot windows
GLOBAL FunctionNumber%
GLOBAL AddNoiseToPBM2$

```

```

'----- TEST FUNCTION DECLARATIONS -----

```

```

DECLARE FUNCTION F1(R(),Nd%,p%,j&) 'F1 (n-D)
DECLARE FUNCTION F2(R(),Nd%,p%,j&) 'F2(n-D)
DECLARE FUNCTION F3(R(),Nd%,p%,j&) 'F3 (n-D)
DECLARE FUNCTION F4(R(),Nd%,p%,j&) 'F4 (n-D)
DECLARE FUNCTION F5(R(),Nd%,p%,j&) 'F5 (n-D)
DECLARE FUNCTION F6(R(),Nd%,p%,j&) 'F6 (n-D)
DECLARE FUNCTION F7(R(),Nd%,p%,j&) 'F7 (n-D)
DECLARE FUNCTION F8(R(),Nd%,p%,j&) 'F8 (n-D)
DECLARE FUNCTION F9(R(),Nd%,p%,j&) 'F9 (n-D)
DECLARE FUNCTION F10(R(),Nd%,p%,j&) 'F10 (n-D)
DECLARE FUNCTION F11(R(),Nd%,p%,j&) 'F11 (n-D)
DECLARE FUNCTION F12(R(),Nd%,p%,j&) 'F12 (n-D)
DECLARE FUNCTION u(Xi,a,k,m) 'Auxiliary function for F12 & F13
DECLARE FUNCTION F13(R(),Nd%,p%,j&) 'F13 (n-D)
DECLARE FUNCTION F14(R(),Nd%,p%,j&) 'F14 (n-D)
DECLARE FUNCTION F15(R(),Nd%,p%,j&) 'F15 (n-D)
DECLARE FUNCTION F16(R(),Nd%,p%,j&) 'F16 (n-D)
DECLARE FUNCTION F17(R(),Nd%,p%,j&) 'F17 (n-D)
DECLARE FUNCTION F18(R(),Nd%,p%,j&) 'F18 (n-D)
DECLARE FUNCTION F19(R(),Nd%,p%,j&) 'F19 (n-D)
DECLARE FUNCTION F20(R(),Nd%,p%,j&) 'F20 (n-D)
DECLARE FUNCTION F21(R(),Nd%,p%,j&) 'F21 (n-D)
DECLARE FUNCTION F22(R(),Nd%,p%,j&) 'F22 (n-D)
DECLARE FUNCTION F23(R(),Nd%,p%,j&) 'F23 (n-D)
DECLARE FUNCTION F24(R(),Nd%,p%,j&) 'F24 (n-D)
DECLARE FUNCTION F25(R(),Nd%,p%,j&) 'F25 (n-D)
DECLARE FUNCTION F26(R(),Nd%,p%,j&) 'F26 (n-D)
DECLARE FUNCTION F27(R(),Nd%,p%,j&) 'F27 (n-D)
DECLARE FUNCTION ParrottF4(R(),Nd%,p%,j&) 'Parrott F4 (1-D)
DECLARE FUNCTION SGO(R(),Nd%,p%,j&) 'SGO Function (2-D)
DECLARE FUNCTION GoldsteinPrice(R(),Nd%,p%,j&) 'Goldstein-Price Function (2-D)
DECLARE FUNCTION StepFunction(R(),Nd%,p%,j&) 'Step Function (n-D)
DECLARE FUNCTION Schwefel226(R(),Nd%,p%,j&) 'Schwefel Prob. 2.26 (n-D)
DECLARE FUNCTION Colville(R(),Nd%,p%,j&) 'Colville Function (4-D)
DECLARE FUNCTION Griewank(R(),Nd%,p%,j&) 'Griewank (n-D)
DECLARE FUNCTION Himmelblau(R(),Nd%,p%,j&) 'Himmelblau (2-D)
DECLARE FUNCTION Rosenbrock(R(),Nd%,p%,j&) 'Rosenbrock (n-D)
DECLARE FUNCTION Sphere(R(),Nd%,p%,j&) 'Sphere (n-D)
DECLARE FUNCTION HimmelblauNLO(R(),Nd%,p%,j&) 'Himmelblau NLO (5-D)
DECLARE FUNCTION Tripod(R(),Nd%,p%,j&) 'Tripod (2-D)
DECLARE FUNCTION Sign(X) 'Auxiliary function for Tripod
DECLARE FUNCTION RosenbrockF6(R(),Nd%,p%,j&) 'Rosenbrock F6 (10-D)
DECLARE FUNCTION CompressionSpring(R(),Nd%,p%,j&) 'Compression Spring (3-D)
DECLARE FUNCTION GearTrain(R(),Nd%,p%,j&) 'Gear Train (4-D)
DECLARE FUNCTION PBM_1(R(),Nd%,p%,j&) 'PBM Benchmark #1
DECLARE FUNCTION PBM_2(R(),Nd%,p%,j&) 'PBM Benchmark #2
DECLARE FUNCTION PBM_3(R(),Nd%,p%,j&) 'PBM Benchmark #3
DECLARE FUNCTION PBM_4(R(),Nd%,p%,j&) 'PBM Benchmark #4
DECLARE FUNCTION PBM_5(R(),Nd%,p%,j&) 'PBM Benchmark #5
DECLARE FUNCTION BOWTIE(R(),Nd%,p%,j&) 'FREE-SPACE RLC-LOADED BOWTIE
DECLARE FUNCTION YAGI_ARRAY(R(),Nd%,p%,j&) 'FREE-SPACE YAGI ARRAY

```

```

'----- SUB DECLARATIONS -----
DECLARE SUB SieveOfEratosthenes(N&&,Primes&&(),NumPrimes&&)
DECLARE SUB IPD_Halton(Np%,Nd%,Nt&,R(),Gamma)
DECLARE SUB ReplaceCommentCard(NECFile$)
DECLARE SUB CopyBestMatrices(Np%,Nd%,Nt&,R(),M(),Rbest(),Mbest())
DECLARE SUB CheckNECFiles(NECFileError$)
DECLARE SUB GetTestFunctionNumber(FunctionName$)
DECLARE SUB FillArrayAij
DECLARE SUB Plot3DbestProbeTrajectories(NumTrajectories%,M(),R(),Np%,Nd%,LastStep&,FunctionName$)
DECLARE SUB Plot2DbestProbeTrajectories(NumTrajectories%,M(),R(),Np%,Nd%,LastStep&,FunctionName$)
DECLARE SUB Plot2DIndividualProbeTrajectories(NumTrajectories%,M(),R(),Np%,Nd%,LastStep&,FunctionName$)
DECLARE SUB Show2Dprobes(R(),Np%,Nt&,j&,Frep,BestFitness,BestProbeNumber%,BestTimeStep&,FunctionName$,RepositionFactor$,Gamma)
DECLARE SUB Show3Dprobes(R(),Np%,Nd%,Nt&,j&,Frep,BestFitness,BestProbeNumber%,BestTimeStep&,FunctionName$,RepositionFactor$,Gamma)
DECLARE SUB StatusWindow(FunctionName$,StatusWindowHandle???)
DECLARE SUB PlotResults(FunctionName$,Nd%,Np%,BestFitnessOverall,BestNpNd%,BestGamma,Neval&&,Rbest(),Mbest(),BestProbeNumberOverall%,BestTimeStepOverall&,LastStepBestRun&,Alpha,Beta)
DECLARE SUB DisplayRunParameters(FunctionName$,Nd%,Np%,Nt&,G,DeltaT,Alpha,Beta,Frep,R(),A(),M(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,RunCFO$,ShrinkDSS$,CheckForEarlyTermination$)
DECLARE SUB GetBestFitness(M(),Np%,StepNumber&,BestFitness,BestProbeNumber%,BestTimeStep&)
DECLARE SUB TabulateDprobeCoordinates(Max1DprobesPlotted%,Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,R(),M(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
DECLARE SUB GetPlotAnnotation(PlotAnnotation$,Nd%,Np%,Nt&,G,DeltaT,Alpha,Beta,Frep,M(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
DECLARE SUB ChangeRunParameters(NumProbesPerDimension%,Np%,Nd%,Nt&,G,Alpha,Beta,DeltaT,Frep,PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$)
DECLARE SUB CLEANUP
DECLARE SUB Plot1DprobePositions(Max1DprobesPlotted%,Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,R(),M(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
DECLARE SUB DisplayMmatrix(Np%,Nt&,M())
DECLARE SUB DisplayMbestMatrix(Np%,Nt&,Mbest())
DECLARE SUB DisplayMmatrixThisTimeStep(Np%,j&,M())
DECLARE SUB DisplayAmatrix(Np%,Nd%,Nt&,A())
DECLARE SUB DisplayAmatrixThisTimeStep(Np%,Nd%,j&,A())
DECLARE SUB DisplayRmatrix(Np%,Nd%,Nt&,R())
DECLARE SUB DisplayRmatrixThisTimeStep(Np%,Nd%,j&,R(),Gamma)
DECLARE SUB DisplayXiminMax(Nd%,Ximin(),Ximax())
DECLARE SUB DisplayRunParameters2(FunctionName$,Nd%,Np%,Nt&,G,DeltaT,Alpha,Beta,Frep,PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$)
DECLARE SUB PlotBestProbeVsTimeStep(Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,M(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
DECLARE SUB PlotBestFitnessEvolution(Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,M(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
DECLARE SUB PlotAverageDistance(Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,M(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,R(),DiagLength,Gamma)
DECLARE SUB Plot2Dfunction(FunctionName$,R())
DECLARE SUB Plot1Dfunction(FunctionName$,R())
DECLARE SUB GetFunctionRunParameters(FunctionName$,Nd%,Np%,Nt&,G,DeltaT,Alpha,Beta,Frep,R(),A(),M(),DiagLength,PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$)
DECLARE SUB InitialProbeDistribution(Np%,Nd%,Nt&,R(),PlaceInitialProbes$,Gamma)
DECLARE SUB RetrieveErrantProbes(Np%,Nd%,j&,R(),Frep)
DECLARE SUB Retrieveerrantprobes2(Np%,Nd%,j&,R(),A(),Frep)
DECLARE SUB CFO(FunctionName$,Nd%,Nt&,R(),A(),M(),DiagLength,BestFitnessOverall,BestNpNd%,BestGamma,Neval&&,Rbest(),Mbest(),BestProbeNumberOverall%,BestTimeStepOverall&,LastStepBestRun&,Alpha,Beta) 'Self-contained CFO routine -> NO USER-SPECIFIED PARAMETERS
DECLARE SUB IPD(Np%,Nd%,Nt&,R(),Gamma)
DECLARE SUB ResetDecisionSpaceBoundaries(Nd%)
DECLARE SUB ThreeDplot(PlotFileName$,PlotTitle$,Annotation$,xCoord$,yCoord$,zCoord$, _
xaxisLabel$,yaxisLabel$,zaxisLabel$,zMin$,zMax$,GnuPlotEXE$,AS)
DECLARE SUB ThreeDplot2(PlotFileName$,PlotTitle$,Annotation$,xCoord$,yCoord$,zCoord$,xaxisLabel$, _
yaxisLabel$,zaxisLabel$,zMin$,zMax$,GnuPlotEXE$,AS,xStart$,xStop$,yStart$,yStop$)
DECLARE SUB ThreeDplot3(PlotFileName$,PlotTitle$,Annotation$,xCoord$,yCoord$,zCoord$, _
xaxisLabel$,yaxisLabel$,zaxisLabel$,zMin$,zMax$,GnuPlotEXE$,xStart$,xStop$,yStart$,yStop$)
DECLARE SUB TwoDplot(PlotFileName$,PlotTitle$,xCoord$,yCoord$,xaxisLabel$,yaxisLabel$, _
LogXaxis$,LogYaxis$,xMin$,xMax$,yMin$,yMax$,xTics$,yTics$,GnuPlotEXE$,LineStyle$,Annotation$)
DECLARE SUB TwoDplot2Curves(PlotFileName1$,PlotFileName2$,PlotTitle$,Annotation$,xCoord$,yCoord$,xaxisLabel$,yaxisLabel$, _
LogXaxis$,LogYaxis$,xMin$,xMax$,yMin$,yMax$,xTics$,yTics$,GnuPlotEXE$,LineStyle)
DECLARE SUB TwoDplot3Curves(NumCurves%,PlotFileName1$,PlotFileName2$,PlotFileName3$,PlotTitle$,Annotation$,xCoord$,yCoord$,xaxisLabel$,yaxisLabel$, _
LogXaxis$,LogYaxis$,xMin$,xMax$,yMin$,yMax$,xTics$,yTics$,GnuPlotEXE$)
DECLARE SUB CreateGnuPlotINIfile(PlotWindowULC_X%,PlotWindowULC_Y%,PlotWindowWidth$,PlotWindowHeight%)
DECLARE SUB Delay(NumSecs)
DECLARE SUB MathematicalConstants
DECLARE SUB AlphabetAndDigits

```

```

DECLARE SUB SpecialSymbols
DECLARE SUB EMconstants
DECLARE SUB ConversionFactors
DECLARE SUB ShowConstants

DECLARE SUB
GetNECdata(NECOutputFile$, NumFreqs%, NumRadPattAngles%, Zo, FrequencyMHZ(), RadEfficiencyPCT(), MaxGainDBI(), MinGainDBI(), RinOhms(), XinOhms(), VSWR(), ForwardGainDBI(), FileStatus$, FileID$)

DECLARE SUB
GetYagiNECdata(NECOutputFile$, NumFreqs%, NumRadPattAngles%, Zo, FrequencyMHZ(), RadEfficiencyPCT(), MaxGainDBI(), MinGainDBI(), RinOhms(), XinOhms(), VSWR(), ForwardGainDBI(), RearGainDBI(), FileStatus$, FileID$)

DECLARE SUB ComplexMultiply(ReA, ImA, ReB, ImB, ReC, ImC)
DECLARE SUB ComplexDivide(ReA, ImA, ReB, ImB, ReC, ImC)

'----- FUNCTION DECLARATIONS -----
DECLARE FUNCTION DecimalToVanDerCorputBaseN(N&&, Nbase%)
DECLARE FUNCTION Probeweight2(Nd%, Np%, R(), M(), p%, j&)
DECLARE FUNCTION Probeweight(Nd%, R(), p%, j&) 'computes a 'weighting factor' based on probe's position (greater weight if closer to decision space boundary)
DECLARE FUNCTION SlopeRatio(M(), Np%, StepNumber&)
DECLARE CALLBACK FUNCTION DlgProc
DECLARE FUNCTION HasFITNESSsaturated$(Nsteps&, j&, Np%, Nd%, M(), R(), DiagLength)
DECLARE FUNCTION HasDAVGsaturated$(Nsteps&, j&, Np%, Nd%, M(), R(), DiagLength)
DECLARE FUNCTION OscillationInDavg$(j&, Np%, Nd%, M(), R(), DiagLength)
DECLARE FUNCTION DavgThisStep(j&, Np%, Nd%, M(), R(), DiagLength)
DECLARE FUNCTION NoSpaces$(X, NumDigit%)
DECLARE FUNCTION FormatFP$(X, Ndigit%)
DECLARE FUNCTION FormatInteger$(M%)
DECLARE FUNCTION TerminateNowForSaturation$(j&, Nd%, Np%, Nt&, G, DeltaT, Alpha, Beta, R(), A(), M())
DECLARE FUNCTION MagVector(V(), N%)
DECLARE FUNCTION UniformDeviate(u&&)
DECLARE FUNCTION RandomNum(a, b)
DECLARE FUNCTION GaussianDeviate(Mu, Sigma)
DECLARE FUNCTION UnitStep(X)
DECLARE FUNCTION Fibonacci&&(N%)
DECLARE FUNCTION ObjectiveFunction(R(), Nd%, p%, j&, FunctionName$)
DECLARE FUNCTION UnitStep(X)
DECLARE FUNCTION FP2String2$(X!)
DECLARE FUNCTION FP2String$(X)
DECLARE FUNCTION Int2String$(X%)
DECLARE FUNCTION StandingWaveRatio(Zo, ReZ, ImZ)

'=====
'----- MAIN PROGRAM -----
FUNCTION PBMAIN () AS LONG
' ----- CFO Parameters -----
LOCAL Nd%, Np%, Nt&
LOCAL G, DeltaT, Alpha, Beta, Freq AS EXT
LOCAL PlaceInitialProbes$, InitialAcceleration$, RepositionFactors
LOCAL R(), A(), M(), Rbest(), Mbest() AS EXT 'position, acceleration & fitness matrices
LOCAL FunctionName$ 'name of objective function
' ----- Miscellaneous Setup Parameters -----
LOCAL N%, O%, P%, i%, YN&, Neval&&, NevalTotal&&, BestNpNd%, NumTrajectories%, MaxIDprobesPlotted%, LastStepBestRun&, Pass%
LOCAL A$, RunCFO$, CFOversion$, NECfileError$, RunStart$, RunStop$
LOCAL BestGamma, BestFitnessThisRun, BestFitnessOverall, StartTime, StopTime, OptimumFitness AS EXT
LOCAL BestProbeNum%, BestTimeStep&, BestProbeNumberOverall%, BestTimeStepOverall&, StatusWindowHandle???
' ----- Global Constants -----
REDIM Aij(1 TO 2, 1 TO 25) '(GLOBAL array for Shekel's Foxholes function)
CALL FillArrayAij
CALL MathematicalConstants 'NOTE: calling order is important!!
CALL AlphabetAndDigits 'NOTE: GLOBAL VARIABLE RUNID$ IS SET HERE
CALL SpecialSymbols
CALL EMconstants
CALL ConversionFactors ' : CALL ShowConstants 'to verify constants have been set
BOWTIEsecsPerRun = 3##
' ----- General Setup -----
CFOversion$ = "CFO Ver. 06-25-2011"
RANDOMIZE TIMER 'seed random number generator with program start time
DESKTOP GET SIZE TO ScreenWidth&, ScreenHeight& 'get screen size (global variables)
IF DIR$( "wgnuplot.exe" ) = "" THEN
MSGBOX("WARNING! wgnuplot.exe' not found. Run terminated.") : EXIT FUNCTION

```



```

END IF
IF DIR$("Fitness") <> "" THEN KILL "Fitness"
IF DIR$("davg") <> "" THEN KILL "davg"
IF DIR$("Best Probe") <> "" THEN KILL "Best Probe"
' ----- CFO RUN PARAMETERS -----
CALL GetTestFunctionNumber(FunctionName$) : exit function 'DEBUG
CALL
GetFunctionRunParameters(FunctionName$,Nd%,Np%,Nt%,G,Delta,Alpha,Beta,Frep,R(O),A(O),M(O),DiagLength,PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$) 'NOTE: Parameters returned but not used in this version!!
REDIM R(1 TO Np%, 1 TO Nd%, 0 TO Nt%), A(1 TO Np%, 1 TO Nd%, 0 TO Nt%), M(1 TO Np%, 0 TO Nt%) 'position, acceleration & fitness matrices
REDIM Rbest(1 TO Np%, 1 TO Nd%, 0 TO Nt%), Mbest(1 TO Np%, 0 TO Nt%) 'overall best position & fitness matrices
' ----- PLOT 1D and 2D FUNCTIONS ON-SCREEN FOR VISUALIZATION -----
IF Nd% = 2 AND INSTR(FunctionName$, "PBM") > 0 THEN
CALL CheckNECFiles(NECFileError$)
IF NECFileError$ = "YES" THEN
EXIT FUNCTION
ELSE
MSGBOX("Begin computing plot of function "+FunctionName$+"? May take a while - be patient...")
END IF
END IF
SELECT CASE Nd%
CASE 1 : CALL Plot1dFunction(FunctionName$,R(O)) : REDIM R(1 TO Np%, 1 TO Nd%, 0 TO Nt%) 'erases coordinate data in R(O)used to plot function
CASE 2 : CALL Plot2dFunction(FunctionName$,R(O)) : REDIM R(1 TO Np%, 1 TO Nd%, 0 TO Nt%) 'ditto
END SELECT
' ----- RUN CFO -----
YN& = MSGBOX("RUN CFO ON FUNCTION " + FunctionName$ + "?" + CHR$(13) + CHR$(13) + "Get some coffee & sit back...", %MB_YESNO, "CONFIRM RUN") : IF YN& = %IDYES THEN RunCFO$ = "YES"
IF RunCFO$ = "YES" THEN
StartTime = TIMER : RunStart$ = "Started at "+TIME$+" , "+DATES
' ----- BOWTIE -----
IF FunctionName$ = "BOWTIE" THEN
N% = FREEFILE : OPEN "RunTime_BOWTIE.DAT" FOR OUTPUT AS #N% : PRINT #N%, RunStart$ : CLOSE #N%
IF DIR$("BOWTIE_CFO.CFG") = "" THEN
N% = FREEFILE
OPEN "BOWTIE_CFO.CFG" FOR OUTPUT AS #N%
PRINT #N%, "150" : PRINT #N%, "11" : PRINT #N%, "2" : PRINT #N%, "4" 'CFO parameters Nt&, NumGammas%, Min/MaxProbesPerDimension%,
respectively
CLOSE #N%
END IF
END IF
' ----- YAGI -----
IF FunctionName$ = "YAGI" THEN
N% = FREEFILE : OPEN "RunTime_YAGI.DAT" FOR OUTPUT AS #N% : PRINT #N%, RunStart$ : CLOSE #N%
IF DIR$("YAGI_CFO.CFG") = "" THEN
N% = FREEFILE
OPEN "YAGI_CFO.CFG" FOR OUTPUT AS #N%
PRINT #N%, "150" : PRINT #N%, "11" : PRINT #N%, "2" : PRINT #N%, "4" 'CFO parameters Nt&, NumGammas%, Min/MaxProbesPerDimension%,
respectively
CLOSE #N%
END IF
END IF
CALL
CFO(FunctionName$,Nd%,Np%,Nt%,R(O),A(O),M(O),DiagLength,BestFitnessOverall,BestNpNd%,BestGamma,Neval&&,Rbest(O),Mbest(O),BestProbeNumberOverall%,BestTimeStepOverall%&,LastStepBestRun&,Alpha,Beta)
StopTime = TIMER : RunStop$ = "Ended at "+TIME$+" , "+DATES
Np% = BestNpNd%*Nd%
' ----- Add Best Run Results to CFO Setup Parameter File -----
N% = FREEFILE
OPEN "CFO_"+RunID$+".PAR" FOR APPEND AS #N%
PRINT #N%, ""
PRINT #N%, "Best Run Data:"
PRINT #N%, "-----"
PRINT #N%, "Fitness" = "+STR$(ROUND(BestFitnessOverall,8))
PRINT #N%, "Np/Nd" = "+STR$(BestNpNd%)
PRINT #N%, "Nd" = "+STR$(Nd%)
PRINT #N%, "Np" = "+STR$(Np%)
PRINT #N%, "Gamma" = "+STR$(BestGamma)
PRINT #N%, "Probe # " = "+STR$(BestProbeNumberOverall%)
PRINT #N%, "Time Step" = "+STR$(BestTimeStepOverall%)
PRINT #N%, "Last Step" = "+STR$(LastStepBestRun&)
CLOSE #N%
CALL
PlotResults(FunctionName$,Nd%,Np%,BestFitnessOverall,BestNpNd%,BestGamma,Neval&&,Rbest(O),Mbest(O),BestProbeNumberOverall%,BestTimeStepOverall%&,LastStepBestRun&,Alpha,Beta)
' ----- BOWTIE -----
IF FunctionName$ = "BOWTIE" THEN
N% = FREEFILE
OPEN "RunTime_BOWTIE.DAT" FOR APPEND AS #N%
PRINT #N%, RunStop$
PRINT #N%, "Runtime" = "+STR$(ROUND((StopTime-StartTime)/3600#,2))+" hrs"
PRINT #N%, "Note: runtime will be incorrect if start/stop times transition midnight..."
PRINT #N%, "FunctionName$+" , Total Function Evaluations = "+STR$(Neval&&)
PRINT #N%, "Avg Time/Run" = "+STR$(ROUND((StopTime-StartTime)/Neval&&,6))
CLOSE #N%
IF DIR$("BestBOWTIE.NEC") <> "" THEN KILL "BestBOWTIE.NEC"
IF DIR$("BestBOWTIE.OUT") <> "" THEN KILL "BestBOWTIE.OUT"
OptimumFitness = BOWTIE(Rbest(O),Nd%,BestProbeNumberOverall%,BestTimeStepOverall%)
CALL ReplaceCommentCard("BOWTIE.NEC")
NAME "BOWTIE.NEC" AS "BestBOWTIE.NEC"
CALL ReplaceCommentCard("BOWTIE.OUT")
NAME "BOWTIE.OUT" AS "BestBOWTIE.OUT"
O% = FREEFILE
OPEN "BestBOWTIE.NEC" FOR APPEND AS #O%
PRINT #O%, "RLC-LOADED BOWTIE"

```

```

        PRINT #0%, "" : PRINT #0%, "OPTIMUM FITNESS = "+STR$(ROUND(OptimumFitness,3))+ " @ Fo = 299.8 MHz, "+DATE$+", "+TIMES$
        PRINT #0%, "" : PRINT #0%, USING$("Best Gamma: ##.### BestNp/Nd: ### Nt: ##### Neval: ##### LastStep:
#####", BestGamma, BestNpNd, Nt, Neval, LastStepBestRun)
        PRINT #0%, ""
        PRINT #0%, RunStart$
        PRINT #0%, RunStop$
        CLOSE #0%

        P% = FREEFILE
        OPEN "BestBOWTIE.OUT" FOR APPEND AS #P%
        PRINT #P%, "RLC-LOADED BOWTIE"
        PRINT #P%, "" : PRINT #P%, "OPTIMUM FITNESS = "+STR$(ROUND(OptimumFitness,3))+ " @ Fo = 299.8 MHz, "+DATE$+", "+TIMES$
        PRINT #P%, "" : PRINT #P%, USING$("Best Gamma: ##.### BestNp/Nd: ### Nt: ##### Neval: ##### LastStep:
#####", BestGamma, BestNpNd, Nt, Neval, LastStepBestRun)
        PRINT #P%, ""
        PRINT #P%, RunStart$
        PRINT #P%, RunStop$
        CLOSE #P%

        SHELL "Read_NEC_Output_File_BOWTIE.exe"
    END IF 'FunctionName$ = "BOWTIE"

    ----- YAGI ARRAY -----
    IF FunctionName$ = "YAGI" THEN

        N% = FREEFILE
        OPEN "Runtime_YAGI.DAT" FOR APPEND AS #N%
        PRINT #N%, RunStop$
        PRINT #N%, "Runtime = "+STR$(ROUND((StopTime-StartTime)/3600##,2))+ " hrs"
        PRINT #N%, " Note: runtime will be incorrect if start/stop times transition midnight..."
        PRINT #N%, FunctionName$+", Total Function Evaluations = "+STR$(Neval)&
        PRINT #N%, "Avg Time/Run = "+STR$(ROUND((StopTime-StartTime)/Neval&&,6))
        CLOSE #N%

        IF DIR$("BestYAGI.NEC") <> "" THEN KILL "BestYAGI.NEC"
        IF DIR$("BestYAGI.OUT") <> "" THEN KILL "BestYAGI.OUT"
        OptimumFitness = YAGI_ARRAY(Rbest(), Nd%, BestProbeNumberOverall%, BestTimeStepOverall%)
        CALL ReplaceCommentCard("YAGI.NEC")
        NAME "YAGI.NEC" AS "BestYAGI.NEC"
        CALL ReplaceCommentCard("YAGI.OUT")
        NAME "YAGI.OUT" AS "BestYAGI.OUT"

        O% = FREEFILE
        OPEN "BestYAGI.NEC" FOR APPEND AS #O%
        PRINT #O%, "YAGI ARRAY"
        PRINT #O%, "" : PRINT #O%, "OPTIMUM FITNESS = "+STR$(ROUND(OptimumFitness,3))+ " @ Fo = 299.8 MHz, "+DATE$+", "+TIMES$
        PRINT #O%, "" : PRINT #O%, USING$("Best Gamma: ##.### BestNp/Nd: ### Nt: ##### Neval: ##### LastStep:
#####", BestGamma, BestNpNd, Nt, Neval, LastStepBestRun)
        PRINT #O%, ""
        PRINT #O%, RunStart$
        PRINT #O%, RunStop$
        CLOSE #O%

        P% = FREEFILE
        OPEN "BestYAGI.OUT" FOR APPEND AS #P%
        PRINT #P%, "YAGI ARRAY"
        PRINT #P%, "" : PRINT #P%, "OPTIMUM FITNESS = "+STR$(ROUND(OptimumFitness,3))+ " @ Fo = 299.8 MHz, "+DATE$+", "+TIMES$
        PRINT #P%, "" : PRINT #P%, USING$("Best Gamma: ##.### BestNp/Nd: ### Nt: ##### Neval: ##### LastStep:
#####", BestGamma, BestNpNd, Nt, Neval, LastStepBestRun)
        PRINT #P%, ""
        PRINT #P%, RunStart$
        PRINT #P%, RunStop$
        CLOSE #P%

        SHELL "Read_NEC_Output_File_YAGI_ARRAY.exe"

    END IF 'FunctionName$ = "YAGI"

    MSGBOX(FunctionName$+CHR$(13)+Total Function Evaluations = "+STR$(Neval&&)+CHR$(13)+Runtime = "+STR$(ROUND((StopTime-StartTime)/3600##,2))+
    " hrs, Avg Time/Run = "+STR$(ROUND((StopTime-StartTime)/Neval&&,6))

    NAME "Fitness" AS "Fitness"+RunID$+".DAT" : NAME "Davg" AS "Davg"+RunID$+".DAT" : NAME "Best Probe" AS "BestProbe"+RunID$+".DAT" 'append Run ID and
'DAT' to data file names to identify file type

    ----- Cleanup Temp Files -----
    IF DIR$("cmd2d.gp") <> "" THEN KILL "cmd2d.gp"
    IF DIR$("cmd3d.gp") <> "" THEN KILL "cmd3d.gp"
    IF DIR$("NECtemp") <> "" THEN KILL "NECtemp"

    END IF 'RunCFO$ = "YES"

ExitPBMAIN:
END FUNCTION 'PBMAIN()

===== CFO SUBROUTINE =====
SUB
CFO(FunctionName$, Nd%, Nt, R(), A(), M(), DiagLength, BestFitnessOverall, BestNpNd%, BestGamma, Neval&&, Rbest(), Mbest(), BestProbeNumberOverall%, BestTimeStepOverall
&, LastStepBestRun&, Alpha, Beta)
LOCAL p%, i%, j% 'Standard Indices: Probe #, Coordinate #, Time Step #
LOCAL Np% 'Number of Probes
LOCAL MinProbesPerDimension%, MaxProbesPerDimension% 'Min/Max # probes per dimension (even #'s)
LOCAL k%, L% 'Dummy summation indices
LOCAL M% 'file number
LOCAL NumProbesPerDimension%, GammaNumber%, NumGammas% 'Probes/dimension on each probe line; gamm point #; # gamma points
LOCAL SumSQ, Denom, Numerator, Gamma, Freq, DeltaFreq, FreqInit, MinFrep AS EXT
LOCAL BestProbeNumber%, BestTimeStep%, LastStep%, BestProbeNumberThisRun%, BestTimeStepThisRun&
LOCAL BestFitness, BestFitnessThisRun, eta AS EXT
LOCAL FitnessSaturation$
'----- NOTE: THIS IS A 'PARAMETER FREE' CFO IMPLEMENTATION. SEE THE ICIC2010 REFERENCE ABOVE FOR DETAILS. -----
'----- Initial Parameter Values -----
NumGammas% = 3 '11 'default value for functions other than BOWTIE
Alpha = 1## : Beta = 1## 'CFO EXPONENTS Alpha & Beta
Nt & = 1000 'set to a large value expecting early termination
IF FunctionName$ = "F7" THEN Nt & = 100 'to reduce runtime because this function contains random noise
Neval&& = 0
FrepInit = 0.5##

```

```

DeltaFrep = 0.1##
MinFrep = 0.05##
SELECT CASE Nd% 'set Np%/Nd% based on Nd% to avoid excessive runtimes
CASE 1 TO 6 : MinProbesPerDimension% = 2 : MaxProbesPerDimension% = 14
CASE 7 TO 10 : MinProbesPerDimension% = 2 : MaxProbesPerDimension% = 12
CASE 11 TO 15 : MinProbesPerDimension% = 2 : MaxProbesPerDimension% = 10
CASE 16 TO 20 : MinProbesPerDimension% = 2 : MaxProbesPerDimension% = 8
CASE 21 TO 30 : MinProbesPerDimension% = 2 : MaxProbesPerDimension% = 6
CASE ELSE : MinProbesPerDimension% = 2 : MaxProbesPerDimension% = 4
END SELECT

'----- BOWTIE -----
IF FunctionName$ = "BOWTIE" THEN
M% = FREEFILE
OPEN "BOWTIE_CFO.CFG" FOR INPUT AS #M%
INPUT #M%, Nt& : INPUT #M%, NumGammas% : INPUT #M%, MinProbesPerDimension% : INPUT #M%, MaxProbesPerDimension%
CLOSE #M%
IF Nt& < 5 OR Nt& > 500 THEN Nt& = 150
IF NumGammas% < 2 OR NumGammas% > 31 THEN NumGammas% = 11
IF MinProbesPerDimension% < 2 OR MinProbesPerDimension% > 10 THEN MinProbesPerDimension% = 2
IF MaxProbesPerDimension% < 2 OR MaxProbesPerDimension% > 10 THEN MaxProbesPerDimension% = 6
IF MinProbesPerDimension% > MinProbesPerDimension% THEN SWAP MinProbesPerDimension%,MinProbesPerDimension%
END IF

'----- YAGI ARRAY -----
IF FunctionName$ = "YAGI" THEN
M% = FREEFILE
OPEN "YAGI_CFO.CFG" FOR INPUT AS #M%
INPUT #M%, Nt& : INPUT #M%, NumGammas% : INPUT #M%, MinProbesPerDimension% : INPUT #M%, MaxProbesPerDimension%
CLOSE #M%
IF Nt& < 5 OR Nt& > 500 THEN Nt& = 150
IF NumGammas% < 2 OR NumGammas% > 31 THEN NumGammas% = 11
IF MinProbesPerDimension% < 2 OR MinProbesPerDimension% > 10 THEN MinProbesPerDimension% = 2
IF MaxProbesPerDimension% < 2 OR MaxProbesPerDimension% > 10 THEN MaxProbesPerDimension% = 6
IF MinProbesPerDimension% > MinProbesPerDimension% THEN SWAP MinProbesPerDimension%,MinProbesPerDimension%
END IF

'-----
LastStep& = Nt&

'IF FunctionName$ = "BOWTIE" THEN
MaxProbesPerDimension% = 6 'to reduce runtime for LOADED BOWTIE
MSGBOX("Approximate runtime: "+STR$(ROUND(BOWTIEsecsPerRun*NumGammas*Nd%*MaxProbesPerDimension%*Nt&/40##,1))+ " minutes")
'END IF

'----- Save Setup Parameters for This Run -----
M% = FREEFILE
OPEN "CFO_"+RunID$+".PAR" FOR OUTPUT AS #M%
PRINT #M%,"CFO RUN PARAMETERS, Run ID: "+RunID$
PRINT #M%,"-----"
PRINT #M%,"Alpha = "+STR$(Alpha)
PRINT #M%,"Beta = "+STR$(Beta)
PRINT #M%,"Nt = "+STR$(Nt&)
PRINT #M%,"Initial Frep = "+STR$(FrepInit)
PRINT #M%,"Delta Frep = "+STR$(DeltaFrep)
PRINT #M%,"Min Frep = "+STR$(MinFrep)
PRINT #M%,"# Gammas = "+STR$(NumGammas%)
PRINT #M%,"Nt = "+STR$(Nt&)
PRINT #M%,"Min Probes/Dim = "+STR$(MinProbesPerDimension%)
PRINT #M%,"Max Probes/Dim = "+STR$(MaxProbesPerDimension%)
CLOSE #M%

'----- Np/Nd LOOP -----
BestFitnessOverall = -1E4200 'very large negative number...
FOR NumProbesPerDimension% = MinProbesPerDimension% TO MaxProbesPerDimension% STEP 2
'FOR NumProbesPerDimension% = 4 TO MaxProbesPerDimension% STEP 2 'original code
Np% = NumProbesPerDimension%*Nd%
'----- GAMMA LOOP -----
FOR GammaNumber% = 1 TO NumGammas%
Gamma = (GammaNumber%-1)/(NumGammas%-1)
REDIM R(1 TO Np%, 1 TO Nd%, 0 TO Nt&), A(1 TO Np%, 1 TO Nd%, 0 TO Nt&), M(1 TO Np%, 0 TO Nt&) 're-initializes Position Vector/Acceleration/Fitness matrices to zero
'STEP (A1) ----- Compute Initial Probe Distribution (Step 0)-----
CALL IPD(Np%,Nd%,Nt&,R(),Gamma) 'Probe Line IPD intersecting on diagonal at a point determined by Gamma
'STEP (A2) ----- Compute Initial Fitness Matrix (Step 0) -----
FOR p% = 1 TO Np% : M(p%,0) = ObjectiveFunction(R(),Nd%,p%,0,FunctionName$) : INCR Neval&& : NEXT p%
'STEP (A3) ----- Set Initial Probe Accelerations to ZERO (Step 0)-----
FOR p% = 1 TO Np% : FOR i% = 1 TO Nd% : A(p%,i%,0) = 0## : NEXT i% : NEXT p%
'STEP (A4) ----- Initialize Frep -----
Frep = FrepInit '0.5##

'===== LOOP ON TIME STEPS STARTING AT STEP #1 =====
BestFitnessThisRun = M(1,0)
FOR j& = 1 TO Nt&
'STEP (B) ----- Compute Probe Position Vectors for this Time Step -----
FOR p% = 1 TO Np% : FOR i% = 1 TO Nd% : R(p%,i%,j&) = R(p%,i%,j&-1) + A(p%,i%,j&-1) : NEXT i% : NEXT p% 'note: factor of 1/2 combined with G=2 to produce unity coefficient
'STEP (C) ----- Retrieve Errant Probes -----
CALL RetrieveErrantProbes(Np%,Nd%,j&,R(),Frep)
CALL RetrieveErrantProbes2(Np%,Nd%,j&,R(),A(),Frep) 'added 04-01-10
'STEP (D) ----- Compute Fitness Matrix for Current Probe Distribution -----
FOR p% = 1 TO Np% : M(p%,j&) = ObjectiveFunction(R(),Nd%,p%,j&,FunctionName$) : INCR Neval&& : NEXT p%
'STEP (E) ----- Compute Accelerations Based on Current Probe Distribution & Fitnesses -----
FOR p% = 1 TO Np%

```

```

FOR i% = 1 TO Nd%
  A(p%,i%,j&) = 0
  FOR k% = 1 TO Np%
    IF k% <> p% THEN
      SumSQ = 0## : FOR L% = 1 TO Nd% : SumSQ = SumSQ + (R(k%,L%,j&)-R(p%,L%,j&))^2 : NEXT L% 'dummy index
      IF SumSQ <> 0## THEN 'to avoid zero denominator (added 03-20-10) [NOTE THAT POWER BASIC DOES NOT FAULT ON DIVIDE-BY-ZERO...]
        Denom = SQR(SumSQ) : Numerator = UnitStep((M(k%,j&)-M(p%,j&)))*(M(k%,j&)-M(p%,j&))
        A(p%,i%,j&) = A(p%,i%,j&) + (R(k%,i%,j&)-R(p%,i%,j&))*Numerator^Alpha/Denom^Beta 'ORIGINAL VERSION WITH VARIABLE Alpha & Beta
      END IF 'added 03-20-10
    END IF
  NEXT k% 'dummy index
NEXT i% 'coord (dimension) #
NEXT p% 'probe #
'----- Get Best Fitness & Corresponding Probe # and Time Step -----
CALL GetBestFitness(M()),Np%,j&,BestFitness,BestProbeNumber%,BestTimeStep&)
IF BestFitness >= BestFitnessThisRun THEN
  BestFitnessThisRun = BestFitness : BestProbeNumberThisRun% = BestProbeNumber% : BestTimeStepThisRun% = BestTimeStep&
END IF
'---- Increment Frep ----
Frep = Frep + DeltaFrep
IF Frep > 1## THEN Frep = MinFrep 'keep Frep in range [0.05,1]
'----- Starting at Step #20 Shrink Decision Space Around Best Probe Every 20th Step -----
' IF j& MOD 10 = 0 AND j& >= 20 THEN
' IF j& MOD 20 = 0 AND j& >= 20 THEN
  FOR i% = 1 TO Nd% : XiMin(i%) = XiMin(i%)+(R(BestProbeNumber%,i%,BestTimeStep&)-XiMin(i%))/2## : XiMax(i%) = XiMax(i%)-(XiMax(i%)-
R(BestProbeNumber%,i%,BestTimeStep&))/2## : NEXT i% 'shrink DS by 0.5
  CALL RetrieveErrantProbes(Np%,Nd%,j&,R()),Frep) 'TO RETRIEVE PROBES LYING OUTSIDE SHRUNKEN DS 'ADDED 02-07-2010
  CALL RetrieveErrantprobes2(Np%,Nd%,j&,R()),AC(),Frep) 'added 04-01-10
END IF
'STEP (F) ----- Check for Early Run Termination -----
IF HasFITNESSsaturated$(25,j&,Np%,Nd%,M()),R(),DiagLength) = "YES" THEN
  LastStep& = j&
  EXIT FOR
END IF
NEXT j& 'END TIME STEP LOOP
'----- Best Overall Fitness & Corresponding Parameters -----
IF BestFitnessThisRun >= BestFitnessOverall THEN
  BestFitnessOverall = BestFitnessThisRun : BestProbeNumberOverall% = BestProbeNumberThisRun% : BestTimeStepOverall& = BestTimeStepThisRun&
  BestNpNd% = NumProbesPerDimension% : BestGamma = Gamma : LastStepBestRun& = LastStep&
  CALL CopyBestMatrices(Np%,Nd%,Nt&,R()),M(),Rbest(),Mbest())
END IF
'STEP (G) ----- Reset Decision Space Boundaries to Initial Values -----
CALL ResetDecisionSpaceBoundaries(Nd%)
NEXT GammaNumber% 'END GAMMA LOOP
NEXT NumProbesPerDimension% 'END Np/Nd LOOP
END SUB 'CFO()
'=====
SUB IPD_Halton(Np%,Nd%,Nt&,R(),Gamma) 'added 06-29-2011
LOCAL DeltaXi, DelX1, DelX2, Di AS EXT
LOCAL NumProbesPerDimension%, p%, i%, k%, NumX1points%, NumX2points%, x1pointNum%, x2pointNum%
  IF Nd% > 1 THEN
    NumProbesPerDimension% = Np%*Nd% 'even #
  ELSE
    NumProbesPerDimension% = Np%
  END IF
  FOR i% = 1 TO Nd%
    FOR p% = 1 TO Np%
      R(p%,i%,0) = XiMin(i%) + Gamma*(XiMax(i%)-XiMin(i%))
    NEXT Np%
  NEXT i%
  FOR i% = 1 TO Nd% 'place probes probe line-by-probe line (i% is dimension number)
    DeltaXi = (XiMax(i%)-XiMin(i%))/(NumProbesPerDimension%-1)
    FOR k% = 1 TO NumProbesPerDimension%
      p% = k% + NumProbesPerDimension%*(i%-1) 'probe #
      R(p%,i%,0) = XiMin(i%) + (k%-1)*DeltaXi
    NEXT k%
  NEXT i%

```

```

NEXT k%
NEXT i%
END SUB 'IPD_Halton()
'-----
FUNCTION DecimalToVanDerCorputBaseN(N&&,Nbase%)
'Returns the decimal value of the VDC base Nbase% 'radical inverse function' to create a Low Discrepancy sequence of decimal values.
'Maps integer argument into a quasirandom real number on the interval [0,1].
'Refs: (1) "Improved Particle Swarm Optimization with Low-Discrepancy Sequences,"
Pant, Thangaraj, Grosan & Abraham, 2008 IEEE Congress on Evolutionary Computation (CEC2008), p. 3011.
' (2) "Quasirandom Ramblings," Computing Science column in American Scientist Magazine, July-August 2011, p. 282.
(www.american.scientist.org)
'CHECK VALUES FOR BASE 2
'-----
Integer(N&&) Base 2 Representation Digits Reversed VDC Decimal Value
'-----
' 0 0 0 0.0
' 2 10 01 0.25
' 3 11 11 0.75
' 4 100 001 0.125
' 6 110 011 0.375
' 7 111 111 0.875
' 15 1111 1111 0.9375
' 120 1111000 0001111 0.1171875
' 121 1111001 1001111 0.6171875
' 532 1000010100 0010100001 0.1572265625
'CHECK VALUES FOR BASE 3
'-----
Integer(N&&) Base 3 Representation Digits Reversed VDC Decimal Value
'-----
' 0 0 0 0.0
' 2 2 2 0.666...
' 3 10 01 0.111...
' 7 21 12 0.555...
' 120 11110 01111 0.164609053497942
' 532 201201 102102 0.422496570544719
'CHECK VALUES FOR BASE 5
'-----
Integer(N&&) Base 5 Representation Digits Reversed VDC Decimal Value
'-----
' 0 0 0 0.0
' 1 1 1 0.2
' 2 2 2 0.4
' 3 3 3 0.6
' 4 4 4 0.8
' 5 10 01 0.04
' 7 12 21 0.44
' 17 32 23 0.52
' 121 441 144 0.392
' 532 4112 2114 0.4544
LOCAL S AS EXT, R AS EXT, I&&, D&&
S = 0##
IF N&& > 2^63-2 THEN
MSGBOX("WARNING! VDC arg > 2^63-2. Zero returned.") : GOTO ExitVDC
END IF
I&& = N&& : R = 1##/Nbase%
DO WHILE I&& <> 0 : D&& = I&& MOD Nbase% : S = S + D&&^R : I&& = (I&&-D&&)/Nbase% : R = R/Nbase% : LOOP
ExitVDC:
DecimalToVanDerCorputBaseN = S
END FUNCTION
'-----
SUB SieveOfEratosthenes(N&&,Primes&&(),NumPrimes&&)
'Returns primes between 2 and N&& and their number.
'NOTE: There are 303 primes between 2 and 2000. Accuracy of this routine has been checked against table of the first 1000 primes (# primes up to N&&=7919).
'Ref: Caldwell, C., "The Prime Pages," Univ. Tennessee at Martin, http://primes.utm.edu
LOCAL i&&, iStart&&, p&&, j&&, TempArray&&()
REDIM TempArray&&(1 TO N&&)
TempArray&&(1) = 0 : FOR i&& = 2 TO N&& : TempArray&&(i&&) = 1 : NEXT i&&
p&& = 2 : WHILE p&&^2 = N&& : j&& = p&&^2 : WHILE j&& = N&& : TempArray&&(j&&) = 0 : j&& = j&& + p&& : WEND : p&& = p&& + 1 : WEND 'inserts 0 or 1
depending on whether or not # is a prime
NumPrimes&& = 0
FOR i&& = 1 TO N&& 'converts the 1's into their corresponding prime numbers & retrieves # primes between 2 and N&&
IF TempArray&&(i&&) = 1 THEN INCR NumPrimes&&
TempArray&&(i&&) = i&&^TempArray&&(i&&)
NEXT i&&
REDIM Primes&&(1 TO NumPrimes&&)
iStart&& = 1
FOR j&& = 1 TO NumPrimes&&
FOR i&& = iStart&& TO N&&
IF TempArray&&(i&&) <> 0 THEN
Primes&&(j&&) = TempArray&&(i&&) : iStart&& = i&&+1 : EXIT FOR
END IF
NEXT i&&
NEXT j&&
END SUB 'SieveOfEratosthenes()
'-----
SUB IPD(Np%,Nd%,Nt&,R(),Gamma)
LOCAL DeltaXi, De1X1, De1X2, Di AS EXT
LOCAL NumProbesPerDimension%, p%, i%, k%, NumX1points%, NumX2points%, x1pointNum%, x2pointNum%
IF Nd% > 1 THEN
NumProbesPerDimension% = Np%/Nd% 'even #

```

```

ELSE
    NumProbesPerDimension% = Np%
END IF
FOR i% = 1 TO Nd%
    FOR p% = 1 TO Np%
        R(p%,i%,0) = XiMin(i%) + Gamma*(XiMax(i%)-XiMin(i%))
    NEXT Np%
NEXT i%
FOR i% = 1 TO Nd% 'place probes probe line-by-probe line (i% is dimension number)
    DeltaXi = (XiMax(i%)-XiMin(i%))/(NumProbesPerDimension%-1)
    FOR k% = 1 TO NumProbesPerDimension%
        p% = k% + NumProbesPerDimension%*(i%-1) 'probe #
        R(p%,i%,0) = XiMin(i%) + (k%-1)*DeltaXi
    NEXT k%
NEXT i%
END SUB 'IPD()
'-----
FUNCTION HasFITNESSsaturated$(Nsteps&,j&,Np%,Nd%,M(),R(),DiagLength)
LOCAL A$, B$
LOCAL k&, p%
LOCAL BestFitness, SumOfBestFitnesses, BestFitnessStepJ, FitnessSatTOL AS EXT
A$ = "NO" : B$ = "j="+STR$(j&)+CHR$(13)
FitnessSatTOL = 0.00001## 'tolerance for FITNESS saturation
IF j& < Nsteps& + 10 THEN GOTO ExitHasFITNESSsaturated 'execute at least 10 steps after averaging interval before performing this check
SumOfBestFitnesses = 0##
FOR k& = j&-Nsteps&+1 TO j& 'GET BEST FITNESSES STEP-BY-STEP FOR Nsteps& INCLUDING THIS STEP j& AND COMPUTE AVERAGE VALUE.
    BestFitness = M(k&,1) 'ORIG CODE 03-23-2010: THIS IS A MISTAKE!
    BestFitness = -1E4200 'THIS LINE CORRECTED 03-23-2010 PER DISCUSSION WITH ROB GREEN.
    'INITIALIZE BEST FITNESS AT k&-th TIME STEP TO AN EXTREMELY LARGE NEGATIVE NUMBER.
    FOR p% = 1 TO Np% 'PROBE-BY-PROBE GET MAXIMUM FITNESS
        IF M(p%,k&) >= BestFitness THEN BestFitness = M(p%,k&)
    NEXT p%
    IF k& = j& THEN BestFitnessStepJ = BestFitness 'IF AT THE END OF AVERAGING INTERVAL, SAVE BEST FITNESS FOR CURRENT TIME STEP j&
    SumOfBestFitnesses = SumOfBestFitnesses + BestFitness
    B$ = B$ + "k="+STR$(k&)+" BestFit="+STR$(BestFitness)+" SumFit="+STR$(SumOfBestFitnesses)+CHR$(13)
NEXT k&
IF ABS(SumOfBestFitnesses/Nsteps&-BestFitnessStepJ) <= FitnessSatTOL THEN A$ = "YES" 'saturation if (avg value - last value) are within TOL
ExitHasFITNESSsaturated:
    HasFITNESSsaturated$ = A$
END FUNCTION 'HasFITNESSsaturated$()
'-----
SUB RetrieveErrantprobes2(Np%,Nd%,j&,R(),A(),Frep) 'added 04-01-10
LOCAL ErrantProbe$
LOCAL p%, i%, k%
LOCAL Xi k, dMax, Eta(), EtaStar, SumSQ, MagAj1 AS EXT
REDIM Eta(1 TO Nd%, 1 TO 2) 'Eta(i%,k%)
FOR p% = 1 TO Np%
    ErrantProbe$ = "NO" 'presume each probe is inside DS
    FOR i% = 1 TO Nd% 'check to see if probe p lies outside DS (any coordinate exceeding a boundary)
        IF (R(p%,i%,j&) > XiMax(i%) OR R(p%,i%,j&) < XiMin(i%)) AND A(p%,i%,j&-1) <> 0## THEN 'probe lies outside DS
            ErrantProbe$ = "YES" : EXIT FOR
        END IF
    NEXT i%
    IF ErrantProbe$ = "YES" THEN 'reposition probe p inside DS with acceleration direction preserved
        FOR i% = 1 TO Nd% 'compute array of Eta values
            FOR k% = 1 TO 2
                SELECT CASE k%
                    CASE 1 : Xi k = XiMin(i%)
                    CASE 2 : Xi k = XiMax(i%)
                END SELECT
                Eta(i%,k%) = (Xi k - R(p%,i%,j&-1))/A(p%,i%,j&-1)
            NEXT k%
        NEXT i%
        EtaStar = 1E4200 'very large positive number
        FOR i% = 1 TO Nd% 'get min Eta value > 0
            FOR k% = 1 TO 2
                IF Eta(i%,k%) <= EtaStar AND Eta(i%,k%) >= 0## THEN EtaStar = Eta(i%,k%)
            NEXT k%
        NEXT i%
    END IF
NEXT p%

```

```

        NEXT k%
    NEXT i%
    SumSQ = 0## : FOR i% = 1 TO Nd% : SumSQ = SumSQ + A(p%,i%,j&-1)^2 : NEXT i% : MagAj1 = SQR(SumSQ) 'magnitude of acceleration vector A(probe #p)
at step j&-1
    dMax = EtaStar*MagAj1 'distance to nearest boundary plane from position of probe p% at step j&-1
    FOR i% = 1 TO Nd% 'change probe p's i-th coordinate in proportion to the ratio of position vector lengths at steps j& and j&-1
        R(p%,i%,j&) = R(p%,i%,j&-1) + Frep*dMax*A(p%,i%,j&-1)/MagAj1 'preserves acceleration directional information by scaling dMax by Frep, which
is arbitrary but precisely known
    NEXT i%
    END IF 'ErrantProbe$ = "YES"
    NEXT p%
END SUB 'Retrieveerrantprobes2()
'-----
SUB RetrieveErrantProbes(Np%,Nd%,j&,R(),Frep)
LOCAL p%, i%
FOR p% = 1 TO Np%
    FOR i% = 1 TO Nd%
        IF R(p%,i%,j&) < XiMin(i%) THEN R(p%,i%,j&) = MAX(XiMin(i%) + Frep*(R(p%,i%,j&-1)-XiMin(i%)),XiMin(i%)) 'CHANGED 02-07-10
        IF R(p%,i%,j&) > XiMax(i%) THEN R(p%,i%,j&) = MIN(XiMax(i%) - Frep*(XiMax(i%)-R(p%,i%,j&-1)),XiMax(i%))
    NEXT i%
NEXT p%
END SUB 'RetrieveErrantProbes()
'-----
SUB ResetDecisionSpaceBoundaries(Nd%)
LOCAL i%
FOR i% = 1 TO Nd% : XiMin(i%) = StartingXiMin(i%) : XiMax(i%) = StartingXiMax(i%) : NEXT i%
END SUB
'-----
SUB CopyBestMatrices(Np%,Nd%,Nt&,R(),M(),Rbest(),Mbest())
LOCAL p%, i%, j&
REDIM Rbest(1 TO Np%, 1 TO Nd%, 0 TO Nt&), Mbest(1 TO Np%, 0 TO Nt&) 're-initializes Best Position Vector/Fitness matrices to zero
FOR p% = 1 TO Np%
    FOR i% = 1 TO Nd%
        FOR j& = 0 TO Nt&
            Rbest(p%,i%,j&) = R(p%,i%,j&) : Mbest(p%,j&) = M(p%,j&)
        NEXT j&
    NEXT i%
NEXT p%
END SUB
'-----
'FORGET THIS IDEA !!!!
FUNCTION Probeweight(Nd%,R(),p%,j&) 'computes a 'weighting factor' based on probe's position (greater weight if closer to decision space boundary)
LOCAL MinDistCoordinate%, i% 'Dimension number. Remember, XiMin(), XiMax() & DiagLength are GLOBAL.
LOCAL MinDistance, dStar, MaxWeight AS EXT
MinDistance = DiagLength 'largest dimension of decision space
FOR i% = 1 TO Nd% 'compute distance to closest boundary
    IF ABS(R(p%,i%,j&)-XiMin(i%)) =< MinDistance THEN
        MinDistance = ABS(R(p%,i%,j&)-XiMin(i%)) : MinDistCoordinate% = i%
    END IF
    IF ABS(XiMax(i%)-R(p%,i%,j&)) =< MinDistance THEN
        MinDistance = ABS(XiMax(i%)-R(p%,i%,j&)) : MinDistCoordinate% = i%
    END IF
NEXT i%
dStar = MinDistance/(XiMax(MinDistCoordinate%)-XiMin(MinDistCoordinate%)) 'normalized minimum distance, [0-1]
MaxWeight = 2##
' Probeweight = 1## + 2##*MaxWeight*abs(dStar-0.5##)
Probeweight = 1## + 4##*MaxWeight*(dStar-0.5##)^2
END FUNCTION 'Probeweight
'-----
'FORGET THIS IDEA !!!!
FUNCTION Probeweight2(Nd%,Np%,R(),M(),p%,j&) 'computes a 'weighting factor' based on probe's position (greater weight if closer to decision space boundary)
LOCAL MinDistCoordinate%, ProbeNum%, BestProbeThisStep%, i% 'Dimension number. Remember, XiMin(), XiMax() & DiagLength are GLOBAL.
LOCAL Distance, SumSQ, dStar, MaxWeight, BestFitnessThisStep AS EXT
BestFitnessThisStep = M(1,j&)
FOR ProbeNum% = 1 TO Np% 'get number of best probe this step

```



```

        IF M(ProbeNum%,j&) >= BestFitnessThisStep THEN
            BestFitnessThisStep = M(ProbeNum%,j&) : BestProbThisStep% = ProbeNum%
        END IF
    NEXT ProbeNum%
    SumSQ = 0##
    FOR i% = 1 TO Nd% 'compute distance from probe #p% to the best probe this step
        SumSQ = (R(p%,i%,j&) - R(BestProbeThisStep%,i%,j&))^2
    NEXT i%
    Distance = SQR(SumSQ)
    dStar = Distance/DiagLength 'range [0-1]
' ----- Compute weight Factor -----
    MaxWeight = 0##
'   Probeweight2 = 1## + 2##*MaxWeight*abs(dstar-0.5##)
'   Probeweight2 = 1## + 4##*MaxWeight*(dstar-0.5##)^2
END FUNCTION 'Probeweight2
'-----
FUNCTION SlopeRatio(M(),Np%,StepNumber&)
LOCAL p% 'probe #
LOCAL NumSteps%
LOCAL BestFitnessAtStepNumber, BestFitnessAtStepNumberMinus1, BestFitnessAtStepNumberMinus2, Z AS EXT
    Z = 1## 'assumes no slope change
    IF StepNumber& < 10 THEN GOTO ExitsSlopeRatio 'need at least 10 steps for this test
    NumSteps% = 2
    BestFitnessAtStepNumber = M(1,StepNumber&) : FOR p% = 1 TO Np% : IF M(p%,StepNumber&) >= BestFitnessAtStepNumber
THEN BestFitnessAtStepNumber = M(p%,StepNumber&) : NEXT p%
    BestFitnessAtStepNumberMinus1 = M(1,StepNumber&-NumSteps%) : FOR p% = 1 TO Np% : IF M(p%,StepNumber&-NumSteps%) >= BestFitnessAtStepNumberMinus1
THEN BestFitnessAtStepNumberMinus1 = M(p%,StepNumber&-NumSteps%) : NEXT p%
    BestFitnessAtStepNumberMinus2 = M(1,StepNumber&-2*NumSteps%) : FOR p% = 1 TO Np% : IF M(p%,StepNumber&-2*NumSteps%) >= BestFitnessAtStepNumberMinus2
THEN BestFitnessAtStepNumberMinus2 = M(p%,StepNumber&-2*NumSteps%) : NEXT p%
    Z = (BestFitnessAtStepNumber-BestFitnessAtStepNumberMinus1)/(BestFitnessAtStepNumberMinus1-BestFitnessAtStepNumberMinus2)
EXITSlopeRatio:
    SlopeRatio = Z
END FUNCTION
'-----
SUB
PlotResults(FunctionName$,Nd%,Np%,BestFitnessOverall,BestNpNd%,BestGamma,Neval&,Rbest(),Mbest(),BestProbeNumberOverall,BestTimeStepOverall,LastStepBestRun&,Alpha,Beta)
LOCAL LastStep&, BestFitnessProbeNumber%, BestFitnessTimeStep&, NumTrajectories%, MaxIDProbesPlotted%, i%
LOCAL RepositionFactor$, PlaceInitialProbes$, InitialAcceleration$, AS, BS
LOCAL G, DeltaT, Freq AS EXT
'   G = 2## : DeltaT = 1## : Freq = 0.5## : RepositionFactor$ = "VARIABLE" : PlaceInitialProbes$ = "UNIFORM ON-AXIS " : InitialAcceleration$ = "FIXED"
'THESE ARE NOW HARDWIRED IN THE CFO EQUATIONS 'ORIG CODE 05/14/2011
'   G = 2## : DeltaT = 1## : Freq = 0.5## : RepositionFactor$ = "VARIABLE" : PlaceInitialProbes$ = "PROBE LINES" : InitialAcceleration$ = "ZERO" 'MOD
05/14/2011
    BS = "" : IF Nd% > 1 THEN BS = "s"
    AS = FunctionName$ + CHR$(13) +
        "Best Fitness = " + REMOVE$(STR$(BestFitnessOverall),ANY" ") + " returned by" + CHR$(13) +
        "Probe # " + REMOVE$(STR$(BestProbeNumberOverall),ANY" ") +
        " at Time Step " + REMOVE$(STR$(BestTimeStepOverall),ANY" ") + CHR$(13) + CHR$(13) + "P" + REMOVE$(STR$(BestProbeNumberOverall),ANY" ") + "
coordinate" + BS + " : " + CHR$(13)
    FOR i% = 1 TO Nd% : AS = AS + STR$(i%)+ " "+REMOVE$(STR$(ROUND(Rbest(BestProbeNumberOverall,i%,BestTimeStepOverall),8),ANY" "))+CHR$(13) : NEXT i%
    MSGBOX(AS)
'-----
'----- PLOT EVOLUTION OF BEST FITNESS, AVG DISTANCE & BEST PROBE # -----
CALL
PlotBestFitnessEvolution(Nd%,Np%,LastStepBestRun&,G,DeltaT,Alpha,Beta,Freq,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,BestGamma)
'   MSGBOX("Enter for next plot...")
CALL
PlotAverageDistance(Nd%,Np%,LastStepBestRun&,G,DeltaT,Alpha,Beta,Freq,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,BestGamma)
'   MSGBOX("Enter for next plot...")
CALL
PlotBestProbesVsTimeStep(Nd%,Np%,LastStepBestRun&,G,DeltaT,Alpha,Beta,Freq,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,BestGamma)
'-----
'----- PLOT TRAJECTORIES OF BEST PROBES FOR 2/3-D FUNCTIONS -----
IF Nd% = 2 THEN
    NumTrajectories% = 10 : CALL Plot2DbestProbeTrajectories(NumTrajectories%,Mbest(),Rbest(),Np%,Nd%,LastStepBestRun&,FunctionName$)
    NumTrajectories% = 16 : CALL Plot2DIndividualProbeTrajectories(NumTrajectories%,Mbest(),Rbest(),Np%,Nd%,LastStepBestRun&,FunctionName$)
END IF
IF Nd% = 3 THEN
    NumTrajectories% = 4 : CALL Plot3DbestProbeTrajectories(NumTrajectories%,Mbest(),Rbest(),Np%,Nd%,LastStepBestRun&,FunctionName$)
END IF
'----- For 1-D Objective Functions, Tabulate Probe Coordinates & if Np% =< MaxIDProbesPlotted% Plot Evolution of Probe Positions -----

```

```

IF Nd% = 1 THEN
    MaxIDprobesPlotted% = 15
    CALL
    TabulateDprobeCoordinates(MaxIDprobesPlotted%,Nd%,Np%,LastStepBestRun&,G,DeltaT,Alpha,Beta,Frep,RbestC),MbestC),PlaceInitialProbes$,InitialAcceleration$,R
    epositionFactor$,FunctionName$,BestGamma)
    IF Np% <= MaxIDprobesPlotted% THEN _
    CALL
    PlotDprobePositions(MaxIDprobesPlotted%,Nd%,Np%,LastStepBestRun&,G,DeltaT,Alpha,Beta,Frep,RbestC),MbestC),PlaceInitialProbes$,InitialAcceleration$,Reposit
    ionFactor$,FunctionName$,BestGamma)
    CALL CLEANUP 'delete probe coordinate plot files, if any
END IF
END SUB 'PlotResults()
'=====
SUB CheckNECfiles(NECfileError$)
LOCAL N%
    NECfileError$ = "NO"
'----- NEC Files Required for PBM Antenna Benchmarks -----
IF DIR$("n4l_2k1.exe") = "" THEN
    MSGBOX("WARNING! 'n4l_2k1.exe' not found. Run terminated.") : NECfileError$ = "YES" : EXIT SUB
END IF
'----- These Files are Required for NEC-4.1, Some for NEC-2 -----
N% = FREEFILE : OPEN "ENDERR.DAT" FOR OUTPUT AS #N% : PRINT #N%, "NO" : CLOSE #N%
N% = FREEFILE : OPEN "FILE_MSG.DAT" FOR OUTPUT AS #N% : PRINT #N%, "NO" : CLOSE #N%
N% = FREEFILE : OPEN "NHSCALE.DAT" FOR OUTPUT AS #N% : PRINT #N%, "0.00001" : CLOSE #N%
END SUB
'-----
SUB GetBestFitness(MC),Np%,StepNumber&,BestFitness,BestProbeNumber%,BestTimeStep&)
LOCAL p%, i&, A$
    BestFitness = M(1,0)
    FOR i& = 0 TO StepNumber&
        FOR p% = 1 TO Np%
            IF M(p%,i&) >= BestFitness THEN
                BestFitness = M(p%,i&) : BestProbeNumber% = p% : BestTimeStep& = i&
            END IF
        NEXT p%
    NEXT i&
END SUB
'===== FUNCTION DEFINITIONS =====
FUNCTION ObjectiveFunction(RC),Nd%,p%,j&,FunctionName$) 'Objective function to be MAXIMIZED is defined here
SELECT CASE FunctionName$
CASE "ParrottF4" : ObjectiveFunction = ParrottF4(RC),Nd%,p%,j& 'Parrott F4 (1-D)
CASE "SGO" : ObjectiveFunction = SGO(RC),Nd%,p%,j& 'SGO Function (2-D)
CASE "GP" : ObjectiveFunction = GoldsteinPrice(RC),Nd%,p%,j& 'Goldstein-Price Function (2-D)
CASE "STEP" : ObjectiveFunction = StepFunction(RC),Nd%,p%,j& 'Step Function (n-D)
CASE "SCHWEFEL226" : ObjectiveFunction = Schwefel226(RC),Nd%,p%,j& 'Schwefel Prob. 2.26 (n-D)
CASE "COLVILLE" : ObjectiveFunction = Colville(RC),Nd%,p%,j& 'Colville Function (4-D)
CASE "GRIEWANK" : ObjectiveFunction = Griewank(RC),Nd%,p%,j& 'Griewank Function (n-D)
CASE "HIMMELBLAU" : ObjectiveFunction = Himmelblau(RC),Nd%,p%,j& 'Himmelblau Function (2-D)
CASE "ROSENBROCK" : ObjectiveFunction = Rosenbrock(RC),Nd%,p%,j& 'Rosenbrock Function (n-D)
CASE "SPHERE" : ObjectiveFunction = Sphere(RC),Nd%,p%,j& 'Sphere Function (n-D)
CASE "HIMMELBLAUNLO" : ObjectiveFunction = HIMMELBLAUNLO(RC),Nd%,p%,j& 'Himmelblau NLO (5-D)
CASE "TRIPOD" : ObjectiveFunction = Tripod(RC),Nd%,p%,j& 'Tripod (2-D)
CASE "ROSENBROCKF6" : ObjectiveFunction = RosenbrockF6(RC),Nd%,p%,j& 'RosenbrockF6 (10-D)
CASE "COMPRESSIONSPRING" : ObjectiveFunction = CompressionSpring(RC),Nd%,p%,j& 'Compression Spring (3-D)
CASE "GEARTRAIN" : ObjectiveFunction = GearTrain(RC),Nd%,p%,j& 'Gear Train (4-D)
'----- GSO Paper Benchmark Functions -----
CASE "F1" : ObjectiveFunction = F1(RC),Nd%,p%,j& 'F1 (n-D)
CASE "F2" : ObjectiveFunction = F2(RC),Nd%,p%,j& 'F2 (n-D)
CASE "F3" : ObjectiveFunction = F3(RC),Nd%,p%,j& 'F3 (n-D)
CASE "F4" : ObjectiveFunction = F4(RC),Nd%,p%,j& 'F4 (n-D)
CASE "F5" : ObjectiveFunction = F5(RC),Nd%,p%,j& 'F5 (n-D)
CASE "F6" : ObjectiveFunction = F6(RC),Nd%,p%,j& 'F6 (n-D)
CASE "F7" : ObjectiveFunction = F7(RC),Nd%,p%,j& 'F7 (n-D)
CASE "F8" : ObjectiveFunction = F8(RC),Nd%,p%,j& 'F8 (n-D)
CASE "F9" : ObjectiveFunction = F9(RC),Nd%,p%,j& 'F9 (n-D)
CASE "F10" : ObjectiveFunction = F10(RC),Nd%,p%,j& 'F10 (n-D)
CASE "F11" : ObjectiveFunction = F11(RC),Nd%,p%,j& 'F11 (n-D)
CASE "F12" : ObjectiveFunction = F12(RC),Nd%,p%,j& 'F12 (n-D)
CASE "F13" : ObjectiveFunction = F13(RC),Nd%,p%,j& 'F13 (n-D)
CASE "F14" : ObjectiveFunction = F14(RC),Nd%,p%,j& 'F14 (2-D)
CASE "F15" : ObjectiveFunction = F15(RC),Nd%,p%,j& 'F15 (4-D)
CASE "F16" : ObjectiveFunction = F16(RC),Nd%,p%,j& 'F16 (2-D)
CASE "F17" : ObjectiveFunction = F17(RC),Nd%,p%,j& 'F17 (2-D)
CASE "F18" : ObjectiveFunction = F18(RC),Nd%,p%,j& 'F18 (2-D)
CASE "F19" : ObjectiveFunction = F19(RC),Nd%,p%,j& 'F19 (3-D)
CASE "F20" : ObjectiveFunction = F20(RC),Nd%,p%,j& 'F20 (6-D)
CASE "F21" : ObjectiveFunction = F21(RC),Nd%,p%,j& 'F21 (4-D)

```

```

CASE "F22"      : ObjectiveFunction = F22(R(),Nd%,p%,j&)      'F22 (4-D)
CASE "F23"      : ObjectiveFunction = F23(R(),Nd%,p%,j&)      'F23 (4-D)
'
----- PBM Antenna Benchmarks -----
CASE "PBM_1"    : ObjectiveFunction = PBM_1(R(),Nd%,p%,j&)    'PBM_1 (2-D)
CASE "PBM_2"    : ObjectiveFunction = PBM_2(R(),Nd%,p%,j&)    'PBM_2 (2-D)
CASE "PBM_3"    : ObjectiveFunction = PBM_3(R(),Nd%,p%,j&)    'PBM_3 (2-D)
CASE "PBM_4"    : ObjectiveFunction = PBM_4(R(),Nd%,p%,j&)    'PBM_4 (2-D)
CASE "PBM_5"    : ObjectiveFunction = PBM_5(R(),Nd%,p%,j&)    'PBM_5 (2-D)
'
----- LOADED BOWTIE IN FREE SPACE -----
CASE "BOWTIE"   : ObjectiveFunction = BOWTIE(R(),Nd%,p%,j&)   'FREE SPACE LOADED BOWTIE
'
----- YAGI ARRAY IN FREE SPACE -----
CASE "YAGI"     : ObjectiveFunction = YAGI_ARRAY(R(),Nd%,p%,j&) 'FREE SPACE YAGI ARRAY
END SELECT
END FUNCTION 'ObjectiveFunction()
'-----
SUB GetFunctionRunParameters(FunctionName$,Nd%,Np%,Nt&,G,DeltaT,Alpha,Beta,Frep,RC,AC,MC,_,_
                             DiagonalLength,PlaceInitialProbes$,InitialAcceleration$,RepositionFactors$)
LOCAL i%, NumProbesPerDimension%, NN%, NumCollinearElements%
LOCAL AS$
SELECT CASE FunctionName$
CASE "ParrottF4"
Nd% = 1 : Np% = 3
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : XiMin(1) = 0## : XiMax(1) = 1##
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "sgo"
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -50## : XiMax(i%) = 50## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "gp"
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "STEP"
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
'
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : XiMin(1) = 72## : XiMax(1) = 78## : XiMin(2) = 27## : XiMax(2) = 33## 'use this to plot STEP detail
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "SCHWEFEL_226"
Nd% = 30 : Np% = 120
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -500## : XiMax(i%) = 500## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "COLVILLE"
Nd% = 4 : Np% = 16
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -10## : XiMax(i%) = 10## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "GRIEWANK"
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -600## : XiMax(i%) = 600## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "HIMMELBLAU"
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -6## : XiMax(i%) = 6## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "ROSENBRÖCK" '(n-D)
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -2## : XiMax(i%) = 2## : NEXT i% : 'XiMin(i%) = -6## : XiMax(i%) = 6##
: NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "SPHERE" '(n-D)
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "HIMMELBLAUNLO" '(5-D)
Nd% = 5 : Np% = 20

```

```

REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%)
XiMin(1) = 78## : XiMax(1) = 102##
XiMin(2) = 33## : XiMax(2) = 45##
XiMin(3) = 27## : XiMax(3) = 45##
XiMin(4) = 27## : XiMax(4) = 45##
XiMin(5) = 27## : XiMax(5) = 45##
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "TRIPOD" '(2-D)
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "ROSENBROCKF6" '(10-D)
Nd% = 10
Np% = 40
REDIM XiOffset(1 TO Nd%)
'
' XiOffset(1) = 81.0232##
' XiOffset(2) = -48.3950##
' XiOffset(3) = 19.2316##
' XiOffset(4) = -2.5231##
' XiOffset(5) = 70.4338##
' XiOffset(6) = 47.1774##
' XiOffset(7) = -7.8358##
' XiOffset(8) = -86.6693##
' XiOffset(9) = 57.8532##
' XiOffset(10) = 0##
'
' XiOffset(1) = 80##
' XiOffset(2) = -50##
' XiOffset(3) = 20##
' XiOffset(4) = -3##
' XiOffset(5) = 70##
' XiOffset(6) = 47##
' XiOffset(7) = -8##
' XiOffset(8) = -87##
' XiOffset(9) = 58##
' XiOffset(10) = 0##
'
' XiOffset(1) = 5##
' XiOffset(2) = -25##
' XiOffset(3) = 5##
' XiOffset(4) = -15##
' XiOffset(5) = 5##
' XiOffset(6) = -25##
' XiOffset(7) = 25##
' XiOffset(8) = -5##
' XiOffset(9) = 5##
' XiOffset(10) = -15##
'
' XiOffset(1) = 0##
' XiOffset(2) = 81.0232##
' XiOffset(3) = -48.3950##
' XiOffset(4) = 19.2316##
' XiOffset(5) = -2.5231##
' XiOffset(6) = 70.4338##
' XiOffset(7) = 47.1774##
' XiOffset(8) = -7.8358##
' XiOffset(9) = -86.6693##
' XiOffset(10) = 57.8532##
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "COMPRESSIONSPRING" '(3-D)
Nd% = 3 : Np% = 12
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%)
XiMin(1) = 1## : XiMax(1) = 70## 'integer values only!!
XiMin(2) = 0.6## : XiMax(2) = 3##
XiMin(3) = 0.207## : XiMax(3) = 0.5##
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "GEARTRAIN" '(4-D)
Nd% = 4 : Np% = 16
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = 12# : XiMax(i%) = 60## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F1" '(n-D)
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F2" '(n-D)
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -10## : XiMax(i%) = 10## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F3" '(n-D)
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F4" '(n-D)
Nd% = 30 : Np% = 60

```

```

REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "F5" '(n-D)
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -30## : XiMax(i%) = 30## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F6" '(n-D) STEP
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -100## : XiMax(i%) = 100## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F7" '(n-D)
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -1.28## : XiMax(i%) = 1.28## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F8" '(n-D)
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -500## : XiMax(i%) = 500## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F9" '(n-D)
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -5.12## : XiMax(i%) = 5.12## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F10" '(n-D) Ackley's Function
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -32## : XiMax(i%) = 32## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F11" '(n-D)
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -600## : XiMax(i%) = 600## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F12" '(n-D) Penalized #1
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -50## : XiMax(i%) = 50## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F13" '(n-D) Penalized #2
Nd% = 30 : Np% = 60
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -50## : XiMax(i%) = 50## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F14" '(2-D) Shekel's Foxholes
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -65.536## : XiMax(i%) = 65.536## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F15" '(4-D) Kowalik's Function
Nd% = 4
Np% = 16
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -5## : XiMax(i%) = 5## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F16" '(2-D) Camel Back
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = -5## : XiMax(i%) = 5## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F17" '(2-D) Branin
Nd% = 2 : Np% = 8
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : XiMin(1) = -5## : XiMax(1) = 10## : XiMin(2) = 0## : XiMax(2) = 15##
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%
CASE "F18" '(2-D) Goldstein-Price
Nd% = 2 : Np% = 8

```

```

REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : XiMin(1) = -2## : XiMax(1) = 2## : XiMin(2) = -2## : XiMax(2) = 2##
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "F19" '(3-D) Hartman's Family #1
Nd% = 3 : Np% = 12
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = 0## : XiMax(i%) = 1## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "F20" '(6-D) Hartman's Family #2
Nd% = 6 : Np% = 24
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = 0## : XiMax(i%) = 1## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "F21" '(4-D) Shekel's Family m=5
Nd% = 4 : Np% = 16
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = 0## : XiMax(i%) = 10## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "F22" '(4-D) Shekel's Family m=7
Nd% = 4 : Np% = 16
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = 0## : XiMax(i%) = 10## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "F23" '(4-D) Shekel's Family m=10
Nd% = 4 : Np% = 16
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = 0## : XiMax(i%) = 10## : NEXT i%
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
CASE "PBM_1" '2-D
Nd% = 2
NumProbesPerDimension% = 2 '4 '20
Np% = NumProbesPerDimension%*Nd%
Nt& = 100
G = 2##
Alpha = 2##
Beta = 2##
DeltaT = 1##
Frep = 0.5##
PlaceInitialProbes$ = "UNIFORM ON-AXIS"
InitialAcceleration$ = "ZERO"
RepositionFactor$ = "VARIABLE" "FIXED"
Np% = NumProbesPerDimension%*Nd%
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%)
XiMin(1) = 0.5## : XiMax(1) = 3## 'dipole length, L, in wavelengths
XiMin(2) = 0## : XiMax(2) = Pi2 'polar angle, Theta, in Radians
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NN% = FREEFILE : OPEN "INFILE.DAT" FOR OUTPUT AS #NN% : PRINT #NN%,"PBML.NEC" : PRINT #NN%,"PBML.OUT" : CLOSE #NN% 'NEC Input/Output Files
CASE "PBM_2" '2-D
AddNoiseToPBM2$ = "NO" "YES" "NO" "YES"
Nd% = 2
NumProbesPerDimension% = 4 '20
Np% = NumProbesPerDimension%*Nd%
Nt& = 100
G = 2##
Alpha = 2##
Beta = 2##
DeltaT = 1##
Frep = 0.5##
PlaceInitialProbes$ = "UNIFORM ON-AXIS"
InitialAcceleration$ = "ZERO"
RepositionFactor$ = "VARIABLE" "FIXED"
Np% = NumProbesPerDimension%*Nd%
REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%)
XiMin(1) = 5## : XiMax(1) = 15## 'dipole separation, D, in wavelengths
XiMin(2) = 0## : XiMax(2) = Pi 'polar angle, Theta, in Radians
NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NN% = FREEFILE : OPEN "INFILE.DAT" FOR OUTPUT AS #NN% : PRINT #NN%,"PBM2.NEC" : PRINT #NN%,"PBM2.OUT" : CLOSE #NN%
CASE "PBM_3" '2-D
Nd% = 2
NumProbesPerDimension% = 4 '20
Np% = NumProbesPerDimension%*Nd%
Nt& = 100
G = 2##
Alpha = 2##
Beta = 2##
DeltaT = 1##
Frep = 0.5##
PlaceInitialProbes$ = "UNIFORM ON-AXIS"
InitialAcceleration$ = "ZERO"
RepositionFactor$ = "VARIABLE" "FIXED"
Np% = NumProbesPerDimension%*Nd%

```

```

REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%)
XiMin(1) = 0## : XiMax(1) = 4## 'Phase Parameter, Beta (0-4)
XiMin(2) = 0## : XiMax(2) = Pi 'polar angle, Theta, in Radians
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%

NN% = FREEFILE : OPEN "INFILE.DAT" FOR OUTPUT AS #NN% : PRINT #NN%, "PBM3.NEC" : PRINT #NN%, "PBM3.OUT" : CLOSE #NN%

CASE "PBM_4" '2-D
Nd% = 2
NumProbesPerDimension% = 4 '6 '2 '4 '20
Np% = NumProbesPerDimension%*Nd%

Nt& = 100
G = 2##
Alpha = 2##
Beta = 2##
DeltaT = 1##
Frep = 0.5##

PlaceInitialProbes$ = "UNIFORM ON-AXIS"
InitialAcceleration$ = "ZERO"
RepositionFactor$ = "VARIABLE" "'FIXED"

Np% = NumProbesPerDimension%*Nd%

REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%)

XiMin(1) = 0.5## : XiMax(1) = 1.5## 'ARM LENGTH (NOT Total Length), wavelengths (0.5-1.5)
XiMin(2) = Pi/18## : XiMax(2) = Pi/2## 'Inner angle, Alpha, in Radians (Pi/18-Pi/2)
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%

NN% = FREEFILE : OPEN "INFILE.DAT" FOR OUTPUT AS #NN% : PRINT #NN%, "PBM4.NEC" : PRINT #NN%, "PBM4.OUT" : CLOSE #NN%

CASE "PBM_5"
NumCollinearElements% = 6 '30 'EVEN or ODD: 6,7,10,13,16,24 used by PBM

Nd% = NumCollinearElements% - 1
NumProbesPerDimension% = 4 '20
Np% = NumProbesPerDimension%*Nd%

Nt& = 100
G = 2##
Alpha = 2##
Beta = 2##
DeltaT = 1##
Frep = 0.5##

PlaceInitialProbes$ = "UNIFORM ON-AXIS"
InitialAcceleration$ = "ZERO"
RepositionFactor$ = "VARIABLE" "'FIXED"

Nd% = NumCollinearElements% - 1
Np% = NumProbesPerDimension%*Nd%

REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : XiMin(i%) = 0.5## : XiMax(i%) = 1.5## : NEXT i%
REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%) : FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) :
NEXT i%

NN% = FREEFILE : OPEN "INFILE.DAT" FOR OUTPUT AS #NN% : PRINT #NN%, "PBM5.NEC" : PRINT #NN%, "PBM5.OUT" : CLOSE #NN%

===== END PBM BENCHMARKS =====

CASE "BOWTIE" 'FREE SPACE LOADED BOWTIE
----- Check for NEC Executable -----
IF DIR$( "NEC41D_4K_053011.EXE" ) = "" THEN
MSGBOX("WARNING! NEC4.1D executable NEC41D_4K_053011.EXE not found!"+CHR$(13)+CHR$(13)+_
RUN TERMINATED.")+CHR$(13)+CHR$(13)
EXIT SUB
END IF

NumRadPattAngles% = 19' : NN% = FREEFILE : OPEN "NumPattAngles.DAT" FOR OUTPUT AS #NN% : PRINT #NN%, NumRadPattAngles% : CLOSE #NN% 'for use by
ReadNEC program

----- Get Segmentation -----
IF DIR$( "BowtieSeg.TXT" ) = "" THEN 'create BowtieSeg.TXT if it doesn't exist
NN% = FREEFILE : OPEN "BowtieSeg.TXT" FOR OUTPUT AS #NN% : PRINT #NN%, "variable" : PRINT #NN%, "0.05" : CLOSE #NN%
END IF
NN% = FREEFILE : OPEN "BowtieSeg.TXT" FOR INPUT AS #NN% : INPUT #NN%, BowtieSegmentLength$ : INPUT #NN%, BowtieSegmentLengthWvlN : CLOSE #NN%
IF INSTR(UCASE$(BowtieSegmentLength$), "V") > 0 THEN BowtieSegmentLength$ = "VARIABLE"
IF INSTR(UCASE$(BowtieSegmentLength$), "F") > 0 THEN BowtieSegmentLength$ = "FIXED"
IF INSTR(UCASE$(BowtieSegmentLength$), "V") = 0 AND INSTR(UCASE$(BowtieSegmentLength$), "F") = 0 THEN BowtieSegmentLength$ = "VARIABLE"
IF BowtieSegmentLengthWvlN < 0.02## OR BowtieSegmentLengthWvlN > 0.2## THEN BowtieSegmentLengthWvlN = 0.05## 'range 0.02-0.2 wavelengths

----- Get Bowtie Fitness Function Coefficients ----- NOTE: OPTIONALLY USED IN FITNESS FUNCTION (SEE BOWTIE FUNCTION FOR ACTUAL CALCULATION)
REDIM BowtieFitnessCoefficients(1 TO 3)
IF DIR$( "BowtieCoeff.TXT" ) = "" THEN 'create BowtieCoeff.TXT if it doesn't exist
NN% = FREEFILE : OPEN "BowtieCoeff.TXT" FOR OUTPUT AS #NN% : PRINT #NN%, "40" : PRINT #NN%, "2" : PRINT #NN%, "3" : CLOSE #NN%
END IF
NN% = FREEFILE
OPEN "BowtieCoeff.TXT" FOR INPUT AS #NN%
INPUT #NN%, BowtieFitnessCoefficients(1) : INPUT #NN%, BowtieFitnessCoefficients(2) : INPUT #NN%, BowtieFitnessCoefficients(3)
CLOSE #NN%

BowtieCoefficients$ = "A="+REMOVE$(STR$(BowtieFitnessCoefficients(1)), ANY" ") +_
" B="+REMOVE$(STR$(BowtieFitnessCoefficients(2)), ANY" ") +_
" C="+REMOVE$(STR$(BowtieFitnessCoefficients(3)), ANY" ")

'BOWTIE DECISION SPACE BOUNDARY ARRAY:

Array Element # Design Variable
-----
1 Bowtie atm length (wavelengths)
2 Bowtie HALF angle (degrees)
3 Loading segment number #1
4 Loading resistance #1 (ohms)
5 Zo

Nd% = 5 'FIXED DIMENSIONALITY BASED ON ABOVE DESIGN PARAMETERS

REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%)

XiMin(1) = 0.01## : XiMax(1) = 0.08## 'min/max arm length (METERS) (>=1/4-wave at 1 GHz)
XiMin(2) = 10## : XiMax(2) = 80## 'min/max HALF angle (degrees)
XiMin(3) = 1 : XiMax(3) = 9 'min/max loading segment number #1 (NOTE FIXED SEGMENTATION AT 9 SEGMENTS !!!)
XiMin(4) = 1## : XiMax(4) = 1000## 'min/max loading resistance, R1 (ohms)
XiMin(5) = 50## : XiMax(5) = 1000## 'Zo, ohms

```



```

REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%)
FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) : NEXT i%

NN% = FREEFILE : OPEN "INFILE.DAT" FOR OUTPUT AS #NN% : PRINT #NN%, "BOWTIE.NEC" : PRINT #NN%, "BOWTIE.OUT" : CLOSE #NN%

===== END BOWTIE =====

CASE "YAGI" 'FREE SPACE YAGI ARRAY

----- Check for NEC Executable -----
IF DIR$( "NEC41D_4K_053011.EXE" ) = "" THEN
MSGBOX ("WARNING! NEC4.1D executable NEC41D_4K_053011.EXE not found!" + CHR$(13) + CHR$(13) + _
RUN TERMINATED. ") + CHR$(13) + CHR$(13)
EXIT SUB
END IF

NumRadPattAngles% = 2' : NN% = FREEFILE : OPEN "NumPattAngles.DAT" FOR OUTPUT AS #NN% : PRINT #NN%, NumRadPattAngles% : CLOSE #NN% 'for use by
ReadNEC program

----- Get Segmentation -----
IF DIR$( "Yagiseg.TXT" ) = "" THEN 'create Yagiseg.TXT if it doesn't exist
NN% = FREEFILE : OPEN "Yagiseg.TXT" FOR OUTPUT AS #NN% : PRINT #NN%, "Variable" : PRINT #NN%, "0.05" : CLOSE #NN%
END IF
NN% = FREEFILE : OPEN "Yagiseg.TXT" FOR INPUT AS #NN% : INPUT #NN%, YagiSegmentLength$ : INPUT #NN%, YagiSegmentLengthwvlN : CLOSE #NN%
IF INSTR(UCASE$(YagiSegmentLength$), "V") > 0 THEN YagiSegmentLength$ = "VARIABLE"
IF INSTR(UCASE$(YagiSegmentLength$), "F") > 0 THEN YagiSegmentLength$ = "FIXED"
IF INSTR(UCASE$(YagiSegmentLength$), "V") = 0 AND INSTR(UCASE$(YagiSegmentLength$), "F") = 0 THEN YagiSegmentLength$ = "VARIABLE"
IF YagiSegmentLengthwvlN < 0.02## OR YagiSegmentLengthwvlN > 0.2## THEN YagiSegmentLengthwvlN = 0.05## 'range 0.02-0.2 wavelengths

----- Get Yagi Fitness Function Coefficients -----
REDIM YagiFitnessCoefficients(1 TO 4)
IF DIR$( "YagiCoeff.TXT" ) = "" THEN 'create YagiCoeff.TXT if it doesn't exist
#NN% = FREEFILE : OPEN "YagiCoeff.TXT" FOR OUTPUT AS #NN% : PRINT #NN%, "20" : PRINT #NN%, "2" : PRINT #NN%, "3" : PRINT #NN%, "4" : CLOSE
#NN%
END IF
NN% = FREEFILE
OPEN "YagiCoeff.TXT" FOR INPUT AS #NN%
INPUT #NN%, YagiFitnessCoefficients(1) : INPUT #NN%, YagiFitnessCoefficients(2) : INPUT #NN%, YagiFitnessCoefficients(3) : INPUT
#NN%, YagiFitnessCoefficients(4)
CLOSE #NN%

YagiCoefficients$ = "A="+REMOVE$(STR$(YagiFitnessCoefficients(1)), ANY" ") + _
" B="+REMOVE$(STR$(YagiFitnessCoefficients(2)), ANY" ") + _
" C="+REMOVE$(STR$(YagiFitnessCoefficients(3)), ANY" ") + _
" D="+REMOVE$(STR$(YagiFitnessCoefficients(4)), ANY" ")

----- Alternate Fitness Coefficients -----
c1 = 0.2## : c2 = 4# : c3 = 1## : c4 = 8## : c5 = 1## : c6 = 0.8##

NN% = FREEFILE
OPEN "Alt_Yagi_Coeff.DAT" FOR OUTPUT AS #NN%
PRINT #NN%, "c1="+REMOVE$(STR$(c1), ANY" ")
PRINT #NN%, "c2="+REMOVE$(STR$(c2), ANY" ")
PRINT #NN%, "c3="+REMOVE$(STR$(c3), ANY" ")
PRINT #NN%, "c4="+REMOVE$(STR$(c4), ANY" ")
PRINT #NN%, "c5="+REMOVE$(STR$(c5), ANY" ")
PRINT #NN%, "c6="+REMOVE$(STR$(c6), ANY" ")
CLOSE #NN%

Fit1$ = "CM "+REMOVE$(STR$(c1), ANY" ") + "*Gfwd(L) -" + REMOVE$(STR$(c2), ANY" ") + "*VSWR(L) +" + REMOVE$(STR$(c3), ANY" ") + "*Gfwd(M) -" + REMOVE$(STR$(c4), ANY"
") + "*VSWR(M) +"
Fit2$ = "CM "+REMOVE$(STR$(c5), ANY" ") + "*Gfwd(U) -" + REMOVE$(STR$(c6), ANY" ") + "*VSWR(U) + "

----- # Array Elements -----
A$ = INPUTBOX$( "# Array Elements", "YAGI ELEMENTS", "6" )
NumYagiElements% = VAL(A$)
Nd% = 2 * NumYagiElements% 'spacing/length are the two optimization parameters defining each element, AND Zo IS AS A DESIGN <<<VARIABLE>>>.
=====

'YAGI DECISION SPACE BOUNDARY ARRAY:
'
' Array Element # Design Variable
'
' 1
' TO Yagi element spacing along boom from previous element, wavelengths
' NumYagiElements-1
'
' NumYagiElements
' TO Yagi element length, wavelengths
' 2*NumYagiElements-1
'
' 2*NumYagiElements (Nd) <<<< Zo >>>>
'
' REDIM XiMin(1 TO Nd%), XiMax(1 TO Nd%)
' FOR i% = 1 TO NumYagiElements%-1 : XiMin(i%) = 0.1## : XiMax(i%) = 0.5## : NEXT i% 'min/max SPACING, wvlN @ 299.8 MHz
'
' FOR i% = NumYagiElements% TO Nd%-1
' XiMin(i%) = 0.2## : XiMax(i%) = 0.6## 'min/max element TOTAL LENGTHS, wvlN @ 299.8 MHz
' NEXT i%
'
' XiMin(Nd%) = 25## : XiMax(i%) = 250## 'min/max values of Zo (OHMS) 'USED FOR 07282011_001156 DESIGN
'
' XiMin(Nd%) = 50## : XiMax(i%) = 50## 'min/max values of Zo (OHMS) 'TO FIX Zo AT 50 OHMS
'
' REDIM StartingXiMin(1 TO Nd%), StartingXiMax(1 TO Nd%)
' FOR i% = 1 TO Nd% : StartingXiMin(i%) = XiMin(i%) : StartingXiMax(i%) = XiMax(i%) : NEXT i%
'
' NN% = FREEFILE : OPEN "INFILE.DAT" FOR OUTPUT AS #NN% : PRINT #NN%, "YAGI.NEC" : PRINT #NN%, "YAGI.OUT" : CLOSE #NN%
'
' ===== END YAGI =====
'
' =====
'
' NOTE - DON'T FORGET TO ADD NEW TEST FUNCTIONS TO FUNCTION objectiveFunction() ABOVE !!
' =====
'
END SELECT

IF Nd% > 100 THEN Nt% = MIN(Nt%, 200) 'to avoid array dimensioning problems

DiagLength = 0## : FOR i% = 1 TO Nd% : DiagLength = DiagLength + (XiMax(i%) - XiMin(i%)) ^ 2 : NEXT i% : DiagLength = SQR(DiagLength) 'compute length of
decision space principal diagonal

END SUB 'GetFunctionRunParameters()

'-----
'
FUNCTION ParrottF4(R(), Nd%, p%, j%) 'Parrott F4 (1-D)
'
'MAXIMUM = 1 AT -0.0796875... WITH ZERO OFFSET (SEEMS TO WORK BEST WITH JUST 3 PROBES, BUT NOT ALLOWED IN THIS VERSION...)
'
'References:
'
'Beasley, D., D. R. Bull, and R. R. Martin, "A Sequential Niche Technique for Multimodal
'Function Optimization," Evol. Comp. (MIT Press), vol. 1, no. 2, 1993, pp. 101-125

```

```

'(online at http://citeseer.ist.psu.edu/beasley93sequential.html).
'Parrott, D., and X. Li, "Locating and Tracking Multiple Dynamic Optima by a Particle Swarm
'Model Using Speciation," IEEE Trans. Evol. Computation, vol. 10, no. 4, Aug. 2006, pp. 440-458.

LOCAL Z, x, offset AS EXT
  offset = 0##
  x = R(p%,1,j&)
  Z = EXP(-2##*LOG(2##))*((x-0.08##-offset)/0.854##)^2*(SIN(5##*Pi*((x-offset)^0.75##-0.05##)))^6 'WARNING! This is a NATURAL LOG, NOT Log10!!!
  ParrottF4 = Z
END FUNCTION 'ParrottF4()
'-----

FUNCTION SGO(R(),Nd%,p%,j&) 'SGO Function (2-D)
'MAXIMUM = ~130.8323226... @ ~(-2.8362075..., -2.8362075...) WITH ZERO OFFSET.
'Reference:
'Hsiao, Y., Chuang, C., Jiang, J., and Chien, C., "A Novel Optimization Algorithm: Space
'Gravitational Optimization," Proc. of 2005 IEEE International Conference on Systems, Man,
'and Cybernetics, 3, 2323-2328. (2005)

  LOCAL x1, x2, Z, t1, t2, SG0x1offset, SG0x2offset AS EXT
  SG0x1offset = 0## : SG0x2offset = 0##
  SG0x1offset = 40## : SG0x2offset = 10##
  x1 = R(p%,1,j&) - SG0x1offset : x2 = R(p%,2,j&) - SG0x2offset
  t1 = x1^4 - 16##*x1^2 + 0.5##*x1 : t2 = x2^4 - 16##*x2^2 + 0.5##*x2
  Z = t1 + t2
  SGO = -Z
END FUNCTION 'SGO()
'-----

FUNCTION GoldsteinPrice(R(),Nd%,p%,j&) 'Goldstein-Price Function (2-D)
'MAXIMUM = -3 @ (0, -1) WITH ZERO OFFSET.
'Reference:
'Cui, Z., Zeng, J., and Sun, G. (2006) 'A Fast Particle Swarm Optimization,' Int'l. J.
'Innovative Computing, Information and Control, vol. 2, no. 6, December, pp. 1365-1380.

  LOCAL Z, x1, x2, offset1, offset2, t1, t2 AS EXT
  offset1 = 0## : offset2 = 0##
  offset1 = 20## : offset2 = -10##
  x1 = R(p%,1,j&)-offset1 : x2 = R(p%,2,j&)-offset2
  t1 = 1##*(x1+x2+1##)^2*(19##-14##*x1+3##*x1^2-14##*x2+6##*x1*x2+3##*x2^2)
  t2 = 30##*(2##*x1-3##*x2)^2*(18##-32##*x1+12##*x1^2+48##*x2-36##*x1*x2+27##*x2^2)
  Z = t1*t2
  GoldsteinPrice = -Z
END FUNCTION 'GoldsteinPrice()
'-----

FUNCTION StepFunction(R(),Nd%,p%,j&) 'Step Function (n-D)
'MAXIMUM VALUE = 0 @ [offset]^n.
'Reference:
'Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.

  LOCAL offset, Z AS EXT
  LOCAL i%
  Z = 0## : offset = 0## '75.123## '0##
  FOR i% = 1 TO Nd%
    IF Nd% = 2 AND i% = 1 THEN offset = 75 '75##
    IF Nd% = 2 AND i% = 2 THEN offset = 35 '30 '35##
    Z = Z + INT((R(p%,i%,j&)-offset) + 0.5##)^2
  NEXT i%
  StepFunction = -Z
END FUNCTION 'StepFunction()
'-----

FUNCTION Schwefel226(R(),Nd%,p%,j&) 'Schwefel Problem 2.26 (n-D)
'MAXIMUM = 12,569.5 @ [420.8687]^30 (30-D CASE).
'Reference:
'Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.

  LOCAL Z, xi AS EXT
  LOCAL i%
  Z = 0##
  FOR i% = 1 TO Nd%
    xi = R(p%,i%,j&)
    Z = Z + xi*SIN(SQR(ABS(xi)))
  NEXT i%

```

```

NEXT i%
Schwefel226 = Z
END FUNCTION 'SCHWEFEL226()
'-----
FUNCTION Colville(R(),Nd%,p%,j&) 'Colville Function (4-D)
'MAXIMUM = 0 @ (1,1,1,1) WITH ZERO OFFSET.
'Reference:
'Doo-Hyun, and Se-Young, O., "A New Mutation Rule for Evolutionary Programming Motivated from
'Backpropagation Learning," IEEE Trans. Evolutionary Computation, Vol. 4, No. 2, pp. 188-190,
'July 2000.
LOCAL Z, x1, x2, x3, x4, offset AS EXT
offset = 0## '7.123##
x1 = R(p%,1,j&)-offset : x2 = R(p%,2,j&)-offset : x3 = R(p%,3,j&)-offset : x4 = R(p%,4,j&)-offset
Z = 100##*(x2-x1^2)^2 + (1##-x1)^2 + -
90##*(x4-x3^2)^2 + (1##-x3)^2 + -
10.1##*(x2-1##)^2 + (x4-1##)^2 + -
19.8##*(x2-1##)^2*(x4-1##)
Colville = -Z
END FUNCTION 'Colville()
'-----
FUNCTION Griewank(R(),Nd%,p%,j&) 'Griewank (n-D)
'Max of zero at (0,...,0)
'Reference: Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.
LOCAL Offset, Sum, Prod, Z, Xi AS EXT
LOCAL i%
Sum = 0## : Prod = 1##
Offset = 75.123##
FOR i% = 1 TO Nd%
Xi = R(p%,i%,j&) - Offset
Sum = Sum + Xi^2
Prod = Prod*COS(Xi/SQR(i%))
NEXT i%
Z = Sum/4000## - Prod + 1##
Griewank = -Z
END FUNCTION 'Griewank()
'-----
FUNCTION Himmelblau(R(),Nd%,p%,j&) 'Himmelblau (2-D)
LOCAL Z, x1, x2, offset AS EXT
offset = 0##
x1 = R(p%,1,j&)-offset : x2 = R(p%,2,j&)-offset
Z = 200## - (x1^2 + x2 - 11##)^2 - (x1+x2^2-7##)^2
Himmelblau = Z
END FUNCTION 'Himmelblau()
'-----
FUNCTION Rosenbrock(R(),Nd%,p%,j&) 'Rosenbrock (n-D)
'MAXIMUM = 0 @ [1,...,1]^n (n-D CASE).
'Reference: Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.
LOCAL Z, Xi, Xi1 AS EXT
LOCAL i%
Z = 0##
FOR i% = 1 TO Nd%-1
Xi = R(p%,i%,j&) : Xi1 = R(p%,i%+1,j&)
Z = Z + 100##*(Xi1-Xi^2)^2 + (Xi-1##)^2
NEXT i%
Rosenbrock = -Z
END FUNCTION 'ROSENBR0CK()
'-----
FUNCTION Sphere(R(),Nd%,p%,j&) 'Sphere (n-D)
'MAXIMUM = 0 @ [0,...,0]^n (n-D CASE).
'Reference: Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.
LOCAL Z, Xi, Xi1 AS EXT
LOCAL i%
Z = 0##
FOR i% = 1 TO Nd%
```

```

        xi = R(p%,i%,j&)
        Z = Z + xi^2
    NEXT i%
    Sphere = -Z
END FUNCTION 'SPHERE()'
'-----
FUNCTION HimmelblauNLO(R(),Nd%,p%,j&) 'Himmelblau non-linear optimization (5-D)
'MAXIMUM ~ 31025.5562644972 @ (78.0,33.0,27.0709971052,45.0,44.9692425501)
'Reference: "Constrained Optimization using CODEQ," Mahamed G.H. Omran & Ayed Salman,
'Chaos, Solitons and Tractals, 42(2009), 662-668
    LOCAL Z, x1, x2, x3, x4, x5, g1, g2, g3 AS EXT
    Z = 1E4200
    x1 = R(p%,1,j&) : x2 = R(p%,2,j&) : x3 = R(p%,3,j&) : x4 = R(p%,4,j&) : x5 = R(p%,5,j&)
    g1 = 85.334407## + 0.0056858##*x2*x5 + 0.00026##*x1*x4 - 0.0022053##*x3*x5
    g2 = 80.51249## + 0.0071317##*x2*x5 + 0.0029955##*x1*x2 + 0.0021813##*x3*x3
    g3 = 9.300961## + 0.0047026##*x3*x5 + 0.0012547##*x1*x3 + 0.0019085##*x3*x4
    IF g1## < 0 OR g1 > 92## OR g2 < 90## OR g2 > 110## OR g3 < 20## OR g3 > 25## THEN GOTO ExitHimmelblauNLO
    Z = 5.3578547##*x3*x3 + 0.8356891##*x1*x5 + 37.29329##*x1 - 40792.141##
ExitHimmelblauNLO:
    HimmelblauNLO = -Z
END FUNCTION 'HimmelblauNLO()'
'-----
FUNCTION Tripod(R(),Nd%,p%,j&) 'Tripod (2-D)
'MAXIMUM = 0 at (0,-50)
'Reference: "Appendix: A mini-benchmark," Maurice Clerc
    LOCAL Z, x1, x2, s1, s2, t1, t2, t3 AS EXT
    x1 = R(p%,1,j&) : x2 = R(p%,2,j&)
    s1 = Sign(x1) : s2 = Sign(x2)
    t1 = (1##-s2)*(ABS(x1)+ABS(x2+50##))
    t2 = 0.5##*(1##+s2)*(1##-s1)*(1##+ABS(x1+50##)+ABS(x2-50##))
    t3 = (1##+s1)*(2##+ABS(x1-50##)+ABS(x2-50##))
    Z = 0.5##*(t1 + t2 + t3)
    Tripod = -Z
END FUNCTION 'Tripod()'
'-----
FUNCTION Sign(X)
    LOCAL Z AS EXT
    Z = 1## : IF X <= 0## THEN Z = -1##
    Sign = Z
END FUNCTION
'-----
FUNCTION RosenbrockF6(R(),Nd%,p%,j&) 'Rosenbrock F6 (10-D)
'WARNING !! 03-19-10 THIS FUNCTION CONTAINS ERRORS. SEE CLERC'S EMAIL!
'MAXIMUM = 394 at (0,-50)
'Reference: "Appendix: A mini-benchmark," Maurice Clerc (NOTE: Uses his notation...)
    LOCAL Z, xi, xi1, Zi, Zi1, Sum AS EXT
    LOCAL i%
    Sum = 0##
    FOR i% = 2 TO Nd%
        xi = R(p%,i%,j&) : xi1 = R(p%,i%-1,j&)
        Zi = xi - Xioffset(i%) + 1## : Zi1 = xi1 - Xioffset(i%-1) + 1##
        Sum = Sum + 100##*(Zi1^2-Zi)^2 + (Zi1-1##)^2
    NEXT i%
    Z = 390## + Sum
    RosenbrockF6 = -Z
END FUNCTION 'RosenbrockF6()'
'-----
FUNCTION CompressionSpring(R(),Nd%,p%,j&) 'Compression Spring (3-D)
'MAXIMUM = 394 at (0,-50)
'Reference: "Appendix: A mini-benchmark," Maurice Clerc (NOTE: Uses his notation...)
    LOCAL Z, x1, x2, x3, g1, g2, g3, g4, g5, Cf, Fmax, S, Lf, Lmax, SigP, SigPM, Fp, K, SigW AS EXT
    Z = 1E4200
    x1 = ROUND(R(p%,1,j&),0) : x2 = R(p%,2,j&) : x3 = ROUND(R(p%,3,j&),3)
    Cf = 1## + 0.75##*x3/(x2-x3)+0.615##*x3/x2
    Fmax = 1000## : S = 189000## : Lmax = 14## : SigPM = 6## : Fp = 300## : SigW = 1.25##

```

```

K = 11.5##*1E6*x3^4/(8##*x1*x2^3)
Lf = Fmax/K + 1.05##*(x1+2##)*x3
SigP = Fp/K
g1 = 8##*Cf*Fmax*x2/(Pi*x3^3) - s
g2 = Lf - Lmax
g3 = SigP - SigPM
g4 = SigP -Fp/K 'WARNING! 03-19-10. THIS IS SATISFIED EXACTLY (SEE CLERC'S EMAIL - TYPO IN HIS BENCHMARKS)
g5 = SigW - (Fmax-Fp)/K
IF g1 > 0## OR g2 > 0## OR g3 > 0## OR g4 > 0## OR g5 > 0## THEN GOTO ExitCompressionSpring
Z = Pi^2*x2*x3^2*(x1+1##)/4##
ExitCompressionSpring:
CompressionSpring = -Z
END FUNCTION 'CompressionSpring
'-----
FUNCTION GearTrain(R(),Nd%,p%,j&) 'GearTrain (4-D)
'MAXIMUM = 394 at (0,-50)
'Reference: "Appendix: A mini-benchmark," Maurice Clerc (NOTE: Uses his notation...)
LOCAL Z, x1, x2, x3, x4 AS EXT
x1 = ROUND(R(p%,1,j&),0) : x2 = ROUND(R(p%,2,j&),0)
x3 = ROUND(R(p%,3,j&),0) : x4 = ROUND(R(p%,4,j&),0)
Z = (1##/6.931##-x1*x2/(x3*x4))^2
GearTrain = -Z
END FUNCTION 'GearTrain
'-----
FUNCTION F1(R(),Nd%,p%,j&) 'F1 (n-D)
'MAXIMUM = ZERO (n-D CASE).
'Reference:
LOCAL Z, Xi AS EXT
LOCAL i%
Z = 0##
FOR i% = 1 TO Nd%
Xi = R(p%,i%,j&)
Z = Z + Xi^2
NEXT i%
F1 = -Z
END FUNCTION 'F1
'-----
FUNCTION F2(R(),Nd%,p%,j&) 'F2 (n-D)
'MAXIMUM = ZERO (n-D CASE).
'Reference:
LOCAL Sum, prod, Z, Xi AS EXT
LOCAL i%
Z = 0## : Sum = 0## : Prod = 1##
FOR i% = 1 TO Nd%
Xi = R(p%,i%,j&)
Sum = Sum+ ABS(Xi)
Prod = Prod*ABS(Xi)
NEXT i%
Z = Sum + Prod
F2 = -Z
END FUNCTION 'F2
'-----
FUNCTION F3(R(),Nd%,p%,j&) 'F3 (n-D)
'MAXIMUM = ZERO (n-D CASE).
'Reference:
LOCAL Z, xk, Sum AS EXT
LOCAL i%, k%
Z = 0##
FOR i% = 1 TO Nd%
Sum = 0##
FOR k% = 1 TO i%
xk = R(p%,k%,j&)
Sum = Sum + xk
NEXT k%
Z = Z + Sum^2

```

```

NEXT i%
F3 = -Z
END FUNCTION 'F3

'-----
FUNCTION F4(R(),Nd%,p%,j&) 'F4 (n-D)
'MAXIMUM = ZERO (n-D CASE).
'Reference:
LOCAL Z, Xi, MaxXi AS EXT
LOCAL i%
MaxXi = -1E4200
FOR i% = 1 TO Nd%
Xi = R(p%,i%,j&)
IF ABS(Xi) >= MaxXi THEN MaxXi = ABS(Xi)
NEXT i%
F4 = -MaxXi
END FUNCTION 'F4

'-----
FUNCTION F5(R(),Nd%,p%,j&) 'F5 (n-D)
'MAXIMUM = ZERO (n-D CASE).
'Reference:
LOCAL Z, Xi, XiPlus1 AS EXT
LOCAL i%
Z = 0##
FOR i% = 1 TO Nd%-1
Xi = R(p%,i%,j&)
XiPlus1 = R(p%,i%+1,j&)
Z = Z + (100##*(XiPlus1-Xi^2)^2+(Xi-1##))^2
NEXT i%
F5 = -Z
END FUNCTION 'F5

'-----
FUNCTION F6(R(),Nd%,p%,j&) 'F6 (n-D STEP)
'MAXIMUM VALUE = 0 @ [offset]An.
'Reference:
'Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.

LOCAL Z AS EXT
LOCAL i%
Z = 0##
FOR i% = 1 TO Nd%
Z = Z + INT(R(p%,i%,j&) + 0.5##)^2
NEXT i%
F6 = -Z
END FUNCTION 'F6

'-----
FUNCTION F7(R(),Nd%,p%,j&) 'F7
'MAXIMUM VALUE = 0 @ [offset]An.
'Reference:
'Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.

LOCAL Z, Xi AS EXT
LOCAL i%
Z = 0##
FOR i% = 1 TO Nd%
Xi = R(p%,i%,j&)
Z = Z + i%*Xi^4
NEXT i%
F7 = -Z - RandomNum(0##,1##)
END FUNCTION 'F7

'-----
FUNCTION F8(R(),Nd%,p%,j&) '(n-D) F8 [Schwefel Problem 2.26]
'MAXIMUM = 12,569.5 @ [420.8687]^30 (30-D CASE).
'Reference:
'Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"

```

```

'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.
LOCAL Z, Xi AS EXT
LOCAL i%
Z = 0##
FOR i% = 1 TO Nd%
  Xi = R(p%,i%,j&)
  Z = Z - Xi*SIN(SQR(ABS(Xi)))
NEXT i%
F8 = -Z
END FUNCTION 'F8
'-----
FUNCTION F9(R(),Nd%,p%,j&) '(n-D) F9 [Rastrigin]
'MAXIMUM = ZERO (n-D CASE).
'Reference:
'Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.
LOCAL Z, Xi AS EXT
LOCAL i%
Z = 0##
FOR i% = 1 TO Nd%
  Xi = R(p%,i%,j&)
  Z = Z + (Xi^2 - 10##*COS(TwoPi*Xi) + 10##)^2
NEXT i%
F9 = -Z
END FUNCTION 'F9
'-----
FUNCTION F10(R(),Nd%,p%,j&) '(n-D) F10 [Ackley's Function]
'MAXIMUM = ZERO (n-D CASE).
'Reference:
'Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.
LOCAL Z, Xi, Sum1, Sum2 AS EXT
LOCAL i%
Z = 0## : Sum1 = 0## : Sum2 = 0##
FOR i% = 1 TO Nd%
  Xi = R(p%,i%,j&)
  Sum1 = Sum1 + Xi^2
  Sum2 = Sum2 + COS(TwoPi*Xi)
NEXT i%
Z = -20##*EXP(-0.2##*SQR(Sum1/Nd%)) - EXP(Sum2/Nd%) + 20## + e
F10 = -Z
END FUNCTION 'F10
'-----
FUNCTION F11(R(),Nd%,p%,j&) '(n-D) F11
'MAXIMUM = ZERO (n-D CASE).
'Reference:
'Yao, X., Liu, Y., and Lin, G., "Evolutionary Programming Made Faster,"
'IEEE Trans. Evolutionary Computation, Vol. 3, No. 2, 82-102, Jul. 1999.
LOCAL Z, Xi, Sum, Prod AS EXT
LOCAL i%
Z = 0## : Sum = 0## : Prod = 1##
FOR i% = 1 TO Nd%
  Xi = R(p%,i%,j&)
  Sum = Sum + (Xi-100##)^2
  Prod = Prod*COS((Xi-100##)/SQR(i%))
NEXT i%
Z = Sum/4000## - Prod + 1##
F11 = -Z
END FUNCTION 'F11
'-----
FUNCTION u(Xi,a,k,m)
LOCAL Z AS EXT
Z = 0##
SELECT CASE Xi
CASE > a : Z = k*(Xi-a)^m
CASE < -a : Z = k*(-Xi-a)^m

```

```

END SELECT
u = Z
END FUNCTION
'-----
FUNCTION F12(R(),Nd%,p%,j&) '(n-D) F12, Penalized #1
'Ref: Yao(1999). Max=0 @ (-1,-1,...,-1), -50=<Xi=<50.
LOCAL Offset, Sum1, Sum2, Z, X1, Y1, Xn, Yn, Xi, Yi, XiPlus1, YiPlus1 AS EXT
LOCAL i%, m%, A$
X1 = R(p%,1,j&) : Y1 = 1## + (X1+1##)/4##
Xn = R(p%,Nd%,j&) : Yn = 1## + (Xn+1##)/4##
Sum1 = 0##
FOR i% = 1 TO Nd%-1
Xi = R(p%,i%,j&) : Yi = 1## + (Xi+1##)/4##
XiPlus1 = R(p%,i%+1,j&) : YiPlus1 = 1## + (XiPlus1+1##)/4##
Sum1 = Sum1 + (Yi-1##)^2*(1##+10##*(SIN(Pi*YiPlus1))^2)
NEXT i%
Sum1 = Sum1 + 10##*(SIN(Pi*Y1))^2 + (Yn-1##)^2
Sum1 = Pi*Sum1/Nd%
Sum2 = 0##
FOR i% = 1 TO Nd%
Xi = R(p%,i%,j&)
Sum2 = Sum2 + u*(Xi,10##,100##,4##)
NEXT i%
Z = Sum1 + Sum2
F12 = -Z
END FUNCTION 'F12()
'-----
FUNCTION F13(R(),Nd%,p%,j&) '(n-D) F13, Penalized #2
'Ref: Yao(1999). Max=0 @ (1,1,...,1), -50=<Xi=<50.
LOCAL Offset, Sum1, Sum2, Z, Xi, Xn, XiPlus1, X1 AS EXT
LOCAL i%, m%, A$
X1 = R(p%,1,j&) : Xn = R(p%,Nd%,j&)
Sum1 = 0##
FOR i% = 1 TO Nd%-1
Xi = R(p%,i%,j&) : XiPlus1 = R(p%,i%+1,j&)
Sum1 = Sum1 + (Xi-1##)^2*(1##+(SIN(3##*Pi*XiPlus1))^2)
NEXT i%
Sum1 = Sum1 + (SIN(Pi*3##*X1))^2 + (Xn-1##)^2*(1##+(SIN(TwoPi*Xn))^2)
Sum2 = 0##
FOR i% = 1 TO Nd%
Xi = R(p%,i%,j&)
Sum2 = Sum2 + u*(Xi,5##,100##,4##)
NEXT i%
Z = Sum1/10## + Sum2
F13 = -Z
END FUNCTION 'F13()
'-----
SUB FillArrayAij 'needed for function F14, Shekel's Foxholes
Aij(1,1)=-32## : Aij(1,2)=-16## : Aij(1,3)=0## : Aij(1,4)=16## : Aij(1,5)=32##
Aij(1,6)=-32## : Aij(1,7)=-16## : Aij(1,8)=0## : Aij(1,9)=16## : Aij(1,10)=32##
Aij(1,11)=-32## : Aij(1,12)=-16## : Aij(1,13)=0## : Aij(1,14)=16## : Aij(1,15)=32##
Aij(1,16)=-32## : Aij(1,17)=-16## : Aij(1,18)=0## : Aij(1,19)=16## : Aij(1,20)=32##
Aij(1,21)=-32## : Aij(1,22)=-16## : Aij(1,23)=0## : Aij(1,24)=16## : Aij(1,25)=32##
Aij(2,1)=-32## : Aij(2,2)=-32## : Aij(2,3)=-32## : Aij(2,4)=-32## : Aij(2,5)=-32##
Aij(2,6)=-16## : Aij(2,7)=-16## : Aij(2,8)=-16## : Aij(2,9)=-16## : Aij(2,10)=-16##
Aij(2,11)=0## : Aij(2,12)=0## : Aij(2,13)=0## : Aij(2,14)=0## : Aij(2,15)=0##
Aij(2,16)=-16## : Aij(2,17)=-16## : Aij(2,18)=-16## : Aij(2,19)=-16## : Aij(2,20)=-16##
Aij(2,21)=32## : Aij(2,22)=32## : Aij(2,23)=32## : Aij(2,24)=32## : Aij(2,25)=32##
END SUB
'-----
FUNCTION F14(R(),Nd%,p%,j&) 'F14 (2-D) Shekel's Foxholes (INVERTED...)
LOCAL Sum1, Sum2, Z, Xi AS EXT
LOCAL i%, jj%
Sum1 = 0##
FOR jj% = 1 TO 25
Sum2 = 0##
FOR i% = 1 TO 2
Xi = R(p%,i%,j&)
Sum2 = Sum2 + (Xi-Aij(i%,jj%))^6
NEXT i%
NEXT jj%
Z = Sum1 + Sum2
F14 = -Z
END FUNCTION 'F14()

```



```

NEXT i%
Sum1 = Sum1 + 1##/(jj%+Sum2)
NEXT j%
Z = 1##/(0.002##+Sum1)
F14 = -Z
END FUNCTION 'F14
'-----
FUNCTION F16(R(),Nd%,p%,j%) 'F16 (2-D) 6-Hump Camel-Back
LOCAL x1, x2, Z AS EXT
x1 = R(p%,1,j%) : x2 = R(p%,2,j%)
Z = 4##*x1^2 - 2.1##*x1^4 + x1^6/3## + x1*x2 - 4*x2^2 + 4*x2^4
F16 = -Z
END FUNCTION 'F16
'-----
FUNCTION F15(R(),Nd%,p%,j%) 'F15 (4-D) Kowalik's Function
'Global maximum = -0.0003075 @ (0.1928,0.1908,0.1231,0.1358)
LOCAL x1, x2, x3, x4, Num, Denom, Z, Aj(), Bj() AS EXT
LOCAL jj%
REDIM Aj(1 TO 11), Bj(1 TO 11)
Aj(1) = 0.1957## : Bj(1) = 1##/0.25##
Aj(2) = 0.1947## : Bj(2) = 1##/0.50##
Aj(3) = 0.1735## : Bj(3) = 1##/1.00##
Aj(4) = 0.1600## : Bj(4) = 1##/2.00##
Aj(5) = 0.0844## : Bj(5) = 1##/4.00##
Aj(6) = 0.0627## : Bj(6) = 1##/6.00##
Aj(7) = 0.0456## : Bj(7) = 1##/8.00##
Aj(8) = 0.0342## : Bj(8) = 1##/10.0##
Aj(9) = 0.0323## : Bj(9) = 1##/12.0##
Aj(10) = 0.0235## : Bj(10) = 1##/14.0##
Aj(11) = 0.0246## : Bj(11) = 1##/16.0##
Z = 0##
x1 = R(p%,1,j%) : x2 = R(p%,2,j%) : x3 = R(p%,3,j%) : x4 = R(p%,4,j%)
FOR jj% = 1 TO 11
Num = x1*(Bj(jj%)^2+Bj(jj%)*x2)
Denom = Bj(jj%)^2+Bj(jj%)*x3-x4
Z = Z + (Aj(jj%)-Num/Denom)^2
NEXT jj%
F15 = -Z
END FUNCTION 'F15
'-----
FUNCTION F17(R(),Nd%,p%,j%) 'F17, (2-D) Branin
'Global maximum = -0.398 @ (-3.142,12.275), (3.142,2.275), (9.425,2.425)
LOCAL x1, x2, Z AS EXT
x1 = R(p%,1,j%) : x2 = R(p%,2,j%)
Z = (x2-5.1##*x1^2/(4##*Pi^2)+5##*x1/Pi-6##)^2 + 10##*(1##-1##/(8##*Pi))^2*cos(x1) + 10##
F17 = -Z
END FUNCTION 'F17
'-----
FUNCTION F18(R(),Nd%,p%,j%) 'Goldstein-Price 2-D Test Function
'Global maximum = -3 @ (0,-1)
LOCAL Z, x1, x2, t1, t2 AS EXT
x1 = R(p%,1,j%) : x2 = R(p%,2,j%)
t1 = 1##+(x1+x2+1##)^2*(19##-14##*x1+3##*x1^2-14##*x2+6##*x1*x2+3##*x2^2)
t2 = 30##+(2##*x1-3##*x2)^2*(18##-32##*x1+12##*x1^2+48##*x2-36##*x1*x2+27##*x2^2)
Z = t1*t2
F18 = -Z
END FUNCTION 'F18()
'-----
FUNCTION F19(R(),Nd%,p%,j%) 'F19 (3-D) Hartman's Family #1
'Global maximum = 3.86 @ (0.114,0.556,0.852)
LOCAL xi, Z, Sum, Aji(), Cj(), Pji() AS EXT
LOCAL i%, jj%, m%
REDIM Aji(1 TO 4, 1 TO 3), Cj(1 TO 4), Pji(1 TO 4, 1 TO 3)
Aji(1,1) = 3.0## : Aji(1,2) = 10## : Aji(1,3) = 30## : Cj(1) = 1.0##
Aji(2,1) = 0.1## : Aji(2,2) = 10## : Aji(2,3) = 35## : Cj(2) = 1.2##
Aji(3,1) = 3.0## : Aji(3,2) = 10## : Aji(3,3) = 30## : Cj(3) = 3.0##
Aji(4,1) = 0.1## : Aji(4,2) = 10## : Aji(4,3) = 35## : Cj(4) = 3.2##
Pji(1,1) = 0.36890## : Pji(1,2) = 0.1170## : Pji(1,3) = 0.2673##
Pji(2,1) = 0.46990## : Pji(2,2) = 0.4387## : Pji(2,3) = 0.7470##
Pji(3,1) = 0.10910## : Pji(3,2) = 0.8732## : Pji(3,3) = 0.5547##
Pji(4,1) = 0.03815## : Pji(4,2) = 0.5743## : Pji(4,3) = 0.8828##
Z = 0##

```

```

FOR jj% = 1 TO 4
  Sum = 0##
  FOR i% = 1 TO 3
    Xi = R(p%,i%,j&)
    Sum = Sum + Aji(jj%,i%)*(Xi-Pji(jj%,i%))^2
  NEXT i%
  Z = Z + Cj(jj%)*EXP(-Sum)
NEXT jj%
F19 = Z
END FUNCTION 'F19
'-----
FUNCTION F20(RC),Nd%,p%,j& 'F20 (6-D) Hartman's Family #2
'Global maximum = 3.32 @ (0.201,0.150,0.477,0.275,0.311,0.657)
LOCAL Xi, Z, Sum, Aji(), Cj(), Pji() AS EXT
LOCAL i%, jj%, m%
REDIM Aji(1 TO 4, 1 TO 6), Cj(1 TO 4), Pji(1 TO 4, 1 TO 6)
Aji(1,1) = 10.0## : Aji(1,2) = 3.00## : Aji(1,3) = 17.0## : Cj(1) = 1.0##
Aji(2,1) = 0.05## : Aji(2,2) = 10.0## : Aji(2,3) = 17.0## : Cj(2) = 1.2##
Aji(3,1) = 3.00## : Aji(3,2) = 3.50## : Aji(3,3) = 1.70## : Cj(3) = 3.0##
Aji(4,1) = 17.0## : Aji(4,2) = 8.00## : Aji(4,3) = 0.05## : Cj(4) = 3.2##
Aji(1,4) = 3.5## : Aji(1,5) = 1.7## : Aji(1,6) = 8##
Aji(2,4) = 0.1## : Aji(2,5) = 8## : Aji(2,6) = 14##
Aji(3,4) = 10## : Aji(3,5) = 17## : Aji(3,6) = 8##
Aji(4,4) = 10## : Aji(4,5) = 0.1## : Aji(4,6) = 14##
Pji(1,1) = 0.13120## : Pji(1,2) = 0.1696## : Pji(1,3) = 0.5569##
Pji(2,1) = 0.23290## : Pji(2,2) = 0.4135## : Pji(2,3) = 0.8307##
Pji(3,1) = 0.23480## : Pji(3,2) = 0.1415## : Pji(3,3) = 0.3522##
Pji(4,1) = 0.40470## : Pji(4,2) = 0.8828## : Pji(4,3) = 0.8732##
Pji(1,4) = 0.01240## : Pji(1,5) = 0.8283## : Pji(1,6) = 0.5886##
Pji(2,4) = 0.37360## : Pji(2,5) = 0.1004## : Pji(2,6) = 0.9991##
Pji(3,4) = 0.28830## : Pji(3,5) = 0.3047## : Pji(3,6) = 0.6650##
Pji(4,4) = 0.57430## : Pji(4,5) = 0.1091## : Pji(4,6) = 0.0381##
Z = 0##
FOR jj% = 1 TO 4
  Sum = 0##
  FOR i% = 1 TO 6
    Xi = R(p%,i%,j&)
    Sum = Sum + Aji(jj%,i%)*(Xi-Pji(jj%,i%))^2
  NEXT i%
  Z = Z + Cj(jj%)*EXP(-Sum)
NEXT jj%
F20 = Z
END FUNCTION 'F20
'-----
FUNCTION F21(RC),Nd%,p%,j& 'F21 (4-D) Shekel's Family m=5
'Global maximum = 10
LOCAL Xi, Z, Sum, Aji(), Cj() AS EXT
LOCAL i%, jj%, m%
m% = 5 : REDIM Aji(1 TO m%, 1 TO 4), Cj(1 TO m%)
Aji(1,1) = 4## : Aji(1,2) = 4## : Aji(1,3) = 4## : Aji(1,4) = 4## : Cj(1) = 0.1##
Aji(2,1) = 1## : Aji(2,2) = 1## : Aji(2,3) = 1## : Aji(2,4) = 1## : Cj(2) = 0.2##
Aji(3,1) = 8## : Aji(3,2) = 8## : Aji(3,3) = 8## : Aji(3,4) = 8## : Cj(3) = 0.2##
Aji(4,1) = 6## : Aji(4,2) = 6## : Aji(4,3) = 6## : Aji(4,4) = 6## : Cj(4) = 0.4##
Aji(5,1) = 3## : Aji(5,2) = 7## : Aji(5,3) = 3## : Aji(5,4) = 7## : Cj(5) = 0.4##
Z = 0##
FOR jj% = 1 TO m% 'NOTE: Index jj% is used to avoid same variable name as j&
  Sum = 0##
  FOR i% = 1 TO 4 'shekel's family is 4-D only
    Xi = R(p%,i%,j&)
    Sum = Sum + (Xi-Aji(jj%,i%))^2
  NEXT i%
  Z = Z + 1##/(Sum + Cj(jj%))
NEXT jj%
F21 = Z
END FUNCTION 'F21
'-----
FUNCTION F22(RC),Nd%,p%,j& 'F22 (4-D) Shekel's Family m=7
'Global maximum = 10
LOCAL Xi, Z, Sum, Aji(), Cj() AS EXT
LOCAL i%, jj%, m%
m% = 7 : REDIM Aji(1 TO m%, 1 TO 4), Cj(1 TO m%)
Aji(1,1) = 4## : Aji(1,2) = 4## : Aji(1,3) = 4## : Aji(1,4) = 4## : Cj(1) = 0.1##
Aji(2,1) = 1## : Aji(2,2) = 1## : Aji(2,3) = 1## : Aji(2,4) = 1## : Cj(2) = 0.2##
Aji(3,1) = 8## : Aji(3,2) = 8## : Aji(3,3) = 8## : Aji(3,4) = 8## : Cj(3) = 0.2##

```

```

Aji(4,1) = 6## : Aji(4,2) = 6## : Aji(4,3) = 6## : Aji(4,4) = 6## : Cj(4) = 0.4##
Aji(5,1) = 3## : Aji(5,2) = 7## : Aji(5,3) = 3## : Aji(5,4) = 7## : Cj(5) = 0.4##
Aji(6,1) = 2## : Aji(6,2) = 9## : Aji(6,3) = 2## : Aji(6,4) = 9## : Cj(6) = 0.6##
Aji(7,1) = 5## : Aji(7,2) = 5## : Aji(7,3) = 3## : Aji(7,4) = 3## : Cj(7) = 0.3##

Z = 0##

FOR jj% = 1 TO m% 'NOTE: Index jj% is used to avoid same variable name as j&
  Sum = 0##
  FOR i% = 1 TO 4 'Shekel's family is 4-D only
    xi = R(p%,i%,j&)
    Sum = Sum + (xi-Aji(jj%,i%))^2
  NEXT i%
  Z = Z + 1##/(Sum + Cj(jj%))
NEXT jj%
F22 = Z
END FUNCTION 'F22

'-----
FUNCTION F23(R(),Nd%,p%,j&) 'F23 (4-D) Shekel's Family m=10
'Global maximum = 10
LOCAL xi, Z, Sum, Aji(), Cj() AS EXT
LOCAL i%, jj%, m%
m% = 10 : REDIM Aji(1 TO m%, 1 TO 4), Cj(1 TO m%)
Aji(1,1) = 4## : Aji(1,2) = 4## : Aji(1,3) = 4## : Aji(1,4) = 4## : Cj(1) = 0.1##
Aji(2,1) = 1## : Aji(2,2) = 1## : Aji(2,3) = 1## : Aji(2,4) = 1## : Cj(2) = 0.2##
Aji(3,1) = 8## : Aji(3,2) = 8## : Aji(3,3) = 8## : Aji(3,4) = 8## : Cj(3) = 0.2##
Aji(4,1) = 6## : Aji(4,2) = 6## : Aji(4,3) = 6## : Aji(4,4) = 6## : Cj(4) = 0.4##
Aji(5,1) = 3## : Aji(5,2) = 7## : Aji(5,3) = 3## : Aji(5,4) = 7## : Cj(5) = 0.4##
Aji(6,1) = 2## : Aji(6,2) = 9## : Aji(6,3) = 2## : Aji(6,4) = 9## : Cj(6) = 0.6##
Aji(7,1) = 5## : Aji(7,2) = 5## : Aji(7,3) = 3## : Aji(7,4) = 3## : Cj(7) = 0.3##
Aji(8,1) = 8## : Aji(8,2) = 1## : Aji(8,3) = 8## : Aji(8,4) = 1## : Cj(8) = 0.7##
Aji(9,1) = 6## : Aji(9,2) = 2## : Aji(9,3) = 6## : Aji(9,4) = 2## : Cj(9) = 0.5##
Aji(10,1) = 7## : Aji(10,2) = 3.6## : Aji(10,3) = 7## : Aji(10,4) = 3.6## : Cj(10) = 0.5##

Z = 0##

FOR jj% = 1 TO m% 'NOTE: Index jj% is used to avoid same variable name as j&
  Sum = 0##
  FOR i% = 1 TO 4 'shekel's family is 4-D only
    xi = R(p%,i%,j&)
    Sum = Sum + (xi-Aji(jj%,i%))^2
  NEXT i%
  Z = Z + 1##/(Sum + Cj(jj%))
NEXT jj%
F23 = Z
END FUNCTION 'F23

'===== END FUNCTION DEFINITIONS =====

SUB Plot2DbestProbeTrajectories(NumTrajectories%,M(),R(),Np%,Nd%,LastStep&,FunctionName$)
LOCAL TrajectoryNumber%, ProbeNumber%, StepNumber&, N%, M%, ProcID??
LOCAL MaximumFitness, MinimumFitness AS EXT
LOCAL BestProbeThisStep%()
LOCAL BestFitnessThisStep(), TempFitness() AS EXT
LOCAL Annotation$, xCoord$, yCoord$, GnuPlotEXE$, PlotwithLines$
Annotation$ = ""
PlotwithLines$ = "YES" "NO"
NumTrajectories% = MIN(Np%,NumTrajectories%)
GnuPlotEXE$ = "wgnuplot.exe"
' ----- Get Min/Max Fitnesses -----
MaximumFitness = M(1,0) : MinimumFitness = M(1,0) 'Note: M(p%,j&)
FOR StepNumber& = 0 TO LastStep&
  FOR ProbeNumber% = 1 TO Np%
    IF M(ProbeNumber%,StepNumber&) >= MaximumFitness THEN MaximumFitness = M(ProbeNumber%,StepNumber&)
    IF M(ProbeNumber%,StepNumber&) <= MinimumFitness THEN MinimumFitness = M(ProbeNumber%,StepNumber&)
  NEXT ProbeNumber%
NEXT StepNumber%
' ----- Copy Fitness Array M() into TempFitness to Preserve M() -----
REDIM TempFitness(1 TO Np%, 0 TO LastStep&)
FOR StepNumber& = 0 TO LastStep&
  FOR ProbeNumber% = 1 TO Np%
    TempFitness(ProbeNumber%,StepNumber&) = M(ProbeNumber%,StepNumber&)
  NEXT ProbeNumber%
NEXT StepNumber%
' ----- LOOP ON TRAJECTORIES -----
FOR TrajectoryNumber% = 1 TO NumTrajectories%
' ----- Get Trajectory Coordinate Data -----

```

```

REDIM BestFitnessThisStep(0 TO LastStep&), BestProbeThisStep(0 TO LastStep&)
FOR StepNumber& = 0 TO LastStep&
    BestFitnessThisStep(StepNumber&) = TempFitness(1,StepNumber&)
    FOR ProbeNumber% = 1 TO Np%
        IF TempFitness(ProbeNumber%,StepNumber&) >= BestFitnessThisStep(StepNumber&) THEN
            BestFitnessThisStep(StepNumber&) = TempFitness(ProbeNumber%,StepNumber&)
            BestProbeThisStep(StepNumber&) = ProbeNumber%
        END IF
    NEXT ProbeNumber%
NEXT StepNumber&

' ----- Create Plot Data File -----
N% = FREEFILE
SELECT CASE TrajectoryNumber%
    CASE 1 : OPEN "t1" FOR OUTPUT AS #N%
    CASE 2 : OPEN "t2" FOR OUTPUT AS #N%
    CASE 3 : OPEN "t3" FOR OUTPUT AS #N%
    CASE 4 : OPEN "t4" FOR OUTPUT AS #N%
    CASE 5 : OPEN "t5" FOR OUTPUT AS #N%
    CASE 6 : OPEN "t6" FOR OUTPUT AS #N%
    CASE 7 : OPEN "t7" FOR OUTPUT AS #N%
    CASE 8 : OPEN "t8" FOR OUTPUT AS #N%
    CASE 9 : OPEN "t9" FOR OUTPUT AS #N%
    CASE 10 : OPEN "t10" FOR OUTPUT AS #N%
END SELECT

' ----- Write Plot File Data -----
FOR StepNumber& = 0 TO LastStep&
    PRINT #N%, USING$( "#####" )+, R(BestProbeThisStep(StepNumber&), 1, StepNumber&), R(BestProbeThisStep(StepNumber&), 2, StepNumber&)
    TempFitness(BestProbeThisStep(StepNumber&), StepNumber&) = MinimumFitness 'so that same max will not be found for next trajectory
NEXT StepNumber&
CLOSE #N%
NEXT TrajectoryNumber%

' ----- Plot Trajectories -----
CALL CreateGNUPLOTINIFile(0.13##*ScreenWidth&, 0.18##*ScreenHeight&, 0.7##*ScreenHeight&, 0.7##*ScreenHeight&)
Annotation$ = ""
N% = FREEFILE
OPEN "cmd2d.gp" FOR OUTPUT AS #N%
PRINT #N%, "set xrange [ "+REMOVE$(STR$(Ximin(1)), ANY" ")+" : "+REMOVE$(STR$(Ximax(1)), ANY" ")+" ]"
PRINT #N%, "set yrange [ "+REMOVE$(STR$(Ximin(2)), ANY" ")+" : "+REMOVE$(STR$(Ximax(2)), ANY" ")+" ]"
PRINT #N%, "set label " + Quote$ + Annotation$ + Quote$ + " at graph " + xCoord$ + ", " + yCoord$
PRINT #N%, "set grid xtics " + "10"
PRINT #N%, "set grid ytics " + "10"
PRINT #N%, "set grid mxtics"
PRINT #N%, "set grid mytics"
PRINT #N%, "show grid"
PRINT #N%, "set title " + Quote$ + "2D " + FunctionName$ + " TRAJECTORIES OF PROBES WITH BEST\FITNESSES (ORDERED BY FITNESS)" + "\n" + RunID$ +
Quote$
PRINT #N%, "set xlabel " + Quote$ + "x1\n\n" + Quote$
PRINT #N%, "set ylabel " + Quote$ + "x2\n\n" + Quote$
IF PlotWithLines$ = "YES" THEN
    SELECT CASE NumTrajectories%
        CASE 1 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3"
        CASE 2 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l"
        CASE 3 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l, "+Quote$+"t3"+Quote$+" w l"
        CASE 4 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l, "+Quote$+"t3"+Quote$+" w l, "+Quote$+"t4"+Quote$+" w l"
        CASE 5 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l, "+Quote$+"t3"+Quote$+" w l, "+Quote$+"t4"+Quote$+" w l, "+Quote$+"t5"+Quote$+" w l"
        CASE 6 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l, "+Quote$+"t3"+Quote$+" w l, "+Quote$+"t4"+Quote$+" w l, "+Quote$+"t5"+Quote$+" w l, "+Quote$+"t6"+Quote$+" w l"
        CASE 7 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l, "+Quote$+"t3"+Quote$+" w l, "+Quote$+"t4"+Quote$+" w l, "+Quote$+"t5"+Quote$+" w l, "+Quote$+"t6"+Quote$+" w l, "+Quote$+"t7"+Quote$+" w l"
        CASE 8 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l, "+Quote$+"t3"+Quote$+" w l, "+Quote$+"t4"+Quote$+" w l, "+Quote$+"t5"+Quote$+" w l, "+Quote$+"t6"+Quote$+" w l, "+Quote$+"t7"+Quote$+" w l, "+Quote$+"t8"+Quote$+" w l"
        CASE 9 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l, "+Quote$+"t3"+Quote$+" w l, "+Quote$+"t4"+Quote$+" w l, "+Quote$+"t5"+Quote$+" w l, "+Quote$+"t6"+Quote$+" w l, "+Quote$+"t7"+Quote$+" w l, "+Quote$+"t8"+Quote$+" w l, "+Quote$+"t9"+Quote$+" w l"
        CASE 10 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" w l lw 3, "+Quote$+"t2"+Quote$+" w l, "+Quote$+"t3"+Quote$+" w l, "+Quote$+"t4"+Quote$+" w l, "+Quote$+"t5"+Quote$+" w l, "+Quote$+"t6"+Quote$+" w l, "+Quote$+"t7"+Quote$+" w l, "+Quote$+"t8"+Quote$+" w l, "+Quote$+"t9"+Quote$+" w l, "+Quote$+"t10"+Quote$+" w l"
    END SELECT
ELSE
    SELECT CASE NumTrajectories%
        CASE 1 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2"
        CASE 2 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2"
        CASE 3 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2, "+Quote$+"t3"+Quote$+" lw 2"
        CASE 4 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2, "+Quote$+"t3"+Quote$+" lw 2, "+Quote$+"t4"+Quote$+" lw 2"
        CASE 5 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2, "+Quote$+"t3"+Quote$+" lw 2, "+Quote$+"t4"+Quote$+" lw 2, "+Quote$+"t5"+Quote$+" lw 2"
        CASE 6 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2, "+Quote$+"t3"+Quote$+" lw 2, "+Quote$+"t4"+Quote$+" lw 2, "+Quote$+"t5"+Quote$+" lw 2, "+Quote$+"t6"+Quote$+" lw 2"
        CASE 7 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2, "+Quote$+"t3"+Quote$+" lw 2, "+Quote$+"t4"+Quote$+" lw 2, "+Quote$+"t5"+Quote$+" lw 2, "+Quote$+"t6"+Quote$+" lw 2, "+Quote$+"t7"+Quote$+" lw 2"
        CASE 8 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2, "+Quote$+"t3"+Quote$+" lw 2, "+Quote$+"t4"+Quote$+" lw 2, "+Quote$+"t5"+Quote$+" lw 2, "+Quote$+"t6"+Quote$+" lw 2, "+Quote$+"t7"+Quote$+" lw 2, "+Quote$+"t8"+Quote$+" lw 2"
        CASE 9 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2, "+Quote$+"t3"+Quote$+" lw 2, "+Quote$+"t4"+Quote$+" lw 2, "+Quote$+"t5"+Quote$+" lw 2, "+Quote$+"t6"+Quote$+" lw 2, "+Quote$+"t7"+Quote$+" lw 2, "+Quote$+"t8"+Quote$+" lw 2, "+Quote$+"t9"+Quote$+" lw 2"
        CASE 10 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2, "+Quote$+"t2"+Quote$+" lw 2, "+Quote$+"t3"+Quote$+" lw 2, "+Quote$+"t4"+Quote$+" lw 2, "+Quote$+"t5"+Quote$+" lw 2, "+Quote$+"t6"+Quote$+" lw 2, "+Quote$+"t7"+Quote$+" lw 2, "+Quote$+"t8"+Quote$+" lw 2, "+Quote$+"t9"+Quote$+" lw 2, "+Quote$+"t10"+Quote$+" lw 2"
    END SELECT

```

```

CASE 10 : PRINT #N%, "plot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" ,"+Quote$+"t3"+Quote$+" ,"+Quote$+"t4"+Quote$+"
"+Quote$+"t5"+Quote$+" ,"+Quote$+"t6"+Quote$+" ,"+Quote$+"t7"+Quote$+" ,"+Quote$+"t8"+Quote$+" ,"+Quote$+"t9"+Quote$+" ,"+Quote$+"t10"+Quote$
END SELECT
END IF
CLOSE #N%
ProcID??? = SHELL(GnuPlotEXE$+" cmd2d.gp -") : CALL Delay(1#)
END SUB 'Plot2DbestProbeTrajectories()
'-----
SUB Plot2DindividualProbeTrajectories(NumTrajectories%,M(),R(),Np%,Nd%,LastStep&,FunctionName$)
LOCAL ProbeNumber%, StepNumber&, N%, ProcID???
LOCAL Annotation$, xCoord$, yCoord$, GnuPlotEXE$, PlotWithLines$
NumTrajectories% = MIN(Np%,NumTrajectories%)
Annotation$ = ""
PlotWithLines$ = "YES" "No"
GnuPlotEXE$ = "wgnuplot.exe"
'----- LOOP ON PROBES -----
FOR ProbeNumber% = 1 TO MIN(NumTrajectories%,Np%)
'----- Create Plot Data File -----
N% = FREEFILE
SELECT CASE ProbeNumber%
CASE 1 : OPEN "p1" FOR OUTPUT AS #N%
CASE 2 : OPEN "p2" FOR OUTPUT AS #N%
CASE 3 : OPEN "p3" FOR OUTPUT AS #N%
CASE 4 : OPEN "p4" FOR OUTPUT AS #N%
CASE 5 : OPEN "p5" FOR OUTPUT AS #N%
CASE 6 : OPEN "p6" FOR OUTPUT AS #N%
CASE 7 : OPEN "p7" FOR OUTPUT AS #N%
CASE 8 : OPEN "p8" FOR OUTPUT AS #N%
CASE 9 : OPEN "p9" FOR OUTPUT AS #N%
CASE 10 : OPEN "p10" FOR OUTPUT AS #N%
CASE 11 : OPEN "p11" FOR OUTPUT AS #N%
CASE 12 : OPEN "p12" FOR OUTPUT AS #N%
CASE 13 : OPEN "p13" FOR OUTPUT AS #N%
CASE 14 : OPEN "p14" FOR OUTPUT AS #N%
CASE 15 : OPEN "p15" FOR OUTPUT AS #N%
CASE 16 : OPEN "p16" FOR OUTPUT AS #N%
END SELECT
'----- Write Plot File Data -----
FOR StepNumber& = 0 TO LastStep&
PRINT #N%, USING$( "#####.#####.#####.#####",R(ProbeNumber%,1,StepNumber&),R(ProbeNumber%,2,StepNumber&))
NEXT StepNumber&
CLOSE #N%
NEXT ProbeNumber%
'----- Plot Trajectories -----
'usage: CALL CreateGnuPlotINIFile(PlotWindowULC_X%,PlotWindowULC_Y%,PlotWindowWidth%,PlotWindowHeight%)
CALL CreateGnuPlotINIFile(0.17##*ScreenWidth&,0.22##*ScreenHeight&,0.7##*ScreenHeight&,0.7##*ScreenHeight&)
Annotation$ = ""
N% = FREEFILE
OPEN "cmd2d.gp" FOR OUTPUT AS #N%
PRINT #N%, "set xrange ["+REMOVE$(STR$(Ximin(1)),ANY"")+" : "+REMOVE$(STR$(Ximax(1)),ANY"")+" ]"
PRINT #N%, "set yrange ["+REMOVE$(STR$(Ximin(2)),ANY"")+" : "+REMOVE$(STR$(Ximax(2)),ANY"")+" ]"
PRINT #N%, "set grid xtics " + "10"
PRINT #N%, "set grid ytics " + "10"
PRINT #N%, "set grid mxtics"
PRINT #N%, "set grid mytics"
PRINT #N%, "show grid"
PRINT #N%, "set title " + Quote$ + "2D " + FunctionName$ + " INDIVIDUAL PROBE TRAJECTORIES\n(ORDERED BY PROBE #)" + "\n" + RunID$ + Quote$
PRINT #N%, "set xlabel " + Quote$ + "x1\n" + Quote$
PRINT #N%, "set ylabel " + Quote$ + "y1\n" + Quote$
IF PlotWithLines$ = "YES" THEN
SELECT CASE NumTrajectories%
CASE 1 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1"
CASE 2 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2"+Quote$+" w l"
CASE 3 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2"+Quote$+" w l,"+Quote$+"p3"+Quote$+" w l"
CASE 4 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2"+Quote$+" w l,"+Quote$+"p3"+Quote$+" w l,"+Quote$+"p4"+Quote$+" w
1"
CASE 5 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2"+Quote$+" w l,"+Quote$+"p3"+Quote$+" w l,"+Quote$+"p4"+Quote$+" w
1,"+Quote$+"p5"+Quote$+" w l"
CASE 6 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2"+Quote$+" w l,"+Quote$+"p3"+Quote$+" w l,"+Quote$+"p4"+Quote$+" w
1,"+Quote$+"p5"+Quote$+" w l,"+Quote$+"p6"+Quote$+" w l"
CASE 7 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l,"+Quote$+"p2"+Quote$+" w l,"+Quote$+"p3"+Quote$+" w l,"+Quote$+"p4"+Quote$+" w
1,"+Quote$+"p5"+Quote$+" w l,"+Quote$+"p6"+Quote$+" w l,"+Quote$+"p7"+Quote$+" w l"
CASE 8 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2"+Quote$+" w l,"+Quote$+"p3"+Quote$+" w l,"+Quote$+"p4"+Quote$+" w
1,"+Quote$+"p5"+Quote$+" w l,"+Quote$+"p6"+Quote$+" w l,"+Quote$+"p7"+Quote$+" w l,"+Quote$+"p8"+Quote$+" w l"
CASE 9 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2"+Quote$+" w l,"+Quote$+"p3"+Quote$+" w l,"+Quote$+"p4"+Quote$+" w
1,"+Quote$+"p5"+Quote$+" w l,"+Quote$+"p6"+Quote$+" w l,"+Quote$+"p7"+Quote$+" w l,"+Quote$+"p8"+Quote$+" w l,"+Quote$+"p9"+Quote$+" w
1"
CASE 10 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2"+Quote$+" w l,"+Quote$+"p3"+Quote$+" w l,"+Quote$+"p4"
+Quote$+" w l,"+Quote$+"p5"+Quote$+" w l,"+Quote$+"p6"+Quote$+" w l,"+Quote$+"p7"+Quote$+" w l,"+Quote$+"p8"+Quote$+" w l,"+Quote$+"p9"
+Quote$+" w l,"+Quote$+"p10"+Quote$+" w l"
CASE 11 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2" +Quote$+" w l,"+Quote$+"p3" +Quote$+" w l,"+Quote$+"p4"
+Quote$+" w l,"+Quote$+"p5" +Quote$+" w l,"+Quote$+"p6" +Quote$+" w l,"+Quote$+"p7" +Quote$+" w l,"+Quote$+"p8" +Quote$+" w l,"+Quote$+"p9"
+Quote$+" w l,"+Quote$+"p10"+Quote$+" w l,"+Quote$+"p11"+Quote$+" w l"
CASE 12 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w l lw 1,"+Quote$+"p2" +Quote$+" w l,"+Quote$+"p3" +Quote$+" w l,"+Quote$+"p4"
+Quote$+" w l,"+Quote$+"p5" +Quote$+" w l,"+Quote$+"p6" +Quote$+" w l,"+

```

```

1,"+Quote$+"p10"+Quote$+" w 1,"+Quote$+"p11"+Quote$+" w 1,"+Quote$+"p12"+Quote$+" w 1,"+Quote$+"p7" +Quote$+" w 1," +Quote$+"p8" +Quote$+" w 1,"+Quote$+"p9" +Quote$+" w
+Quote$+" w 1,"+Quote$+"p5" +Quote$+" w 1,"+Quote$+"p6" +Quote$+" w 1,"+Quote$+"p2" +Quote$+" w 1,"+Quote$+"p3" +Quote$+" w 1,"+Quote$+"p4"
1,"+Quote$+"p10"+Quote$+" w 1,"+Quote$+"p11"+Quote$+" w 1,"+Quote$+"p12"+Quote$+" w 1,"+Quote$+"p7" +Quote$+" w 1,"+Quote$+"p8" +Quote$+" w 1,"+Quote$+"p9" +Quote$+" w
Quote$+"p13" +Quote$+" w 1,"
CASE 13 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w 1 lw 1,"+Quote$+"p2" +Quote$+" w 1,"+Quote$+"p3" +Quote$+" w 1,"+Quote$+"p4"
+Quote$+" w 1,"+Quote$+"p5" +Quote$+" w 1,"+Quote$+"p6" +Quote$+" w 1,"+Quote$+"p7" +Quote$+" w 1,"+Quote$+"p8" +Quote$+" w 1,"+Quote$+"p9" +Quote$+" w
Quote$+"p13" +Quote$+" w 1,"
CASE 14 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w 1 lw 1,"+Quote$+"p2" +Quote$+" w 1,"+Quote$+"p3" +Quote$+" w 1,"+Quote$+"p4"
+Quote$+" w 1,"+Quote$+"p5" +Quote$+" w 1,"+Quote$+"p6" +Quote$+" w 1,"+Quote$+"p7" +Quote$+" w 1,"+Quote$+"p8" +Quote$+" w 1,"+Quote$+"p9" +Quote$+" w
Quote$+"p13" +Quote$+" w 1,"+Quote$+"p14" +Quote$+" w 1"
CASE 15 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w 1 lw 1,"+Quote$+"p2" +Quote$+" w 1,"+Quote$+"p3" +Quote$+" w 1,"+Quote$+"p4"
+Quote$+" w 1,"+Quote$+"p5" +Quote$+" w 1,"+Quote$+"p6" +Quote$+" w 1,"+Quote$+"p7" +Quote$+" w 1,"+Quote$+"p8" +Quote$+" w 1,"+Quote$+"p9" +Quote$+" w
Quote$+"p13" +Quote$+" w 1,"+Quote$+"p14" +Quote$+" w 1,"+Quote$+"p15" +Quote$+" w 1"
CASE 16 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" w 1 lw 1,"+Quote$+"p2" +Quote$+" w 1,"+Quote$+"p3" +Quote$+" w 1,"+Quote$+"p4"
+Quote$+" w 1,"+Quote$+"p5" +Quote$+" w 1,"+Quote$+"p6" +Quote$+" w 1,"+Quote$+"p7" +Quote$+" w 1,"+Quote$+"p8" +Quote$+" w 1,"+Quote$+"p9" +Quote$+" w
Quote$+"p13" +Quote$+" w 1,"+Quote$+"p12"+Quote$+" w 1,"+Quote$+"p14" +Quote$+" w 1,"+Quote$+"p15" +Quote$+" w
1,"+Quote$+"p16"+Quote$+" w 1"
END SELECT
ELSE
SELECT CASE NumTrajectories%
CASE 1 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1"
CASE 2 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2"+Quote$
CASE 3 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2"+Quote$+" "+Quote$+"p3"+Quote$
CASE 4 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2"+Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4"+Quote$
CASE 5 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2"+Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4"+Quote$
"+Quote$+"p5"+Quote$
CASE 6 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2"+Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4"+Quote$+"
"+Quote$+"p5"+Quote$+" "+Quote$+"p6"+Quote$
CASE 7 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2"+Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4"+Quote$+"
"+Quote$+"p5"+Quote$+" "+Quote$+"p6"+Quote$+" "+Quote$+"p7"+Quote$
CASE 8 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2"+Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4"+Quote$+"
"+Quote$+"p5"+Quote$+" "+Quote$+"p6"+Quote$+" "+Quote$+"p7"+Quote$+" "+Quote$+"p8"+Quote$
CASE 9 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2"+Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4"+Quote$+"
"+Quote$+"p5"+Quote$+" "+Quote$+"p6"+Quote$+" "+Quote$+"p7"+Quote$+" "+Quote$+"p8"+Quote$+" "+Quote$+"p9"+Quote$
"+Quote$+"p5"+Quote$+" "+Quote$+"p6"+Quote$+" "+Quote$+"p7"+Quote$+" "+Quote$+"p8"+Quote$+" "+Quote$+"p9"+Quote$
CASE 10 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2" +Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4" +Quote$+"
"+Quote$+"p5"+Quote$+" "+Quote$+"p6"+Quote$+" "+Quote$+"p7"+Quote$+" "+Quote$+"p8" +Quote$+" "+Quote$+"p9"+Quote$+" "+Quote$+"p10" +Quote$
"+Quote$+"p5" +Quote$+" "+Quote$+"p6" +Quote$+" "+Quote$+"p7"+Quote$+" "+Quote$+"p8" +Quote$+" "+Quote$+"p9"+Quote$+" "+Quote$+"p10" +Quote$+"
"+Quote$+"p11"+Quote$
CASE 11 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2" +Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4" +Quote$+"
"+Quote$+"p5" +Quote$+" "+Quote$+"p6" +Quote$+" "+Quote$+"p7"+Quote$+" "+Quote$+"p8" +Quote$+" "+Quote$+"p9"+Quote$+" "+Quote$+"p10" +Quote$+"
"+Quote$+"p11"+Quote$+" "+Quote$+"p12"+Quote$
CASE 12 : PRINT #N%, "plot "+Quote$+"p1"+Quote$+" lw 1,"+Quote$+"p2" +Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4" +Quote$+"
"+Quote$+"p5" +Quote$+" "+Quote$+"p6" +Quote$+" "+Quote$+"p7"+Quote$+" "+Quote$+"p8" +Quote$+" "+Quote$+"p9"+Quote$+" "+Quote$+"p10" +Quote$+"
"+Quote$+"p11"+Quote$+" "+Quote$+"p12"+Quote$
CASE 13 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" lw 1,"+Quote$+"p2" +Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4" +Quote$+"
"+Quote$+"p5" +Quote$+" "+Quote$+"p6" +Quote$+" "+Quote$+"p7" +Quote$+" "+Quote$+"p8" +Quote$+" "+Quote$+"p9"+Quote$+" "+Quote$+"p10" +Quote$+"
"+Quote$+"p11"+Quote$+" "+Quote$+"p12"+Quote$+" "+Quote$+"p13"+Quote$
CASE 14 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" lw 1,"+Quote$+"p2" +Quote$+" "+Quote$+"p3"+Quote$+" "+Quote$+"p4" +Quote$+"
"+Quote$+"p5" +Quote$+" "+Quote$+"p6" +Quote$+" "+Quote$+"p7" +Quote$+" "+Quote$+"p8" +Quote$+" "+Quote$+"p9"+Quote$+" "+Quote$+"p10" +Quote$+"
"+Quote$+"p11"+Quote$+" "+Quote$+"p12"+Quote$+" "+Quote$+"p13"+Quote$+" "+Quote$+"p14"+Quote$
CASE 15 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" lw 1,"+Quote$+"p2" +Quote$+" "+Quote$+"p3" +Quote$+" "+Quote$+"p4" +Quote$+"
"+Quote$+"p5" +Quote$+" "+Quote$+"p6" +Quote$+" "+Quote$+"p7" +Quote$+" "+Quote$+"p8" +Quote$+" "+Quote$+"p9" +Quote$+" "+Quote$+"p10" +Quote$+"
"+Quote$+"p11"+Quote$+" "+Quote$+"p12"+Quote$+" "+Quote$+"p13"+Quote$+" "+Quote$+"p14"+Quote$+" "+Quote$+"p15"+Quote$
CASE 16 : PRINT #N%, "plot "+Quote$+"p1" +Quote$+" lw 1,"+Quote$+"p2" +Quote$+" "+Quote$+"p3" +Quote$+" "+Quote$+"p4" +Quote$+"
"+Quote$+"p5" +Quote$+" "+Quote$+"p6" +Quote$+" "+Quote$+"p7" +Quote$+" "+Quote$+"p8" +Quote$+" "+Quote$+"p9" +Quote$+" "+Quote$+"p10" +Quote$+"
"+Quote$+"p11"+Quote$+" "+Quote$+"p12"+Quote$+" "+Quote$+"p13"+Quote$+" "+Quote$+"p14"+Quote$+" "+Quote$+"p15"+Quote$+" "+Quote$+"p16"+Quote$
END SELECT
END IF
CLOSE #N%
ProcID??? = SHELL(GnuPlotEXE$+" cmd2d.gp -") : CALL Delay(1#)
END SUB 'Plot2DindividualProbeTrajectories()
'-----
SUB Plot3DbestProbeTrajectories(NumTrajectories%,M(),R(),Np%,Nd%,LastStep&,FunctionName$) 'XYZZY
LOCAL TrajectoryNumber%, ProbeNumber%, StepNumber&, N%, M%, ProcID???
LOCAL MaximumFitness, MinimumFitness AS EXT
LOCAL BestProbeThisStep%( )
LOCAL BestFitnessThisStep(), TempFitness() AS EXT
LOCAL Annotation$, xCoord$, yCoord$, zCoord$, GnuPlotEXE$, PlotwithLines$
Annotation$ = ""
PlotwithLines$ = "NO" 'YES" "NO"
NumTrajectories% = MIN(Np%,NumTrajectories%)
GnuPlotEXE$ = "wgnuplot.exe"
' ----- Get Min/Max Fitnesses -----
MaximumFitness = M(1,0) : MinimumFitness = M(1,0) 'Note: M(p%,j&)
FOR StepNumber& = 0 TO LastStep&
FOR ProbeNumber% = 1 TO Np%
IF M(ProbeNumber%,StepNumber&) >= MaximumFitness THEN MaximumFitness = M(ProbeNumber%,StepNumber&)

```

```

IF M(ProbeNumber%,StepNumber%) =< MinimumFitness THEN MinimumFitness = M(ProbeNumber%,StepNumber%)
NEXT ProbeNumber%
NEXT StepNumber%
' ----- Copy Fitness Array M() into TempFitness to Preserve M() -----
REDIM TempFitness(1 TO Np%, 0 TO LastStep%)
FOR StepNumber% = 0 TO LastStep%
FOR ProbeNumber% = 1 TO Np%
TempFitness(ProbeNumber%,StepNumber%) = M(ProbeNumber%,StepNumber%)
NEXT ProbeNumber%
NEXT StepNumber%
' ----- LOOP ON TRAJECTORIES -----
FOR TrajectoryNumber% = 1 TO NumTrajectories%
' ----- Get Trajectory Coordinate Data -----
REDIM BestFitnessThisStep(0 TO LastStep%), BestProbeThisStep(0 TO LastStep%)
FOR StepNumber% = 0 TO LastStep%
BestFitnessThisStep(StepNumber%) = TempFitness(1,StepNumber%)
FOR ProbeNumber% = 1 TO Np%
IF TempFitness(ProbeNumber%,StepNumber%) >= BestFitnessThisStep(StepNumber%) THEN
BestFitnessThisStep(StepNumber%) = TempFitness(ProbeNumber%,StepNumber%)
BestProbeThisStep%(StepNumber%) = ProbeNumber%
END IF
NEXT ProbeNumber%
NEXT StepNumber%
' ----- Create Plot Data File -----
N% = FREEFILE
SELECT CASE TrajectoryNumber%
CASE 1 : OPEN "t1" FOR OUTPUT AS #N%
CASE 2 : OPEN "t2" FOR OUTPUT AS #N%
CASE 3 : OPEN "t3" FOR OUTPUT AS #N%
CASE 4 : OPEN "t4" FOR OUTPUT AS #N%
CASE 5 : OPEN "t5" FOR OUTPUT AS #N%
CASE 6 : OPEN "t6" FOR OUTPUT AS #N%
CASE 7 : OPEN "t7" FOR OUTPUT AS #N%
CASE 8 : OPEN "t8" FOR OUTPUT AS #N%
CASE 9 : OPEN "t9" FOR OUTPUT AS #N%
CASE 10 : OPEN "t10" FOR OUTPUT AS #N%
END SELECT
' ----- Write Plot File Data -----
FOR StepNumber% = 0 TO LastStep%
PRINT #N%, USING$("#####.#####.#####.#####")
#####.#####", R(BestProbeThisStep%(StepNumber%),1,StepNumber%),R(BestProbeThisStep%(StepNumber%),2,StepNumber%),R(BestProbeThisStep%(StepNumber%),3,Step
Number%))+CHR$(13)
TempFitness(BestProbeThisStep%(StepNumber%),StepNumber%) = MinimumFitness 'so that same max will not be found for next trajectory
NEXT StepNumber%
CLOSE #N%
NEXT TrajectoryNumber%
' ----- Plot Trajectories -----
'CALL CreateGnuplotINIfile(0.1##*Screenwidth&,0.25##*ScreenHeight&,0.6##*ScreenHeight&,0.6##*ScreenHeight&)
Annotation$ = ""
N% = FREEFILE
OPEN "cmd3d.gp" FOR OUTPUT AS #N%
PRINT #N%, "set pm3d"
PRINT #N%, "show pm3d"
PRINT #N%, "set hidden3d"
PRINT #N%, "set view 45, 45, 1, 1"
PRINT #N%, "unset colorbox"
PRINT #N%, "set xrange [" + REMOVE$(STR$(Ximin(1)),ANY"" ) + ";" + REMOVE$(STR$(Ximax(1)),ANY"" ) + "]"
PRINT #N%, "set yrange [" + REMOVE$(STR$(Yimin(2)),ANY"" ) + ";" + REMOVE$(STR$(Yimax(2)),ANY"" ) + "]"
PRINT #N%, "set zrange [" + REMOVE$(STR$(Zimin(3)),ANY"" ) + ";" + REMOVE$(STR$(Zimax(3)),ANY"" ) + "]"
PRINT #N%, "set grid xtics ytics ztics"
PRINT #N%, "show grid"
PRINT #N%, "set title " + Quote$ + "3D " + FunctionName$ + " PROBE TRAJECTORIES" + "\n" + RunID$ + Quote$
PRINT #N%, "set xlabel " + Quote$ + "x1" + Quote$
PRINT #N%, "set ylabel " + Quote$ + "x2" + Quote$
PRINT #N%, "set zlabel " + Quote$ + "x3" + Quote$
IF PlotWithLines$ = "YES" THEN
SELECT CASE NumTrajectories%
CASE 1 : PRINT #N%, "splot "+Quote$+"t1"+Quote$+" w l lw 3"
CASE 2 : PRINT #N%, "splot "+Quote$+"t1"+Quote$+" w l lw 3,"+Quote$+"t2"+Quote$+" w l"
CASE 3 : PRINT #N%, "splot "+Quote$+"t1"+Quote$+" w l lw 3,"+Quote$+"t2"+Quote$+" w l,"+Quote$+"t3"+Quote$+" w l"
CASE 4 : PRINT #N%, "splot "+Quote$+"t1"+Quote$+" w l lw 3,"+Quote$+"t2"+Quote$+" w l,"+Quote$+"t3"+Quote$+" w l,"+Quote$+"t4"+Quote$+" w l"
CASE 5 : PRINT #N%, "splot "+Quote$+"t1"+Quote$+" w l lw 3,"+Quote$+"t2"+Quote$+" w l,"+Quote$+"t3"+Quote$+" w l,"+Quote$+"t4"+Quote$+" w l,"+Quote$+"t5"+Quote$+" w l"
CASE 6 : PRINT #N%, "splot "+Quote$+"t1"+Quote$+" w l lw 3,"+Quote$+"t2"+Quote$+" w l,"+Quote$+"t3"+Quote$+" w l,"+Quote$+"t4"+Quote$+" w l,"+Quote$+"t5"+Quote$+" w l,"+Quote$+"t6"+Quote$+" w l"
CASE 7 : PRINT #N%, "splot "+Quote$+"t1"+Quote$+" w l lw 3,"+Quote$+"t2"+Quote$+" w l,"+Quote$+"t3"+Quote$+" w l,"+Quote$+"t4"+Quote$+" w l,"+Quote$+"t5"+Quote$+" w l,"+Quote$+"t6"+Quote$+" w l"
CASE 8 : PRINT #N%, "splot "+Quote$+"t1"+Quote$+" w l lw 3,"+Quote$+"t2"+Quote$+" w l,"+Quote$+"t3"+Quote$+" w l,"+Quote$+"t4"+Quote$+" w l,"+Quote$+"t5"+Quote$+" w l,"+Quote$+"t6"+Quote$+" w l,"+Quote$+"t7"+Quote$+" w l,"+Quote$+"t8"+Quote$+" w l"

```

```

CASE 9 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" w 1 lw 3,"+Quote$+"t2"+Quote$+" w 1,"+Quote$+"t3"+Quote$+" w 1,"+Quote$+"t4"+Quote$+" w 1,"+Quote$+"t5"+Quote$+" w 1,"+Quote$+"t6"+Quote$+" w 1,"+Quote$+"t7"+Quote$+" w 1,"+Quote$+"t8"+Quote$+" w 1,"+Quote$+"t9"+Quote$+" w 1"
CASE 10 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" w 1 lw 3,"+Quote$+"t2"+Quote$+" w 1,"+Quote$+"t3"+Quote$+" w 1,"+Quote$+"t4"+Quote$+" w 1,"+Quote$+"t5"+Quote$+" w 1,"+Quote$+"t6"+Quote$+" w 1,"+Quote$+"t7"+Quote$+" w 1,"+Quote$+"t8"+Quote$+" w 1,"+Quote$+"t9"+Quote$+" w 1,"+Quote$+"t10"+Quote$+" w 1"
END SELECT
ELSE
SELECT CASE NumTrajectories%
CASE 1 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2"
CASE 2 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$
CASE 3 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" "+Quote$+"t3"+Quote$
CASE 4 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" "+Quote$+"t3"+Quote$+" "+Quote$+"t4"+Quote$
CASE 5 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" "+Quote$+"t3"+Quote$+" "+Quote$+"t4"+Quote$+" "+Quote$+"t5"+Quote$
CASE 6 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" "+Quote$+"t3"+Quote$+" "+Quote$+"t4"+Quote$+" "+Quote$+"t5"+Quote$+" "+Quote$+"t6"+Quote$
CASE 7 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" "+Quote$+"t3"+Quote$+" "+Quote$+"t4"+Quote$+" "+Quote$+"t5"+Quote$+" "+Quote$+"t6"+Quote$+" "+Quote$+"t7"+Quote$
CASE 8 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" "+Quote$+"t3"+Quote$+" "+Quote$+"t4"+Quote$+" "+Quote$+"t5"+Quote$+" "+Quote$+"t6"+Quote$+" "+Quote$+"t7"+Quote$+" "+Quote$+"t8"+Quote$
CASE 9 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" "+Quote$+"t3"+Quote$+" "+Quote$+"t4"+Quote$+" "+Quote$+"t5"+Quote$+" "+Quote$+"t6"+Quote$+" "+Quote$+"t7"+Quote$+" "+Quote$+"t8"+Quote$+" "+Quote$+"t9"+Quote$
CASE 10 : PRINT #N%, "sp1ot "+Quote$+"t1"+Quote$+" lw 2,"+Quote$+"t2"+Quote$+" "+Quote$+"t3"+Quote$+" "+Quote$+"t4"+Quote$+" "+Quote$+"t5"+Quote$+" "+Quote$+"t6"+Quote$+" "+Quote$+"t7"+Quote$+" "+Quote$+"t8"+Quote$+" "+Quote$+"t9"+Quote$+" "+Quote$+"t10"+Quote$
END SELECT
END IF
CLOSE #N%
ProcID??? = SHELL(GnuPlotEXE$+" cmd3d.gp -") : CALL Delay(1#)
END SUB 'Plot3dbestProbeTrajectories()
'-----
FUNCTION HasDAVGsaturated$(Nsteps&,j&,Np%,Nd%,M(C),R(C),DiagLength)
LOCAL A$
LOCAL k&
LOCAL SumOfDavg, DavgStepJ AS EXT
LOCAL DavgSatTOL AS EXT
A$ = "NO"
DavgSatTOL = 0.0005## 'tolerance for DAVG saturation
IF j& < Nsteps& + 10 THEN GOTO ExitHasDAVGsaturated 'execute at least 10 steps after averaging interval before performing this check
DavgStepJ = DavgThisStep(j&,Np%,Nd%,M(C),R(C),DiagLength)
SumOfDavg = 0##
FOR k& = j&-Nsteps&+1 TO j& 'check this step and previous (Nsteps&-1) steps
SumOfDavg = SumOfDavg + DavgThisStep(k&,Np%,Nd%,M(C),R(C),DiagLength)
NEXT k&
IF ABS(SumOfDavg/Nsteps&-DavgStepJ) =< DavgSatTOL THEN A$ = "YES" 'saturation if (avg value - last value) are within TOL
ExitHasDAVGsaturated:
HasDAVGsaturated$ = A$
END FUNCTION 'HasDAVGsaturated$()
'-----
FUNCTION oscillationInDavg$(j&,Np%,Nd%,M(C),R(C),DiagLength)
LOCAL A$
LOCAL k&, NumSlopeChanges%
A$ = "NO"
NumSlopeChanges% = 0
IF j& < 15 THEN GOTO ExitDavgoscillation 'wait at least 15 steps
FOR k& = j&-10 TO j&-1 'check previous ten steps
IF (DavgThisStep(k&,Np%,Nd%,M(C),R(C),DiagLength)-DavgThisStep(k&-1,Np%,Nd%,M(C),R(C),DiagLength))* _
(DavgThisStep(k&+1,Np%,Nd%,M(C),R(C),DiagLength)-DavgThisStep(k&,Np%,Nd%,M(C),R(C),DiagLength))) < 0## THEN INCR NumSlopeChanges%
NEXT j&
IF NumSlopeChanges% >= 3 THEN A$ = "YES"
ExitDavgoscillation:
OscillationInDavg$ = A$
END FUNCTION 'oscillationInDavg$()
'-----
FUNCTION DavgThisStep(j&,Np%,Nd%,M(C),R(C),DiagLength)
LOCAL BestFitness, TotalDistanceAllProbes, SumSQ AS EXT
LOCAL p%, k&, N%, i%, BestProbeNumber%, BestTimeStep&
' ----- Best Probe #, etc. -----
FOR k& = 0 TO j&
BestFitness = M(1,k&)
FOR p% = 1 TO Np%
IF M(p%,k&) >= BestFitness THEN
BestFitness = M(p%,k&) : BestProbeNumber% = p% : BestTimeStep& = k&
END IF

```



```

        NEXT p% 'probe #
    NEXT k& 'time step
' ----- Average Distance to Best Probe -----
    TotalDistanceAllProbes = 0##
    FOR p% = 1 TO Np%
        SumSQ = 0##
        FOR i% = 1 TO Nd%
            SumSQ = SumSQ + (R(BestProbeNumber%,i%,BestTimeStep&)-R(p%,i%,j&))^2 'do not exclude p%=BestProbeNumber%(j&) from sum because it adds zero
        NEXT i%
        TotalDistanceAllProbes = TotalDistanceAllProbes + SQR(SumSQ)
    NEXT p%
    DavgThisStep = TotalDistanceAllProbes/(DiagLength*(Np%-1)) 'but exclude best probe from average
END FUNCTION 'davgThisStep()
'-----
SUB
PlotBestFitnessEvolution(Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
LOCAL BestFitness(), GlobalBestFitness AS EXT
LOCAL PlotAnnotation$, PlotTitle$
LOCAL p%, j&, N%
    REDIM BestFitness(0 TO LastStep&)
    CALL
GetPlotAnnotation(PlotAnnotation$,Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
    GlobalBestFitness = Mbest(1,0)
    FOR j& = 0 TO LastStep&
'
        BestFitness(j&) = Mbest(1,j&) 'orig code 03-23-2010
        BestFitness(j&) = -1E4200 'added 03-23-2010
        FOR p% = 1 TO Np%
            IF Mbest(p%,j&) >= BestFitness(j&) THEN BestFitness(j&) = Mbest(p%,j&)
            IF Mbest(p%,j&) >= GlobalBestFitness THEN GlobalBestFitness = Mbest(p%,j&)
        NEXT p% 'probe #
    NEXT j& 'time step
    N% = FREEFILE
    OPEN "Fitness" FOR OUTPUT AS #N%
'
    print #N%,"From Sub PlotBestFitness..."
    FOR j& = 0 TO LastStep&
'
        PRINT #N%, USING$( "##### ##.#####^#####" ,j&,BestFitness(j&))
        PRINT #N%, USING$( "#####.#####.#####" ,j&,BestFitness(j&))
    NEXT j&
    CLOSE #N%
    PlotAnnotation$ = PlotAnnotation$ + "Best Fitness = " + REMOVE$(STR$(ROUND(GlobalBestFitness,8)),ANY" ")
    PlotTitle$ = "Best Fitness vs Time Step\n" + "[" + REMOVE$(STR$(Np%),ANY" ") + " probes, "+REMOVE$(STR$(LastStep&),ANY" ")+" time steps]"
    CALL CreateGnuPlotINIFile(0.1##*ScreenWidth&,0.1##*ScreenHeight&,0.6##*ScreenWidth&,0.6##*ScreenHeight&)
    CALL Twoplot("Fitness","Best Fitness","0.7","0.7","Time Step\n\n." ".\n\nBest Fitness(X)"; _
        "wgnuplot.exe", " with lines linewidth 2",PlotAnnotation$)
END SUB 'PlotBestFitnessEvolution()
'-----
SUB
PlotAverageDistance(Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,R(),DiagLength,Gamma)
LOCAL Davg(), BestFitness(), TotalDistanceAllProbes, SumSQ AS EXT
LOCAL PlotAnnotation$, PlotTitle$
LOCAL p%, j&, N%, i%, BestProbeNumber%(), BestTimeStep&()
    REDIM Davg(0 TO LastStep&), BestFitness(0 TO LastStep&), BestProbeNumber%(0 TO LastStep&), BestTimeStep&(0 TO LastStep&)
    CALL
GetPlotAnnotation(PlotAnnotation$,Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
'
' ----- Best Probe #, etc. -----
    FOR j& = 0 TO LastStep&
        BestFitness(j&) = Mbest(1,j&)
        FOR p% = 1 TO Np%
            IF Mbest(p%,j&) >= BestFitness(j&) THEN
                BestFitness(j&) = Mbest(p%,j&) : BestProbeNumber%(j&) = p% : BestTimeStep&(j&) = j& 'only probe number is used at this time, but other data
are computed for possible future use.
            END IF
        NEXT p% 'probe #
    NEXT j& 'time step
    N% = FREEFILE
'
' ----- Average Distance to Best Probe -----
    FOR j& = 0 TO LastStep&

```

```

TotalDistanceAllProbes = 0##
FOR p% = 1 TO Np%
  SumsQ = 0##
  FOR i% = 1 TO Nd%
    SumsQ = SumsQ + (R(BestProbeNumber%(j&),i%,j&)-R(p%,i%,j&))^2 'do not exclude p%=BestProbeNumber%(j&) from sum because it adds zero
  NEXT i%
  TotalDistanceAllProbes = TotalDistanceAllProbes + SQR(SumsQ)
NEXT p%
Davg(j&) = TotalDistanceAllProbes/(DiagLength*(Np%-1)) 'but exclude best prove from average
NEXT j&
'----- Create Plot Data File -----
OPEN "davg" FOR OUTPUT AS #N%
FOR j& = 0 TO LastStep&
  PRINT #N%, USING$("#####.#####",j&,Davg(j&))
NEXT j&
CLOSE #N%
PlotTitle$ = "Average Distance of " + REMOVE$(STR$(Np%-1),ANY" ") + " Probes to Best Probe\nNormalized to Size of Decision Space\n" + _
["[" + REMOVE$(STR$(Np%),ANY" ") + " probes, " + REMOVE$(STR$(LastStep&),ANY" ") + " time steps]"
CALL CreateGnuPlotINIFile(0.2##*ScreenWidth&,0.2##*ScreenHeight&,0.6##*ScreenWidth&,0.6##*ScreenHeight&)
CALL TwoDPlot("davg",PlotTitle$,"0.7","0.9","Time Step\n\n",".\n\n-D-/Ldiag",_
"","","","","","","","","","wgnuplot.exe", "with lines linewidth 2",PlotAnnotation$)
END SUB 'PlotAverageDistance()
'-----
SUB
GetPlotAnnotation(PlotAnnotation$,Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
LOCAL AS
AS = "" : IF PlaceInitialProbes$ = "UNIFORM ON-AXIS" AND Nd% > 1 THEN AS = "(" + REMOVE$(STR$(Np%/Nd%),ANY" ") + "/axis)"
PlotAnnotation$ = RunID$ + "\n" + "=" + FunctionName$ + "(" + FormatInteger$(Nd%) + "-D" \n" + _
FormatInteger$(Np%) + " probes" + AS + "\n" + _
"G = " + FormatFP$(G,2) + "\n" + _
"Alpha = " + FormatFP$(Alpha,1) + "\n" + _
"Beta = " + FormatFP$(Beta,1) + "\n" + _
"DeltaT = " + FormatFP$(DeltaT,1) + "\n" + _
"Gamma = " + FormatFP$(Gamma,3) + "\n" + _
"Init Probes " + PlaceInitialProbes$ + "\n" + _
"Init Accel " + InitialAcceleration$ + "\n" + _
"Frep " + RepositionFactor$ + "\n"
END SUB
'-----
SUB
PlotBestProbeVsTimeStep(Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
LOCAL BestFitness AS EXT
LOCAL PlotAnnotation$, PlotTitle$
LOCAL p%, j&, N%, BestProbeNumber%(0 TO LastStep&)
REDIM BestProbeNumber%(0 TO LastStep&)
CALL
GetPlotAnnotation(PlotAnnotation$,Nd%,Np%,LastStep&,G,DeltaT,Alpha,Beta,Frep,Mbest(),PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$,Gamma)
FOR j& = 0 TO LastStep&
  BestFitness = Mbest(1,j&)
  FOR p% = 1 TO Np%
    IF Mbest(p%,j&) >= BestFitness THEN
      BestFitness = Mbest(p%,j&) : BestProbeNumber%(j&) = p%
    END IF
  NEXT p% 'probe #
NEXT j& 'time step
N% = FREEFILE
OPEN "Best Probe" FOR OUTPUT AS #N%
FOR j& = 0 TO LastStep&
  PRINT #N%, USING$("#####.#####",j&,BestProbeNumber%(j&))
NEXT j&
CLOSE #N%
PlotTitle$ = "Best Probe Number vs Time Step\n" + "[" + REMOVE$(STR$(Np%),ANY" ") + " probes, " + REMOVE$(STR$(LastStep&),ANY" ") + " time steps]"
CALL CreateGnuPlotINIFile(0.15##*ScreenWidth&,0.15##*ScreenHeight&,0.6##*ScreenWidth&,0.6##*ScreenHeight&)
'USAGE: CALL
TwoDPlot(PlotFileName$,PlotTitle$,xCoord$,yCoord$,xaxisLabel$,yaxisLabel$,LogXaxis$,LogYaxis$,xMin$,xMax$,yMin$,yMax$,xTics$,yTics$,GnuPlotEXE$,LineStyle$,A
nnotation$)
CALL TwoDPlot("Best Probe",PlotTitle$,"0.7","0.9","Time Step\n\n",".\n\nBest Probe #",,,,,,"0",NoSpaces$(Np%+1,0),,,,,,"wgnuplot.exe", " pt 8
ps .5 lw 1",PlotAnnotation$) 'pt, pointtype; ps, pointsize; lw, linewidth
END SUB 'PlotBestProbeVsTimeStep()
'-----
FUNCTION FormatInteger$(N%) : FormatInteger$ = REMOVE$(STR$(N%),ANY" ") : END FUNCTION

```

```

'-----
FUNCTION FormatFP$(X,Ndigits%)
LOCAL A$
IF X = 0## THEN
  A$ = "0." : GOTO ExitFormatFP
END IF
A$ = REMOVE$(STR$(ROUND(ABS(X),Ndigits%)),ANY" ")
IF ABS(X) < 1## THEN
  IF X > 0## THEN
    A$ = "0" + A$
  ELSE
    A$ = "-0" + A$
  END IF
ELSE
  IF X < 0## THEN A$ = "-" + A$
END IF
ExitFormatFP:
FormatFP$ = A$
END FUNCTION
'-----
SUB InitialProbeDistribution(Np%,Nd%,Nt&,R,C),PlaceInitialProbes$,Gamma)
LOCAL DeltaXi, DelX1, DelX2, Di AS EXT
LOCAL NumProbesPerDimension%, p%, i%, k%, NumX1points%, NumX2points%, x1pointNum%, x2pointNum%, A$
SELECT CASE PlaceInitialProbes$
CASE "UNIFORM ON-AXIS"
  IF Nd% > 1 THEN
    NumProbesPerDimension% = Np%\Nd% 'even #
  ELSE
    NumProbesPerDimension% = Np%
  END IF
  FOR i% = 1 TO Nd%
    FOR p% = 1 TO Np%
      R(p%,i%,0) = XiMin(i%) + Gamma*(XiMax(i%)-XiMin(i%))
    NEXT Np%
  NEXT i%
  FOR i% = 1 TO Nd% 'place probes probe line-by-probe line (i% is dimension number)
    DeltaXi = (XiMax(i%)-XiMin(i%))/(NumProbesPerDimension%-1)
    FOR k% = 1 TO NumProbesPerDimension%
      p% = k% + NumProbesPerDimension%*(i%-1) 'probe #
      R(p%,i%,0) = XiMin(i%) + (k%-1)*DeltaXi
    NEXT k%
  NEXT i%
CASE "UNIFORM ON-DIAGONAL"
  FOR p% = 1 TO Np%
    FOR i% = 1 TO Nd%
      DeltaXi = (XiMax(i%)-XiMin(i%))/(Np%-1)
      R(p%,i%,0) = XiMin(i%) + (p%-1)*DeltaXi
    NEXT i%
  NEXT p%
CASE "2D GRID"
  NumProbesPerDimension% = SQR(Np%) : NumX1points% = NumProbesPerDimension% : NumX2points% = NumX1points% 'broken down for possible future use
  DelX1 = (XiMax(1)-XiMin(1))/(NumX1points%-1)
  DelX2 = (XiMax(2)-XiMin(2))/(NumX2points%-1)
  FOR x1pointNum% = 1 TO NumX1points%
    FOR x2pointNum% = 1 TO NumX2points%
      p% = NumX1points%*(x1pointNum%-1)+x2pointNum% 'probe #
      R(p%,1,0) = XiMin(1) + DelX1*(x1pointNum%-1) 'x1 coord
      R(p%,2,0) = XiMin(2) + DelX2*(x2pointNum%-1) 'x2 coord
    NEXT x2pointNum%
  NEXT x1pointNum%
CASE "RANDOM"
  FOR p% = 1 TO Np%
    FOR i% = 1 TO Nd%
      R(p%,i%,0) = XiMin(i%) + RandomNum(0##,1##)*(XiMax(i%)-XiMin(i%))
    NEXT i%

```

```

        NEXT p%
    END SELECT
END SUB 'InitialProbeDistribution()
'-----
SUB
ChangeRunParameters(NumProbesPerDimension%,Np%,Nd%,Nt&,G,Alpha,Beta,DeltaT,Frep,PlaceInitialProbes$,InitialAcceleration$,RepositionFactor$,FunctionName$)
'THIS PROCEDURE NOT USED
LOCAL A$, DefaultValue$
    A$ = INPUTBOX$("# dimensions?", "Change # Dimensions (" + FunctionName$ + ")", NoSpaces$(Nd% + 0, 0)) : Nd% = VAL(A$) : IF Nd% < 1 OR Nd% > 500 THEN Nd% = 2
    IF Nd% > 1 THEN NumProbesPerDimension% = 2 * (NumProbesPerDimension% \ 2) 'require an even # probes on each probe line to avoid overlapping at origin
    (in symmetrical spaces at least...)
    IF Nd% = 1 THEN NumProbesPerDimension% = MAX(NumProbesPerDimension%, 3) 'at least 3 probes on x-axis for 1-D functions
    Np% = NumProbesPerDimension% * Nd%
    A$ = INPUTBOX$("# time steps?", "Change # Steps (" + FunctionName$ + ")", NoSpaces$(Nt& + 0, 0)) : Nt& = VAL(A$) : IF Nt& < 3 THEN Nt&
= 50
    A$ = INPUTBOX$("Grav Const G?", "Change G (" + FunctionName$ + ")", NoSpaces$(G, 2)) : G = VAL(A$) : IF G < -100## OR G > 100## THEN G
= 2##
    A$ = INPUTBOX$("Alpha?", "Change Alpha (" + FunctionName$ + ")", NoSpaces$(Alpha, 2)) : Alpha = VAL(A$) : IF Alpha < -50## OR Alpha > 50## THEN
Alpha = 2##
    A$ = INPUTBOX$("Beta?", "Change Beta (" + FunctionName$ + ")", NoSpaces$(Beta, 2)) : Beta = VAL(A$) : IF Beta < -50## OR Beta > 50## THEN Beta
= 2##
    A$ = INPUTBOX$("Delta T", "Change Delta-T (" + FunctionName$ + ")", NoSpaces$(DeltaT, 2)) : DeltaT = VAL(A$) : IF DeltaT =< 0## THEN
DeltaT = 1##
    A$ = INPUTBOX$("Frep [0-1]?", "Change Frep (" + FunctionName$ + ")", NoSpaces$(Frep, 3)) : Frep = VAL(A$) : IF Frep < 0## OR Frep > 1## THEN Frep
= 0.5##
' ----- Initial Probe Distribution -----
SELECT CASE PlaceInitialProbes$
CASE "UNIFORM ON-AXIS" : DefaultValue$ = "1"
CASE "UNIFORM ON-DIAGONAL" : DefaultValue$ = "2"
CASE "2D GRID" : DefaultValue$ = "3"
CASE "RANDOM" : DefaultValue$ = "4"
END SELECT
A$ = INPUTBOX$("Initial Probes?" + CHR$(13) + "1 - UNIFORM ON-AXIS" + CHR$(13) + "2 - UNIFORM ON-DIAGONAL" + CHR$(13) + "3 - 2D GRID" + CHR$(13) + "4 -
RANDOM", "Initial Probe Distribution (" + FunctionName$ + ")", DefaultValue$)
IF VAL(A$) < 1 OR VAL(A$) > 4 THEN A$ = "1"
SELECT CASE VAL(A$)
CASE 1 : PlaceInitialProbes$ = "UNIFORM ON-AXIS"
CASE 2 : PlaceInitialProbes$ = "UNIFORM ON-DIAGONAL"
CASE 3 : PlaceInitialProbes$ = "2D GRID"
CASE 4 : PlaceInitialProbes$ = "RANDOM"
END SELECT
IF Nd% = 1 AND PlaceInitialProbes$ = "UNIFORM ON-DIAGONAL" THEN PlaceInitialProbes$ = "UNIFORM ON-AXIS" 'cannot do diagonal in 1-D space
IF Nd% > 2 AND PlaceInitialProbes$ = "2D GRID" THEN PlaceInitialProbes$ = "UNIFORM ON-AXIS" '2D grid is available only in 2 dimensions!
' ----- Initial Acceleration -----
SELECT CASE InitialAcceleration$
CASE "ZERO" : DefaultValue$ = "1"
CASE "FIXED" : DefaultValue$ = "2"
CASE "RANDOM" : DefaultValue$ = "3"
END SELECT
A$ = INPUTBOX$("Initial Acceleration?" + CHR$(13) + "1 - ZERO" + CHR$(13) + "2 - FIXED" + CHR$(13) + "3 - RANDOM", "Initial Acceleration
(" + FunctionName$ + ")", DefaultValue$)
IF VAL(A$) < 1 OR VAL(A$) > 3 THEN A$ = "1"
SELECT CASE VAL(A$)
CASE 1 : InitialAcceleration$ = "ZERO"
CASE 2 : InitialAcceleration$ = "FIXED"
CASE 3 : InitialAcceleration$ = "RANDOM"
END SELECT
' ----- Reposition Factor -----
SELECT CASE RepositionFactor$
CASE "FIXED" : DefaultValue$ = "1"
CASE "VARIABLE" : DefaultValue$ = "2"
CASE "RANDOM" : DefaultValue$ = "3"
END SELECT
A$ = INPUTBOX$("Reposition Factor?" + CHR$(13) + "1 - FIXED" + CHR$(13) + "2 - VARIABLE" + CHR$(13) + "3 - RANDOM", "Retrieve Probes
(" + FunctionName$ + ")", DefaultValue$)
IF VAL(A$) < 1 OR VAL(A$) > 3 THEN A$ = "1"
SELECT CASE VAL(A$)
CASE 1 : RepositionFactor$ = "FIXED"
CASE 2 : RepositionFactor$ = "VARIABLE"
CASE 3 : RepositionFactor$ = "RANDOM"
END SELECT
END SUB 'ChangeRunParameters()
'-----
FUNCTION NoSpaces$(X, NumDigits%) : NoSpaces$ = REMOVE$(STR$(X, NumDigits%), ANY" ") : END FUNCTION
'-----
FUNCTION TerminateNowForSaturation$(j&, Nd%, Np%, Nt&, G, DeltaT, Alpha, Beta, R(), A(), M())
LOCAL A$, i&, p%, NumStepsForAveraging&
LOCAL BestFitness, AvgFitness, FitnessTOL AS EXT 'terminate if avg fitness does not change over NumStepsForAveraging& time steps
FitnessTOL = 0.00001## : NumStepsForAveraging& = 10
A$ = "NO"
IF j& >= NumStepsForAveraging+10 THEN 'wait until step 10 to start checking for fitness saturation
AvgFitness = 0##
FOR i& = j&-NumStepsForAveraging+1 TO j& 'avg fitness over current step & previous NumStepsForAveraging&-1 steps

```

```

BestFitness = M(1,i&)
FOR p% = 1 TO Np%
  IF M(p%,i&) >= BestFitness THEN BestFitness = M(p%,i&)
NEXT p%
AvgFitness = AvgFitness + BestFitness
NEXT i&
AvgFitness = AvgFitness/NumStepsForAveraging&
IF ABS(AvgFitness-BestFitness) < FitnessTOL THEN A$ = "YES" 'compare avg fitness to best fitness at this step
END IF
TerminateNowForSaturation$ = A$
END FUNCTION 'TerminateNowForSaturation$()
'-----
FUNCTION MagVector(V(),N%) 'returns magnitude of Nx1 column vector V
LOCAL SumSq AS EXT
LOCAL i%
SumSq = 0## : FOR i% = 1 TO N% : SumSq = SumSq + V(i%)^2 : NEXT i% : MagVector = SQR(SumSq)
END FUNCTION 'MagVector()
'---
FUNCTION UnitStep(X)
LOCAL Z AS EXT
IF X < 0## THEN
  Z = 0##
ELSE
  Z = 1##
END IF
UnitStep = Z
END FUNCTION 'UnitStep()
'---
SUB Plot1Dfunction(FunctionName$,R()) 'plots 1D function on-screen
LOCAL NumPoints%, i%, N%
LOCAL DeltaX, X AS EXT
NumPoints% = 32001
DeltaX = (xiMax(1)-xiMin(1))/(NumPoints%-1)
N% = FREEFILE
SELECT CASE FunctionName$
  CASE "ParrottF4" 'PARROTT F4 FUNCTION
    OPEN "ParrottF4" FOR OUTPUT AS #N%
    FOR i% = 1 TO NumPoints%
      R(1,1,0) = xiMin(1) + (i%-1)*DeltaX
      PRINT #N%, USING$("#.##### #.#####",R(1,1,0),ParrottF4(R),1,1,0)
    NEXT i%
    CLOSE #N%
    CALL CreateGnUPlotINIFile(0.2##*Screenwidth&,0.2##*ScreenHeight&,0.6##*Screenwidth&,0.6##*ScreenHeight&)
    CALL TwoDPlot("ParrottF4","Parrott F4 Function","0.7","0.7","\n\n.", ".\n\nParrott F4(X)","", "", "0", "1", "0", "1", "", "", "wgnplot.exe", " with
lines linewidth 2", "")
  END SELECT
END SUB
'-----
SUB CLEANUP 'probe coordinate plot files
IF DIR$("p1") <> "" THEN KILL "p1"
IF DIR$("p2") <> "" THEN KILL "p2"
IF DIR$("p3") <> "" THEN KILL "p3"
IF DIR$("p4") <> "" THEN KILL "p4"
IF DIR$("p5") <> "" THEN KILL "p5"
IF DIR$("p6") <> "" THEN KILL "p6"
IF DIR$("p7") <> "" THEN KILL "p7"
IF DIR$("p8") <> "" THEN KILL "p8"
IF DIR$("p9") <> "" THEN KILL "p9"
IF DIR$("p10") <> "" THEN KILL "p10"
IF DIR$("p11") <> "" THEN KILL "p11"
IF DIR$("p12") <> "" THEN KILL "p12"
IF DIR$("p13") <> "" THEN KILL "p13"
IF DIR$("p14") <> "" THEN KILL "p14"
IF DIR$("p15") <> "" THEN KILL "p15"
END SUB
'-----
SUB Plot2Dfunction(FunctionName$,R())
LOCAL A$
LOCAL NumPoints%, i%, k%, N%
LOCAL delX1, delX2, Z AS EXT
SELECT CASE FunctionName$
  CASE "BOWTIE" : NumPoints% = 5

```

```

CASE "YAGI" : NumPoints% = 5
CASE "PBM_1","PBM_2","PBM_3","PBM_4","PBM_5" : NumPoints% = 25
CASE ELSE : NumPoints% = 100
END SELECT
N% = FREEFILE : OPEN "TwoDplot.DAT" FOR OUTPUT AS #N%
De1X1 = (XiMax(1)-XiMin(1))/(NumPoints%-1) : De1X2 = (XiMax(2)-XiMin(2))/(NumPoints%-1)
FOR i% = 1 TO NumPoints%
R(1,1,0) = XiMin(1) + (i%-1)*De1X1 'x1 value
FOR k% = 1 TO NumPoints%
R(1,2,0) = XiMin(2) + (k%-1)*De1X2 'x2 value
Z = ObjectiveFunction(R(),2,1,0,FunctionName$)
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####.#####.#####",R(1,1,0),R(1,2,0),Z)
NEXT k%
PRINT #N%, ""
NEXT i%
CLOSE #N%
CALL CreateGnuPlotIniFile(0.1##*ScreenWidth&,0.1##*ScreenHeight&,0.6##*ScreenWidth&,0.6##*ScreenHeight&)
A$ = "" : IF INSTR(FunctionName$,"PBM_") > 0 THEN A$ = "Coarse "
CALL ThreeDplot2("TwoDplot.DAT",A$+"Plot of "+FunctionName$+" Function", "", "0.6","0.6","1.2", _
"x1","x2","z=F(x1,x2)", "", "", "wgnuplot.exe", "", "", "", "", "", "")
END SUB
'-----
SUB TwoDplot3curves(NumCurves%, PlotFileName1$, PlotFileName2$, PlotFileName3$, PlotTitle$, Annotation$, xCoord$, yCoord$, XaxisLabel$, YaxisLabel$, _
LogXaxis$, LogYaxis$, xMin$, xMax$, yMin$, yMax$, xTics$, yTics$, GnuPlotEXE$)
LOCAL N%
LOCAL LineSize$
LineSize$ = "2"
N% = FREEFILE
OPEN "cmd2d.gp" FOR OUTPUT AS #N%
IF LogXaxis$ = "YES" AND LogYaxis$ = "NO" THEN PRINT #N%, "set logscale x"
IF LogXaxis$ = "NO" AND LogYaxis$ = "YES" THEN PRINT #N%, "set logscale y"
IF LogXaxis$ = "YES" AND LogYaxis$ = "YES" THEN PRINT #N%, "set logscale xy"
IF xMin$ <> "" AND xMax$ <> "" THEN PRINT #N%, "set xrange ["+xMin$+":"+xMax$+ "]"
IF yMin$ <> "" AND yMax$ <> "" THEN PRINT #N%, "set yrange ["+yMin$+":"+yMax$+ "]"
PRINT #N%, "set label "+Quote$+Annotation$+Quote$+" at graph "+xCoord$+"," +yCoord$
PRINT #N%, "set grid xtics"
PRINT #N%, "set grid ytics"
PRINT #N%, "set xtics "+xTics$
PRINT #N%, "set ytics "+yTics$
PRINT #N%, "set grid mxtics"
PRINT #N%, "set grid mytics"
PRINT #N%, "set title "+Quote$+PlotTitle$+Quote$
PRINT #N%, "set xlabel "+Quote$+XaxisLabel$+Quote$
PRINT #N%, "set ylabel "+Quote$+YaxisLabel$+Quote$
SELECT CASE NumCurves%
CASE 1
PRINT #N%, "plot "+ Quote$ + PlotFileName1$ + Quote$ + " with lines linewidth "+ LineSize$
CASE 2
PRINT #N%, "plot "+ Quote$ + PlotFileName1$ + Quote$ + " with lines linewidth "+ LineSize$+", " + _
Quote$ + PlotFileName2$ + Quote$ + " with lines linewidth "+ LineSize$
CASE 3
PRINT #N%, "plot "+ Quote$ + PlotFileName1$ + Quote$ + " with lines linewidth "+ LineSize$+", " + _
Quote$ + PlotFileName2$ + Quote$ + " with lines linewidth "+ LineSize$+", " + _
Quote$ + PlotFileName3$ + Quote$ + " with lines linewidth "+ LineSize$
END SELECT
CLOSE #N%
SHELL(GnuPlotEXE$+" cmd2d.gp -")
CALL Delay(1##)
END SUB 'TwoDplot3Curves()
'---
FUNCTION Fibonacci&&(N%) 'RETURNS Nth FIBONACCI NUMBER
LOCAL i%, Fn&&, Fn1&&, Fn2&&
LOCAL A$
IF N% > 91 OR N% < 0 THEN
MSGBOX("ERROR! Fibonacci argument"+STR$(N%)+ " > 91. Out of range or < 0...") : EXIT FUNCTION
END IF
SELECT CASE N%
CASE 0: Fn&& = 1
CASE ELSE
Fn&& = 0 : Fn2&& = 1 : i% = 0
FOR i% = 1 TO N%
Fn&& = Fn1&& + Fn2&&
Fn1&& = Fn2&&
Fn2&& = Fn&&
NEXT i% 'LOOP

```

```

END SELECT
Fibonacci&& = Fn&&
END FUNCTION 'Fibonacci&&()'
'-----
FUNCTION RandomNum(a,b) 'Returns random number X, a=< X < b.
    RandomNum = a + (b-a)*RND
END FUNCTION 'RandomNum()'
'-----
FUNCTION GaussianDeviate(Mu,Sigma) 'returns NORMAL (Gaussian) random deviate with mean Mu and standard deviation Sigma (variance = Sigma^2)
'Refs: (1) Press, W.H., Flannery, B.P., Teukolsky, S.A., and Vetterling, W.T., "Numerical Recipes: The Art of Scientific Computing,"
      $7.2, Cambridge University Press, Cambridge, UK, 1986.
      (2) Shinzato, T., "Box Muller Method," 2007, http://www.sp.dis.titech.ac.jp/~shinzato/boxmuller.pdf
LOCAL s, t, Z AS EXT
    s = RND : t = RND
    Z = Mu + Sigma*SQR(-2#*LOG(s))*COS(TwoPi*t)
GaussianDeviate = Z
END FUNCTION 'GaussianDeviate()'
'-----
SUB ContourPlot(PlotFileName$,PlotTitle$,Annotation$,xCoord$,yCoord$,zCoord$, _
    xaxisLabel$,yaxisLabel$,zaxisLabel$,zMin$,zMax$,GnuPlotEXE$,AS)
    LOCAL N%
    N% = FREEFILE
    OPEN "cmd3d.gp" FOR OUTPUT AS #N%
        PRINT #N%, "show surface"
        PRINT #N%, "set hidden3d"
        IF zMin$ <> "" AND zMax$ <> "" THEN PRINT #N%, "set zrange [":zMin$:":zMax$:"]"
        PRINT #N%, "set label "+Quote$+Annotation$+Quote$+" at graph "+xCoord$+", "+yCoord$+", "+zCoord$
        PRINT #N%, "show label"
        PRINT #N%, "set grid xtics ytics ztics"
        PRINT #N%, "show grid"
        PRINT #N%, "set title "+Quote$+PlotTitle$+Quote$
        PRINT #N%, "set xlabel "+Quote$+xaxisLabel$+Quote$
        PRINT #N%, "set ylabel "+Quote$+yaxisLabel$+Quote$
        PRINT #N%, "set zlabel "+Quote$+zaxisLabel$+Quote$
        PRINT #N%, "splot "+Quote$+PlotFileName$+Quote$+AS " " notitle with linespoints 'AS" notitle with lines"
    CLOSE #N%
    SHELL(GnuPlotEXE$+" cmd3d.gp -")
END SUB 'ContourPlot()'
'---
SUB ThreeDplot(PlotFileName$,PlotTitle$,Annotation$,xCoord$,yCoord$,zCoord$, _
    xaxisLabel$,yaxisLabel$,zaxisLabel$,zMin$,zMax$,GnuPlotEXE$,AS)
    LOCAL N%, ProcessID???
    N% = FREEFILE
    OPEN "cmd3d.gp" FOR OUTPUT AS #N%
        PRINT #N%, "set pm3d"
        PRINT #N%, "show pm3d"
        IF zMin$ <> "" AND zMax$ <> "" THEN PRINT #N%, "set zrange [":zMin$:":zMax$:"]"
        PRINT #N%, "set label "+Quote$+Annotation$+Quote$+" at graph "+xCoord$+", "+yCoord$+", "+zCoord$
        PRINT #N%, "show label"
        PRINT #N%, "set grid xtics ytics ztics"
        PRINT #N%, "show grid"
        PRINT #N%, "set title "+Quote$+PlotTitle$+Quote$
        PRINT #N%, "set xlabel "+Quote$+xaxisLabel$+Quote$
        PRINT #N%, "set ylabel "+Quote$+yaxisLabel$+Quote$
        PRINT #N%, "set zlabel "+Quote$+zaxisLabel$+Quote$
        PRINT #N%, "splot "+Quote$+PlotFileName$+Quote$+AS+" notitle" with lines"
    CLOSE #N%
    SHELL(GnuPlotEXE$+" cmd3d.gp -") : CALL Delay(1##)
END SUB 'ThreeDplot()'
'---
SUB ThreeDplot2(PlotFileName$,PlotTitle$,Annotation$,xCoord$,yCoord$,zCoord$, _
    xaxisLabel$,yaxisLabel$,zaxisLabel$,zMin$,zMax$,GnuPlotEXE$,AS,xStart$,xStop$,yStart$,yStop$)
    LOCAL N%
    N% = FREEFILE
    OPEN "cmd3d.gp" FOR OUTPUT AS #N%
        PRINT #N%, "set pm3d"
        PRINT #N%, "show pm3d"
        PRINT #N%, "set hidden3d"
        PRINT #N%, "set view 45, 45, 1, 1"
        IF zMin$ <> "" AND zMax$ <> "" THEN PRINT #N%, "set zrange [":zMin$:":zMax$:"]"
        PRINT #N%, "set xrange [":xStart$:":xStop$:"]"
        PRINT #N%, "set yrange [":yStart$:":yStop$:"]"
        PRINT #N%, "set label "+Quote$ + Annotation$ + Quote$+" at graph "+xCoord$+", "+yCoord$+", "+zCoord$
        PRINT #N%, "show label"
        PRINT #N%, "set grid xtics ytics ztics"
        PRINT #N%, "show grid"
        PRINT #N%, "set title "+Quote$ + PlotTitle$ + Quote$
        PRINT #N%, "set xlabel "+Quote$+xaxisLabel$ + Quote$
        PRINT #N%, "set ylabel "+Quote$+yaxisLabel$ + Quote$
        PRINT #N%, "set zlabel "+Quote$+zaxisLabel$ + Quote$
        PRINT #N%, "splot "+Quote$+PlotFileName$ + Quote$ + AS + " notitle with lines"
    CLOSE #N%
    SHELL(GnuPlotEXE$+" cmd3d.gp -")
END SUB 'ThreeDplot2()'
'---
SUB TwoDplot2Curves(PlotFileName$,PlotFileName2$,PlotTitle$,Annotation$,xCoord$,yCoord$,xaxisLabel$,yaxisLabel$, _
    LogXaxis$,LogYaxis$,xMin$,xMax$,yMin$,yMax$,xtics$,ytics$,GnuPlotEXE$,LineStyle)

```

```

LOCAL N%, ProcessID???
N% = FREEFILE
OPEN "cmd2d.gp" FOR OUTPUT AS #N%
  "print #N%, "set output "+Quote$+"test.plt"+Quote$ 'tried this 3/11/06, didn't work...'
  IF LogXaxis$ = "YES" AND LogYaxis$ = "NO" THEN PRINT #N%, "set logscale x"
  IF LogXaxis$ = "NO" AND LogYaxis$ = "YES" THEN PRINT #N%, "set logscale y"
  IF LogXaxis$ = "YES" AND LogYaxis$ = "YES" THEN PRINT #N%, "set logscale xy"
  IF xMin$ <> "" AND xMax$ <> "" THEN PRINT #N%, "set xrange ["+xMin$+":"+xMax$+"]"
  IF yMin$ <> "" AND yMax$ <> "" THEN PRINT #N%, "set yrange ["+yMin$+":"+yMax$+"]"
  PRINT #N%, "set label "+Quote$+Annotation$+Quote$+" at graph "+xCoord$+","+yCoord$
  PRINT #N%, "set grid xtics"
  PRINT #N%, "set grid ytics"
  PRINT #N%, "set xtics "+xTics$
  PRINT #N%, "set ytics "+yTics$
  PRINT #N%, "set grid mxtics"
  PRINT #N%, "set grid mytics"
  PRINT #N%, "set title "+Quote$+PlotTitle$+Quote$
  PRINT #N%, "set xlabel "+Quote$+XaxisLabel$+Quote$
  PRINT #N%, "set ylabel "+Quote$+YaxisLabel$+Quote$
  PRINT #N%, "plot "+Quote$+PlotFileName1$+Quote$+" with lines linewidth "+REMOVE$(STR$(LineSize),ANY" ")+" "+Quote$+PlotFileName2$+Quote$+" with points pointsize 0.05"+REMOVE$(STR$(LineSize),ANY" ")
CLOSE #N%
ProcessID??? = SHELL(GnuPlotEXE$+" cmd2d.gp -") : CALL Delay(1##)
END SUB 'TwoDplot2Curves()
'---
SUB Probe2Dplots(ProbePlotsFileList$, PlotTitle$, Annotation$, xCoord$, yCoord$, XaxisLabel$, YaxisLabel$, _
LogXaxis$, LogYaxis$, xMin$, xMax$, yMin$, yMax$, xTics$, yTics$, GnuPlotEXE$)
LOCAL N%, ProcessID???
N% = FREEFILE
OPEN "cmd2d.gp" FOR OUTPUT AS #N%
  IF LogXaxis$ = "YES" AND LogYaxis$ = "NO" THEN PRINT #N%, "set logscale x"
  IF LogXaxis$ = "NO" AND LogYaxis$ = "YES" THEN PRINT #N%, "set logscale y"
  IF LogXaxis$ = "YES" AND LogYaxis$ = "YES" THEN PRINT #N%, "set logscale xy"
  IF xMin$ <> "" AND xMax$ <> "" THEN PRINT #N%, "set xrange ["+xMin$+":"+xMax$+"]"
  IF yMin$ <> "" AND yMax$ <> "" THEN PRINT #N%, "set yrange ["+yMin$+":"+yMax$+"]"
  PRINT #N%, "set label "+Quote$+Annotation$+Quote$+" at graph "+xCoord$+","+yCoord$
  PRINT #N%, "set grid xtics"
  PRINT #N%, "set grid ytics"
  PRINT #N%, "set xtics "+xTics$
  PRINT #N%, "set ytics "+yTics$
  PRINT #N%, "set grid mxtics"
  PRINT #N%, "set grid mytics"
  PRINT #N%, "set title "+Quote$+PlotTitle$+Quote$
  PRINT #N%, "set xlabel "+Quote$+XaxisLabel$+Quote$
  PRINT #N%, "set ylabel "+Quote$+YaxisLabel$+Quote$
  PRINT #N%, ProbePlotsFileList$
CLOSE #N%
ProcessID??? = SHELL(GnuPlotEXE$+" cmd2d.gp -") : CALL Delay(1##)
END SUB 'Probe2Dplots()
'---
SUB Show2Dprobes(RC), Np%, Nt%, j&, j&, Freq, BestFitness, BestProbeNumber%, BestTimeStep&, FunctionName$, RepositionFactor$, Gamma)
LOCAL N%, p%
LOCAL A$, PlotFileName$, PlotTitle$, Symbols$
LOCAL xMin$, xMax$, yMin$, yMax$
LOCAL s1, s2, s3, s4 AS EXT
PlotFileName$ = "Probes("+REMOVE$(STR$(j&),ANY" ")+" )"
IF j& > 0 THEN 'PLOT PROBES AT THIS TIME STEP
  PlotTitle$ = "\nLOCATIONS OF "+REMOVE$(STR$(Np%),ANY" ") + " PROBES AT TIME STEP" + STR$(j&) + " / " + REMOVE$(STR$(Nt&),ANY" ") + "\n" + _
  "Fitness = "+REMOVE$(STR$(ROUND(BestFitness,3)),ANY" ") + ", Probe # " + REMOVE$(STR$(BestProbeNumber%),ANY" ") + " at Step #" + _
  REMOVE$(STR$(BestTimeStep&),ANY" ") + " [" + Freq + "+REMOVE$(STR$(Freq,4),ANY" ") + " + RepositionFactor$ + "]"
ELSE 'PLOT INITIAL PROBE DISTRIBUTION
  PlotTitle$ = "\nLOCATIONS OF "+REMOVE$(STR$(Np%),ANY" ") + " INITIAL PROBES FOR " + FunctionName$ + " FUNCTION\n[" + Gamma + _
  "+STR$(ROUND(Gamma,3))+"]\n"
END IF
N% = FREEFILE : OPEN PlotFileName$ FOR OUTPUT AS #N%
  FOR p% = 1 TO Np% : PRINT #N%, USING$("#####.#####.#####.#####", R(p%, 1, j&), R(p%, 2, j&)) : NEXT p%
CLOSE #N%
s1 = 1.1## : s2 = 1.1## : s3 = 1.1## : s4 = 1.1## 'expand plots axes by 10%
IF xMin(1) > 0## THEN s1 = 0.9##
IF xMax(1) < 0## THEN s2 = 0.9##
IF xMin(2) > 0## THEN s3 = 0.9##
IF xMax(2) < 0## THEN s4 = 0.9##
xMin$ = REMOVE$(STR$(s1*xMin(1), 2), ANY" ")
xMax$ = REMOVE$(STR$(s2*xMax(1), 2), ANY" ")
yMin$ = REMOVE$(STR$(s3*yMin(2), 2), ANY" ")
yMax$ = REMOVE$(STR$(s4*yMax(2), 2), ANY" ")
CALL TwoDplot(PlotFileName$, PlotTitle$, "0.6", "0.7", "x1\n\n", "\nx2", "NO", "NO", xMin$, xMax$, yMin$, yMax$, "5", "5", "wgnuplot.exe", " pointsize 1 linewidth 2", "")
KILL PlotFileName$ 'erase plot data file after probes have been displayed
END SUB 'Show2Dprobes()
'---

```



```

SUB Show3Dprobes(R(),Np%,Nd%,Nt%,j&,Frep,BestFitness,BestProbeNumber%,BestTimeStep&,FunctionName$,RepositionFactor$,Gamma)
LOCAL N%, p%, PlotWindowULC_X%, PlotWindowULC_Y%, PlotWindowWidth%, PlotWindowHeight%, PlotWindowOffset%
LOCAL A$, PlotFileName$, PlotTitle$, Symbols$, Annotation$
LOCAL xMin$, xMax$, yMin$, yMax$, zMin$, zMax$
LOCAL s1, s2, s3, s4, s5, s6 AS EXT
PlotFileName$ = "Probes("+REMOVE$(STR$(j&),ANY" ")+" )"
IF j& > 0 THEN 'PLOT PROBES AT THIS TIME STEP
    PlotTitle$ = "\nLOCATIONS OF "+REMOVE$(STR$(Np%),ANY" ") + " PROBES AT TIME STEP" + STR$(j&) + " / " + REMOVE$(STR$(Nt&),ANY" ") + "\n" + _
    "Fitness = "+REMOVE$(STR$(ROUND(BestFitness,3)),ANY" ") + ", Probe #" + REMOVE$(STR$(BestProbeNumber%),ANY" ") + " at Step #" + _
    REMOVE$(STR$(BestTimeStep&),ANY" ") + " [Frep = "+REMOVE$(STR$(Frep,4),ANY" ") + " + " + RepositionFactor$ + "]" \n"
ELSE 'PLOT INITIAL PROBE DISTRIBUTION
    A$ = "" : IF Gamma > 0## AND Gamma < 1## THEN A$ = "0"
    PlotTitle$ = "\n"+REMOVE$(STR$(Np%),ANY" ") + "-PROBE IPD FOR FUNCTION " + FunctionName$ + ", GAMMA = "+A$+REMOVE$(STR$(ROUND(Gamma,3)),ANY" ")
END IF
' ----- Probe Coordinates -----
N% = FREEFILE : OPEN PlotFileName$ FOR OUTPUT AS #N%
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(1,1,j&),R(1,2,j&),R(1,3,j&)) 'This line repeats Probe #1's coordinates. It's
necessary
FOR p% = 1 TO Np% : PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(p%,1,j&),R(p%,2,j&),R(p%,3,j&)) : NEXT p%
CLOSE #N%
' ----- Principal Diagonal -----
N% = FREEFILE : OPEN "diag" FOR OUTPUT AS #N%
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",xMin(1),xMin(2),xMin(3))
PRINT #N%, ""
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",xMax(1),xMax(2),xMax(3))
CLOSE #N%
' ----- Probe Line #1 -----
N% = FREEFILE : OPEN "probeline1" FOR OUTPUT AS #N%
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(1,1,j&),R(1,2,j&),R(1,3,j&))
PRINT #N%, ""
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(Np%/Nd%,1,j&),R(Np%/Nd%,2,j&),R(Np%/Nd%,3,j&))
CLOSE #N%
' ----- Probe Line #2 -----
N% = FREEFILE : OPEN "probeline2" FOR OUTPUT AS #N%
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(1+Np%/Nd%,1,j&),R(1+Np%/Nd%,2,j&),R(1+Np%/Nd%,3,j&))
PRINT #N%, ""
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(2*Np%/Nd%,1,j&),R(2*Np%/Nd%,2,j&),R(2*Np%/Nd%,3,j&))
CLOSE #N%
' ----- Probe Line #3 -----
N% = FREEFILE : OPEN "probeline3" FOR OUTPUT AS #N%
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(1+2*Np%/Nd%,1,j&),R(1+2*Np%/Nd%,2,j&),R(1+2*Np%/Nd%,3,j&))
PRINT #N%, ""
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(3*Np%/Nd%,1,j&),R(3*Np%/Nd%,2,j&),R(3*Np%/Nd%,3,j&))
CLOSE #N%
' ----- RE-PLOT PROBE #1 BECAUSE OF SOME ARTIFACT THAT DROPS IT FROM PROBE LINE #1 ?????? -----
N% = FREEFILE : OPEN "probe1" FOR OUTPUT AS #N%
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(1,1,j&),R(1,2,j&),R(1,3,j&))
PRINT #N%, USING$("#####.#####.#####.#####.#####.#####",R(1,1,j&),R(1,2,j&),R(1,3,j&))
CLOSE #N%
s1 = 1.1## : s2 = s1 : s3 = s1 : s4 = s1 : s5 = s1 : s6 = s1 'expand plots axes by 10%
IF xMin(1) > 0## THEN s1 = 0.9##
IF xMax(1) < 0## THEN s2 = 0.9##
IF xMin(2) > 0## THEN s3 = 0.9##
IF xMax(2) < 0## THEN s4 = 0.9##
IF xMin(3) > 0## THEN s5 = 0.9##
IF xMax(3) < 0## THEN s6 = 0.9##
xMin$ = REMOVE$(STR$(s1*xMin(1),2),ANY" ")
xMax$ = REMOVE$(STR$(s2*xMax(1),2),ANY" ")
yMin$ = REMOVE$(STR$(s3*yMin(2),2),ANY" ")
yMax$ = REMOVE$(STR$(s4*yMax(2),2),ANY" ")
zMin$ = REMOVE$(STR$(s5*zMin(2),2),ANY" ")
zMax$ = REMOVE$(STR$(s6*zMax(2),2),ANY" ")
'USAGE: CALL ThreeDplot3(PlotFileName$,PlotTitle$,Annotation$,xCoords$,yCoords$,zCoords$, _
xaxisLabel$,yaxisLabel$,zaxisLabel$,zMin$,zMax$,GnuPlotEXE$,xStart$,xStop$,yStart$,yStop$)
PlotWindowULC_X% = 50 : PlotWindowULC_Y% = 50 : PlotWindowWidth% = 1000 : PlotWindowHeight% = 800
PlotWindowOffset% = 100*Gamma
CALL CreateGnuPlotINIFile(PlotWindowULC_X%+PlotWindowOffset%,PlotWindowULC_Y%+PlotWindowOffset%,PlotWindowWidth%,PlotWindowHeight%)
CALL ThreeDplot3(PlotFileName$,PlotTitle$,Annotation$,"0.6","0.7","0.8", _
"x1","x2","x3",zMin$,zMax$,"wgnuplot.exe",xMin$,xMax$,yMin$,yMax$)
'KILL PlotFileName$ 'erase plot data file after probes have been displayed
END SUB 'Show3Dprobes()
'---
SUB ThreeDplot3(PlotFileName$,PlotTitle$,Annotation$,xCoords$,yCoords$,zCoords$, _
xaxisLabel$,yaxisLabel$,zaxisLabel$,zMin$,zMax$,GnuPlotEXE$,xStart$,xStop$,yStart$,yStop$)
LOCAL N%, ProcID???
N% = FREEFILE
OPEN "cmd3d.gp" FOR OUTPUT AS #N%

```

```

PRINT #N%, "set pm3d"
PRINT #N%, "show pm3d"
PRINT #N%, "set htden3d"
PRINT #N%, "set view 45, 45, 1, 1"

PRINT #N%, "set view 45, 60, 1, 1"

IF zMin$ <> "" AND zMax$ <> "" THEN PRINT #N%, "set zrange ["+zMin$+":" +zMax$+ "]"

PRINT #N%, "set xrange [" + xStart$ + ":" + xStop$ + "]"
PRINT #N%, "set yrange [" + yStart$ + ":" + yStop$ + "]"

PRINT #N%, "set label " + Quote$ + Annotation$ + Quote$ + " at graph "+xCoord$+", "+yCoord$+", "+zCoord$
PRINT #N%, "show label"
PRINT #N%, "set grid xtics ytics ztics"
PRINT #N%, "show grid"
PRINT #N%, "set title " + Quote$+PlotTitle$ + Quote$
PRINT #N%, "set xlabel " + Quote$+XaxisLabel$ + Quote$
PRINT #N%, "set ylabel " + Quote$+YaxisLabel$ + Quote$
PRINT #N%, "set zlabel " + Quote$+ZaxisLabel$ + Quote$
PRINT #N%, "unset colorbox"
print #N%, "set style fill"

PRINT #N%, "splot " + Quote$+PlotFileName$ + Quote$ + " notitle lw l pt 8, " _
+ Quote$ + "diag" + Quote$ + " notitle w l, " _
+ Quote$ + "probeline1" + Quote$ + " notitle w l, " _
+ Quote$ + "probeline2" + Quote$ + " notitle w l, " _
+ Quote$ + "probeline3" + Quote$ + " notitle w l" _

CLOSE #N%

PROCID??? = SHELL(GnuPlotEXE$+" cmd3d.gp -")

CALL Delay(1##)

END SUB 'ThreeDplot3()

'-----

SUB TwoDplot(PlotFileName$, PlotTitle$, xCoord$, yCoord$, XaxisLabel$, YaxisLabel$, _
LogXaxis$, LogYaxis$, xMin$, xMax$, yMin$, yMax$, xTics$, yTics$, GnuPlotEXE$, Linetype$, Annotation$)

LOCAL N%, ProcessID???

N% = FREEFILE

OPEN "cmd2d.gp" FOR OUTPUT AS #N%

IF LogXaxis$ = "YES" AND LogYaxis$ = "NO" THEN PRINT #N%, "set logscale x"
IF LogXaxis$ = "NO" AND LogYaxis$ = "YES" THEN PRINT #N%, "set logscale y"
IF LogXaxis$ = "YES" AND LogYaxis$ = "YES" THEN PRINT #N%, "set logscale xy"

IF xMin$ <> "" AND xMax$ <> "" THEN PRINT #N%, "set xrange ["+xMin$+":" +xMax$+ "]"
IF yMin$ <> "" AND yMax$ <> "" THEN PRINT #N%, "set yrange ["+yMin$+":" +yMax$+ "]"

PRINT #N%, "set label " + Quote$ + Annotation$ + Quote$ + " at graph " + xCoord$ + " , " + yCoord$
PRINT #N%, "set grid xtics " + XTics$
PRINT #N%, "set grid ytics " + YTics$
PRINT #N%, "set grid mxtics"
PRINT #N%, "set grid mytics"
PRINT #N%, "show grid"
PRINT #N%, "set title " + Quote$+PlotTitle$+Quote$
PRINT #N%, "set xlabel " + Quote$+XaxisLabel$+Quote$
PRINT #N%, "set ylabel " + Quote$+YaxisLabel$+Quote$

PRINT #N%, "plot "+Quote$+PlotFileName$+Quote$+" notitle"+Linetype$

CLOSE #N%

ProcessID??? = SHELL(GnuPlotEXE$+" cmd2d.gp -") : CALL Delay(1##)

END SUB 'TwoDplot()

'-----

SUB CreateGnuPlotINIfile(PlotWindowULC_X%, PlotWindowULC_Y%, PlotWindowwidth%, PlotWindowHeight%)

LOCAL N%, WinPath$, A$, B$, WindowsDirectory$

WinPath$ = UCASE$(ENVIRON$("Path"))'DIR$( "C:\WINDOWS", 23)

DO
B$ = A$
A$ = EXTRACT$(WinPath$, A$ + ";")
WinPath$ = REMOVE$(WinPath$, A$ + ";")
IF RIGHT$(A$, 7) = "WINDOWS" OR A$ = B$ THEN EXIT LOOP
IF RIGHT$(A$, 5) = "WINNT" OR A$ = B$ THEN EXIT LOOP
LOOP

WindowsDirectory$ = A$

N% = FREEFILE

----- WGNUPLOT.INPUT FILE -----
OPEN WindowsDirectory$+"\wgnuplot.ini" FOR OUTPUT AS #N%

PRINT #N%, "[WGNUPLOT]"
PRINT #N%, "TextOrigin=0 0"
PRINT #N%, "TextSize=640 150"
PRINT #N%, "TextFont=Terminal, 9"
PRINT #N%, "GraphOrigin="+REMOVE$(STR$(PlotWindowULC_X%), ANY" ")+" "+REMOVE$(STR$(PlotWindowULC_Y%), ANY" ")
PRINT #N%, "GraphSize="+REMOVE$(STR$(PlotWindowwidth%), ANY" ")+" "+REMOVE$(STR$(PlotWindowHeight%), ANY" ")
PRINT #N%, "GraphFont=Arial, 10"
PRINT #N%, "GraphColor=1"
PRINT #N%, "GraphToTop=1"
PRINT #N%, "GraphBackground=255 255 255"
PRINT #N%, "border=0 0 0 0"
PRINT #N%, "Axis=192 192 192 2 2"
PRINT #N%, "Line1=0 0 255 0 0"
PRINT #N%, "Line2=0 255 0 0 1"
PRINT #N%, "Line3=255 0 0 0 2"
PRINT #N%, "Line4=255 0 255 0 3"
PRINT #N%, "Lines=0 0 128 0 4"

CLOSE #N%

END SUB 'CreateGnuPlotINIfile()

'-----

SUB Delay(NumSecs)

LOCAL StartTime, StopTime AS EXT

```

```

    StartTime = TIMER
DO UNTIL (StopTime-StartTime) >= NumSecs
    StopTime = TIMER
LOOP
END SUB 'delay()
'-----
SUB MathematicalConstants
EulerConst = 0.577215664901532860606512##
Pi = 3.141592653589793238462643##
Pi2 = Pi/2##
Pi4 = Pi/4##
TwoPi = 2##*Pi
FourPi = 4##*Pi
e = 2.718281828459045235360287##
Root2 = 1.4142135623730950488##
END SUB
'-----
SUB AlphabetAndDigits
Alphabet$ = "ABCDEFGHJKLMNPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz"
Digits$ = "0123456789"
RuñID$ = REMOVE$(DATE$+"_"+TIME$,ANY Alphabet$+" :~/")
END SUB
'-----
SUB SpecialSymbols
Quote$ = CHR$(34) 'Quotation mark "
SpecialCharacters$ = "'(),#;:/_"
END SUB
'-----
SUB EMconstants
Mu0 = 4E-7##*Pi 'hy/meter
Eps0 = 8.854##*1E-12 'fd/meter
c = 2.998E8## 'velocity of light, 1##/SQR(Mu0*Eps0) 'meters/sec
eta0 = SQR(Mu0/Eps0) 'impedance of free space, ohms
END SUB
'-----
SUB ConversionFactors
Rad2Deg = 180##/Pi
Deg2Rad = 1##/Rad2Deg
Feet2Meters = 0.3048##
Meters2Feet = 1##/Feet2Meters
Inches2Meters = 0.0254##
Meters2Inches = 1##/Inches2Meters
Miles2Meters = 1609.344##
Meters2Miles = 1##/Miles2Meters
NautMiles2Meters = 1852##
Meters2NautMi = 1##/NautMiles2Meters
END SUB
'-----
SUB ShowConstants 'puts up msgbox showing all constants
LOCAL A$
A$ = _
"Mathematical Constants:"+CHR$(13)+_
"Euler const="+STR$(EulerConst)+CHR$(13)+_
"Pi="+STR$(Pi)+CHR$(13)+_
"Pi/2="+STR$(Pi2)+CHR$(13)+_
"Pi/4="+STR$(Pi4)+CHR$(13)+_
"2Pi="+STR$(TwoPi)+CHR$(13)+_
"4Pi="+STR$(FourPi)+CHR$(13)+_
"e="+STR$(e)+CHR$(13)+_
"Sqr2="+STR$(Root2)+CHR$(13)+CHR$(13)+_
"Alphabet, Digits & Special Characters:"+CHR$(13)+_
"Alphabet="+Alphabet+CHR$(13)+_
"Digits="+Digits+CHR$(13)+_
"quote="+Quote+CHR$(13)+_
"Spec chars="+SpecialCharacters+CHR$(13)+CHR$(13)+_
"E&M Constants:"+CHR$(13)+_
"Mu0="+STR$(Mu0)+CHR$(13)+_
"eps0="+STR$(Eps0)+CHR$(13)+_
"eta0="+STR$(eta0)+CHR$(13)+CHR$(13)+_
"Conversion Factors:"+CHR$(13)+_
"Rad2Deg="+STR$(Rad2Deg)+CHR$(13)+_
"Deg2Rad="+STR$(Deg2Rad)+CHR$(13)+_
"Feet2Meters="+STR$(Feet2Meters)+CHR$(13)+_
"Meters2Feet="+STR$(Meters2Feet)+CHR$(13)+_
"Inches2Meters="+STR$(Inches2Meters)+CHR$(13)+_
"Meters2Inches="+STR$(Meters2Inches)+CHR$(13)+_
"Miles2Meters="+STR$(Miles2Meters)+CHR$(13)+_
"Meters2Miles="+STR$(Meters2Miles)+CHR$(13)+_
"NautMiles2Meters="+STR$(NautMiles2Meters)+CHR$(13)+_
"Meters2NautMi="+STR$(Meters2NautMi)+CHR$(13)+CHR$(13)
MSGBOX(A$)
END SUB
'-----
SUB DisplayRmatrix(Np%,Nd%,Nt&,R())
LOCAL p%, i%, j&, A$
A$ = "Position Vector Matrix R()"+CHR$(13)
FOR p% = 1 TO Np%
    FOR i% = 1 TO Nd%
        FOR j& = 0 TO Nt&
            A$ = A$ + "R(" + STR$(p%) + ", " + STR$(i%) + ", " + STR$(j&) + ") = " + STR$(R(p%, i%, j&)) + CHR$(13)
        NEXT j&
    NEXT i%
NEXT p%
MSGBOX(A$)
END SUB

```

```

'-----
SUB DisplayRmatrixThisTimeStep(Np%,Nd%,j&,R(),Gamma)
LOCAL p%, i%, A$, B$
A$ = "Position Vector Matrix R() at step "+STR$(j&)+", Gamma =" +STR$(Gamma)+": "+CHR$(13)+CHR$(13)
FOR p% = 1 TO Np%
A$ = A$ + "Probe#" + REMOVE$(STR$(p%),ANY" ") + ": "
B$ = ""
FOR i% = 1 TO Nd%
B$ = B$ + " " + USING$( "###.##", R(p%,i%,j&) )
NEXT i%
A$ = A$ + B$ + CHR$(13)
NEXT p%
MSGBOX(A$)
END SUB
'-----
SUB DisplayAmatrix(Np%,Nd%,Nt&,A())
LOCAL p%, i%, j&, A$
A$ = "Acceleration Vector Matrix A()"+CHR$(13)
FOR p% = 1 TO Np%
FOR i% = 1 TO Nd%
FOR j& = 0 TO Nt&
A$ = A$ + "A(" +STR$(p%)+", "+STR$(i%)+", "+STR$(j&)+ ") =" +STR$(A(p%,i%,j&)) + CHR$(13)
NEXT j&
NEXT i%
NEXT p%
MSGBOX(A$)
END SUB
'-----
SUB DisplayAmatrixThisTimeStep(Np%,Nd%,j&,A())
LOCAL p%, i%, A$
A$ = "Acceleration matrix A() at step "+STR$(j&)+": "+CHR$(13)
FOR p% = 1 TO Np%
FOR i% = 1 TO Nd%
A$ = A$ + "A(" +STR$(p%)+", "+STR$(i%)+", "+STR$(j&)+ ") =" +STR$(A(p%,i%,j&)) + CHR$(13)
NEXT i%
NEXT p%
MSGBOX(A$)
END SUB
'-----
SUB DisplayMmatrix(Np%,Nt&,M())
LOCAL p%, j&, A$
A$ = "Fitness Matrix M()"+CHR$(13)
FOR p% = 1 TO Np%
FOR j& = 0 TO Nt&
A$ = A$ + "M(" +STR$(p%)+", "+STR$(j&)+ ") =" +STR$(M(p%,j&)) + CHR$(13)
NEXT j&
NEXT p%
MSGBOX(A$)
END SUB
'-----
SUB DisplayMbestMatrix(Np%,Nt&,Mbest())
LOCAL p%, j&, A$
A$ = "Np=" +STR$(Np%)+", Nt=" +STR$(Nt&)+CHR$(13)+ "Fitness Matrix Mbest()"+CHR$(13)
FOR p% = 1 TO Np%
FOR j& = 0 TO Nt&
A$ = A$ + "Mbest(" +STR$(p%)+", "+STR$(j&)+ ") =" +STR$(Mbest(p%,j&)) + CHR$(13)
NEXT j&
NEXT p%
MSGBOX(A$)
END SUB
'-----
SUB DisplayMmatrixThisTimeStep(Np%,j&,M())
LOCAL p%, A$
A$ = "Fitness matrix M() at step "+STR$(j&)+": "+CHR$(13)

```

```

FOR p% = 1 TO Np%
  A$ = A$ + "M(" + STR$(p%) + ", " + STR$(j&) + ") = " + STR$(M(p%, j&)) + CHR$(13)
NEXT p%
MSGBOX(A$)
END SUB
'-----

SUB DisplayXiMinMax(Nd%, XiMin(), XiMax())
LOCAL i%, A$
A$ = ""
FOR i% = 1 TO Nd%
  A$ = A$ + "XiMin(" + STR$(i%) + ") = " + STR$(XiMin(i%)) + "  XiMax(" + STR$(i%) + ") = " + STR$(XiMax(i%)) + CHR$(13)
NEXT i%
MSGBOX(A$)
END SUB
'-----

SUB DisplayRunParameters2(FunctionName$, Nd%, Np%, Nt&, G, DeltaT, Alpha, Beta, Frep, PlaceInitialProbes$, InitialAcceleration$, RepositionFactor$)
LOCAL A$
A$ = "Function = " + FunctionName$ + CHR$(13) + _
      "Nd = " + STR$(Nd%) + CHR$(13) + _
      "Np = " + STR$(Np%) + CHR$(13) + _
      "Nt = " + STR$(Nt&) + CHR$(13) + _
      "G = " + STR$(G) + CHR$(13) + _
      "DeltaT = " + STR$(DeltaT) + CHR$(13) + _
      "Alpha = " + STR$(Alpha) + CHR$(13) + _
      "Beta = " + STR$(Beta) + CHR$(13) + _
      "Frep = " + STR$(Frep) + CHR$(13) + _
      "Init Probes: " + PlaceInitialProbes$ + CHR$(13) + _
      "Init Accel: " + InitialAcceleration$ + CHR$(13) + _
      "Retrieve Method: " + RepositionFactor$ + CHR$(13)
MSGBOX(A$)
END SUB
'-----

SUB Tabulate1DprobeCoordinates(Max1DprobesPlotted%, Nd%, Np%, LastStep&, G, DeltaT, Alpha, Beta, Frep, R(), M(), PlaceInitialProbes$, InitialAcceleration$, RepositionFactor$, FunctionName$, Gamma)
LOCAL N%, ProbeNum%, FileHeader$, A$, B$, C$, D$, E$, F$, H$, StepNum&, FieldNumber% 'kludgy, yes, but it accomplishes its purpose...
CALL
GetPlotAnnotation(FileHeader$, Nd%, Np%, LastStep&, G, DeltaT, Alpha, Beta, Frep, R(), M(), PlaceInitialProbes$, InitialAcceleration$, RepositionFactor$, FunctionName$, Gamma)

REPLACE "\n" WITH " " IN FileHeader$
FileHeader$ = LEFT$(FileHeader$, LEN(FileHeader$) - 2)
FileHeader$ = "PROBE COORDINATES" + CHR$(13) + _
              "-----" + CHR$(13) + FileHeader$
N% = FREEFILE : OPEN "ProbeCoordinates.DAT" FOR OUTPUT AS #N%
A$ = " Step #      " : B$ = " ----- " : C$ = ""
FOR ProbeNum% = 1 TO Np% 'create out data file header
  SELECT CASE ProbeNum%
    CASE 1 TO 9 : E$ = "" : F$ = " " : H$ = " "
    CASE 10 TO 99 : E$ = "-" : F$ = " " : H$ = " "
    CASE 100 TO 999 : E$ = "--" : F$ = " " : H$ = " "
  END SELECT
  A$ = A$ + "P" + Nospaces$(ProbeNum%+0,0) + F$ 'note: adding zero to ProbeNum% necessary to convert to floating point...
  B$ = B$ + E$ + "-" + H$
  C$ = C$ + "#####.### "
  C$ = C$ + "##.#####"
NEXT ProbeNum%
PRINT #N%, FileHeader$ + CHR$(13) : PRINT #N%, A$ : PRINT #N%, B$
FOR StepNum& = 0 TO LastStep&
  D$ = USING$("##### " , StepNum&)
  FOR ProbeNum% = 1 TO Np% : D$ = D$ + USING$(C$, R(ProbeNum%, 1, StepNum&)) : NEXT ProbeNum%
  PRINT #N%, D$
NEXT StepNum&
CLOSE #N%
END SUB 'Tabulate1DprobeCoordinates()
'-----

SUB
Plot1DprobePositions(Max1DprobesPlotted%, Nd%, Np%, LastStep&, G, DeltaT, Alpha, Beta, Frep, R(), M(), PlaceInitialProbes$, InitialAcceleration$, RepositionFactor$, FunctionName$, Gamma)
'plots on-screen 1D function probe positions vs time step if Np <= 10
LOCAL ProcessID???, N%, n1%, n2%, n3%, n4%, n5%, n6%, n7%, n8%, n9%, n10%, n11%, n12%, n13%, n14%, n15%, ProbeNum%, StepNum&, A$
LOCAL PlotAnnotation$
IF Np% > Max1DprobesPlotted% THEN EXIT SUB
CALL CLEANUP 'delete old "px" plot files, if any
ProbeNum% = 0
DO 'create output data files, probe-by-probe
INCR ProbeNum% : n1% = FREEFILE : OPEN "P"+REMOVE$(STR$(ProbeNum%), ANY" ") FOR OUTPUT AS #n1% : IF ProbeNum% = Np% THEN EXIT LOOP
INCR ProbeNum% : n2% = FREEFILE : OPEN "P"+REMOVE$(STR$(ProbeNum%), ANY" ") FOR OUTPUT AS #n2% : IF ProbeNum% = Np% THEN EXIT LOOP
INCR ProbeNum% : n3% = FREEFILE : OPEN "P"+REMOVE$(STR$(ProbeNum%), ANY" ") FOR OUTPUT AS #n3% : IF ProbeNum% = Np% THEN EXIT LOOP

```



```

"Following parameters?" + CHR$(13) + CHR$(13) + _
Function " + FunctionName$ + CHR$(13) + CHR$(13) + _
# time steps = " + REMOVE$(STR$(Nt&),ANY" ") + CHR$(13) + _
"grav const G = " + REMOVE$(STR$(G_2),ANY" ") + CHR$(13) + _
"delta-T = " + REMOVE$(STR$(DeltaT_3),ANY" ") + CHR$(13) + _
"Exp Alpha = " + REMOVE$(STR$(Alpha_3),ANY" ") + CHR$(13) + _
"Exp Beta = " + REMOVE$(STR$(Beta_3),ANY" ") + CHR$(13) + _
"Freq = " + REMOVE$(STR$(Freq_4),ANY" ") + CHR$(13) + _
"Initial Probes: " + PlaceInitialProbes$ + CHR$(13) + _
"Initial Accel: " + InitialAcceleration$ + CHR$(13) + _
"Check for Early Termination?" + CheckForEarlyTermination$ + CHR$(13) + _
"Shrink Decision Space? " + ShrinkDS$ + CHR$(13) + CHR$(13)

! Result& = MSGBOX(txt$ [, [style&], title&])

AS = "RUN CFO ON FUNCTION " + FunctionName$ + "?"
YN& = MSGBOX(AS,%MB_YESNO,"CONFIRM RUN")

IF YN& = %IDYES THEN RunCFO$ = "YES"

END SUB

'-----
SUB StatusWindow(FunctionName$,StatusWindowHandle???)
GRAPHIC WINDOW "Run Progress, "+FunctionName$,0.08##*ScreenWidth&,0.08##*ScreenHeight&,0.25##*ScreenWidth&,0.17##*ScreenHeight& TO
StatusWindowHandle???)

GRAPHIC ATTACH StatusWindowHandle???,0,REDRAW

GRAPHIC FONT "Lucida Console",8,0 "Courier New",8,0 'Fixed width fonts

GRAPHIC SET PIXEL (35,15) : GRAPHIC PRINT " Initializing.. " : GRAPHIC REDRAW

END SUB

'-----
SUB GetTestFunctionNumber(FunctionName$)

LOCAL hdlg AS DWORD

LOCAL N%, M%

LOCAL Framewidth&, FrameHeight&, Boxwidth&, BoxHeight&

Boxwidth& = 276 : BoxHeight& = 300 : Framewidth& = 82 : FrameHeight& = BoxHeight&-5
Boxwidth& = 276 : BoxHeight& = 300 : Framewidth& = 90 : FrameHeight& = BoxHeight&-5

DIALOG NEW 0, "CENTRAL FORCE OPTIMIZATION TEST FUNCTIONS",... Boxwidth&, BoxHeight&, %WS_CAPTION OR %WS_SYSMENU, 0 TO hdlg

'-----
CONTROL ADD FRAME, hdlg, %IDC_FRAME1, "Test Functions", 5, 2, Framewidth&, FrameHeight&
CONTROL ADD FRAME, hdlg, %IDC_FRAME2, "GSO Test Functions", 105, 2, Framewidth&, 255

CONTROL ADD OPTION, hdlg, %IDC_Function_Number1, "Parrott F4", 10, 14, 70, 10, %WS_GROUP OR %WS_TABSTOP
CONTROL ADD OPTION, hdlg, %IDC_Function_Number2, "SGO", 10, 24, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number3, "Goldstein-Price", 10, 34, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number4, "Step", 10, 44, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number5, "Schwefel 2.26", 10, 54, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number6, "Colville", 10, 64, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number7, "Griewank", 10, 74, 70, 10

CONTROL ADD OPTION, hdlg, %IDC_Function_Number31, "PBM #1", 10, 84, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number32, "PBM #2", 10, 94, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number33, "PBM #3", 10, 104, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number34, "PBM #4", 10, 114, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number35, "PBM #5", 10, 124, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number36, "Himmelblau", 10, 134, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number37, "Rosenbrock", 10, 144, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number38, "Sphere", 10, 154, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number39, "HimmelblauLO", 10, 164, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number40, "Tripod", 10, 174, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number41, "Rosenbrock F6", 10, 184, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number42, "Comp Spring", 10, 194, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number43, "Gear Train", 10, 204, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number44, "Loaded Bowtie", 10, 214, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number45, "Yagi Array", 10, 224, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number46, "Reserved", 10, 234, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number47, "Reserved", 10, 244, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number48, "Reserved", 10, 254, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number49, "Reserved", 10, 264, 70, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number50, "Reserved", 10, 274, 70, 10

'----- Test Functions from GSO Paper -----
CONTROL ADD OPTION, hdlg, %IDC_Function_Number8, "F1", 120, 14, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number9, "F2", 120, 24, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number10, "F3", 120, 34, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number11, "F4", 120, 44, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number12, "F5", 120, 54, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number13, "F6", 120, 64, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number14, "F7", 120, 74, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number15, "F8", 120, 84, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number16, "F9", 120, 94, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number17, "F10", 120, 104, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number18, "F11", 120, 114, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number19, "F12", 120, 124, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number20, "F13", 120, 134, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number21, "F14", 120, 144, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number22, "F15", 120, 154, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number23, "F16", 120, 164, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number24, "F17", 120, 174, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number25, "F18", 120, 184, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number26, "F19", 120, 194, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number27, "F20", 120, 204, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number28, "F21", 120, 214, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number29, "F22", 120, 224, 40, 10
CONTROL ADD OPTION, hdlg, %IDC_Function_Number30, "F23", 120, 234, 40, 10

CONTROL SET OPTION hdlg, %IDC_Function_Number1, %IDC_Function_Number1, %IDC_Function_Number3 'default to Parrott F4

'-----
CONTROL ADD BUTTON, hdlg, %IDOK, "&OK", 200, 0.45##*BoxHeight&, 50, 14

'-----
DIALOG SHOW MODAL hdlg CALL DlgProc

CALL Delay(1##)

IF FunctionNumber% < 1 OR FunctionNumber% > 45 THEN
FunctionNumber% = 1 : MSGBOX("Error in function number...")

```

```

END IF

SELECT CASE FunctionNumber%
CASE 1 : FunctionName$ = "ParrotF4"
CASE 2 : FunctionName$ = "SGO"
CASE 3 : FunctionName$ = "GP"
CASE 4 : FunctionName$ = "STEP"
CASE 5 : FunctionName$ = "SCHWEFEL_226"
CASE 6 : FunctionName$ = "COLVILLE"
CASE 7 : FunctionName$ = "GRIEWANK"
CASE 8 : FunctionName$ = "F1"
CASE 9 : FunctionName$ = "F2"
CASE 10: FunctionName$ = "F3"
CASE 11: FunctionName$ = "F4"
CASE 12: FunctionName$ = "F5"
CASE 13: FunctionName$ = "F6"
CASE 14: FunctionName$ = "F7"
CASE 15: FunctionName$ = "F8"
CASE 16: FunctionName$ = "F9"
CASE 17: FunctionName$ = "F10"
CASE 18: FunctionName$ = "F11"
CASE 19: FunctionName$ = "F12"
CASE 20: FunctionName$ = "F13"
CASE 21: FunctionName$ = "F14"
CASE 22: FunctionName$ = "F15"
CASE 23: FunctionName$ = "F16"
CASE 24: FunctionName$ = "F17"
CASE 25: FunctionName$ = "F18"
CASE 26: FunctionName$ = "F19"
CASE 27: FunctionName$ = "F20"
CASE 28: FunctionName$ = "F21"
CASE 29: FunctionName$ = "F22"
CASE 30: FunctionName$ = "F23"
CASE 31: FunctionName$ = "PBM_1"
CASE 32: FunctionName$ = "PBM_2"
CASE 33: FunctionName$ = "PBM_3"
CASE 34: FunctionName$ = "PBM_4"
CASE 35: FunctionName$ = "PBM_5"
CASE 36: FunctionName$ = "HIMMELBLAU"
CASE 37: FunctionName$ = "ROSENBRÖCK"
CASE 38: FunctionName$ = "SPHERE"
CASE 39: FunctionName$ = "HIMMELBLAUNLO"
CASE 40: FunctionName$ = "TRIPOD"
CASE 41: FunctionName$ = "ROSENBRÖCKF6"
CASE 42: FunctionName$ = "COMPRESSIONSPRING"
CASE 43: FunctionName$ = "GEARTRAIN"
CASE 44: FunctionName$ = "BOWTIE"
CASE 45: FunctionName$ = "YAGI"

END SELECT

END SUB

'-----
CALLBACK FUNCTION DlgProc() AS LONG
'-----
' callback procedure for the main dialog
'-----
LOCAL c, lRes AS LONG, sText AS STRING

SELECT CASE AS LONG CBMSG
CASE %WM_INITDIALOG' %WM_INITDIALOG is sent right before the dialog is shown.
CASE %WM_COMMAND ' <- a control is calling
SELECT CASE AS LONG CBCTL ' <- look at control's id
CASE %IDOK ' <- OK button or Enter key was pressed

IF CBCTLMMSG = %BN_CLICKED THEN
'-----
' Loop through the Function_Number controls
' to see which one is selected
'-----
FOR c = %IDC_Function_Number1 TO %IDC_Function_Number50
CONTROL GET CHECK CBHNDL, c TO lRes
IF lRes THEN EXIT FOR
NEXT 'c holds the id for selected test function.
FunctionNumber% = c-120
DIALOG END CBHNDL
END IF
END SELECT
END SELECT

END FUNCTION

'----- PBM ANTENNA BENCHMARK FUNCTIONS -----
'Reference for benchmarks PBM_1 through PBM_5:
'Pantoja, M F., Bretones, A. R., Martin, R. G., "Benchmark Antenna Problems for Evolutionary
'Optimization Algorithms," IEEE Trans. Antennas & Propagation, vol. 55, no. 4, April 2007,
'pp. 1111-1121
FUNCTION PBM_1(R(),Nd%,p%,j&) 'PBM Benchmark #1: Max D for Variable-Length CF Dipole
LOCAL Z, LengthWaves, ThetaRadians AS EXT
LOCAL N%, Nsegs%, FeedSegNum%
LOCAL NumSegs$, FeedSeg$, HalfLength$, Radius$, ThetaDeg$, Lyne$, GainDB$
LengthWaves = R(p%,1,j&)
ThetaRadians = R(p%,2,j&)
ThetaDeg$ = REMOVE$(STR$(ROUND(ThetaRadians*Rad2Deg,2)),ANY" ")
IF TALLY(ThetaDeg$,".") = 0 THEN ThetaDeg$ = ThetaDeg$+"."
Nsegs% = 2*(INT(100*LengthWaves)\2)+1 '100 segs per wavelength, must be an odd #, VOLTAGE SOURCE
FeedSegNum% = Nsegs%\2 + 1 'center segment number, VOLTAGE SOURCE
NumSegs$ = REMOVE$(STR$(Nsegs%),ANY" ")
FeedSeg$ = REMOVE$(STR$(FeedSegNum%),ANY" ")

```



```

HalfLength$ = REMOVE$(STR$(ROUND(Lengthwaves/2##,6)),ANY" ")
IF TALLY(HalfLength$,".") = 0 THEN HalfLength$ = HalfLength$+"."
Radius$ = "0.00001" 'REMOVE$(STR$(ROUND(Lengthwaves/1000##,6)),ANY" ")
N% = FREEFILE
OPEN "PBM1.NEC" FOR OUTPUT AS #N%
PRINT #N%,"CM File: PBM1.NEC"
PRINT #N%,"CM Run_ID "+DATE$+" "+TIME$
PRINT #N%,"CM Nd="+STR$(Nd%)+", p="+STR$(p%)+", j="+STR$(j&)
PRINT #N%,"CM R(p,1,j)="+STR$(R(p%,1,j&))+", R(p,2,j)="+STR$(R(p%,2,j&))
PRINT #N%,"CE"
PRINT #N%,"GW 1,"+NumSegs$+",0.,0.,-"+HalfLength$+",0.,0.,"+HalfLength$+", "+Radius$
PRINT #N%,"GE"
PRINT #N%,"EX 0,1,"+FeedSeg$+",0,1.,0." 'VOLTAGE SOURCE
PRINT #N%,"FR 0,1,0,0,299.79564,0."
PRINT #N%,"RP 0,1,1,1001,"+ThetaDeg$+",0.,0.,0.,1000." 'gain at 1000 wavelengths range
PRINT #N%,"XQ"
PRINT #N%,"EN"
CLOSE #N%

'-----
' THETA PHIT - - - POWER GAINS - - - - - POLARIZATION - - - - - E(THETA) - - - - - E(PHI) - - - -
' DEGREES DEGREES VERT. HOR. TOTAL AXIAL TILT SENSE MAGNITUDE PHASE MAGNITUDE PHASE
' 90.00 0.00 3.91 -999.99 3.91 0.00000 0.00 LINEAR 1.29504E-04 5.37 0.00000E+00 -5.24
' 123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x
' 10 20 30 40 50 60 70 80 90 100 110 120

SHELL "n4l_2k1.exe",0
N% = FREEFILE
OPEN "PBM1.OUT" FOR INPUT AS #N%
WHILE NOT EOF(N%)
LINE INPUT #N%, Lyne$
IF INSTR(Lyne$,"DEGREES DEGREES") > 0 THEN EXIT LOOP
WEND 'position at next data line
LINE INPUT #N%, Lyne$
CLOSE #N%
GainDB$ = REMOVE$(MID$(Lyne$,37,8),ANY" ")
PBM_1 = 10^(VAL(GainDB$)/10##) 'Directivity
END FUNCTION 'PBM_1()

'-----
FUNCTION PBM2(R(),Nd%,p%,j&) 'PBM Benchmark #2: Max D for Variable-Separation Array of CF Dipoles
LOCAL Z, DipoleSeparationWaves, ThetaRadians AS EXT
LOCAL N%, i%
LOCAL NumSegs$, FeedSeg$, Radius$, ThetaDeg$, Lyne$, GainDB$, Xcoord$, WireNum$
DipoleSeparationWaves = R(p%,1,j&)
ThetaRadians = R(p%,2,j&)
ThetaDeg$ = REMOVE$(STR$(ROUND(ThetaRadians*RadDeg,2)),ANY" ")
IF TALLY(ThetaDeg$,".") = 0 THEN ThetaDeg$ = ThetaDeg$+"."
NumSegs$ = "49"
FeedSeg$ = "25"
Radius$ = "0.00001"
N% = FREEFILE
OPEN "PBM2.NEC" FOR OUTPUT AS #N%
PRINT #N%,"CM File: PBM2.NEC"
PRINT #N%,"CM Run_ID "+DATE$+" "+TIME$
PRINT #N%,"CM Nd="+STR$(Nd%)+", p="+STR$(p%)+", j="+STR$(j&)
PRINT #N%,"CM R(p,1,j)="+STR$(R(p%,1,j&))+", R(p,2,j)="+STR$(R(p%,2,j&))
PRINT #N%,"CE"
FOR i% = -9 TO 9 STEP 2
WireNum$ = REMOVE$(STR$(i%/11),2),ANY" ")
Xcoord$ = REMOVE$(STR$(i%*DipoleSeparationWaves/2##),ANY" ")
PRINT #N%,"GW "+WireNum$+", "+NumSegs$+", "+Xcoord$+",0.,-0.25,"+Xcoord$+",0.,0.25,"+Radius$
NEXT i%
PRINT #N%,"GE"
FOR i% = 1 TO 10
PRINT #N%,"EX 0,"+REMOVE$(STR$(i%),ANY" ")+" "+FeedSeg$+",0,1.,0." 'VOLTAGE SOURCE
NEXT i%
PRINT #N%,"FR 0,1,0,0,299.79564,0."
PRINT #N%,"RP 0,1,1,1001,"+ThetaDeg$+",90.,0.,0.,1000." 'gain at 1000 wavelengths range
PRINT #N%,"XQ"
PRINT #N%,"EN"
CLOSE #N%

'-----
' THETA PHIT - - - POWER GAINS - - - - - POLARIZATION - - - - - E(THETA) - - - - - E(PHI) - - - -
' DEGREES DEGREES VERT. HOR. TOTAL AXIAL TILT SENSE MAGNITUDE PHASE MAGNITUDE PHASE
' 90.00 0.00 3.91 -999.99 3.91 0.00000 0.00 LINEAR 1.29504E-04 5.37 0.00000E+00 -5.24
' 123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x
' 10 20 30 40 50 60 70 80 90 100 110 120

SHELL "n4l_2k1.exe",0
N% = FREEFILE
OPEN "PBM2.OUT" FOR INPUT AS #N%
WHILE NOT EOF(N%)
LINE INPUT #N%, Lyne$
IF INSTR(Lyne$,"DEGREES DEGREES") > 0 THEN EXIT LOOP
WEND 'position at next data line

```

```

LINE INPUT #N%, Lyne$
CLOSE #N%
GainDB$ = REMOVE$(MID$(Lyne$,37,8),ANY" ")
IF AddNoiseToPBM2$ = "YES" THEN
  Z = 10^(VAL(GainDB$)/10##) + GaussianDeviate(0##,0.4472##) 'Directivity with Gaussian noise (zero mean, 0.2 variance)
ELSE
  Z = 10^(VAL(GainDB$)/10##) 'Directivity without noise
END IF
PBM_2 = Z
END FUNCTION 'PBM_2()
'-----
FUNCTION PBM_3(R(),Nd%,p%,j&) 'PBM Benchmark #3: Max D for Circular Dipole Array
LOCAL Beta, ThetaRadians, Alpha, Rev, Imv AS EXT
LOCAL N%, i%
LOCAL NumSegs$, FeedSeg$, Radius$, ThetaDeg$, Lyne$, GainDB$, Xcoord$, Ycoord$, WireNum$, ReEX$, ImEX$
Beta = R(p%,1,j&)
ThetaRadians = R(p%,2,j&)
ThetaDeg$ = REMOVE$(STR$(ROUND(ThetaRadians*Rad2Deg,2)),ANY" ")
IF TALLY(ThetaDeg$, ".") = 0 THEN ThetaDeg$ = ThetaDeg$+ "."
NumSegs$ = "49"
FeedSeg$ = "25"
Radius$ = "0.00001"
N% = FREEFILE
OPEN "PBM3.NEC" FOR OUTPUT AS #N%
PRINT #N%, "CM File: PBM3.NEC"
PRINT #N%, "CM Run ID "+DATE$+" "+TIME$
PRINT #N%, "CM Nd="+STR$(Nd%)+", p="+STR$(p%)+", j="+STR$(j&)
PRINT #N%, "CM R(p,1,j)="+STR$(R(p%,1,j&))+", R(p,2,j)="+STR$(R(p%,2,j&))
PRINT #N%, "CE"
FOR i% = 1 TO 8
  WireNum$ = REMOVE$(STR$(i%),ANY" ")
  SELECT CASE i%
    CASE 1 : Xcoord$ = "1" : Ycoord$ = "0"
    CASE 2 : Xcoord$ = "0.70711" : Ycoord$ = "0.70711"
    CASE 3 : Xcoord$ = "0" : Ycoord$ = "-1"
    CASE 4 : Xcoord$ = "-0.70711" : Ycoord$ = "0.70711"
    CASE 5 : Xcoord$ = "-1" : Ycoord$ = "0"
    CASE 6 : Xcoord$ = "-0.70711" : Ycoord$ = "-0.70711"
    CASE 7 : Xcoord$ = "0" : Ycoord$ = "-1"
    CASE 8 : Xcoord$ = "0.70711" : Ycoord$ = "-0.70711"
  END SELECT
  PRINT #N%, "GW "+WireNum$+", "+NumSegs$+", "+Xcoord$+", "+Ycoord$+", -0.25, "+Xcoord$+", "Ycoord$+", 0.25, "+Radius$
NEXT i%
PRINT #N%, "GE"
FOR i% = 1 TO 8
  Alpha = -COS(TwoPi*Beta*(i%-1))
  Rev = COS(Alpha)
  Imv = SIN(Alpha)
  ReEX$ = REMOVE$(STR$(ROUND(Rev,6)),ANY" ")
  ImEX$ = REMOVE$(STR$(ROUND(Imv,6)),ANY" ")
  IF TALLY(ReEX$, ".") = 0 THEN ReEX$ = ReEX$+ "."
  IF TALLY(ImEX$, ".") = 0 THEN ImEX$ = ImEX$+ "."
  PRINT #N%, "EX 0, "+REMOVE$(STR$(i%),ANY" ")+" "+FeedSeg$+", 0, "+ReEX$+", "+ImEX$ 'VOLTAGE SOURCE
NEXT i%
PRINT #N%, "FR 0,1,0,0,299.79564,0."
PRINT #N%, "RP 0,1,1,1001, "+ThetaDeg$+", 0.0,0.0,1000." 'gain at 1000 wavelengths range
PRINT #N%, "XQ"
PRINT #N%, "EN"
CLOSE #N%
'
' - - ANGLES - - - - POWER GAINS - - - - POLARIZATION - - - - E(THETA) - - - - E(PHI) - - -
' THETA PHI VERT. HOR. TOTAL AXIAL TILT SENSE MAGNITUDE PHASE MAGNITUDE PHASE
' DEGREES DEGREES DB DB DB RATIO DEG. VOLTS/M DEGREES VOLTS/M DEGREES
' 90.00 0.00 3.91 -999.99 3.91 0.00000 0.00 LINEAR 1.29504E-04 5.37 0.00000E+00 5.24
' 123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x
' 10 20 30 40 50 60 70 80 90 100 110 120
SHELL "n41_2k1.exe",0
N% = FREEFILE
OPEN "PBM3.OUT" FOR INPUT AS #N%
WHILE NOT EOF(N%)
  LINE INPUT #N%, Lyne$
  IF INSTR(Lyne$, "DEGREES DEGREES") > 0 THEN EXIT LOOP
  WEND 'position at next data line
  LINE INPUT #N%, Lyne$
CLOSE #N%
GainDB$ = REMOVE$(MID$(Lyne$,37,8),ANY" ")
PBM_3 = 10^(VAL(GainDB$)/10##) 'Directivity
END FUNCTION 'PBM_3()
'-----

```

```

FUNCTION PBM_4(R(),Nd%,p%,j&) 'PBM Benchmark #4: Max D for Vee Dipole
  LOCAL TotalLengthWaves, AlphaRadians, ArmLength, Xlength, Zlength, Lfeed AS EXT
  LOCAL N%, i%, Nsegs%, FeedZcoord$
  LOCAL NumSegs$, Lyne$, GainDB$, Xcoord$, Zcoord$
  TotalLengthWaves = 2##*R(p%,1,j&)
  AlphaRadians = R(p%,2,j&)
  Lfeed = 0.01##
  FeedZcoord$ = REMOVE$(STR$(Lfeed),ANY" ")
  ArmLength = (TotalLengthWaves-2##*Lfeed)/2##
  Xlength = ROUND(ArmLength*COS(AlphaRadians),6)
  Xcoord$ = REMOVE$(STR$(Xlength),ANY" ") : IF TALLY(Xcoord$,".") = 0 THEN Xcoord$ = Xcoord$+"."
  Zlength = ROUND(ArmLength*SIN(AlphaRadians),6)
  Zcoord$ = REMOVE$(STR$(Zlength+Lfeed),ANY" ") : IF TALLY(Zcoord$,".") = 0 THEN Zcoord$ = Zcoord$+"."
  Nsegs% = 2*(INT(TotalLengthWaves*100)\2) 'even number, total # segs
  NumSegs$ = REMOVE$(STR$(Nsegs%\2),ANY" ") '# segs per arm
  N% = FREEFILE
  OPEN "PBM4.NEC" FOR OUTPUT AS #N%
  PRINT #N%,"CM File: PBM4.NEC"
  PRINT #N%,"CM Run ID "+DATE$+" "+TIME$
  PRINT #N%,"CM Nd="+STR$(Nd%)+", p="+STR$(p%)+", j="+STR$(j&)
  PRINT #N%,"CM R(p,1,j)="+STR$(R(p%,1,j&))+", R(p,2,j)="+STR$(R(p%,2,j&))
  PRINT #N%,"CE"
  PRINT #N%,"GW 1,5,0.,0.-"+FeedZcoord$+",0.,0.-"+FeedZcoord$+",0.00001" 'feed wire, 1 segment, 0.01 wvln
  PRINT #N%,"GW 2,"+NumSegs$+",0.,0.-"+FeedZcoord$+", "+Xcoord$+",0.-"+Zcoord$+",0.00001" 'upper arm
  PRINT #N%,"GW 3,"+NumSegs$+",0.,0.-"+FeedZcoord$+", "+Xcoord$+",0.-"+Zcoord$+",0.00001" 'lower arm
  PRINT #N%,"GE"
  PRINT #N%,"EX 0,1,3,0,1.,0." 'VOLTAGE SOURCE
  PRINT #N%,"FR 0,1,0,0,299.79564,0."
  PRINT #N%,"RP 0,1,1,1001.90.,0.,0.,1000." 'ENDFIRE gain at 1000 wavelengths range
  PRINT #N%,"XQ"
  PRINT #N%,"EN"
  CLOSE #N%
  '
  ' - - ANGLES - - - - POWER GAINS - - - - POLARIZATION - - - - E(THETA) - - - - E(PHI) - - -
  ' THETA PHI VERT. HOR. TOTAL AXIAL TILT SENSE MAGNITUDE PHASE MAGNITUDE PHASE
  ' DEGREES DEGREES DB DB DB RATIO DEG. DEGREES VOLTS/M DEGREES VOLTS/M DEGREES
  ' 90.00 0.00 3.91 -999.99 3.91 0.00000 0.00 LINEAR 1.29504E-04 5.37 0.00000E+00 -5.24
  ' 123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x
  ' 10 20 30 40 50 60 70 80 90 100 110 120
  SHELL "n4L_2k1.exe",0
  N% = FREEFILE
  OPEN "PBM4.OUT" FOR INPUT AS #N%
  WHILE NOT EOF(N%)
    LINE INPUT #N%, Lyne$
    IF INSTR(Lyne$,"DEGREES DEGREES") > 0 THEN EXIT LOOP
  WEND 'position at next data line
  LINE INPUT #N%, Lyne$
  CLOSE #N%
  GainDB$ = REMOVE$(MID$(Lyne$,37,8),ANY" ")
  PBM_4 = 10^(VAL(GainDB$)/10##) 'Directivity
END FUNCTION 'PBM_4()
'----
FUNCTION PBM_5(R(),Nd%,p%,j&) 'PBM Benchmark #5: N-element collinear array (Nd=N-1)
  LOCAL TotalLengthWaves, Di(), Ystart, Y1, Y2, SumDi AS EXT
  LOCAL N%, i%, q%
  LOCAL Lyne$, GainDB$
  REDIM Di(1 TO Nd%)
  FOR i% = 1 TO Nd%
    Di(i%) = R(p%,i%,j&) 'dipole separation, wavelengths
  NEXT i%
  TotalLengthWaves = 0##
  FOR i% = 1 TO Nd%
    TotalLengthWaves = TotalLengthWaves + Di(i%)
  NEXT i%
  TotalLengthWaves = TotalLengthWaves + 0.5## 'add half-wavelength of 1 meter at 299.8 MHz
  Ystart = -TotalLengthWaves/2##
  N% = FREEFILE
  OPEN "PBM5.NEC" FOR OUTPUT AS #N%
  PRINT #N%,"CM File: PBM5.NEC"
  PRINT #N%,"CM Run ID "+DATE$+" "+TIME$
  PRINT #N%,"CM Nd="+STR$(Nd%)+", p="+STR$(p%)+", j="+STR$(j&)
  PRINT #N%,"CM R(p,1,j)="+STR$(R(p%,1,j&))+", R(p,2,j)="+STR$(R(p%,2,j&))
  PRINT #N%,"CE"
  FOR i% = 1 TO Nd%+1

```



```

FileID$ = REMOVE$(DATE$+TIME$,ANY Alphabet$+" -:/")
PRINT #N%, "CM File: BOWTIE.NEC"
PRINT #N%, "CM R-LOADED BOWTIE IN FREE SPACE WITH"
PRINT #N%, "CM Zo AS AN OPTIMIZATION PARAMETER."
PRINT #N%, "CM Antenna in Y-z plane."
PRINT #N%, "CM Run ID: "+RunID$
PRINT #N%, "CM Fitness function:
PRINT #N%, "CM [Min(Eff)+5*Min(Gmax)]/[|Zo-MaxRin|*(MaxVSWR-MinVSWR)*(MaxXin-MinXin)]
PRINT #N%, "CM Arm Length = "+REMOVE$(STR$(ArmLengthMeters),ANY" ")+" meters"
PRINT #N%, "CM Bowtie HALF Angle = "+REMOVE$(STR$(ROUND(R(p%,2,j&),2)),ANY" ")+" degrees"
PRINT #N%, "CM Zo = "+REMOVE$(STR$(Zo),ANY" ")+" ohms"
PRINT #N%, "CM Rload = "+REMOVE$(STR$(ROUND(LoadResistance1ohms,2)),ANY" ")+" ohms"
PRINT #N%, "CM Loaded Seg # = "+REMOVE$(STR$(LoadedSegNum1%),ANY" ")+" / "+REMOVE$(STR$(Nsegs%),ANY" ")
PRINT #N%, "CM File ID "+FileID$
PRINT #N%, "CM Nd = "+STR$(Nd%)+" , p = "+STR$(p%)+" , j = "+STR$(j&)
PRINT #N%, "CE"

x1 = 0## : x2 = x1 : y1 = -0.01## : y2 = -y1 : z1 = 0## : z2 = z1 'feed wire coords (wv1n)
PRINT
#N%, "GW1,3,"+FP2String$(x1)+","+FP2String$(y1)+","+FP2String$(z1)+","+FP2String$(x2)+","+FP2String$(y2)+","+FP2String$(z2)+","+FP2String$(a_meters) 'feed
wire, 3 segs

y1 = 0.01## : y2 = ROUND(y1+ArmLengthMeters*COS(AngleRadians),3) : z1 = 0## : z2 = ROUND(ArmLengthMeters*SIN(AngleRadians),3) 'upper right arm
PRINT
#N%, "GW2,"+Int2String$(Nsegs%)+","+FP2String$(x1)+","+FP2String$(y1)+","+FP2String$(z1)+","+FP2String$(x2)+","+FP2String$(y2)+","+FP2String$(z2)+","+FP2Stri
ng$(a_meters) 'feed wire, 3 segs

y1 = 0.01## : y2 = ROUND(y1-ArmLengthMeters*COS(AngleRadians),3) : z1 = 0## : z2 = -ROUND(ArmLengthMeters*SIN(AngleRadians),3) 'lower right arm
PRINT
#N%, "GW3,"+Int2String$(Nsegs%)+","+FP2String$(x1)+","+FP2String$(y1)+","+FP2String$(z1)+","+FP2String$(x2)+","+FP2String$(y2)+","+FP2String$(z2)+","+FP2Stri
ng$(a_meters) 'feed wire, 3 segs

y1 = ROUND(0.01##+ArmLengthMeters*COS(AngleRadians),3) : y2 = y1 : z1 = ROUND(ArmLengthMeters*SIN(AngleRadians),3) : z2 = -z1 'right arm vertical
connecting wire
PRINT
#N%, "GW4,"+Int2String$(Nsegs%)+","+FP2String$(x1)+","+FP2String$(y1)+","+FP2String$(z1)+","+FP2String$(x2)+","+FP2String$(y2)+","+FP2String$(z2)+","+FP2Stri
ng$(a_meters) 'feed wire, 3 segs

y1 = -0.01## : y2 = ROUND(y1-ArmLengthMeters*COS(AngleRadians),3) : z1 = 0## : z2 = ROUND(ArmLengthMeters*SIN(AngleRadians),3) 'upper left arm
PRINT
#N%, "GW5,"+Int2String$(Nsegs%)+","+FP2String$(x1)+","+FP2String$(y1)+","+FP2String$(z1)+","+FP2String$(x2)+","+FP2String$(y2)+","+FP2String$(z2)+","+FP2Stri
ng$(a_meters) 'feed wire, 3 segs

y1 = -0.01## : y2 = ROUND(y1-ArmLengthMeters*COS(AngleRadians),3) : z1 = 0## : z2 = -ROUND(ArmLengthMeters*SIN(AngleRadians),3) 'lower left arm
PRINT
#N%, "GW6,"+Int2String$(Nsegs%)+","+FP2String$(x1)+","+FP2String$(y1)+","+FP2String$(z1)+","+FP2String$(x2)+","+FP2String$(y2)+","+FP2String$(z2)+","+FP2Stri
ng$(a_meters) 'feed wire, 3 segs

y1 = -ROUND(0.01##+ArmLengthMeters*COS(AngleRadians),3) : y2 = y1 : z1 = ROUND(ArmLengthMeters*SIN(AngleRadians),3) : z2 = -z1 'left arm vertical
connecting wire
PRINT
#N%, "GW7,"+Int2String$(Nsegs%)+","+FP2String$(x1)+","+FP2String$(y1)+","+FP2String$(z1)+","+FP2String$(x2)+","+FP2String$(y2)+","+FP2String$(z2)+","+FP2Stri
ng$(a_meters) 'feed wire, 3 segs

PRINT #N%, "GE"

----- LOAD RESISTOR #1 -----
IF LoadResistance1ohms <> 0## THEN 'load bowtie only if loading resistance is not zero
PRINT #N%, "LD0,2,"+Int2String$(LoadedSegNum1%)+","+Int2String$(LoadedSegNum1%)+","
+FP2String2$(ROUND(LoadResistance1ohms,2))+","0.0." 'load upper right arm
PRINT #N%, "LD0,3,"+Int2String$(LoadedSegNum1%)+","+Int2String$(LoadedSegNum1%)+","
+FP2String2$(ROUND(LoadResistance1ohms,2))+","0.0." 'load lower right arm
PRINT #N%, "LD0,5,"+Int2String$(LoadedSegNum1%)+","+Int2String$(LoadedSegNum1%)+","
+FP2String2$(ROUND(LoadResistance1ohms,2))+","0.0." 'load upper left arm
PRINT #N%, "LD0,6,"+Int2String$(LoadedSegNum1%)+","+Int2String$(LoadedSegNum1%)+","
+FP2String2$(ROUND(LoadResistance1ohms,2))+","0.0." 'load lower left arm
END IF

----- LOAD RESISTOR #2 -----
IF LoadResistance2ohms <> 0## THEN 'load bowtie only if loading resistance is not zero
PRINT #N%, "LD0,2,"+Int2String$(LoadedSegNum2%)+","+Int2String$(LoadedSegNum2%)+","
+FP2String2$(ROUND(LoadResistance2ohms,2))+","0.0." 'load upper right arm
PRINT #N%, "LD0,3,"+Int2String$(LoadedSegNum2%)+","+Int2String$(LoadedSegNum2%)+","
+FP2String2$(ROUND(LoadResistance2ohms,2))+","0.0." 'load lower right arm
PRINT #N%, "LD0,5,"+Int2String$(LoadedSegNum2%)+","+Int2String$(LoadedSegNum2%)+","
+FP2String2$(ROUND(LoadResistance2ohms,2))+","0.0." 'load upper left arm
PRINT #N%, "LD0,6,"+Int2String$(LoadedSegNum2%)+","+Int2String$(LoadedSegNum2%)+","
+FP2String2$(ROUND(LoadResistance2ohms,2))+","0.0." 'load lower left arm
'END IF

PRINT #N%, FR1$ ' frequency card
PRINT #N%, "EX 0,1,2,1,1,0." 'excite center segment in DRIVEN ELEMENT #2 with 1+j0 volts
PRINT #N%, "RP 0,"+Int2String$(NumRadPattAngles%)+","1,1001,0.0,"+FP2String2$(ROUND(90##/(NumRadPattAngles%-1),2))+","0.,100000." 'vertical
radiation pattern at Phi=0 (+x-ax1s)
PRINT #N%, "EN"

CLOSE #N%

SHELL "NEC2D_200_02-22-2011.EXE",0
SHELL "NEC4ID_4k_053011.EXE",0

CALL
GetNECdata("BOWTIE.OUT",NumFreqs$,NumRadPattAngles$,Zo,FrequencyMHZ(),RadEfficiencyPCT(),MaxGainDBI(),MinGainDBI(),RinOhms(),XinOhms(),VSWR(),ForwardGainDB
i(),FileStatus$,FileID$)

Fitness = -98765## 'default value
IF FileStatus$ = "OK" THEN
MinimumRadiationEfficiency = RadEfficiencyPCT(1) : MinimumMaxGain = MaxGainDBI(1) : MinVSWR = VSWR(1) : MaxVSWR = VSWR(1)
MinRin = RinOhms(1) : MaxRin = RinOhms(1) : MinXin = XinOhms(1) : MaxXin = XinOhms(1)
MinFwdGain = ForwardGainDBi(1) : MaxFwdGain = ForwardGainDBi(1)
FOR i% = 1 TO NumFreqs$
IF RadEfficiencyPCT(i%) <= MinimumRadiationEfficiency THEN MinimumRadiationEfficiency = RadEfficiencyPCT(i%)
IF MinimumRadiationEfficiency < 0## THEN EXIT FOR 'bad run -> use default fitness & exit
IF RadEfficiencyPCT(i%) >= MaximumRadiationEfficiency THEN MaximumRadiationEfficiency = RadEfficiencyPCT(i%)
IF MaxGainDBI(i%) <= MinimumMaxGain THEN MinimumMaxGain = MaxGainDBI(i%)
IF MaxGainDBI(i%) >= MaximumMaxGain THEN MaximumMaxGain = MaxGainDBI(i%)
IF VSWR(i%) <= MinVSWR THEN MinVSWR = VSWR(i%)
IF VSWR(i%) >= MaxVSWR THEN MaxVSWR = VSWR(i%)
IF RinOhms(i%) <= MinRin THEN MinRin = RinOhms(i%)
IF RinOhms(i%) >= MaxRin THEN MaxRin = RinOhms(i%)
IF XinOhms(i%) <= MinXin THEN MinXin = XinOhms(i%)
IF XinOhms(i%) >= MaxXin THEN MaxXin = XinOhms(i%)
IF ForwardGainDBi(i%) <= MinFwdGain THEN MinFwdGain = ForwardGainDBi(i%)
IF ForwardGainDBi(i%) >= MaxFwdGain THEN MaxFwdGain = ForwardGainDBi(i%)
NEXT i%

A = BowtieFitnessCoefficients(1) : B = BowtieFitnessCoefficients(2) : C = BowtieFitnessCoefficients(3) 'use this notation for consistency
'NOTE: Forward gain is in direction on +x-axis.

```

```

Fitness = (A*ForwardGainDBi-B*ABS(Zo-MaxRin))-C*(MAX(ABS(MaxXin),ABS(MinXin)))/(A+B+C) 'NOTE: THIS IS ONE OF AN INFINITY OF FITNESS FUNCTIONS.
                                     'CHANGING THE FUNCTION CHANGES THE DECISION SPACE LANDSCAPE
                                     'RESULTING IN COMPLETELY DIFFERENT ANTENNA DESIGNS.
IF MinimumRadiationEfficiency >= 0## THEN Fitness = (MinimumRadiationEfficiency+5##*MinimumMaxGain)/(ABS(Zo-MaxRin)*(MaxVSWR-MinVSWR)*(MaxXin-
MinXin)) 'compute only if run is OK and min eff >= 0
END IF

N% = FREEFILE
OPEN "BOWTIE.NEC" FOR APPEND AS #N%
PRINT #N%,""
PRINT #N%,"CM R-LOADED BOWTIE IN FREE SPACE WITH"
PRINT #N%,"CM Zo AS AN OPTIMIZATION PARAMETER."
PRINT #N%,"Run ID: "+RunID$
PRINT #N%,"USING$ ("Fitness           =#,"#####", Fitness)
PRINT #N%,"Fwd Gain (dbi) Min/Max    "+STR$(MinFwdGain)+" / "+STR$(MinFwdGain)
PRINT #N%,"VSWR Min/Max              "+STR$(ROUND(MinVSWR,2))+" / "+STR$(ROUND(MaxVSWR,2))+" / "+REMOVE$(STR$(Zo),ANY" ")
PRINT #N%,"Rin Min/Max                "+STR$(ROUND(MinRin,2))+" / "+STR$(ROUND(MaxRin,2))
PRINT #N%,"Xin Min/Max                 "+STR$(ROUND(MinXin,2))+" / "+STR$(ROUND(MaxXin,2))
PRINT #N%,"Gmax(db) Min/Max            "+STR$(ROUND(MinimumMaxGain,2))+" / "+STR$(ROUND(MaximumMaxGain,2))
PRINT #N%,"Eff(%) Min/Max              "+STR$(ROUND(MinimumRadiationEfficiency,2))+" / "+STR$(ROUND(MaximumRadiationEfficiency,2))
PRINT #N%,""
CLOSE #N%

N% = FREEFILE
OPEN "BOWTIE_OUT" FOR APPEND AS #N%
PRINT #N%,""
PRINT #N%,"CM R-LOADED BOWTIE IN FREE SPACE WITH"
PRINT #N%,"CM Zo AS AN OPTIMIZATION PARAMETER."
PRINT #N%,"Run ID: "+RunID$
PRINT #N%,"USING$ ("Fitness           =#,"#####", Fitness)
PRINT #N%,"Fwd Gain (dbi) Min/Max    "+STR$(MinFwdGain)+" / "+STR$(MinFwdGain)
PRINT #N%,"VSWR Min/Max              "+STR$(ROUND(MinVSWR,2))+" / "+STR$(ROUND(MaxVSWR,2))+" / "+REMOVE$(STR$(Zo),ANY" ")
PRINT #N%,"Rin Min/Max                "+STR$(ROUND(MinRin,2))+" / "+STR$(ROUND(MaxRin,2))
PRINT #N%,"Xin Min/Max                 "+STR$(ROUND(MinXin,2))+" / "+STR$(ROUND(MaxXin,2))
PRINT #N%,"Gmax(db) Min/Max            "+STR$(ROUND(MinimumMaxGain,2))+" / "+STR$(ROUND(MaximumMaxGain,2))
PRINT #N%,"Eff(%) Min/Max              "+STR$(ROUND(MinimumRadiationEfficiency,2))+" / "+STR$(ROUND(MaximumRadiationEfficiency,2))
PRINT #N%,""
CLOSE #N%

'
' - - ANGLES - -          - POWER GAINS -          - - - POLARIZATION - - -          - E(THETA) - - -          - E(PHI) - - -
' THETA  PHI       VERT.  HOR.    TOTAL    AXIAL    TILT   SENSE   MAGNITUDE  PHASE    MAGNITUDE  PHASE
' DEGREES DEGREES  DB     DB     DB     RATIO   DEG.    VOLTS/M  DEGREES  VOLTS/M  DEGREES
' 90.00   0.00    3.91 -999.99  3.91   0.00000  0.00  LINEAR  1.29504E-04  5.37  0.00000E+00  -5.24
'123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x
'   10       20       30       40       50       60       70       80       90      100     110     120
BOWTIE = Fitness
END FUNCTION 'BOWTIE()

'-----
SUB ReplaceCommentCard(NECfile$)
LOCAL N%, M%
LOCAL Lyne$
N% = FREEFILE : OPEN NECfile$ FOR INPUT AS #N%
M% = FREEFILE : OPEN "NECtemp" FOR OUTPUT AS #M%
WHILE NOT EOF(N%)
LINE INPUT #N%, Lyne$
IF INSTR(Lyne$, "BOWTIE.NEC") > 0 THEN REPLACE "BOWTIE.NEC" WITH "BESTBOWTIE.NEC" IN Lyne$
PRINT #M%, Lyne$
WEND
CLOSE #M% : CLOSE #N%
KILL Necfile$ : NAME "NECtemp" AS NECfile$
END SUB

'-----
FUNCTION FP2string2$(X!)
LOCAL A$
A$=LTRIMS(RTRIMS(STR$(X!)))
IF TALLY(A$,".") = 0! THEN A$ = A$ + "."
FP2string2$ = A$
END FUNCTION

'---
FUNCTION FP2string$(X)
LOCAL A$
A$=LTRIMS(RTRIMS(STR$(X)))
IF TALLY(A$,".") = 0## THEN A$ = A$ + "."
FP2string$ = A$
END FUNCTION

'---
FUNCTION Int2string$(X%)
LOCAL A$
A$=LTRIMS(RTRIMS(STR$(X%)))
Int2string$ = A$
END FUNCTION

SUB
GetNECdata(NECoutputFile$, NumFreqs%, NumRadPattAngles$, Zo, FrequencyMHZ(), RadEfficiencyPCT(), MaxGainDBI(), MinGainDBI(), RinOhms(), XinOhms(), VSWR(), ForwardGain
DBI(), FileStatus$, FileID$)
LOCAL N%, idx%, AngleNum%
LOCAL Lyne$, Dum$
LOCAL GmaxDBI, GminDBI, FwdGainDBi AS EXT
REDIM FrequencyMHZ(1 TO NumFreqs%), RadEfficiencyPCT(1 TO NumFreqs%), MaxGainDBI(1 TO NumFreqs%), MinGainDBI(1 TO NumFreqs%), _
RinOhms(1 TO NumFreqs%), XinOhms(1 TO NumFreqs%), VSWR(1 TO NumFreqs%), ForwardGainDBI(1 TO NumFreqs%)
FileStatus$ = "NOK"
OPEN NECoutputFile$ FOR INPUT AS #N%
WHILE NOT EOF(N%)
LINE INPUT #N%, Lyne$
IF INSTR(Lyne$, "RUN TIME") > 0 THEN FileStatus$ = "OK"
WEND

```

```

CLOSE #N%
IF FileStatus$ <> "OK" THEN EXIT SUB
OPEN NECoutputFile$ FOR INPUT AS #N%
    idx% = 1
    WHILE NOT EOF(N%)
        LINE INPUT #N%, Lyne$
        IF INSTR(Lyne$, "File ID") > 0 THEN 'CHECK THAT NEC OUTPUT FILE WAS COMPUTED FROM CURRENT NEC INPUT FILE BY COMPARIN FILE ID'S (TO AVIOD
        CACHE/BUFFER PROBLEMS CREATD BY OS)
            IF FileID$ <> REMOVE$(Lyne$,ANY Alphabet$+" ") THEN MSGBOX("WARNING! NEC I/O File ID's don't Match!"+CHR$(13)+Lyne$ =
            "+Lyne$+CHR$(13)+FileID$" "+FileID$)
            END IF
        IF INSTR(Lyne$, "FREQUENCY=") > 0 THEN
            Lyne$ = REMOVE$(Lyne$, "MHZ") : Lyne$ = REMOVE$(Lyne$, "FREQUENCY=") : FrequencyMHZ(idx%) = VAL(Lyne$)
            'MSGBOX("idx="+STR$(idx%)+ " F="+STR$(FrequencyMHZ(idx%)))
            END IF
        IF INSTR(Lyne$, "INPUT PARAMETERS") > 0 THEN
            LINE INPUT #N%, Dum$ : LINE INPUT #N%, Dum$ : LINE INPUT #N%, Dum$ 'skip three lines
            LINE INPUT #N%, Lyne$ 'input next line with impedance data
            RinOhms(idx%) = VAL(MID$(Lyne$,61,12)) : XinOhms(idx%) = VAL(MID$(Lyne$,73,12)) : VSWR(idx%) =
            StandingWaveRatio(Zo,RinOhms(idx%),XinOhms(idx%))
            END IF
        IF INSTR(Lyne$, "EFFICIENCY") > 0 THEN RadefficiencyPCT(idx%) = VAL(REMOVE$(Lyne$,ANY Alphabet$+" "))
        IF INSTR(Lyne$, "E(THETA)") > 0 THEN
            LINE INPUT #N%, Dum$ : LINE INPUT #N%, Dum$ 'skip two lines
            GmaxDBI = -9999## : GminDBI = -GmaxDBI
            FOR AngleNum% = 1 TO NumRadPatAngles%
                LINE INPUT #N%, Lyne$ 'input next TEN lines with pattern data
                IF VAL(MID$(Lyne$,38,7)) >= GmaxDBI THEN GmaxDBI = VAL(MID$(Lyne$,38,7)) 'get max gain
                IF (VAL(MID$(Lyne$,38,7)) <= GminDBI AND VAL(MID$(Lyne$,38,7)) >= -999.99##) THEN GminDBI = VAL(MID$(Lyne$,38,7)) 'get min gain
                IF AngleNum% = NumRadPatAngles% THEN FwdGainDBI = VAL(MID$(Lyne$,38,7)) 'forward gain
            NEXT AngleNum%
            MaxGainDBI(idx%) = GmaxDBI
            MinGainDBI(idx%) = GminDBI
            ForwardGainDBI(idx%) = FwdGainDBI
            INCR idx%
        END IF
        'msgbox("idx="+STR$(idx%))
    WEND
CLOSE #N%

```

TAG NO.		SEG. NO.		VOLTAGE (VOLTS)		CURRENT (AMPS)		IMPEDANCE (OHMS)		ADMITTANCE (MHOS)		POWER (WATTS)
REAL	IMAG.	REAL	IMAG.	REAL	IMAG.	REAL	IMAG.	REAL	IMAG.	REAL	IMAG.	
1	1	1.00000E+00	0.00000E+00	7.17910E-06	8.93193E-04	8.99811E+00	-1.11951E+03	7.17910E-06	8.93193E-04	3.58955E-06		

```


```

THETA DEGREES		PHI DEGREES		VERT. DB		HOR. DB		TOTAL DB		AXIAL RATIO DEG.		TILT SENSE		MAGNITUDE VOLTS/M		PHASE DEGREES		MAGNITUDE VOLTS/M		PHASE DEGREES	
0.00	0.00	-999.99	-999.99	-999.99	-999.99	0.00000	0.00	0.00000	0.00	0.00000E+00	-240.17	0.00000E+00	-240.17	2.69380E-08	-61.44	0.00000E+00	-240.17	2.69380E-08	-61.44	0.00000E+00	-240.17

```

END SUB 'GetNECdata()
'-----
FUNCTION StandingWaveRatio(Zo,ReZ,ImZ)
LOCAL ReRho, ImRho, MagRho, SWR AS EXT
    SWR = 9999##
    CALL ComplexDivide(ReZ-Zo,ImZ,ReZ+Zo,ImZ,ReRho,ImRho)
    MagRho = SQR(ReRho*ReRho+ImRho*ImRho) 'reflection coefficient
    IF MagRho <> 1## THEN SWR=(1##+MagRho)/(1##-MagRho)
    StandingWaveRatio = SWR
END FUNCTION 'StandingWaveRatio()
'-----
SUB ComplexMultiply(ReA,ImA,ReB,ImB,ReC,ImC)
    Returns real and imaginary parts of product C=A*B
    ReC = ReA*ReB-ImA*ImB
    ImC = ImA*ReB+ReA*ImB
END SUB
'-----
SUB ComplexDivide(ReA,ImA,ReB,ImB,ReC,ImC)
    Returns real and imaginary parts of quotient C=A/B
    LOCAL Denom AS EXT
    Denom = ReB*ReB-ImB*ImB
    ReC = (ReA*ReB+ImA*ImB)/Denom
    ImC = (ImA*ReB-ReA*ImB)/Denom
END SUB
'-----
FUNCTION YAGI_ARRAY(R(),Nd%,p%,j&) 'FREE SPACE YAGI
LOCAL N%, i%, Nseg$, NumFreq$, ElemNum%, NumRadPatAngles%, ExcitedSegment%
LOCAL Lyne$, FRIS$, FileStatus$, FileID$
LOCAL A, B, C, D AS EXT 'coefficients for Yagi Fitness function
LOCAL a_wvln, segLength, x1, x2, y1, y2, BoomDistance, Spacing, Length AS EXT
LOCAL Zo, FrequencyMHZ(), RadefficiencyPCT(), MaxGainDBI(), MinGainDBI(), RinOhms(), XinOhms(), VSWR(), ForwardGainDBI(), RearGainDBI() AS EXT
LOCAL Fitness, MinimumRadiationEfficiency, MaximumRadiationEfficiency, MinimumMaxGain, MaximumMaxGain, MinVSWR, MaxVSWR, MinRin, MaxRin, Minxin,
Maxxin, MinFwdGain, MaxFwdGain, MinRearGain, MaxRearGain AS EXT
LOCAL StartFreqMHZ!, StopFreqMHZ!, FreqStepMHZ!, FcMHZ!

```

REDIM FrequencyMHZ(1 TO 1), RadEfficiencyPCT(1 TO 1), MaxGainDBI(1 TO 1), MinGainDBI(1 TO 1), RinOhms(1 TO 1), XinOhms(1 TO 1), VSWR(1 TO 1), ForwardGainDBi(1 TO 1), RearGainDBi(1 TO 1)

'INFO: YAGI DECISION SPACE BOUNDARY ARRAY:

```
'
' Array Element #          Design Variable
' -----
' 1
' TO
' NumYagiElements-1      Yagi element spacing along boom from previous element, wavelengths
'
' NumYagiElements
' TO
' 2*NumYagiElements-1    Yagi element length, wavelengths
'
' 2*NumYagiElements (Nd)      <<<< Zo >>>>
'
' =====
a_wvln = 0.00635## 'wire radius WAVELENGTHS at 299.8 MHz (0.5" DIAM ELEMENTS @ 299.8 MHz)
Zo = ROUND(R(p%,Nd%,j&),2) 'feed system characteristic impedance, OHMS, as a design VARIABLE for computing VSWR
NumRadPattAngles% = 2
IF YagiSegmentLength$ = "FIXED" THEN SegLength = YagiSegmentLength*wvln 'wavelengths @ 299.8 MHz, FIXED [SEE HEADER NOTE ON SEGMENTATION]
FcMHz! = 299.8! : FreqStepMHz! = 50!
StartFreqMHz! = FcMHz!-FreqStepMHz! : StopFreqMHz! = FcMHz! + FreqStepMHz!
NumFreqs% = 1 + (StopFreqMHz!-StartFreqMHz!)/FreqStepMHz! 'Center Frequency, Fc = 299.8 MHz (wvln = 1.000 meters)
NumFreqs% = 2*(NumFreqs%\2)+1 'make it an odd # so three-point averaging can be done
FR1$ = "FR 0,"+Int2String$(NumFreqs%)+",0,0,"+FP2String2$(StartFreqMHz!)+"," +FP2String2$(FreqStepMHz!)
'
' PROCESS SET PRIORITY %NORMAL_PRIORITY_CLASS 'NORMAL PRIORITY TO AVOID PROBLEMS WRITING/READING NEC FILES
' PROCESS SET PRIORITY %REALTIME_PRIORITY_CLASS 'PREEMPTS ALL OTHER PROCESSES -> CAN CAUSE PROBLEMS...
N% = FREEFILE
OPEN "YAGI.NEC" FOR OUTPUT AS #N%
FileID$ = REMOVE$(DATE$+TIME$,ANY Alphabet$+" -:/")
PRINT #N%,"CM File: YAGI.NEC"
PRINT #N%,"CM YAGI ARRAY IN FREE SPACE"
PRINT #N%,"CM Band center frequency, Fc ="+STR$(FcMHz!)+ " MHz"
PRINT #N%,"CM Freq step ="+STR$(FreqStepMHz!)+ " MHz +/- Fc"
PRINT #N%,"CM Run ID: "+RunID$
PRINT #N%,"CM Fitness function:
PRINT #N%,Fit1$ : PRINT #N%,Fit2$
PRINT #N%,"CM where L,M,U are lower/mid/upper frequencies"
PRINT #N%,"CM MaxGfwd/[|Zo-MaxRin|*(MaxVSWR-MinVSWR)*(MaxXin-MinXin)]
PRINT #N%,"CM (A*MaxFwdGain-B*|Zo-MaxRin|-C*(MAX(|MaxXin|,|MinXin|)))
PRINT #N%,"CM -D*(MaxVSWR-MinVSWR))/(A+B+C*D)
PRINT #N%,"CM where "+YagiCoefficients$
PRINT #N%,"CM Zo="+REMOVE$(STR$(Zo),ANY" ")+" ohms"
PRINT #N%,"CM Note: All dimensions are in METERS."
PRINT #N%,"CM File ID "+FileID$
PRINT #N%,"CM Nd="+STR$(Nd%)+", p="+STR$(p%)+", j="+STR$(j&)
PRINT #N%,"CE"
FOR ElemNum% = 1 TO NumYagiElements%
BoomDistance = 0## 'element #1 (REF) on Y-axis
IF ElemNum% > 1 THEN
FOR i% = 1 TO ElemNum%-1 'add up element spacings to get position along boom
Spacing = ROUND(R(p%,i%,j&),3) 'element spacing from previous element, WAVELENGTHS @ 299.8 MHz
BoomDistance = BoomDistance + Spacing
NEXT i%
END IF
Length = R(p%,ElemNum%+NumYagiElements%-1,j&) 'element length, WAVELENGTHS
Nsegs% = 9 'use same # segs each element unless seg LENGTH is FIXED, in which case use a different # segs in each element as follows
IF YagiSegmentLength$ = "FIXED" THEN 'adjust # segments in each element and change element length to be an integer # of segments
Nsegs% = INT((Length/SegLength))
Nsegs% = 2*(Nsegs%\2)+1 'must be odd # to preserve symmetry about excitation at center
Length = Nsegs%*SegLength 'round element length to an integer multiple of segment length to guaranty segment alignment as recommended in
NEC Manual
END IF
IF ElemNum% = 2 THEN ExcitedSegment% = Nsegs%\2+1
x1 = ROUND(BoomDistance,3) : x2 = x1 'Yagi elements are parallel to Y-axis arrayed along +X-axis. Round spacings & length to nearest 0.001
wavelength.
y1 = ROUND(-Length/2##,3) : y2 = -y1
PRINT
#N%,"Gw"+Int2String$(ElemNum%)+"," +Int2String$(Nsegs%)+"," +FP2String$(x1)+"," +FP2String$(y1)+",0.,"+FP2String$(x2)+"," +FP2String$(y2)+",0.,"+FP2String$(a_wvln)
NEXT ElemNum%
PRINT #N%,"GE"
PRINT #N%,FR1$ ' frequency card
PRINT #N%,"EX 0,2,"+Int2String$(ExcitedSegment%)+",1,1,0." 'excite center segment in DRIVEN ELEMENT #2 with 1+j0 volts
PRINT #N%,"RP 0,"+Int2String$(NumRadPattAngles%)+",2,1001,0,0.,"+FP2String2$(ROUND(90##/(NumRadPattAngles%-1),2))+",180.,100000."
PRINT #N%,"EN"
CLOSE #N%
SHELL "NEC4ID_4K_053011.EXE",0
CALL
GetYagiNECdata("YAGI.OUT",NumFreqs%,NumRadPattAngles%,Zo,FrequencyMHZ(),RadEfficiencyPCT(),MaxGainDBI(),MinGainDBI(),RinOhms(),XinOhms(),VSWR(),ForwardGainDBi(),RearGainDBi(),FileStatus$,FileID$)
Fitness = -98765## 'default value
IF FileStatus$ = "OK" THEN
MinimumRadiationEfficiency = RadEfficiencyPCT(1)
MaximumRadiationEfficiency = RadEfficiencyPCT(1)
MinimumMaxGain = MaxGainDBI(1) : MaximumMaxGain = MaxGainDBI(1)
MinVSWR = VSWR(1) : MaxVSWR = VSWR(1)
MinRin = RinOhms(1) : MaxRin = RinOhms(1)
MinXin = XinOhms(1) : MaxXin = XinOhms(1)
MinFwdGain = ForwardGainDBi(1) : MaxFwdGain = ForwardGainDBi(1)
MinRearGain = RearGainDBi(1) : MaxRearGain = RearGainDBi(1)

```





```

LINE INPUT #N%, Lyne$ 'input next line with impedance data
RinOhms(id%) = VAL(MID$(Lyne$,61,12)) : XinOhms(id%) = VAL(MID$(Lyne$,73,12)) : vSWR(id%) =
StandingWaveRatio(Zo,RinOhms(id%),XinOhms(id%))
END IF
IF INSTR(Lyne$,"EFFICIENCY") > 0 THEN RadEfficiencyPCT(id%) = VAL(REMOVE$(Lyne$,ANY Alphabet$+" "))
IF INSTR(Lyne$,"E(THETA)") > 0 THEN
LINE INPUT #N%, Dum$ : LINE INPUT #N%, Dum$ 'skip two lines
GmaxDBI = -9999## : GminDBI = -GmaxDBI

----- FORWARD PATTERN -----
FOR AngleNum% = 1 TO NumRadPatAngles%
LINE INPUT #N%, Lyne$ 'input next NumRadPatAngles% lines with pattern data
IF VAL(MID$(Lyne$,38,7)) >= GmaxDBI THEN GmaxDBI = VAL(MID$(Lyne$,38,7)) 'get max gain
IF (VAL(MID$(Lyne$,38,7)) <= GminDBI AND VAL(MID$(Lyne$,38,7)) >= -999.99##) THEN GminDBI = VAL(MID$(Lyne$,38,7)) 'get min gain
IF AngleNum% = NumRadPatAngles% THEN FwdGainDBi = VAL(MID$(Lyne$,38,7)) 'forward gain
NEXT AngleNum%
MaxGainDBI(id%) = GmaxDBI
MinGainDBI(id%) = GminDBI
ForwardGainDBi(id%) = FwdGainDBi

----- REAR PATTERN -----
FOR AngleNum% = 1 TO NumRadPatAngles%
LINE INPUT #N%, Lyne$ 'input next NumRadPatAngles% lines with pattern data
IF AngleNum% = NumRadPatAngles% THEN RearGain = VAL(MID$(Lyne$,38,7)) 'rear gain
NEXT AngleNum%
RearGainDBi(id%) = RearGain

INCR id%
END IF

msgbox("idx="+STR$(id%))

WEND
CLOSE #N%

' TAG SEG. VOLTAGE (VOLTS) CURRENT (AMPS) IMPEDANCE (OHMS) ADMITTANCE (MHOS) POWER
' NO. NO. REAL IMAG. REAL IMAG. REAL IMAG. REAL IMAG. REAL IMAG. (WATTS)
' 1 1.00000E+00 0.00000E+00 7.17910E-06 8.93193E-04 8.99811E+00 -1.11951E+03 7.17910E-06 8.93193E-04 3.58955E-06
'123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x
' 10 20 30 40 50 60 70 80 90 100 110 120 130

' - - ANGLES - - - POWER GAINS - - - POLARIZATION - - - E(THETA) - - - E(PHI) - - -
' THETA PHI VERT. HOR. TOTAL AXIAL TILT SENSE MAGNITUDE PHASE MAGNITUDE PHASE
' DEGREES DEGREES DB DB DB RATIO DEG. VOLTS/M DEGREES VOLTS/M DEGREES
' 0.00 0.00 -999.99 -999.99 -999.99 0.00000 0.00 0.00000E+00 -240.17 0.00000E+00 -240.17
' 10.00 0.00 -18.97 -999.99 -18.97 0.00000 0.00 LINEAR 2.69380E-08 -61.44 0.00000E+00 -240.17
'123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x123456789x
' 10 20 30 40 50 60 70 80 90 100 110 120 130

END SUB 'GetYagiNECdata()

-----
***** END PROGRAM 'CFO_YAGI_07-27-2011.BAS' *****

```

## Appendix II. Variable Z<sub>0</sub> Yagi Performance

CM File: YAGI.NEC  
 CM YAGI ARRAY IN FREE SPACE  
 CM Band center Frequency, Fc = 299.8 MHz  
 CM Freq step = 50 MHz +/- FC  
 CM Run ID: 07282011\_001156  
 CM Fitness function:  
 CM  $2 * \text{Gfwd(L)} - 4 * \text{vsWR(L)} + 1 * \text{Gfwd(M)} - 8 * \text{vsWR(M)} +$   
 CM  $1 * \text{Gfwd(U)} - 8 * \text{vsWR(U)}$   
 CM where L,M,U are lower/mid/upper frequencies  
 CM Z<sub>0</sub>=105.64 ohms  
 CM Notes: All dimensions are in METERS.  
 CM File ID 0728201112236  
 CM Nd= 12, p= 48, j= 210

FREE SPACE YAGI: SUMMARY NEC DATA

F (MHz)	Rad Eff (%)	Fwd Gain (dbi)	Rear Gain (dbi)	FB Ratio (dB)	Max Gain (dbi)	Min Gain (dbi)	Rin (ohms)	Xin (ohms)	vsWR/105.64	Avg Pwr Gain**
200.00	1.84	4.44	1.84	-2.30	1.84	0.02	22.37	-160.77	15.81	0.996
200.10	1.85	4.45	1.85	-2.30	1.85	0.01	22.38	-160.50	15.76	0.996
200.20	1.85	4.45	1.85	-2.31	1.85	0.00	22.40	-160.24	15.72	0.996
200.30	1.85	4.46	1.85	-2.31	1.85	-0.01	22.41	-159.98	15.67	0.996
200.40	1.86	4.47	1.86	-2.31	1.86	-0.02	22.42	-159.71	15.63	0.996
200.50	1.86	4.47	1.86	-2.31	1.86	-0.02	22.44	-159.45	15.58	0.996
200.60	1.87	4.48	1.87	-2.31	1.87	-0.03	22.45	-159.18	15.54	0.996
200.70	1.87	4.48	1.87	-2.31	1.87	-0.04	22.46	-158.92	15.49	0.996
200.80	1.87	4.19	1.87	-2.32	1.88	-0.05	22.48	-158.65	15.45	0.996
200.90	1.88	4.20	1.88	-2.32	1.88	-0.06	22.49	-158.39	15.40	0.996
201.00	1.88	4.20	1.88	-2.32	1.88	-0.07	22.50	-158.12	15.36	0.996
201.10	1.89	4.20	1.89	-2.31	1.89	-0.07	22.52	-157.86	15.32	0.996
201.20	1.89	4.21	1.89	-2.32	1.89	-0.08	22.53	-157.60	15.27	0.996
201.30	1.90	4.22	1.90	-2.32	1.90	-0.09	22.54	-157.33	15.23	0.996
201.40	1.90	4.22	1.90	-2.32	1.90	-0.10	22.55	-157.07	15.19	0.996
201.50	1.91	4.23	1.91	-2.32	1.91	-0.11	22.57	-156.80	15.14	0.996
201.60	1.91	4.23	1.91	-2.32	1.91	-0.12	22.58	-156.54	15.10	0.996
201.70	1.92	4.24	1.92	-2.32	1.92	-0.12	22.59	-156.27	15.06	0.996
201.80	1.92	4.24	1.92	-2.32	1.92	-0.13	22.60	-156.01	15.01	0.996
201.90	1.93	4.25	1.93	-2.32	1.93	-0.14	22.62	-155.74	14.97	0.996
202.00	1.93	4.25	1.93	-2.32	1.93	-0.15	22.63	-155.48	14.93	0.996
202.10	1.94	4.26	1.94	-2.32	1.94	-0.16	22.64	-155.22	14.88	0.996
202.20	1.94	4.27	1.94	-2.33	1.94	-0.17	22.65	-154.95	14.84	0.996
202.30	1.95	4.27	1.95	-2.32	1.95	-0.18	22.67	-154.69	14.80	0.996
202.40	1.95	4.28	1.95	-2.33	1.95	-0.19	22.68	-154.42	14.76	0.996
202.50	1.96	4.28	1.96	-2.32	1.96	-0.20	22.69	-154.16	14.72	0.996
202.60	1.96	4.29	1.96	-2.33	1.96	-0.20	22.70	-153.89	14.67	0.996
202.70	1.97	4.29	1.97	-2.33	1.97	-0.21	22.71	-153.61	14.63	0.996
202.80	1.97	4.30	1.97	-2.33	1.97	-0.22	22.73	-153.36	14.59	0.996
202.90	1.98	4.30	1.98	-2.32	1.98	-0.23	22.74	-153.10	14.55	0.996
203.00	1.99	4.31	1.99	-2.32	1.99	-0.24	22.75	-152.84	14.51	0.996
203.10	1.99	4.32	1.99	-2.33	1.99	-0.25	22.76	-152.57	14.47	0.996
203.20	2.00	4.32	2.00	-2.32	2.00	-0.26	22.78	-152.31	14.43	0.996
203.30	2.00	4.33	2.00	-2.32	2.00	-0.27	22.79	-152.04	14.38	0.996
203.40	2.01	4.33	2.01	-2.32	2.01	-0.28	22.80	-151.78	14.34	0.996
203.50	2.02	4.34	2.02	-2.32	2.02	-0.29	22.81	-151.51	14.30	0.996
203.60	2.02	4.34	2.02	-2.32	2.02	-0.30	22.82	-151.25	14.26	0.996
203.70	2.03	4.35	2.03	-2.32	2.03	-0.31	22.84	-150.98	14.22	0.996
203.80	2.03	4.36	2.03	-2.33	2.03	-0.32	22.85	-150.72	14.18	0.996
203.90	2.04	4.36	2.04	-2.33	2.04	-0.33	22.86	-150.46	14.14	0.996
204.00	2.05	4.37	2.05	-2.32	2.05	-0.34	22.87	-150.19	14.10	0.996
204.10	2.05	4.37	2.05	-2.32	2.05	-0.35	22.88	-149.93	14.06	0.996
204.20	2.06	4.38	2.06	-2.32	2.06	-0.36	22.89	-149.66	14.02	0.996
204.30	2.07	4.38	2.07	-2.31	2.07	-0.37	22.91	-149.40	13.98	0.996
204.40	2.07	4.39	2.07	-2.32	2.07	-0.38	22.92	-149.13	13.94	0.996
204.50	2.08	4.39	2.08	-2.31	2.08	-0.39	22.93	-148.87	13.90	0.996
204.60	2.09	4.40	2.09	-2.31	2.09	-0.40	22.94	-148.60	13.86	0.996
204.70	2.10	4.41	2.10	-2.31	2.10	-0.41	22.95	-148.34	13.82	0.996
204.80	2.11	4.41	2.11	-2.31	2.11	-0.42	22.96	-148.07	13.78	0.996
204.90	2.11	4.42	2.11	-2.31	2.11	-0.43	22.98	-147.81	13.74	0.996
205.00	2.12	4.42	2.12	-2.30	2.12	-0.44	22.99	-147.54	13.70	0.996
205.10	2.13	4.43	2.13	-2.30	2.13	-0.45	23.00	-147.28	13.67	0.996
205.20	2.13	4.43	2.13	-2.30	2.13	-0.46	23.01	-147.01	13.63	0.996
205.30	2.14	4.44	2.14	-2.30	2.14	-0.47	23.02	-146.74	13.59	0.996
205.40	2.15	4.45	2.15	-2.30	2.15	-0.48	23.03	-146.48	13.55	0.996
205.50	2.16	4.45	2.16	-2.29	2.16	-0.49	23.04	-146.22	13.51	0.996
205.60	2.16	4.46	2.16	-2.30	2.16	-0.50	23.05	-145.95	13.47	0.996
205.70	2.17	4.46	2.17	-2.29	2.17	-0.51	23.07	-145.69	13.43	0.996
205.80	2.18	4.47	2.18	-2.29	2.18	-0.52	23.08	-145.42	13.40	0.996
205.90	2.19	4.47	2.19	-2.28	2.19	-0.53	23.09	-145.15	13.36	0.996
206.00	2.19	4.48	2.19	-2.28	2.19	-0.54	23.10	-144.89	13.32	0.996
206.10	2.20	4.48	2.20	-2.28	2.20	-0.55	23.11	-144.62	13.28	0.996
206.20	2.21	4.49	2.21	-2.28	2.21	-0.56	23.12	-144.36	13.24	0.996
206.30	2.22	4.50	2.22	-2.27	2.22	-0.57	23.13	-144.09	13.21	0.996
206.40	2.23	4.50	2.23	-2.27	2.23	-0.58	23.14	-143.82	13.17	0.996
206.50	2.24	4.51	2.24	-2.27	2.24	-0.60	23.15	-143.56	13.13	0.996
206.60	2.25	4.51	2.25	-2.26	2.25	-0.61	23.16	-143.29	13.09	0.996
206.70	2.26	4.52	2.26	-2.26	2.26	-0.62	23.18	-143.02	13.06	0.996
206.80	2.27	4.52	2.27	-2.25	2.27	-0.63	23.19	-142.76	13.02	0.996
206.90	2.28	4.53	2.28	-2.25	2.28	-0.64	23.20	-142.49	12.98	0.996
207.00	2.28	4.54	2.28	-2.26	2.28	-0.66	23.21	-142.23	12.94	0.996
207.10	2.29	4.54	2.29	-2.25	2.29	-0.67	23.22	-141.96	12.91	0.996
207.20	2.30	4.55	2.30	-2.25	2.30	-0.68	23.23	-141.69	12.87	0.996
207.30	2.31	4.55	2.31	-2.24	2.31	-0.69	23.24	-141.43	12.83	0.996
207.40	2.32	4.56	2.32	-2.24	2.32	-0.71	23.25	-141.16	12.80	0.996
207.50	2.33	4.56	2.33	-2.23	2.33	-0.72	23.26	-140.89	12.76	0.996
207.60	2.34	4.57	2.34	-2.23	2.34	-0.73	23.27	-140.62	12.72	0.996
207.70	2.35	4.57	2.35	-2.22	2.35	-0.74	23.28	-140.36	12.69	0.996
207.80	2.36	4.58	2.36	-2.22	2.36	-0.76	23.29	-140.09	12.65	0.996
207.90	2.37	4.58	2.37	-2.21	2.37	-0.77	23.31	-139.82	12.62	0.996
208.00	2.38	4.59	2.38	-2.21	2.38	-0.78	23.32	-139.56	12.58	0.996
208.10	2.39	4.60	2.39	-2.20	2.40	-0.80	23.33	-139.29	12.54	0.996
208.20	2.40	4.60	2.40	-2.20	2.40	-0.81	23.34	-139.02	12.51	0.996
208.30	2.41	4.61	2.41	-2.20	2.41	-0.82	23.35	-138.75	12.47	0.996
208.40	2.42	4.62	2.42	-2.19	2.42	-0.84	23.36	-138.48	12.43	0.996
208.50	2.43	4.62	2.43	-2.18	2.44	-0.85	23.37	-138.22	12.40	0.996
208.60	2.45	4.62	2.45	-2.17	2.45	-0.86	23.38	-137.95	12.36	0.996
208.70	2.46	4.63	2.46	-2.17	2.46	-0.87	23.39	-137.68	12.33	0.996
208.80	2.47	4.63	2.47	-2.16	2.47	-0.88	23.40	-137.41	12.29	0.996
208.90	2.48	4.64	2.48	-2.16	2.48	-0.90	23.41	-137.14	12.26	0.996
209.00	2.49	4.64	2.49	-2.15	2.49	-0.91	23.42	-136.87	12.22	0.996
209.10	2.50	4.65	2.50	-2.15	2.50	-0.93	23.43	-136.61	12.19	0.996
209.20	2.51	4.66	2.51	-2.15	2.51	-0.95	23.44	-136.34	12.15	0.996
209.30	2.53	4.66	2.53	-2.13	2.53	-0.96	23.45	-136.07	12.12	0.996
209.40	2.54	4.67	2.54	-2.13	2.54	-0.98	23.47	-135.80	12.08	0.996
209.50	2.55	4.67	2.55	-2.12	2.55	-0.99	23.48	-135.53	12.05	0.996
209.60	2.56	4.68	2.56	-2.12	2.56	-1.00	23.49	-135.26	12.01	0.996
209.70	2.57	4.68	2.57	-2.11	2.57	-1.02	23.50	-134.99	11.98	0.996
209.80	2.59	4.69	2.59	-2.10	2.59	-1.03	23.51	-134.72	11.94	0.996
209.90	2.60	4.69	2.60	-2.09	2.60	-1.05	23.52	-134.45	11.91	0.996
210.00	2.61	4.70	2.61	-2.09	2.61	-1.06	23.53	-134.18	11.87	0.996
210.10	2.62	4.70	2.62	-2.08	2.62	-1.08	23.54	-133.91	11.84	0.996
210.20	2.64	4.71	2.64	-2.07	2.64	-1.09	23.55	-133.64	11.80	0.996
210.30	2.65	4.71	2.65	-2.06	2.65	-1.11	23.56	-133.37	11.77	0.996
210.40	2.66	4.72	2.66	-2.06	2.66	-1.12	23.57	-133.10	11.73	0.996
210.50	2.67	4.72	2.67	-2.05	2.67	-1.14	23.58	-132.83	11.70	0.996
210.60	2.69	4.73	2.6							

213.80	100.00	3.17	4.87	-1.70	3.17	-1.69	23.97	-123.80	10.59	0.996
213.90	100.00	4.88	4.88	-1.69	3.19	-1.71	23.98	-123.79	10.59	0.996
214.00	100.00	3.20	4.88	-1.68	3.20	-1.72	23.99	-123.24	10.53	0.996
214.10	100.00	3.22	4.88	-1.66	3.22	-1.74	24.01	-122.96	10.49	0.996
214.20	100.00	4.89	4.89	-1.64	3.24	-1.76	24.02	-122.69	10.46	0.996
214.30	100.00	3.25	4.89	-1.64	3.25	-1.78	24.03	-122.41	10.43	0.996
214.40	100.00	3.27	4.89	-1.62	3.27	-1.80	24.05	-122.13	10.40	0.996
214.50	100.00	4.90	4.90	-1.61	3.29	-1.82	24.06	-121.85	10.36	0.996
214.60	100.00	3.31	4.90	-1.59	3.31	-1.83	24.07	-121.57	10.33	0.996
214.70	100.00	3.33	4.90	-1.57	3.33	-1.85	24.09	-121.29	10.30	0.996
214.80	100.00	4.91	4.91	-1.57	3.35	-1.87	24.10	-121.01	10.27	0.996
214.90	100.00	3.36	4.91	-1.55	3.36	-1.89	24.12	-120.74	10.23	0.996
215.00	100.00	3.38	4.91	-1.53	3.38	-1.91	24.13	-120.46	10.20	0.996
215.10	100.00	4.92	4.92	-1.52	3.40	-1.93	24.14	-120.18	10.17	0.996
215.20	100.00	3.42	4.92	-1.50	3.42	-1.95	24.16	-119.89	10.14	0.996
215.30	100.00	3.44	4.92	-1.48	3.44	-1.97	24.17	-119.61	10.10	0.996
215.40	100.00	3.45	4.93	-1.48	3.45	-1.99	24.19	-119.33	10.07	0.996
215.50	100.00	3.47	4.93	-1.46	3.47	-2.01	24.20	-119.05	10.04	0.996
215.60	100.00	3.49	4.93	-1.44	3.49	-2.03	24.22	-118.77	10.01	0.996
215.70	100.00	3.51	4.94	-1.43	3.51	-2.04	24.23	-118.49	9.97	0.996
215.80	100.00	3.53	4.94	-1.41	3.53	-2.07	24.25	-118.21	9.94	0.996
215.90	100.00	3.55	4.94	-1.39	3.55	-2.09	24.26	-117.92	9.91	0.996
216.00	100.00	3.57	4.94	-1.37	3.57	-2.11	24.28	-117.64	9.88	0.996
216.10	100.00	3.59	4.95	-1.36	3.59	-2.14	24.29	-117.36	9.84	0.996
216.20	100.00	3.61	4.95	-1.34	3.61	-2.16	24.31	-117.08	9.81	0.996
216.30	100.00	3.63	4.95	-1.32	3.63	-2.18	24.33	-116.79	9.78	0.996
216.40	100.00	3.65	4.95	-1.30	3.65	-2.21	24.34	-116.51	9.75	0.996
216.50	100.00	3.67	4.96	-1.29	3.67	-2.23	24.36	-116.23	9.71	0.996
216.60	100.00	3.69	4.96	-1.28	3.69	-2.25	24.38	-115.95	9.68	0.996
216.70	100.00	3.71	4.96	-1.25	3.71	-2.28	24.39	-115.66	9.65	0.996
216.80	100.00	3.73	4.96	-1.23	3.73	-2.30	24.41	-115.37	9.62	0.996
216.90	100.00	3.75	4.96	-1.21	3.75	-2.33	24.43	-115.09	9.58	0.996
217.00	100.00	3.77	4.97	-1.20	3.77	-2.35	24.44	-114.80	9.55	0.996
217.10	100.00	3.79	4.97	-1.18	3.79	-2.38	24.46	-114.52	9.52	0.996
217.20	100.00	3.81	4.97	-1.16	3.81	-2.40	24.48	-114.23	9.49	0.996
217.30	100.00	3.83	4.97	-1.14	3.83	-2.42	24.50	-113.95	9.46	0.996
217.40	100.00	3.85	4.97	-1.12	3.85	-2.45	24.52	-113.66	9.42	0.996
217.50	100.00	3.87	4.97	-1.10	3.87	-2.47	24.54	-113.38	9.39	0.996
217.60	100.00	3.89	4.98	-1.09	3.89	-2.50	24.55	-113.09	9.36	0.996
217.70	100.00	3.91	4.98	-1.07	3.91	-2.52	24.57	-112.80	9.33	0.996
217.80	100.00	3.93	4.98	-1.05	3.93	-2.55	24.59	-112.51	9.29	0.996
217.90	100.00	3.95	4.98	-1.03	3.95	-2.58	24.61	-112.23	9.26	0.996
218.00	100.00	3.97	4.98	-1.01	3.97	-2.60	24.63	-111.94	9.23	0.996
218.10	100.00	3.99	4.98	-0.99	3.99	-2.63	24.65	-111.65	9.20	0.996
218.20	100.00	4.02	4.98	-0.96	4.02	-2.65	24.67	-111.36	9.16	0.996
218.30	100.00	4.04	4.98	-0.94	4.04	-2.68	24.69	-111.07	9.13	0.996
218.40	100.00	4.06	4.98	-0.92	4.06	-2.70	24.71	-110.78	9.10	0.996
218.50	100.00	4.08	4.98	-0.90	4.08	-2.73	24.74	-110.50	9.07	0.996
218.60	100.00	4.10	4.98	-0.88	4.10	-2.76	24.76	-110.20	9.03	0.996
218.70	100.00	4.12	4.98	-0.86	4.12	-2.78	24.78	-109.92	9.00	0.996
218.80	100.00	4.15	4.98	-0.83	4.15	-2.81	24.80	-109.62	8.97	0.996
218.90	100.00	4.17	4.98	-0.81	4.17	-2.83	24.82	-109.34	8.94	0.996
219.00	100.00	4.19	4.98	-0.79	4.19	-2.85	24.84	-109.04	8.91	0.996
219.10	100.00	4.21	4.98	-0.77	4.21	-2.89	24.87	-108.75	8.87	0.996
219.20	100.00	4.23	4.98	-0.75	4.23	-2.91	24.89	-108.46	8.84	0.996
219.30	100.00	4.25	4.98	-0.73	4.25	-2.94	24.91	-108.17	8.81	0.996
219.40	100.00	4.28	4.98	-0.70	4.28	-2.97	24.94	-107.88	8.78	0.996
219.50	100.00	4.30	4.98	-0.68	4.30	-2.99	24.96	-107.58	8.74	0.996
219.60	100.00	4.32	4.98	-0.66	4.32	-3.02	24.99	-107.29	8.71	0.996
219.70	100.00	4.34	4.98	-0.64	4.34	-3.05	25.01	-107.00	8.68	0.996
219.80	100.00	4.37	4.98	-0.61	4.37	-3.07	25.04	-106.71	8.65	0.996
219.90	100.00	4.39	4.98	-0.59	4.39	-3.10	25.06	-106.41	8.62	0.996
220.00	100.00	4.41	4.98	-0.57	4.41	-3.13	25.09	-106.12	8.58	0.996
220.10	100.00	4.43	4.98	-0.55	4.43	-3.15	25.11	-105.83	8.55	0.996
220.20	100.00	4.46	4.98	-0.52	4.46	-3.18	25.14	-105.54	8.52	0.996
220.30	100.00	4.48	4.97	-0.49	4.48	-3.21	25.17	-105.24	8.48	0.996
220.40	100.00	4.50	4.97	-0.47	4.50	-3.23	25.19	-104.94	8.45	0.996
220.50	100.00	4.52	4.97	-0.45	4.52	-3.25	25.21	-104.65	8.42	0.996
220.60	100.00	4.55	4.97	-0.42	4.55	-3.29	25.25	-104.35	8.39	0.996
220.70	100.00	4.57	4.97	-0.40	4.57	-3.32	25.28	-104.06	8.35	0.996
220.80	100.00	4.59	4.96	-0.38	4.59	-3.34	25.31	-103.76	8.32	0.996
220.90	100.00	4.61	4.96	-0.35	4.61	-3.37	25.34	-103.46	8.29	0.996
221.00	100.00	4.64	4.96	-0.32	4.64	-3.40	25.37	-103.17	8.26	0.996
221.10	100.00	4.66	4.96	-0.30	4.66	-3.42	25.40	-102.87	8.22	0.996
221.20	100.00	4.68	4.95	-0.27	4.68	-3.45	25.43	-102.57	8.19	0.996
221.30	100.00	4.71	4.95	-0.24	4.71	-3.48	25.46	-102.27	8.16	0.996
221.40	100.00	4.73	4.95	-0.22	4.73	-3.51	25.49	-101.98	8.12	0.996
221.50	100.00	4.75	4.94	-0.19	4.75	-3.53	25.52	-101.68	8.09	0.996
221.60	100.00	4.77	4.94	-0.17	4.77	-3.56	25.55	-101.38	8.06	0.996
221.70	100.00	4.79	4.94	-0.14	4.79	-3.59	25.58	-101.08	8.03	0.996
221.80	100.00	4.82	4.93	-0.11	4.82	-3.61	25.62	-100.78	7.99	0.996
221.90	100.00	4.84	4.93	-0.09	4.84	-3.64	25.65	-100.48	7.96	0.996
222.00	100.00	4.87	4.92	-0.07	4.87	-3.67	25.69	-100.18	7.93	0.996
222.10	100.00	4.89	4.92	-0.03	4.89	-3.71	25.72	-99.88	7.90	0.996
222.20	100.00	4.91	4.92	-0.01	4.91	-3.75	25.76	-99.58	7.86	0.996
222.30	100.00	4.94	4.91	0.00	4.94	-3.78	25.79	-99.28	7.83	0.996
222.40	100.00	4.96	4.91	0.05	4.96	-3.82	25.83	-98.98	7.80	0.996
222.50	100.00	4.98	4.90	0.08	4.98	-3.85	25.86	-98.68	7.76	0.996
222.60	100.00	5.01	4.90	0.11	5.01	-3.89	25.90	-98.38	7.73	0.996
222.70	100.00	5.03	4.89	0.14	5.03	-3.92	25.94	-98.08	7.70	0.996
222.80	100.00	5.05	4.89	0.16	5.05	-3.95	25.98	-97.78	7.67	0.996
222.90	100.00	5.07	4.88	0.19	5.07	-3.99	26.01	-97.48	7.63	0.996
223.00	100.00	5.10	4.88	0.22	5.10	-4.02	26.05	-97.17	7.60	0.996
223.10	100.00	5.12	4.87	0.25	5.12	-4.05	26.09	-96.87	7.57	0.996
223.20	100.00	5.14	4.87	0.27	5.14	-4.09	26.13	-96.57	7.53	0.996
223.30	100.00	5.17	4.86	0.31	5.17	-4.12	26.17	-96.27	7.50	0.996
223.40	100.00	5.19	4.85	0.34	5.19	-4.16	26.21	-95.96	7.47	0.996
223.50	100.00	5.21	4.85	0.36	5.21	-4.19	26.25	-95.66	7.44	0.996
223.60	100.00	5.23	4.84	0.39	5.23	-4.22	26.30	-95.36	7.40	0.996
223.70	100.00	5.26	4.83	0.43	5.26	-4.26	26.34	-95.05	7.37	0.996
223.80	100.00	5.28	4.83	0.45	5.28	-4.29	26.39	-94.74	7.34	0.996
223.90	100.00	5.30	4.82	0.48	5.30	-4.33	26.43	-94.44	7.31	0.996
224.00	100.00	5.33	4.81	0.52	5.33	-4.36	26.47	-94.14	7.27	0.996
224.10	100.00	5.35	4.80	0.55	5.35	-4.40	26.52	-93.83	7.24	0.996
224.20	100.00	5.37	4.80	0.57	5.37	-4.43	26.56	-93.53	7.21	0.996
224.30	100.00	5.39	4.79	0.60	5.39	-4.46	26.61	-93.22	7.17	0.996
224.40	100.00	5.42	4.78	0.64	5.42	-4.50	26.66	-92.92	7.14	0.996
224.50	100.00	5.44	4.77	0.67	5.44	-4.52	26.71	-92.61	7.11	0.996
224.60	100.00	5.46	4.76	0.70	5.46	-4.56	26.75	-92.31	7.08	0.996
224.70	100.00	5.48	4.76	0.72	5.48	-4.59	26.80	-92.00	7.04	0.996
224.80	100.00	5.51	4.75	0.76	5.51	-4.62	26.85	-91.70	7.01	0.996
224.90	100.00	5.53	4.74							

230.00	100.00	6.55	3.99	2.56	6.55	-6.11	30.43	-75.68	5.35	0.995
230.10	100.00	6.56	3.99	2.56	6.55	-6.14	30.52	-75.37	5.32	0.995
230.20	100.00	6.58	3.95	2.63	6.58	-6.15	30.62	-75.06	5.29	0.995
230.30	100.00	6.60	3.93	2.67	6.60	-6.15	30.71	-74.76	5.26	0.995
230.40	100.00	6.61	3.93	2.70	6.60	-6.17	30.80	-74.45	5.23	0.995
230.50	100.00	6.63	3.89	2.74	6.63	-6.17	30.89	-74.15	5.20	0.995
230.60	100.00	6.65	3.86	2.79	6.65	-6.18	30.99	-73.84	5.17	0.995
230.70	100.00	6.66	3.84	2.82	6.66	-6.20	31.08	-73.54	5.15	0.995
230.80	100.00	6.68	3.82	2.86	6.68	-6.20	31.18	-73.23	5.12	0.995
230.90	100.00	6.69	3.80	2.89	6.69	-6.20	31.28	-72.93	5.09	0.995
231.00	100.00	6.71	3.78	2.91	6.71	-6.21	31.37	-72.62	5.06	0.995
231.10	100.00	6.73	3.75	2.98	6.73	-6.21	31.47	-72.32	5.03	0.995
231.20	100.00	6.74	3.73	3.01	6.74	-6.21	31.57	-72.02	5.00	0.995
231.30	100.00	6.76	3.71	3.05	6.76	-6.21	31.67	-71.71	4.97	0.995
231.40	100.00	6.77	3.68	3.09	6.77	-6.21	31.77	-71.41	4.94	0.995
231.50	100.00	6.79	3.66	3.13	6.79	-6.21	31.88	-71.11	4.91	0.995
231.60	100.00	6.80	3.63	3.17	6.80	-6.21	31.98	-70.81	4.89	0.995
231.70	100.00	6.81	3.61	3.20	6.81	-6.20	32.08	-70.50	4.86	0.995
231.80	100.00	6.83	3.59	3.24	6.83	-6.20	32.19	-70.20	4.83	0.995
231.90	100.00	6.84	3.56	3.28	6.84	-6.19	32.29	-69.90	4.80	0.995
232.00	100.00	6.86	3.54	3.32	6.86	-6.18	32.40	-69.60	4.77	0.995
232.10	100.00	6.87	3.51	3.36	6.87	-6.18	32.51	-69.30	4.75	0.995
232.20	100.00	6.89	3.49	3.40	6.89	-6.17	32.61	-69.00	4.72	0.995
232.30	100.00	6.90	3.46	3.44	6.90	-6.16	32.72	-68.70	4.69	0.995
232.40	100.00	6.91	3.44	3.47	6.91	-6.14	32.83	-68.40	4.66	0.995
232.50	100.00	6.93	3.41	3.52	6.93	-6.13	32.94	-68.11	4.64	0.995
232.60	100.00	6.94	3.38	3.56	6.94	-6.12	33.05	-67.81	4.61	0.995
232.70	100.00	6.95	3.36	3.59	6.95	-6.10	33.17	-67.51	4.58	0.995
232.80	100.00	6.96	3.33	3.63	6.96	-6.09	33.28	-67.21	4.55	0.995
232.90	100.00	6.98	3.30	3.68	6.98	-6.07	33.39	-66.92	4.53	0.995
233.00	100.00	6.99	3.28	3.71	6.99	-6.05	33.51	-66.62	4.50	0.995
233.10	100.00	7.00	3.25	3.75	7.00	-6.04	33.62	-66.33	4.48	0.995
233.20	100.00	7.01	3.22	3.79	7.01	-6.02	33.74	-66.03	4.45	0.995
233.30	100.00	7.03	3.19	3.84	7.03	-6.00	33.86	-65.74	4.42	0.995
233.40	100.00	7.04	3.17	3.87	7.04	-5.99	33.97	-65.44	4.40	0.995
233.50	100.00	7.05	3.14	3.91	7.05	-5.95	34.09	-65.15	4.37	0.995
233.60	100.00	7.06	3.11	3.95	7.06	-5.93	34.21	-64.86	4.35	0.995
233.70	100.00	7.07	3.08	3.99	7.07	-5.91	34.33	-64.57	4.32	0.995
233.80	100.00	7.08	3.05	4.03	7.08	-5.88	34.45	-64.28	4.29	0.995
233.90	100.00	7.10	3.02	4.08	7.10	-5.86	34.57	-63.98	4.27	0.995
234.00	100.00	7.11	2.99	4.13	7.11	-5.84	34.70	-63.69	4.24	0.995
234.10	100.00	7.12	2.97	4.15	7.12	-5.80	34.82	-63.41	4.22	0.995
234.20	100.00	7.13	2.94	4.19	7.13	-5.78	34.94	-63.12	4.19	0.995
234.30	100.00	7.14	2.91	4.23	7.14	-5.76	35.07	-62.83	4.17	0.995
234.40	100.00	7.15	2.88	4.27	7.15	-5.72	35.19	-62.54	4.15	0.995
234.50	100.00	7.16	2.85	4.31	7.16	-5.69	35.32	-62.25	4.12	0.995
234.60	100.00	7.17	2.82	4.35	7.17	-5.66	35.45	-61.97	4.10	0.995
234.70	100.00	7.18	2.79	4.39	7.18	-5.63	35.57	-61.68	4.07	0.995
234.80	100.00	7.19	2.76	4.43	7.19	-5.60	35.70	-61.40	4.05	0.995
234.90	100.00	7.20	2.72	4.47	7.20	-5.57	35.83	-61.11	4.03	0.995
235.00	100.00	7.21	2.69	4.52	7.21	-5.53	35.96	-60.83	4.00	0.995
235.10	100.00	7.22	2.66	4.56	7.22	-5.50	36.09	-60.55	3.98	0.995
235.20	100.00	7.23	2.63	4.60	7.23	-5.47	36.22	-60.27	3.96	0.995
235.30	100.00	7.24	2.60	4.64	7.24	-5.43	36.35	-59.98	3.93	0.995
235.40	100.00	7.24	2.57	4.67	7.24	-5.40	36.48	-59.70	3.91	0.995
235.50	100.00	7.25	2.54	4.71	7.25	-5.37	36.61	-59.42	3.89	0.995
235.60	100.00	7.26	2.50	4.76	7.26	-5.33	36.75	-59.14	3.86	0.995
235.70	100.00	7.27	2.47	4.80	7.27	-5.29	36.88	-58.86	3.84	0.995
235.80	100.00	7.28	2.44	4.84	7.28	-5.26	37.02	-58.58	3.82	0.995
235.90	100.00	7.29	2.41	4.88	7.29	-5.22	37.15	-58.31	3.80	0.995
236.00	100.00	7.30	2.37	4.93	7.30	-5.18	37.29	-58.03	3.78	0.995
236.10	100.00	7.30	2.34	4.96	7.30	-5.15	37.43	-57.76	3.75	0.995
236.20	100.00	7.31	2.31	5.00	7.31	-5.11	37.56	-57.48	3.73	0.995
236.30	100.00	7.32	2.27	5.05	7.32	-5.07	37.70	-57.21	3.71	0.995
236.40	100.00	7.33	2.24	5.09	7.33	-5.03	37.84	-56.94	3.69	0.995
236.50	100.00	7.33	2.21	5.12	7.33	-5.00	37.98	-56.67	3.67	0.995
236.60	100.00	7.34	2.17	5.17	7.34	-4.96	38.12	-56.39	3.65	0.995
236.70	100.00	7.35	2.14	5.21	7.35	-4.92	38.26	-56.11	3.63	0.995
236.80	100.00	7.35	2.11	5.24	7.35	-4.88	38.40	-55.85	3.61	0.995
236.90	100.00	7.36	2.07	5.29	7.36	-4.84	38.54	-55.59	3.59	0.995
237.00	100.00	7.37	2.04	5.33	7.37	-4.80	38.68	-55.32	3.57	0.995
237.10	100.00	7.38	2.00	5.38	7.38	-4.77	38.82	-55.05	3.55	0.995
237.20	100.00	7.38	1.97	5.41	7.38	-4.73	38.97	-54.78	3.53	0.995
237.30	100.00	7.39	1.93	5.45	7.39	-4.69	39.11	-54.52	3.51	0.995
237.40	100.00	7.39	1.90	5.49	7.39	-4.65	39.25	-54.25	3.49	0.995
237.50	100.00	7.40	1.86	5.54	7.40	-4.61	39.40	-53.99	3.47	0.995
237.60	100.00	7.41	1.83	5.58	7.41	-4.57	39.54	-53.72	3.45	0.995
237.70	100.00	7.41	1.79	5.62	7.41	-4.53	39.69	-53.46	3.43	0.995
237.80	100.00	7.42	1.76	5.66	7.42	-4.49	39.83	-53.20	3.41	0.995
237.90	100.00	7.42	1.72	5.70	7.42	-4.45	39.98	-52.94	3.39	0.995
238.00	100.00	7.43	1.69	5.74	7.43	-4.41	40.12	-52.68	3.37	0.995
238.10	100.00	7.43	1.65	5.78	7.43	-4.37	40.27	-52.43	3.35	0.995
238.20	100.00	7.44	1.62	5.82	7.44	-4.33	40.42	-52.17	3.33	0.995
238.30	100.00	7.44	1.58	5.86	7.44	-4.29	40.56	-51.91	3.32	0.995
238.40	100.00	7.45	1.54	5.91	7.45	-4.25	40.71	-51.65	3.30	0.995
238.50	100.00	7.45	1.51	5.94	7.45	-4.21	40.86	-51.40	3.28	0.995
238.60	100.00	7.46	1.47	5.99	7.46	-4.18	41.01	-51.15	3.26	0.995
238.70	100.00	7.46	1.44	6.02	7.46	-4.14	41.16	-50.89	3.24	0.995
238.80	100.00	7.47	1.40	6.07	7.47	-4.10	41.31	-50.63	3.22	0.995
238.90	100.00	7.47	1.36	6.11	7.47	-4.06	41.45	-50.39	3.21	0.995
239.00	100.00	7.48	1.33	6.15	7.48	-4.02	41.60	-50.14	3.19	0.995
239.10	100.00	7.48	1.29	6.19	7.48	-3.98	41.75	-49.89	3.17	0.995
239.20	100.00	7.49	1.25	6.24	7.49	-3.94	41.90	-49.64	3.16	0.995
239.30	100.00	7.49	1.21	6.28	7.49	-3.90	42.06	-49.39	3.14	0.995
239.40	100.00	7.49	1.18	6.32	7.49	-3.87	42.21	-49.15	3.12	0.995
239.50	100.00	7.50	1.14	6.36	7.50	-3.83	42.36	-48.90	3.11	0.995
239.60	100.00	7.50	1.10	6.40	7.50	-3.79	42.51	-48.65	3.09	0.995
239.70	100.00	7.51	1.07	6.44	7.51	-3.75	42.66	-48.41	3.07	0.995
239.80	100.00	7.51	1.03	6.48	7.51	-3.71	42.81	-48.17	3.06	0.995
239.90	100.00	7.51	0.99	6.52	7.51	-3.68	42.96	-47.93	3.04	0.995
240.00	100.00	7.52	0.95	6.57	7.52	-3.64	43.12	-47.68	3.03	0.995
240.10	100.00	7.52	0.92	6.60	7.52	-3.60	43.27	-47.44	3.01	0.995
240.20	100.00	7.52	0.88	6.64	7.52	-3.56	43.42	-47.20	3.00	0.995
240.30	100.00	7.53	0.84	6.68	7.53	-3.52	43.57	-46.97	2.98	0.995
240.40	100.00	7.53	0.80	6.73	7.53	-3.49	43.73	-46.73	2.97	0.995
240.50	100.00	7.53	0.76	6.77	7.53	-3.45	43.88	-46.49	2.95	0.995
240.60	100.00	7.53	0.73	6.80	7.53	-3.41	44.03	-46.25	2.94	0.995
240.70	100.00	7.54	0.69	6.85	7.54	-3.38	44.19	-46.02	2.92	0.995
240.80	100.00	7.54	0.65	6.89	7.54	-3.34	44.34	-45.79	2.91	0.995
240.90	100.00	7.54	0.61	6.94	7.54	-3.31	44.49	-45.55	2.89	0.995
241.00	100.00	7.54	0.57	6.97	7.54	-3.27	44.65	-45.32	2.88	0.995
241.10	100.00									

246.20	100.00	7.58	-1.42	9.00	7.58	-1.70	52.56	-34.41	2.28	0.996
246.30	100.00	7.58	-1.46	9.04	7.58	-1.68	52.71	-34.27	2.27	0.996
246.40	100.00	7.58	-1.50	9.08	7.58	-1.65	52.85	-34.03	2.26	0.996
246.50	100.00	7.58	-1.54	9.12	7.58	-1.63	53.00	-33.84	2.26	0.996
246.60	100.00	7.58	-1.57	9.15	7.57	-1.60	53.14	-33.65	2.25	0.996
246.70	100.00	7.58	-1.61	9.19	7.58	-1.58	53.29	-33.47	2.24	0.996
246.80	100.00	7.57	-1.65	9.22	7.57	-1.55	53.44	-33.28	2.23	0.996
246.90	100.00	7.57	-1.68	9.25	7.57	-1.53	53.58	-33.09	2.22	0.996
247.00	100.00	7.57	-1.72	9.29	7.57	-1.51	53.73	-32.91	2.21	0.996
247.10	100.00	7.57	-1.76	9.33	7.57	-1.48	53.87	-32.72	2.21	0.996
247.20	100.00	7.57	-1.79	9.36	7.57	-1.46	54.02	-32.54	2.20	0.996
247.30	100.00	7.57	-1.83	9.40	7.57	-1.44	54.16	-32.36	2.19	0.996
247.40	100.00	7.57	-1.87	9.44	7.57	-1.42	54.30	-32.17	2.18	0.996
247.50	100.00	7.57	-1.90	9.47	7.57	-1.39	54.45	-31.99	2.17	0.996
247.60	100.00	7.57	-1.94	9.51	7.57	-1.37	54.59	-31.81	2.17	0.996
247.70	100.00	7.57	-1.97	9.54	7.57	-1.35	54.73	-31.63	2.16	0.996
247.80	100.00	7.56	-2.01	9.57	7.56	-1.33	54.87	-31.45	2.15	0.996
247.90	100.00	7.56	-2.05	9.61	7.56	-1.30	55.01	-31.27	2.14	0.996
248.00	100.00	7.56	-2.08	9.64	7.56	-1.28	55.16	-31.09	2.13	0.996
248.10	100.00	7.56	-2.12	9.68	7.56	-1.26	55.30	-30.91	2.13	0.996
248.20	100.00	7.56	-2.15	9.71	7.56	-1.24	55.44	-30.73	2.12	0.996
248.30	100.00	7.56	-2.19	9.75	7.56	-1.22	55.58	-30.55	2.11	0.996
248.40	100.00	7.56	-2.22	9.78	7.56	-1.20	55.72	-30.37	2.11	0.996
248.50	100.00	7.56	-2.26	9.82	7.56	-1.18	55.86	-30.20	2.10	0.996
248.60	100.00	7.56	-2.29	9.85	7.56	-1.16	56.00	-30.02	2.09	0.996
248.70	100.00	7.55	-2.33	9.88	7.55	-1.14	56.14	-29.85	2.08	0.996
248.80	100.00	7.55	-2.36	9.91	7.55	-1.11	56.28	-29.67	2.08	0.996
248.90	100.00	7.55	-2.40	9.95	7.55	-1.09	56.41	-29.50	2.07	0.996
249.00	100.00	7.55	-2.43	9.98	7.55	-1.07	56.55	-29.32	2.06	0.996
249.10	100.00	7.55	-2.46	10.01	7.55	-1.05	56.69	-29.15	2.06	0.996
249.20	100.00	7.55	-2.50	10.05	7.55	-1.04	56.83	-28.97	2.05	0.996
249.30	100.00	7.55	-2.53	10.08	7.54	-1.02	56.96	-28.80	2.04	0.996
249.40	100.00	7.54	-2.57	10.11	7.54	-1.00	57.10	-28.63	2.04	0.996
249.50	100.00	7.54	-2.60	10.14	7.54	-0.98	57.23	-28.46	2.03	0.996
249.60	100.00	7.54	-2.63	10.17	7.54	-0.96	57.37	-28.28	2.02	0.996
249.70	100.00	7.54	-2.67	10.21	7.54	-0.94	57.51	-28.11	2.02	0.996
249.80	100.00	7.54	-2.70	10.24	7.54	-0.92	57.64	-27.94	2.01	0.996
249.90	100.00	7.54	-2.73	10.27	7.54	-0.90	57.77	-27.77	2.01	0.996
250.00	100.00	7.54	-2.76	10.30	7.54	-0.88	57.91	-27.60	2.00	0.996
250.10	100.00	7.53	-2.80	10.33	7.53	-0.86	58.04	-27.43	1.99	0.996
250.20	100.00	7.53	-2.83	10.36	7.53	-0.84	58.18	-27.26	1.98	0.996
250.30	100.00	7.53	-2.86	10.39	7.53	-0.83	58.31	-27.09	1.98	0.996
250.40	100.00	7.53	-2.89	10.42	7.53	-0.81	58.44	-26.92	1.97	0.996
250.50	100.00	7.53	-2.92	10.45	7.53	-0.79	58.57	-26.75	1.96	0.996
250.60	100.00	7.53	-2.96	10.49	7.53	-0.77	58.70	-26.59	1.96	0.996
250.70	100.00	7.53	-2.99	10.52	7.53	-0.76	58.84	-26.42	1.95	0.996
250.80	100.00	7.52	-3.02	10.54	7.52	-0.74	58.97	-26.25	1.95	0.996
250.90	100.00	7.52	-3.05	10.57	7.52	-0.72	59.10	-26.09	1.94	0.996
251.00	100.00	7.52	-3.08	10.60	7.52	-0.70	59.23	-25.92	1.93	0.996
251.10	100.00	7.52	-3.11	10.63	7.52	-0.68	59.36	-25.76	1.93	0.996
251.20	100.00	7.52	-3.14	10.66	7.52	-0.67	59.49	-25.59	1.92	0.996
251.30	100.00	7.52	-3.17	10.69	7.52	-0.65	59.62	-25.43	1.92	0.996
251.40	100.00	7.51	-3.20	10.71	7.51	-0.64	59.74	-25.26	1.91	0.996
251.50	100.00	7.51	-3.23	10.74	7.51	-0.62	59.87	-25.10	1.91	0.996
251.60	100.00	7.51	-3.26	10.77	7.51	-0.60	60.00	-24.93	1.90	0.996
251.70	100.00	7.51	-3.29	10.80	7.51	-0.59	60.13	-24.77	1.89	0.996
251.80	100.00	7.51	-3.32	10.83	7.51	-0.57	60.26	-24.61	1.89	0.996
251.90	100.00	7.51	-3.35	10.86	7.51	-0.56	60.38	-24.44	1.88	0.996
252.00	100.00	7.50	-3.38	10.89	7.50	-0.54	60.51	-24.28	1.87	0.996
252.10	100.00	7.50	-3.41	10.91	7.50	-0.52	60.64	-24.12	1.87	0.996
252.20	100.00	7.50	-3.43	10.93	7.50	-0.51	60.76	-23.95	1.87	0.996
252.30	100.00	7.50	-3.46	10.96	7.50	-0.49	60.89	-23.79	1.86	0.996
252.40	100.00	7.50	-3.49	10.99	7.50	-0.48	61.01	-23.63	1.86	0.996
252.50	100.00	7.50	-3.52	11.02	7.50	-0.46	61.14	-23.47	1.85	0.996
252.60	100.00	7.49	-3.54	11.04	7.49	-0.45	61.27	-23.31	1.85	0.996
252.70	100.00	7.49	-3.57	11.06	7.49	-0.43	61.38	-23.15	1.84	0.996
252.80	100.00	7.49	-3.60	11.09	7.49	-0.42	61.51	-22.99	1.84	0.996
252.90	100.00	7.49	-3.63	11.11	7.49	-0.40	61.63	-22.83	1.83	0.996
253.00	100.00	7.49	-3.65	11.14	7.49	-0.39	61.75	-22.67	1.83	0.996
253.10	100.00	7.49	-3.68	11.17	7.49	-0.37	61.88	-22.51	1.82	0.996
253.20	100.00	7.48	-3.70	11.19	7.48	-0.36	62.00	-22.35	1.82	0.996
253.30	100.00	7.48	-3.73	11.21	7.48	-0.34	62.12	-22.19	1.81	0.996
253.40	100.00	7.48	-3.76	11.24	7.48	-0.33	62.24	-22.03	1.81	0.996
253.50	100.00	7.48	-3.78	11.26	7.48	-0.31	62.36	-21.87	1.80	0.996
253.60	100.00	7.48	-3.81	11.29	7.48	-0.30	62.48	-21.71	1.80	0.996
253.70	100.00	7.48	-3.83	11.31	7.48	-0.29	62.60	-21.55	1.79	0.996
253.80	100.00	7.47	-3.86	11.34	7.47	-0.27	62.72	-21.39	1.78	0.996
253.90	100.00	7.47	-3.88	11.35	7.47	-0.26	62.84	-21.24	1.78	0.996
254.00	100.00	7.47	-3.90	11.37	7.47	-0.24	62.96	-21.08	1.78	0.996
254.10	100.00	7.47	-3.93	11.40	7.47	-0.23	63.08	-20.92	1.77	0.996
254.20	100.00	7.47	-3.95	11.42	7.47	-0.22	63.20	-20.76	1.77	0.996
254.30	100.00	7.47	-3.98	11.45	7.47	-0.20	63.31	-20.61	1.76	0.996
254.40	100.00	7.46	-4.00	11.47	7.46	-0.19	63.43	-20.45	1.76	0.996
254.50	100.00	7.46	-4.02	11.48	7.46	-0.18	63.55	-20.29	1.76	0.996
254.60	100.00	7.46	-4.04	11.50	7.46	-0.16	63.67	-20.14	1.75	0.996
254.70	100.00	7.46	-4.07	11.53	7.46	-0.15	63.78	-19.98	1.75	0.996
254.80	100.00	7.46	-4.09	11.55	7.46	-0.14	63.90	-19.82	1.74	0.996
254.90	100.00	7.46	-4.11	11.57	7.46	-0.12	64.02	-19.67	1.74	0.996
255.00	100.00	7.45	-4.13	11.58	7.45	-0.11	64.13	-19.51	1.73	0.996
255.10	100.00	7.45	-4.15	11.60	7.45	-0.10	64.25	-19.36	1.73	0.996
255.20	100.00	7.45	-4.18	11.63	7.45	-0.09	64.36	-19.20	1.73	0.996
255.30	100.00	7.45	-4.20	11.65	7.45	-0.07	64.48	-19.04	1.72	0.996
255.40	100.00	7.45	-4.22	11.67	7.45	-0.06	64.59	-18.89	1.72	0.996
255.50	100.00	7.45	-4.24	11.69	7.45	-0.05	64.70	-18.73	1.71	0.996
255.60	100.00	7.44	-4.26	11.71	7.44	-0.04	64.82	-18.58	1.71	0.996
255.70	100.00	7.44	-4.28	11.72	7.44	-0.03	64.93	-18.43	1.70	0.996
255.80	100.00	7.44	-4.30	11.74	7.44	-0.01	65.04	-18.27	1.70	0.996
255.90	100.00	7.44	-4.32	11.76	7.44	-0.01	65.16	-18.12	1.70	0.996
256.00	100.00	7.44	-4.34	11.78	7.44	0.00	65.27	-17.96	1.69	0.996
256.10	100.00	7.44	-4.35	11.79	7.44	0.02	65.38	-17.81	1.69	0.996
256.20	100.00	7.44	-4.37	11.81	7.44	0.03	65.49	-17.65	1.68	0.996
256.30	100.00	7.43	-4.39	11.82	7.43	0.05	65.61	-17.50	1.68	0.996
256.40	100.00	7.43	-4.41	11.84	7.43	0.06	65.72	-17.35	1.68	0.996
256.50	100.00	7.43	-4.43	11.85	7.43	0.07	65.83	-17.19	1.67	0.996
256.60	100.00	7.43	-4.44	11.87	7.43	0.08	65.94	-17.04	1.67	0.996
256.70	100.00	7.43	-4.46	11.89	7.43	0.09	66.05	-16.89	1.66	0.996
256.80	100.00	7.43	-4.48	11.91	7.43	0.11	66.16	-16.73	1.66	0.996
256.90	100.00	7.42	-4.50	11.92	7.42	0.12	66.27	-16.58	1.66	0.996
257.00	100.00	7.42	-4.51	11.93	7.42	0.13	66.38	-16.43	1.65	0.996
257.10	100.00	7.42	-4.52	11.95	7.42	0.14	66.49	-16.27	1.65	0.996
257.20	100.00	7.42	-4.54	11.96						



262.40	100.00	7.35	-5.03	12.38	7.35	0.64	71.92	-8.27	1.49	0.996
262.50	100.00	7.35	-5.04	12.39	7.35	0.65	72.02	-8.12	1.48	0.996
262.60	100.00	7.35	-5.04	12.39	7.35	0.65	72.11	-7.97	1.48	0.996
262.70	100.00	7.35	-5.04	12.39	7.35	0.66	72.21	-7.82	1.48	0.996
262.80	100.00	7.35	-5.05	12.40	7.35	0.67	72.31	-7.67	1.48	0.996
262.90	100.00	7.35	-5.05	12.40	7.35	0.68	72.40	-7.52	1.47	0.996
263.00	100.00	7.35	-5.05	12.40	7.35	0.69	72.50	-7.37	1.47	0.996
263.10	100.00	7.35	-5.05	12.40	7.35	0.69	72.60	-7.22	1.47	0.996
263.20	100.00	7.35	-5.05	12.40	7.35	0.70	72.69	-7.07	1.47	0.996
263.30	100.00	7.35	-5.06	12.41	7.35	0.71	72.79	-6.92	1.46	0.996
263.40	100.00	7.34	-5.06	12.41	7.34	0.72	72.88	-6.77	1.46	0.996
263.50	100.00	7.34	-5.06	12.40	7.34	0.72	72.98	-6.62	1.46	0.996
263.60	100.00	7.34	-5.06	12.40	7.34	0.73	73.07	-6.47	1.46	0.996
263.70	100.00	7.34	-5.06	12.40	7.34	0.74	73.17	-6.32	1.45	0.996
263.80	100.00	7.34	-5.06	12.40	7.34	0.75	73.27	-6.17	1.45	0.996
263.90	100.00	7.34	-5.06	12.40	7.34	0.76	73.36	-6.02	1.45	0.996
264.00	100.00	7.34	-5.06	12.40	7.34	0.76	73.45	-5.87	1.45	0.996
264.10	100.00	7.34	-5.06	12.40	7.34	0.77	73.55	-5.72	1.44	0.996
264.20	100.00	7.34	-5.06	12.40	7.34	0.78	73.64	-5.58	1.44	0.996
264.30	100.00	7.34	-5.06	12.40	7.34	0.78	73.74	-5.43	1.44	0.996
264.40	100.00	7.34	-5.06	12.40	7.34	0.79	73.83	-5.28	1.44	0.996
264.50	100.00	7.34	-5.06	12.40	7.34	0.80	73.93	-5.13	1.44	0.996
264.60	100.00	7.34	-5.06	12.40	7.34	0.80	74.02	-4.98	1.43	0.996
264.70	100.00	7.33	-5.06	12.39	7.33	0.81	74.12	-4.83	1.43	0.996
264.80	100.00	7.33	-5.06	12.39	7.33	0.82	74.21	-4.68	1.43	0.996
264.90	100.00	7.33	-5.06	12.39	7.33	0.83	74.30	-4.53	1.43	0.996
265.00	100.00	7.33	-5.06	12.39	7.33	0.83	74.40	-4.38	1.42	0.996
265.10	100.00	7.33	-5.06	12.39	7.33	0.84	74.49	-4.23	1.42	0.996
265.20	100.00	7.33	-5.05	12.38	7.33	0.85	74.58	-4.08	1.42	0.996
265.30	100.00	7.33	-5.05	12.38	7.33	0.85	74.68	-3.93	1.42	0.996
265.40	100.00	7.33	-5.05	12.38	7.33	0.86	74.77	-3.78	1.42	0.996
265.50	100.00	7.33	-5.05	12.38	7.33	0.87	74.86	-3.63	1.41	0.996
265.60	100.00	7.33	-5.05	12.38	7.33	0.87	74.96	-3.48	1.41	0.996
265.70	100.00	7.33	-5.04	12.37	7.33	0.88	75.05	-3.34	1.41	0.996
265.80	100.00	7.33	-5.04	12.37	7.33	0.89	75.14	-3.19	1.41	0.996
265.90	100.00	7.33	-5.04	12.37	7.33	0.89	75.23	-3.04	1.41	0.996
266.00	100.00	7.33	-5.04	12.37	7.33	0.90	75.33	-2.89	1.40	0.996
266.10	100.00	7.33	-5.03	12.36	7.33	0.91	75.42	-2.74	1.40	0.996
266.20	100.00	7.33	-5.03	12.36	7.33	0.91	75.51	-2.59	1.40	0.996
266.30	100.00	7.33	-5.03	12.36	7.33	0.92	75.60	-2.44	1.40	0.996
266.40	100.00	7.33	-5.02	12.35	7.33	0.93	75.70	-2.29	1.40	0.996
266.50	100.00	7.32	-5.02	12.34	7.32	0.93	75.79	-2.14	1.40	0.996
266.60	100.00	7.32	-5.02	12.34	7.32	0.94	75.88	-1.99	1.39	0.996
266.70	100.00	7.32	-5.01	12.33	7.32	0.94	75.97	-1.84	1.39	0.996
266.80	100.00	7.32	-5.01	12.33	7.32	0.95	76.06	-1.70	1.39	0.996
266.90	100.00	7.32	-5.00	12.32	7.32	0.96	76.16	-1.55	1.39	0.996
267.00	100.00	7.32	-5.00	12.32	7.32	0.96	76.25	-1.40	1.39	0.996
267.10	100.00	7.32	-5.00	12.32	7.32	0.97	76.34	-1.25	1.38	0.996
267.20	100.00	7.32	-4.99	12.31	7.32	0.98	76.43	-1.10	1.38	0.996
267.30	100.00	7.32	-4.99	12.31	7.32	0.98	76.52	-0.95	1.38	0.996
267.40	100.00	7.32	-4.98	12.30	7.32	0.99	76.61	-0.80	1.38	0.996
267.50	100.00	7.32	-4.98	12.30	7.32	1.00	76.71	-0.65	1.38	0.996
267.60	100.00	7.32	-4.97	12.29	7.32	1.00	76.80	-0.50	1.38	0.996
267.70	100.00	7.32	-4.97	12.29	7.32	1.01	76.89	-0.36	1.37	0.996
267.80	100.00	7.32	-4.96	12.28	7.32	1.01	76.98	-0.21	1.37	0.996
267.90	100.00	7.32	-4.95	12.27	7.32	1.02	77.07	-0.06	1.37	0.996
268.00	100.00	7.32	-4.95	12.27	7.32	1.03	77.16	0.09	1.37	0.996
268.10	100.00	7.32	-4.94	12.26	7.32	1.03	77.25	0.24	1.37	0.996
268.20	100.00	7.32	-4.94	12.26	7.32	1.04	77.34	0.39	1.36	0.996
268.30	100.00	7.32	-4.93	12.25	7.32	1.04	77.43	0.54	1.36	0.996
268.40	100.00	7.32	-4.93	12.25	7.32	1.05	77.52	0.68	1.36	0.996
268.50	100.00	7.32	-4.92	12.24	7.32	1.06	77.62	0.83	1.36	0.996
268.60	100.00	7.32	-4.92	12.24	7.32	1.06	77.71	0.98	1.36	0.996
268.70	100.00	7.32	-4.91	12.23	7.32	1.07	77.80	1.13	1.36	0.996
268.80	100.00	7.32	-4.90	12.22	7.32	1.07	77.89	1.28	1.36	0.996
268.90	100.00	7.32	-4.90	12.22	7.32	1.08	77.98	1.43	1.36	0.996
269.00	100.00	7.32	-4.89	12.21	7.32	1.08	78.07	1.58	1.35	0.996
269.10	100.00	7.32	-4.88	12.20	7.32	1.09	78.16	1.73	1.35	0.996
269.20	100.00	7.32	-4.88	12.20	7.32	1.10	78.25	1.87	1.35	0.996
269.30	100.00	7.32	-4.87	12.19	7.32	1.10	78.34	2.02	1.35	0.996
269.40	100.00	7.32	-4.86	12.18	7.32	1.11	78.43	2.17	1.35	0.996
269.50	100.00	7.32	-4.86	12.18	7.32	1.11	78.52	2.32	1.35	0.996
269.60	100.00	7.32	-4.85	12.17	7.32	1.12	78.61	2.47	1.35	0.996
269.70	100.00	7.32	-4.84	12.16	7.32	1.12	78.70	2.62	1.34	0.996
269.80	100.00	7.32	-4.84	12.16	7.32	1.13	78.79	2.76	1.34	0.996
269.90	100.00	7.32	-4.83	12.15	7.32	1.14	78.88	2.91	1.34	0.996
270.00	100.00	7.32	-4.82	12.14	7.32	1.14	78.97	3.06	1.34	0.996
270.10	100.00	7.32	-4.82	12.14	7.32	1.15	79.06	3.21	1.34	0.996
270.20	100.00	7.32	-4.81	12.13	7.32	1.15	79.15	3.35	1.34	0.996
270.30	100.00	7.32	-4.80	12.12	7.32	1.16	79.24	3.50	1.34	0.996
270.40	100.00	7.32	-4.79	12.11	7.32	1.16	79.33	3.65	1.34	0.996
270.50	100.00	7.32	-4.79	12.11	7.32	1.17	79.42	3.80	1.33	0.996
270.60	100.00	7.32	-4.78	12.10	7.32	1.17	79.51	3.95	1.33	0.996
270.70	100.00	7.32	-4.77	12.09	7.32	1.18	79.60	4.09	1.33	0.996
270.80	100.00	7.32	-4.76	12.08	7.32	1.18	79.69	4.24	1.33	0.996
270.90	100.00	7.32	-4.75	12.07	7.32	1.19	79.78	4.39	1.33	0.996
271.00	100.00	7.32	-4.75	12.07	7.32	1.19	79.87	4.54	1.33	0.996
271.10	100.00	7.32	-4.74	12.06	7.32	1.20	79.96	4.69	1.33	0.996
271.20	100.00	7.32	-4.73	12.05	7.32	1.21	80.05	4.83	1.33	0.996
271.30	100.00	7.32	-4.72	12.04	7.32	1.21	80.14	4.98	1.33	0.996
271.40	100.00	7.32	-4.71	12.03	7.32	1.22	80.23	5.13	1.32	0.996
271.50	100.00	7.32	-4.71	12.03	7.32	1.22	80.32	5.28	1.32	0.996
271.60	100.00	7.32	-4.70	12.02	7.32	1.23	80.41	5.42	1.32	0.996
271.70	100.00	7.32	-4.69	12.01	7.32	1.23	80.50	5.57	1.32	0.996
271.80	100.00	7.32	-4.68	12.00	7.32	1.24	80.59	5.72	1.32	0.996
271.90	100.00	7.32	-4.67	11.99	7.32	1.24	80.68	5.87	1.32	0.996
272.00	100.00	7.32	-4.66	11.98	7.32	1.25	80.77	6.01	1.32	0.996
272.10	100.00	7.32	-4.65	11.97	7.32	1.25	80.86	6.16	1.32	0.996
272.20	100.00	7.32	-4.65	11.97	7.32	1.26	80.95	6.31	1.32	0.996
272.30	100.00	7.32	-4.64	11.96	7.32	1.26	81.04	6.45	1.32	0.996
272.40	100.00	7.32	-4.63	11.95	7.32	1.27	81.13	6.60	1.31	0.996
272.50	100.00	7.32	-4.62	11.94	7.32	1.27	81.22	6.75	1.31	0.996
272.60	100.00	7.32	-4.61	11.93	7.32	1.28	81.30	6.90	1.31	0.996
272.70	100.00	7.32	-4.60	11.92	7.32	1.28	81.39	7.04	1.31	0.996
272.80	100.00	7.32	-4.59	11.91	7.32	1.29	81.48	7.19	1.31	0.996
272.90	100.00	7.32	-4.58	11.90	7.32	1.29	81.57	7.34	1.31	0.996
273.00	100.00	7.32	-4.57	11.89	7.32	1.30	81.66	7.48	1.31	0.996
273.10	100.00	7.32	-4.57	11.89	7.32	1.30	81.75	7.63	1.31	0.996
273.20	100.00	7.32	-4.56	11.88	7.32	1.30	81.84	7.78	1.31	0.996
273.30	100.00	7.32	-4.55	11.87	7.32	1.31	81.93	7.92	1.31	0.996
273.40	100.00	7.32	-4.54	11.86	7.32	1.31	82.02	8.07	1.31	0.996
273.50	100.00	7.32	-4.53	11.85	7.32	1.32	82.11	8.21	1.31	0.996
273.60	100.00	7.32								

278.60	100.00	7.35	-4.03	11.38	7.35	1.50	86.69	15.56	1.29	0.996
278.70	100.00	7.36	-4.02	11.38	7.36	1.50	86.78	15.70	1.29	0.996
278.80	100.00	7.36	-4.01	11.37	7.36	1.50	86.87	15.84	1.29	0.996
278.90	100.00	7.36	-4.00	11.36	7.36	1.50	86.96	15.98	1.29	0.996
279.00	100.00	7.36	-3.99	11.35	7.36	1.50	87.05	16.13	1.29	0.996
279.10	100.00	7.36	-3.98	11.34	7.36	1.50	87.14	16.27	1.29	0.996
279.20	100.00	7.36	-3.97	11.33	7.36	1.50	87.23	16.41	1.29	0.996
279.30	100.00	7.36	-3.96	11.32	7.36	1.50	87.32	16.55	1.29	0.996
279.40	100.00	7.36	-3.95	11.31	7.36	1.49	87.41	16.69	1.29	0.996
279.50	100.00	7.36	-3.94	11.30	7.36	1.49	87.50	16.83	1.29	0.996
279.60	100.00	7.36	-3.93	11.29	7.36	1.49	87.59	16.97	1.29	0.996
279.70	100.00	7.36	-3.93	11.29	7.36	1.49	87.68	17.11	1.29	0.996
279.80	100.00	7.37	-3.92	11.29	7.37	1.49	87.77	17.25	1.29	0.996
279.90	100.00	7.37	-3.91	11.28	7.37	1.49	87.86	17.39	1.29	0.996
280.00	100.00	7.37	-3.90	11.27	7.37	1.49	87.95	17.52	1.29	0.996
280.10	100.00	7.37	-3.89	11.26	7.37	1.49	88.04	17.66	1.29	0.996
280.20	100.00	7.37	-3.88	11.25	7.37	1.49	88.13	17.80	1.29	0.996
280.30	100.00	7.37	-3.87	11.24	7.37	1.48	88.22	17.94	1.29	0.996
280.40	100.00	7.37	-3.86	11.23	7.37	1.48	88.31	18.08	1.30	0.996
280.50	100.00	7.37	-3.85	11.22	7.37	1.48	88.40	18.22	1.30	0.996
280.60	100.00	7.37	-3.84	11.21	7.37	1.48	88.49	18.36	1.30	0.996
280.70	100.00	7.38	-3.83	11.21	7.38	1.48	88.58	18.50	1.30	0.996
280.80	100.00	7.38	-3.82	11.20	7.38	1.48	88.67	18.63	1.30	0.996
280.90	100.00	7.38	-3.81	11.19	7.38	1.48	88.76	18.77	1.30	0.996
281.00	100.00	7.38	-3.80	11.18	7.38	1.48	88.85	18.91	1.30	0.996
281.10	100.00	7.38	-3.79	11.17	7.38	1.48	88.94	19.05	1.30	0.996
281.20	100.00	7.38	-3.78	11.16	7.38	1.47	89.03	19.18	1.30	0.996
281.30	100.00	7.38	-3.77	11.15	7.38	1.47	89.12	19.32	1.30	0.996
281.40	100.00	7.38	-3.76	11.14	7.38	1.47	89.21	19.46	1.30	0.996
281.50	100.00	7.38	-3.75	11.13	7.38	1.47	89.31	19.60	1.30	0.996
281.60	100.00	7.39	-3.74	11.13	7.39	1.47	89.40	19.73	1.30	0.996
281.70	100.00	7.39	-3.73	11.12	7.39	1.47	89.49	19.87	1.30	0.996
281.80	100.00	7.39	-3.72	11.11	7.39	1.47	89.58	20.00	1.30	0.996
281.90	100.00	7.39	-3.71	11.10	7.39	1.47	89.67	20.14	1.30	0.996
282.00	100.00	7.39	-3.70	11.09	7.39	1.46	89.76	20.28	1.30	0.996
282.10	100.00	7.39	-3.69	11.08	7.39	1.46	89.85	20.41	1.30	0.996
282.20	100.00	7.39	-3.68	11.07	7.39	1.46	89.94	20.55	1.30	0.996
282.30	100.00	7.40	-3.67	11.06	7.40	1.46	90.03	20.68	1.30	0.996
282.40	100.00	7.40	-3.66	11.05	7.40	1.46	90.12	20.82	1.30	0.996
282.50	100.00	7.40	-3.65	11.04	7.40	1.46	90.21	20.95	1.30	0.996
282.60	100.00	7.40	-3.64	11.04	7.40	1.46	90.30	21.09	1.31	0.996
282.70	100.00	7.40	-3.63	11.03	7.40	1.46	90.39	21.22	1.31	0.996
282.80	100.00	7.40	-3.62	11.02	7.40	1.46	90.48	21.36	1.31	0.996
282.90	100.00	7.40	-3.61	11.01	7.40	1.45	90.57	21.49	1.31	0.996
283.00	100.00	7.41	-3.60	11.01	7.41	1.45	90.66	21.63	1.31	0.996
283.10	100.00	7.41	-3.59	11.00	7.41	1.45	90.76	21.76	1.31	0.996
283.20	100.00	7.41	-3.58	10.99	7.41	1.45	90.85	21.89	1.31	0.996
283.30	100.00	7.41	-3.58	10.99	7.41	1.45	90.94	22.03	1.31	0.996
283.40	100.00	7.41	-3.57	10.98	7.41	1.45	91.03	22.16	1.31	0.996
283.50	100.00	7.41	-3.56	10.97	7.41	1.45	91.12	22.29	1.31	0.996
283.60	100.00	7.41	-3.56	10.97	7.41	1.45	91.21	22.43	1.31	0.996
283.70	100.00	7.41	-3.55	10.96	7.41	1.45	91.30	22.56	1.31	0.996
283.80	100.00	7.42	-3.54	10.95	7.42	1.44	91.39	22.69	1.31	0.996
283.90	100.00	7.42	-3.53	10.95	7.42	1.44	91.48	22.82	1.31	0.996
284.00	100.00	7.42	-3.52	10.94	7.42	1.44	91.57	22.95	1.31	0.996
284.10	100.00	7.42	-3.51	10.93	7.42	1.44	91.66	23.09	1.31	0.996
284.20	100.00	7.42	-3.50	10.92	7.42	1.44	91.75	23.22	1.32	0.996
284.30	100.00	7.42	-3.50	10.92	7.42	1.44	91.84	23.35	1.32	0.996
284.40	100.00	7.42	-3.49	10.91	7.42	1.44	91.93	23.48	1.32	0.996
284.50	100.00	7.43	-3.48	10.91	7.43	1.44	92.02	23.61	1.32	0.996
284.60	100.00	7.43	-3.47	10.90	7.43	1.43	92.11	23.74	1.32	0.996
284.70	100.00	7.43	-3.46	10.89	7.43	1.43	92.20	23.87	1.32	0.996
284.80	100.00	7.43	-3.45	10.88	7.43	1.43	92.29	24.00	1.32	0.996
284.90	100.00	7.43	-3.44	10.87	7.43	1.42	92.39	24.13	1.32	0.996
285.00	100.00	7.43	-3.44	10.87	7.43	1.42	92.48	24.26	1.32	0.996
285.10	100.00	7.43	-3.43	10.86	7.43	1.41	92.57	24.39	1.32	0.996
285.20	100.00	7.44	-3.42	10.86	7.44	1.41	92.66	24.52	1.32	0.996
285.30	100.00	7.44	-3.41	10.85	7.44	1.41	92.75	24.65	1.32	0.996
285.40	100.00	7.44	-3.40	10.84	7.44	1.40	92.84	24.78	1.32	0.996
285.50	100.00	7.44	-3.39	10.83	7.44	1.40	92.93	24.91	1.32	0.996
285.60	100.00	7.44	-3.39	10.83	7.44	1.40	93.02	25.04	1.33	0.996
285.70	100.00	7.44	-3.38	10.82	7.44	1.39	93.11	25.16	1.33	0.996
285.80	100.00	7.45	-3.37	10.82	7.45	1.39	93.20	25.29	1.33	0.996
285.90	100.00	7.45	-3.36	10.81	7.45	1.38	93.29	25.42	1.33	0.996
286.00	100.00	7.45	-3.35	10.80	7.45	1.38	93.38	25.55	1.33	0.996
286.10	100.00	7.45	-3.34	10.79	7.45	1.37	93.47	25.67	1.33	0.996
286.20	100.00	7.45	-3.34	10.79	7.45	1.37	93.56	25.80	1.33	0.996
286.30	100.00	7.45	-3.33	10.78	7.45	1.37	93.65	25.93	1.33	0.996
286.40	100.00	7.46	-3.32	10.78	7.46	1.36	93.74	26.05	1.33	0.996
286.50	100.00	7.46	-3.31	10.77	7.46	1.35	93.83	26.18	1.33	0.996
286.60	100.00	7.46	-3.31	10.77	7.46	1.35	93.92	26.30	1.33	0.996
286.70	100.00	7.46	-3.30	10.76	7.46	1.35	94.01	26.43	1.33	0.996
286.80	100.00	7.46	-3.29	10.75	7.46	1.34	94.10	26.56	1.34	0.996
286.90	100.00	7.46	-3.28	10.74	7.46	1.34	94.19	26.68	1.34	0.996
287.00	100.00	7.47	-3.27	10.74	7.47	1.34	94.28	26.80	1.34	0.996
287.10	100.00	7.47	-3.26	10.73	7.47	1.33	94.37	26.93	1.34	0.996
287.20	100.00	7.47	-3.26	10.73	7.47	1.33	94.46	27.05	1.34	0.996
287.30	100.00	7.47	-3.25	10.72	7.47	1.32	94.55	27.18	1.34	0.996
287.40	100.00	7.47	-3.24	10.71	7.47	1.32	94.64	27.30	1.34	0.996
287.50	100.00	7.47	-3.24	10.71	7.47	1.32	94.73	27.42	1.34	0.996
287.60	100.00	7.48	-3.23	10.71	7.48	1.31	94.82	27.55	1.34	0.996
287.70	100.00	7.48	-3.22	10.70	7.48	1.31	94.90	27.67	1.34	0.996
287.80	100.00	7.48	-3.21	10.69	7.48	1.30	94.99	27.79	1.34	0.996
287.90	100.00	7.48	-3.21	10.69	7.48	1.30	95.08	27.92	1.35	0.996
288.00	100.00	7.48	-3.20	10.68	7.48	1.29	95.17	28.04	1.35	0.996
288.10	100.00	7.48	-3.19	10.67	7.48	1.29	95.26	28.16	1.35	0.996
288.20	100.00	7.49	-3.18	10.67	7.49	1.29	95.35	28.28	1.35	0.996
288.30	100.00	7.49	-3.18	10.66	7.49	1.28	95.44	28.40	1.35	0.996
288.40	100.00	7.49	-3.17	10.66	7.49	1.28	95.53	28.52	1.35	0.996
288.50	100.00	7.49	-3.16	10.65	7.49	1.28	95.62	28.64	1.35	0.996
288.60	100.00	7.49	-3.16	10.65	7.49	1.27	95.71	28.77	1.35	0.996
288.70	100.00	7.50	-3.15	10.65	7.50	1.27	95.79	28.88	1.35	0.996
288.80	100.00	7.50	-3.14	10.64	7.50	1.26	95.88	29.00	1.35	0.996
288.90	100.00	7.50	-3.14	10.64	7.50	1.26	95.96	29.12	1.35	0.996
289.00	100.00	7.50	-3.13	10.63	7.50	1.25	96.06	29.24	1.36	0.996
289.10	100.00	7.50	-3.12	10.62	7.50	1.25	96.15	29.36	1.36	0.996
289.20	100.00	7.51	-3.11	10.62	7.51	1.24	96.24	29.48	1.36	0.996
289.30	100.00	7.51	-3.11	10.62	7.51	1.24	96.32	29.60	1.36	0.996
289.40	100.00	7.51	-3.10	10.61	7.51	1.24	96.41	29.72	1.36	0.996
289.50	100.00	7.51	-3.10	10.61	7.51	1.23	96.50	29.83	1.36	0.996
289.60	100.00									



294.80	100.00	7.63	-2.83	10.46	7.63	1.01	100.95	35.60	1.41	0.996
294.90	100.00	7.63	-2.82	10.45	7.63	1.00	101.02	35.70	1.41	0.996
295.00	100.00	7.63	-2.82	10.45	7.63	1.00	101.10	35.80	1.42	0.996
295.10	100.00	7.64	-2.82	10.46	7.64	1.00	101.18	35.90	1.42	0.996
295.20	100.00	7.64	-2.82	10.46	7.64	0.99	101.26	36.00	1.42	0.996
295.30	100.00	7.64	-2.81	10.45	7.64	0.99	101.34	36.10	1.42	0.996
295.40	100.00	7.64	-2.81	10.45	7.64	0.98	101.41	36.20	1.42	0.996
295.50	100.00	7.65	-2.81	10.45	7.65	0.98	101.49	36.29	1.42	0.996
295.60	100.00	7.65	-2.80	10.45	7.65	0.97	101.57	36.39	1.42	0.996
295.70	100.00	7.65	-2.80	10.45	7.65	0.97	101.64	36.49	1.42	0.996
295.80	100.00	7.65	-2.80	10.45	7.65	0.97	101.72	36.58	1.42	0.996
295.90	100.00	7.66	-2.80	10.46	7.66	0.96	101.79	36.68	1.42	0.996
296.00	100.00	7.66	-2.79	10.45	7.66	0.96	101.87	36.78	1.43	0.996
296.10	100.00	7.66	-2.79	10.45	7.66	0.95	101.94	36.87	1.43	0.996
296.20	100.00	7.66	-2.79	10.45	7.66	0.95	102.02	36.97	1.43	0.996
296.30	100.00	7.67	-2.79	10.46	7.67	0.94	102.09	37.06	1.43	0.996
296.40	100.00	7.67	-2.78	10.45	7.67	0.94	102.17	37.15	1.43	0.996
296.50	100.00	7.67	-2.78	10.45	7.67	0.94	102.24	37.25	1.43	0.996
296.60	100.00	7.67	-2.78	10.45	7.67	0.93	102.31	37.34	1.43	0.996
296.70	100.00	7.68	-2.78	10.46	7.68	0.93	102.39	37.43	1.43	0.996
296.80	100.00	7.68	-2.78	10.46	7.68	0.92	102.46	37.53	1.43	0.996
296.90	100.00	7.68	-2.77	10.45	7.68	0.92	102.53	37.62	1.43	0.996
297.00	100.00	7.69	-2.77	10.46	7.69	0.91	102.60	37.71	1.44	0.996
297.10	100.00	7.69	-2.77	10.46	7.69	0.91	102.67	37.80	1.44	0.996
297.20	100.00	7.69	-2.77	10.46	7.69	0.91	102.74	37.89	1.44	0.996
297.30	100.00	7.70	-2.77	10.47	7.70	0.90	102.89	38.08	1.44	0.996
297.40	100.00	7.70	-2.76	10.46	7.70	0.89	102.96	38.17	1.44	0.996
297.50	100.00	7.70	-2.76	10.46	7.70	0.89	103.03	38.26	1.44	0.996
297.60	100.00	7.71	-2.76	10.47	7.71	0.89	103.10	38.35	1.44	0.996
297.70	100.00	7.71	-2.76	10.47	7.71	0.88	103.16	38.43	1.44	0.996
297.80	100.00	7.71	-2.76	10.47	7.71	0.88	103.23	38.52	1.44	0.996
297.90	100.00	7.71	-2.76	10.47	7.71	0.87	103.30	38.61	1.45	0.996
298.00	100.00	7.72	-2.76	10.48	7.72	0.87	103.37	38.70	1.45	0.996
298.10	100.00	7.72	-2.76	10.48	7.72	0.86	103.44	38.79	1.45	0.996
298.20	100.00	7.72	-2.76	10.48	7.72	0.86	103.50	38.87	1.45	0.996
298.30	100.00	7.73	-2.76	10.49	7.73	0.86	103.57	38.96	1.45	0.996
298.40	100.00	7.73	-2.75	10.48	7.73	0.85	103.64	39.05	1.45	0.996
298.50	100.00	7.73	-2.75	10.48	7.73	0.85	103.70	39.13	1.45	0.996
298.60	100.00	7.73	-2.75	10.48	7.73	0.84	103.76	39.22	1.45	0.996
298.70	100.00	7.74	-2.75	10.49	7.74	0.84	103.83	39.31	1.45	0.996
298.80	100.00	7.74	-2.75	10.49	7.74	0.83	103.89	39.39	1.45	0.996
298.90	100.00	7.74	-2.75	10.49	7.74	0.83	103.96	39.48	1.45	0.996
299.00	100.00	7.75	-2.75	10.50	7.75	0.83	104.02	39.56	1.46	0.996
299.10	100.00	7.75	-2.75	10.50	7.75	0.81	104.08	39.64	1.46	0.996
299.20	100.00	7.75	-2.75	10.50	7.75	0.81	104.15	39.73	1.46	0.996
299.30	100.00	7.76	-2.75	10.51	7.76	0.80	104.21	39.81	1.46	0.996
299.40	100.00	7.76	-2.75	10.51	7.76	0.79	104.27	39.89	1.46	0.996
299.50	100.00	7.76	-2.75	10.51	7.76	0.78	104.33	39.98	1.46	0.996
299.60	100.00	7.77	-2.76	10.52	7.77	0.77	104.39	40.06	1.46	0.996
299.70	100.00	7.77	-2.76	10.53	7.77	0.76	104.45	40.14	1.46	0.996
299.80	100.00	7.77	-2.76	10.53	7.77	0.75	104.51	40.22	1.46	0.996
299.90	100.00	7.77	-2.76	10.53	7.77	0.75	104.57	40.30	1.46	0.996
300.00	100.00	7.78	-2.76	10.54	7.78	0.74	104.63	40.39	1.47	0.996
300.10	100.00	7.78	-2.76	10.54	7.78	0.73	104.69	40.47	1.47	0.996
300.20	100.00	7.78	-2.76	10.54	7.78	0.73	104.74	40.55	1.47	0.996
300.30	100.00	7.79	-2.76	10.55	7.79	0.71	104.80	40.63	1.47	0.996
300.40	100.00	7.79	-2.76	10.55	7.79	0.70	104.86	40.71	1.47	0.996
300.50	100.00	7.79	-2.76	10.55	7.79	0.69	104.91	40.79	1.47	0.996
300.60	100.00	7.80	-2.77	10.57	7.80	0.69	104.97	40.86	1.47	0.996
300.70	100.00	7.80	-2.77	10.57	7.80	0.68	105.02	40.94	1.47	0.996
300.80	100.00	7.80	-2.77	10.57	7.80	0.67	105.08	41.02	1.47	0.996
300.90	100.00	7.81	-2.77	10.58	7.81	0.66	105.13	41.10	1.47	0.996
301.00	100.00	7.81	-2.77	10.58	7.81	0.65	105.18	41.18	1.47	0.996
301.10	100.00	7.81	-2.77	10.58	7.81	0.64	105.24	41.26	1.48	0.996
301.20	100.00	7.82	-2.78	10.60	7.82	0.63	105.29	41.33	1.48	0.996
301.30	100.00	7.82	-2.78	10.60	7.82	0.62	105.34	41.41	1.48	0.996
301.40	100.00	7.82	-2.78	10.60	7.82	0.62	105.39	41.49	1.48	0.996
301.50	100.00	7.83	-2.78	10.61	7.83	0.61	105.44	41.56	1.48	0.996
301.60	100.00	7.83	-2.79	10.62	7.83	0.60	105.49	41.64	1.48	0.996
301.70	100.00	7.83	-2.79	10.62	7.83	0.59	105.54	41.71	1.48	0.996
301.80	100.00	7.84	-2.79	10.63	7.84	0.58	105.59	41.79	1.48	0.996
301.90	100.00	7.84	-2.79	10.63	7.84	0.57	105.64	41.86	1.48	0.996
302.00	100.00	7.84	-2.80	10.65	7.84	0.56	105.68	41.94	1.48	0.996
302.10	100.00	7.85	-2.80	10.65	7.85	0.55	105.73	42.01	1.48	0.996
302.20	100.00	7.85	-2.80	10.65	7.85	0.54	105.78	42.09	1.49	0.996
302.30	100.00	7.85	-2.81	10.66	7.85	0.53	105.82	42.16	1.49	0.996
302.40	100.00	7.86	-2.81	10.67	7.86	0.52	105.87	42.23	1.49	0.996
302.50	100.00	7.86	-2.81	10.67	7.86	0.52	105.91	42.31	1.49	0.996
302.60	100.00	7.87	-2.82	10.69	7.87	0.51	105.96	42.38	1.49	0.996
302.70	100.00	7.87	-2.82	10.69	7.87	0.50	106.00	42.45	1.49	0.996
302.80	100.00	7.87	-2.82	10.69	7.87	0.49	106.04	42.52	1.49	0.996
302.90	100.00	7.88	-2.83	10.71	7.88	0.48	106.08	42.60	1.49	0.996
303.00	100.00	7.88	-2.83	10.71	7.88	0.47	106.12	42.67	1.49	0.996
303.10	100.00	7.88	-2.84	10.72	7.88	0.46	106.16	42.74	1.49	0.996
303.20	100.00	7.89	-2.85	10.73	7.89	0.45	106.20	42.81	1.49	0.996
303.30	100.00	7.89	-2.85	10.74	7.89	0.44	106.24	42.88	1.49	0.996
303.40	100.00	7.89	-2.85	10.74	7.89	0.43	106.28	42.95	1.50	0.996
303.50	100.00	7.90	-2.85	10.75	7.90	0.42	106.32	43.02	1.50	0.996
303.60	100.00	7.90	-2.86	10.76	7.90	0.42	106.35	43.09	1.50	0.996
303.70	100.00	7.91	-2.86	10.77	7.91	0.41	106.39	43.16	1.50	0.996
303.80	100.00	7.91	-2.87	10.78	7.91	0.40	106.42	43.23	1.50	0.996
303.90	100.00	7.91	-2.87	10.78	7.91	0.39	106.46	43.30	1.50	0.996
304.00	100.00	7.92	-2.88	10.80	7.92	0.38	106.49	43.37	1.50	0.996
304.10	100.00	7.92	-2.88	10.80	7.92	0.37	106.52	43.44	1.50	0.996
304.20	100.00	7.93	-2.89	10.82	7.93	0.36	106.56	43.51	1.50	0.996
304.30	100.00	7.93	-2.89	10.82	7.93	0.35	106.59	43.58	1.50	0.996
304.40	100.00	7.93	-2.90	10.83	7.93	0.34	106.62	43.65	1.50	0.996
304.50	100.00	7.94	-2.91	10.85	7.94	0.33	106.65	43.72	1.51	0.996
304.60	100.00	7.94	-2.91	10.85	7.94	0.32	106.68	43.78	1.51	0.996
304.70	100.00	7.95	-2.92	10.87	7.95	0.31	106.71	43.85	1.51	0.996
304.80	100.00	7.95	-2.93	10.88	7.95	0.30	106.74	43.92	1.51	0.996
304.90	100.00	7.95	-2.93	10.88	7.95	0.29	106.76	43.99	1.51	0.996
305.00	100.00	7.96	-2.93	10.89	7.96	0.28	106.79	44.06	1.51	0.996
305.10	100.00	7.96	-2.95	10.91	7.96	0.27	106.81	44.12	1.51	0.996
305.20	100.00	7.97	-2.95	10.92	7.97	0.26	106.84	44.19	1.51	0.996
305.30	100.00	7.97	-2.95	10.92	7.97	0.25	106.86	44.25	1.51	0.996
305.40	100.00	7.97	-2.97	10.94	7.97	0.24	106.88	44.32	1.51	0.996
305.50	100.00	7.98	-2.97	10.95	7.98	0.23	106.91	44.39	1.51	0.996
305.60	100.00	7.98	-2.97	10.95	7.98	0.22	106.93	44.45	1.51	0.996
305.70	100.00	7.								

311.00	100.00	8.24	-3.61	11.85	8.24	-0.32	106.73	47.90	1.56	0.996
311.10	100.00	8.25	-3.63	11.85	8.25	-0.34	106.70	47.97	1.57	0.996
311.20	100.00	8.26	-3.66	11.89	8.26	-0.35	106.67	48.04	1.57	0.996
311.30	100.00	8.27	-3.68	11.92	8.27	-0.36	106.63	48.10	1.57	0.996
311.40	100.00	8.28	-3.71	11.97	8.28	-0.37	106.60	48.17	1.57	0.996
311.50	100.00	8.29	-3.72	12.00	8.29	-0.38	106.56	48.24	1.57	0.996
311.60	100.00	8.30	-3.73	12.04	8.30	-0.39	106.53	48.31	1.57	0.996
311.70	100.00	8.31	-3.74	12.07	8.31	-0.40	106.49	48.38	1.57	0.996
311.80	100.00	8.32	-3.75	12.11	8.32	-0.41	106.46	48.45	1.57	0.996
311.90	100.00	8.33	-3.76	12.15	8.33	-0.42	106.43	48.52	1.57	0.996
312.00	100.00	8.34	-3.77	12.19	8.34	-0.43	106.40	48.59	1.57	0.996
312.10	100.00	8.35	-3.78	12.23	8.35	-0.44	106.37	48.66	1.58	0.996
312.20	100.00	8.36	-3.79	12.27	8.36	-0.45	106.34	48.73	1.58	0.996
312.30	100.00	8.37	-3.80	12.31	8.37	-0.46	106.31	48.80	1.58	0.996
312.40	100.00	8.38	-3.81	12.35	8.38	-0.47	106.28	48.87	1.58	0.996
312.50	100.00	8.39	-3.82	12.39	8.39	-0.48	106.25	48.94	1.58	0.996
312.60	100.00	8.40	-3.83	12.43	8.40	-0.49	106.22	49.01	1.58	0.996
312.70	100.00	8.41	-3.84	12.47	8.41	-0.50	106.19	49.08	1.58	0.996
312.80	100.00	8.42	-3.85	12.51	8.42	-0.51	106.16	49.15	1.58	0.996
312.90	100.00	8.43	-3.86	12.55	8.43	-0.52	106.13	49.22	1.59	0.996
313.00	100.00	8.44	-3.87	12.59	8.44	-0.53	106.10	49.29	1.59	0.996
313.10	100.00	8.45	-3.88	12.63	8.45	-0.54	106.07	49.36	1.59	0.996
313.20	100.00	8.46	-3.89	12.67	8.46	-0.55	106.04	49.43	1.59	0.996
313.30	100.00	8.47	-3.90	12.71	8.47	-0.56	106.01	49.50	1.59	0.996
313.40	100.00	8.48	-3.91	12.75	8.48	-0.57	105.98	49.57	1.59	0.996
313.50	100.00	8.49	-3.92	12.79	8.49	-0.58	105.95	49.64	1.59	0.996
313.60	100.00	8.50	-3.93	12.83	8.50	-0.59	105.92	49.71	1.60	0.996
313.70	100.00	8.51	-3.94	12.87	8.51	-0.60	105.89	49.78	1.60	0.996
313.80	100.00	8.52	-3.95	12.91	8.52	-0.61	105.86	49.85	1.60	0.996
313.90	100.00	8.53	-3.96	12.95	8.53	-0.62	105.83	49.92	1.60	0.996
314.00	100.00	8.54	-3.97	12.99	8.54	-0.63	105.80	49.99	1.60	0.996
314.10	100.00	8.55	-3.98	13.03	8.55	-0.64	105.77	50.06	1.60	0.996
314.20	100.00	8.56	-3.99	13.07	8.56	-0.65	105.74	50.13	1.60	0.996
314.30	100.00	8.57	-4.00	13.11	8.57	-0.66	105.71	50.20	1.60	0.996
314.40	100.00	8.58	-4.01	13.15	8.58	-0.67	105.68	50.27	1.61	0.996
314.50	100.00	8.59	-4.02	13.19	8.59	-0.68	105.65	50.34	1.61	0.996
314.60	100.00	8.60	-4.03	13.23	8.60	-0.69	105.62	50.41	1.61	0.996
314.70	100.00	8.61	-4.04	13.27	8.61	-0.70	105.59	50.48	1.61	0.996
314.80	100.00	8.62	-4.05	13.31	8.62	-0.71	105.56	50.55	1.61	0.996
314.90	100.00	8.63	-4.06	13.35	8.63	-0.72	105.53	50.62	1.61	0.996
315.00	100.00	8.64	-4.07	13.39	8.64	-0.73	105.50	50.69	1.61	0.996
315.10	100.00	8.65	-4.08	13.43	8.65	-0.74	105.47	50.76	1.61	0.996
315.20	100.00	8.66	-4.09	13.47	8.66	-0.75	105.44	50.83	1.61	0.996
315.30	100.00	8.67	-4.10	13.51	8.67	-0.76	105.41	50.90	1.62	0.996
315.40	100.00	8.68	-4.11	13.55	8.68	-0.77	105.38	50.97	1.62	0.996
315.50	100.00	8.69	-4.12	13.59	8.69	-0.78	105.35	51.04	1.62	0.996
315.60	100.00	8.70	-4.13	13.63	8.70	-0.79	105.32	51.11	1.62	0.996
315.70	100.00	8.71	-4.14	13.67	8.71	-0.80	105.29	51.18	1.62	0.996
315.80	100.00	8.72	-4.15	13.71	8.72	-0.81	105.26	51.25	1.63	0.996
315.90	100.00	8.73	-4.16	13.75	8.73	-0.82	105.23	51.32	1.63	0.996
316.00	100.00	8.74	-4.17	13.79	8.74	-0.83	105.20	51.39	1.63	0.996
316.10	100.00	8.75	-4.18	13.83	8.75	-0.84	105.17	51.46	1.63	0.996
316.20	100.00	8.76	-4.19	13.87	8.76	-0.85	105.14	51.53	1.63	0.996
316.30	100.00	8.77	-4.20	13.91	8.77	-0.86	105.11	51.60	1.63	0.996
316.40	100.00	8.78	-4.21	13.95	8.78	-0.87	105.08	51.67	1.63	0.996
316.50	100.00	8.79	-4.22	13.99	8.79	-0.88	105.05	51.74	1.64	0.996
316.60	100.00	8.80	-4.23	14.03	8.80	-0.89	105.02	51.81	1.64	0.996
316.70	100.00	8.81	-4.24	14.07	8.81	-0.90	104.99	51.88	1.64	0.996
316.80	100.00	8.82	-4.25	14.11	8.82	-0.91	104.96	51.95	1.64	0.996
316.90	100.00	8.83	-4.26	14.15	8.83	-0.92	104.93	52.02	1.64	0.996
317.00	100.00	8.84	-4.27	14.19	8.84	-0.93	104.90	52.09	1.65	0.996
317.10	100.00	8.85	-4.28	14.23	8.85	-0.94	104.87	52.16	1.65	0.996
317.20	100.00	8.86	-4.29	14.27	8.86	-0.95	104.84	52.23	1.65	0.996
317.30	100.00	8.87	-4.30	14.31	8.87	-0.96	104.81	52.30	1.65	0.996
317.40	100.00	8.88	-4.31	14.35	8.88	-0.97	104.78	52.37	1.65	0.996
317.50	100.00	8.89	-4.32	14.39	8.89	-0.98	104.75	52.44	1.65	0.996
317.60	100.00	8.90	-4.33	14.43	8.90	-0.99	104.72	52.51	1.66	0.996
317.70	100.00	8.91	-4.34	14.47	8.91	-1.00	104.69	52.58	1.66	0.996
317.80	100.00	8.92	-4.35	14.51	8.92	-1.01	104.66	52.65	1.66	0.996
317.90	100.00	8.93	-4.36	14.55	8.93	-1.02	104.63	52.72	1.66	0.996
318.00	100.00	8.94	-4.37	14.59	8.94	-1.03	104.60	52.79	1.66	0.996
318.10	100.00	8.95	-4.38	14.63	8.95	-1.04	104.57	52.86	1.67	0.996
318.20	100.00	8.96	-4.39	14.67	8.96	-1.05	104.54	52.93	1.67	0.996
318.30	100.00	8.97	-4.40	14.71	8.97	-1.06	104.51	53.00	1.67	0.996
318.40	100.00	8.98	-4.41	14.75	8.98	-1.07	104.48	53.07	1.67	0.996
318.50	100.00	8.99	-4.42	14.79	8.99	-1.08	104.45	53.14	1.67	0.996
318.60	100.00	9.00	-4.43	14.83	9.00	-1.09	104.42	53.21	1.67	0.996
318.70	100.00	9.01	-4.44	14.87	9.01	-1.10	104.39	53.28	1.68	0.996
318.80	100.00	9.02	-4.45	14.91	9.02	-1.11	104.36	53.35	1.68	0.996
318.90	100.00	9.03	-4.46	14.95	9.03	-1.12	104.33	53.42	1.68	0.996
319.00	100.00	9.04	-4.47	14.99	9.04	-1.13	104.30	53.49	1.68	0.996
319.10	100.00	9.05	-4.48	15.03	9.05	-1.14	104.27	53.56	1.68	0.996
319.20	100.00	9.06	-4.49	15.07	9.06	-1.15	104.24	53.63	1.69	0.996
319.30	100.00	9.07	-4.50	15.11	9.07	-1.16	104.21	53.70	1.69	0.996
319.40	100.00	9.08	-4.51	15.15	9.08	-1.17	104.18	53.77	1.69	0.996
319.50	100.00	9.09	-4.52	15.19	9.09	-1.18	104.15	53.84	1.69	0.996
319.60	100.00	9.10	-4.53	15.23	9.10	-1.19	104.12	53.91	1.69	0.996
319.70	100.00	9.11	-4.54	15.27	9.11	-1.20	104.09	53.98	1.69	0.996
319.80	100.00	9.12	-4.55	15.31	9.12	-1.21	104.06	54.05	1.69	0.996
319.90	100.00	9.13	-4.56	15.35	9.13	-1.22	104.03	54.12	1.69	0.996
320.00	100.00	9.14	-4.57	15.39	9.14	-1.23	104.00	54.19	1.70	0.996
320.10	100.00	9.15	-4.58	15.43	9.15	-1.24	103.97	54.26	1.70	0.996
320.20	100.00	9.16	-4.59	15.47	9.16	-1.25	103.94	54.33	1.70	0.996
320.30	100.00	9.17	-4.60	15.51	9.17	-1.26	103.91	54.40	1.70	0.996
320.40	100.00	9.18	-4.61	15.55	9.18	-1.27	103.88	54.47	1.71	0.996
320.50	100.00	9.19	-4.62	15.59	9.19	-1.28	103.85	54.54	1.71	0.996
320.60	100.00	9.20	-4.63	15.63	9.20	-1.29	103.82	54.61	1.71	0.996
320.70	100.00	9.21	-4.64	15.67	9.21	-1.30	103.79	54.68	1.71	0.996
320.80	100.00	9.22	-4.65	15.71	9.22	-1.31	103.76	54.75	1.71	0.996
320.90	100.00	9.23	-4.66	15.75	9.23	-1.32	103.73	54.82	1.72	0.996
321.00	100.00	9.24	-4.67	15.79	9.24	-1.33	103.70	54.89	1.72	0.996
321.10	100.00	9.25	-4.68	15.83	9.25	-1.34	103.67	54.96	1.72	0.996
321.20	100.00	9.26	-4.69	15.87	9.26	-1.35	103.64	55.03	1.72	0.996
321.30	100.00	9.27	-4.70	15.91	9.27	-1.36	103.61	55.10	1.72	0.996
321.40	100.00	9.28	-4.71	15.95	9.28	-1.37	103.58	55.17	1.73	0.996
321.50	100.00	9.29	-4.72	15.99	9.29	-1.38	103.55	55.24	1.73	0.996
321.60	100.00	9.30	-4.73	16.03	9.30	-1.39	103.52	55.31	1.73	0.996
321.70	100.00	9.31	-4.74	16.07	9.31	-1.40	103.49	55.38	1.73	0.996
321.80	100.00	9.32	-4.75	16.11	9.32	-1.41	103.46	55.45	1.73	0.996
321.90	100.00	9.								

327.20	100.00	9.74	-15.43	25.17	9.74	-3.80	87.79	71.37	2.11	0.995
327.30	100.00	9.74	-15.70	25.45	9.74	-3.83	87.63	71.65	2.17	0.995
327.40	100.00	9.76	-15.97	25.73	9.76	-3.86	87.46	71.95	2.13	0.995
327.50	100.00	9.78	-16.25	26.03	9.78	-3.89	87.29	72.24	2.13	0.995
327.60	100.00	9.79	-16.54	26.33	9.79	-3.92	87.12	72.54	2.14	0.995
327.70	100.00	9.80	-16.83	26.63	9.80	-3.96	86.95	72.84	2.15	0.995
327.80	100.00	9.82	-17.14	26.96	9.82	-3.99	86.78	73.14	2.16	0.995
327.90	100.00	9.83	-17.45	27.28	9.83	-4.02	86.61	73.45	2.17	0.995
328.00	100.00	9.84	-17.78	27.62	9.84	-4.05	86.45	73.75	2.18	0.995
328.10	100.00	9.86	-18.11	27.97	9.86	-4.08	86.28	74.06	2.19	0.995
328.20	100.00	9.87	-18.45	28.32	9.87	-4.11	86.12	74.38	2.19	0.995
328.30	100.00	9.89	-18.79	28.68	9.89	-4.14	85.95	74.69	2.20	0.995
328.40	100.00	9.90	-19.14	29.04	9.90	-4.18	85.79	75.01	2.21	0.995
328.50	100.00	9.91	-19.49	29.40	9.91	-4.21	85.62	75.33	2.22	0.995
328.60	100.00	9.93	-19.85	29.78	9.93	-4.24	85.46	75.66	2.23	0.995
328.70	100.00	9.94	-20.20	30.14	9.94	-4.27	85.30	75.98	2.24	0.995
328.80	100.00	9.95	-20.55	30.50	9.95	-4.30	85.15	76.31	2.25	0.995
328.90	100.00	9.97	-20.89	30.86	9.97	-4.33	84.97	76.64	2.26	0.995
329.00	100.00	9.98	-21.21	31.19	9.98	-4.36	84.81	76.98	2.27	0.995
329.10	100.00	10.00	-21.51	31.51	10.00	-4.39	84.65	77.31	2.28	0.995
329.20	100.00	10.01	-21.78	31.79	10.01	-4.42	84.49	77.65	2.29	0.995
329.30	100.00	10.02	-22.00	32.02	10.02	-4.44	84.34	78.00	2.30	0.995
329.40	100.00	10.04	-22.18	32.22	10.04	-4.47	84.18	78.34	2.31	0.995
329.50	100.00	10.05	-22.30	32.35	10.05	-4.50	84.02	78.69	2.32	0.995
329.60	100.00	10.06	-22.35	32.41	10.06	-4.53	83.87	79.04	2.33	0.995
329.70	100.00	10.08	-22.34	32.42	10.08	-4.55	83.72	79.40	2.34	0.995
329.80	100.00	10.09	-22.26	32.35	10.09	-4.58	83.56	79.75	2.35	0.995
329.90	100.00	10.11	-22.12	32.23	10.11	-4.61	83.41	80.11	2.36	0.995
330.00	100.00	10.12	-21.93	32.03	10.12	-4.63	83.26	80.47	2.37	0.995
330.10	100.00	10.13	-21.65	31.78	10.13	-4.66	83.11	80.84	2.38	0.995
330.20	100.00	10.15	-21.35	31.50	10.15	-4.68	82.97	81.21	2.39	0.995
330.30	100.00	10.16	-21.01	31.17	10.16	-4.71	82.82	81.58	2.40	0.995
330.40	100.00	10.18	-20.64	30.82	10.18	-4.73	82.68	81.95	2.42	0.995
330.50	100.00	10.19	-20.25	30.44	10.19	-4.75	82.53	82.33	2.43	0.995
330.60	100.00	10.20	-19.85	30.05	10.20	-4.78	82.39	82.70	2.44	0.995
330.70	100.00	10.22	-19.44	29.66	10.22	-4.80	82.25	83.09	2.45	0.995
330.80	100.00	10.23	-19.03	29.26	10.23	-4.82	82.11	83.47	2.46	0.995
330.90	100.00	10.24	-18.66	28.86	10.24	-4.84	81.97	83.86	2.47	0.995
331.00	100.00	10.26	-18.20	28.46	10.26	-4.86	81.84	84.25	2.48	0.995
331.10	100.00	10.27	-17.79	28.06	10.27	-4.88	81.70	84.64	2.50	0.995
331.20	100.00	10.29	-17.39	27.68	10.29	-4.90	81.57	85.03	2.51	0.995
331.30	100.00	10.30	-17.00	27.30	10.30	-4.91	81.44	85.43	2.52	0.995
331.40	100.00	10.32	-16.62	26.94	10.32	-4.93	81.31	85.83	2.53	0.995
331.50	100.00	10.34	-16.24	26.54	10.34	-4.95	81.19	86.24	2.54	0.995
331.60	100.00	10.34	-15.87	26.21	10.34	-4.96	81.06	86.65	2.56	0.995
331.70	100.00	10.36	-15.51	25.87	10.36	-5.04	80.94	87.05	2.57	0.995
331.80	100.00	10.37	-15.16	25.51	10.37	-5.12	80.82	87.47	2.58	0.995
331.90	100.00	10.39	-14.82	25.21	10.39	-5.20	80.70	87.88	2.59	0.995
332.00	100.00	10.40	-14.49	24.89	10.40	-5.28	80.58	88.30	2.61	0.995
332.10	100.00	10.41	-14.16	24.57	10.41	-5.36	80.47	88.72	2.62	0.995
332.20	100.00	10.43	-13.84	24.27	10.43	-5.44	80.36	89.14	2.63	0.995
332.30	100.00	10.44	-13.53	23.97	10.44	-5.52	80.25	89.57	2.64	0.995
332.40	100.00	10.45	-13.25	23.68	10.45	-5.60	80.14	90.00	2.66	0.995
332.50	100.00	10.47	-12.94	23.41	10.47	-5.69	80.04	90.43	2.67	0.995
332.60	100.00	10.48	-12.65	23.13	10.48	-5.78	79.93	90.86	2.68	0.995
332.70	100.00	10.50	-12.37	22.87	10.50	-5.87	79.83	91.30	2.70	0.995
332.80	100.00	10.51	-12.09	22.60	10.51	-5.96	79.74	91.74	2.71	0.995
332.90	100.00	10.52	-11.82	22.34	10.52	-6.05	79.64	92.18	2.72	0.995
333.00	100.00	10.54	-11.54	22.10	10.54	-6.14	79.55	92.62	2.74	0.995
333.10	100.00	10.55	-11.30	21.85	10.55	-6.24	79.46	93.07	2.75	0.995
333.20	100.00	10.56	-11.05	21.61	10.56	-6.33	79.37	93.52	2.76	0.995
333.30	100.00	10.58	-10.81	21.39	10.58	-6.43	79.29	93.97	2.78	0.995
333.40	100.00	10.59	-10.56	21.15	10.59	-6.52	79.21	94.43	2.79	0.995
333.50	100.00	10.60	-10.33	20.93	10.60	-6.62	79.13	94.88	2.80	0.995
333.60	100.00	10.62	-10.10	20.72	10.62	-6.72	79.05	95.34	2.82	0.995
333.70	100.00	10.63	-9.87	20.50	10.63	-6.82	78.99	95.81	2.83	0.995
333.80	100.00	10.64	-9.65	20.29	10.64	-6.92	78.92	96.27	2.85	0.995
333.90	100.00	10.65	-9.43	20.08	10.65	-7.02	78.85	96.74	2.86	0.995
334.00	100.00	10.67	-9.22	19.89	10.67	-7.13	78.79	97.21	2.87	0.995
334.10	100.00	10.68	-9.01	19.69	10.68	-7.24	78.73	97.68	2.89	0.995
334.20	100.00	10.69	-8.80	19.49	10.69	-7.35	78.68	98.15	2.90	0.995
334.30	100.00	10.71	-8.60	19.31	10.71	-7.46	78.63	98.63	2.92	0.995
334.40	100.00	10.72	-8.40	19.12	10.72	-7.57	78.58	99.11	2.93	0.995
334.50	100.00	10.73	-8.21	18.94	10.73	-7.68	78.54	99.60	2.94	0.995
334.60	100.00	10.74	-8.02	18.76	10.74	-7.79	78.50	100.07	2.96	0.995
334.70	100.00	10.76	-7.83	18.59	10.76	-7.90	78.46	100.56	2.97	0.995
334.80	100.00	10.77	-7.64	18.43	10.77	-8.01	78.43	101.05	2.99	0.995
334.90	100.00	10.78	-7.46	18.24	10.78	-8.14	78.40	101.54	3.00	0.995
335.00	100.00	10.79	-7.28	18.07	10.79	-8.25	78.37	102.03	3.02	0.995
335.10	100.00	10.80	-7.11	17.91	10.80	-8.37	78.35	102.53	3.03	0.995
335.20	100.00	10.82	-6.93	17.75	10.82	-8.49	78.34	103.02	3.04	0.995
335.30	100.00	10.83	-6.76	17.59	10.83	-8.61	78.33	103.52	3.06	0.995
335.40	100.00	10.84	-6.60	17.44	10.84	-8.74	78.32	104.02	3.07	0.995
335.50	100.00	10.85	-6.43	17.28	10.85	-8.86	78.32	104.52	3.09	0.995
335.60	100.00	10.86	-6.27	17.13	10.86	-8.98	78.32	105.02	3.10	0.995
335.70	100.00	10.87	-6.11	16.97	10.87	-9.11	78.32	105.52	3.12	0.995
335.80	100.00	10.89	-5.95	16.84	10.89	-9.23	78.33	106.03	3.13	0.995
335.90	100.00	10.90	-5.80	16.70	10.90	-9.36	78.35	106.54	3.14	0.995
336.00	100.00	10.91	-5.65	16.56	10.91	-9.49	78.37	107.05	3.16	0.995
336.10	100.00	10.92	-5.50	16.42	10.92	-9.61	78.39	107.56	3.17	0.995
336.20	100.00	10.93	-5.35	16.28	10.93	-9.74	78.42	108.08	3.19	0.995
336.30	100.00	10.94	-5.20	16.14	10.94	-9.87	78.46	108.60	3.21	0.995
336.40	100.00	10.95	-5.06	16.01	10.95	-9.99	78.50	109.11	3.21	0.995
336.50	100.00	10.96	-4.92	15.88	10.96	-10.12	78.54	109.62	3.23	0.995
336.60	100.00	10.97	-4.78	15.74	10.97	-10.24	78.59	110.14	3.24	0.995
336.70	100.00	10.98	-4.64	15.62	10.98	-10.37	78.65	110.66	3.25	0.995
336.80	100.00	10.99	-4.50	15.49	10.99	-10.49	78.71	111.18	3.27	0.995
336.90	100.00	11.00	-4.37	15.37	11.00	-10.62	78.78	111.70	3.28	0.995
337.00	100.00	11.01	-4.24	15.25	11.01	-10.73	78.85	112.22	3.29	0.995
337.10	100.00	11.02	-4.11	15.13	11.02	-10.85	78.93	112.75	3.31	0.995
337.20	100.00	11.03	-3.98	15.01	11.03	-10.96	79.01	113.27	3.32	0.995
337.30	100.00	11.04	-3.86	14.90	11.04	-11.08	79.11	113.80	3.33	0.995
337.40	100.00	11.05	-3.73	14.78	11.05	-11.19	79.20	114.32	3.35	0.995
337.50	100.00	11.06	-3.61	14.67	11.06	-11.30	79.30	114.84	3.36	0.995
337.60	100.00	11.07	-3.49	14.56	11.07	-11.39	79.41	115.37	3.37	0.995
337.70	100.00	11.07	-3.37	14.44	11.07	-11.49	79.53	115.90	3.38	0.995
337.80	100.00	11.08	-3.25	14.33	11.08	-11.58	79.65	116.42	3.40	0.995
337.90	100.00	11.09	-3.14	14.23	11.09	-11.66				

343.40	100.00	11.26	1.14	10.12	11.26	-15.66	99.36	139.46	3.58	0.995
343.50	100.00	11.26	1.18	10.08	11.26	-15.66	99.36	139.46	3.57	0.995
343.60	100.00	11.25	1.23	10.02	11.25	-16.38	100.56	139.64	3.56	0.995
343.70	100.00	11.25	1.27	9.98	11.25	-16.75	101.17	139.71	3.55	0.995
343.80	100.00	11.25	1.31	9.94	11.25	-17.12	101.78	139.78	3.55	0.995
343.90	100.00	11.25	1.35	9.90	11.25	-17.46	102.40	139.76	3.52	0.995
344.00	100.00	11.25	1.39	9.86	11.25	-17.79	103.02	139.75	3.51	0.995
344.10	100.00	11.24	1.42	9.84	11.24	-18.11	103.64	139.72	3.50	0.995
344.20	100.00	11.24	1.46	9.78	11.24	-18.39	104.27	139.66	3.48	0.995
344.30	100.00	11.24	1.49	9.75	11.24	-18.64	104.89	139.57	3.47	0.995
344.40	100.00	11.24	1.53	9.71	11.24	-18.86	105.52	139.46	3.46	0.995
344.50	100.00	11.23	1.56	9.67	11.23	-19.05	106.15	139.32	3.44	0.995
344.60	100.00	11.23	1.59	9.64	11.23	-19.09	106.78	139.15	3.42	0.995
344.70	100.00	11.23	1.62	9.61	11.23	-19.12	107.41	138.94	3.41	0.995
344.80	100.00	11.23	1.65	9.58	11.23	-19.08	108.03	138.71	3.39	0.995
344.90	100.00	11.23	1.68	9.55	11.23	-18.98	108.65	138.45	3.37	0.995
345.00	100.00	11.22	1.71	9.51	11.22	-18.81	109.26	138.15	3.36	0.995
345.10	100.00	11.22	1.73	9.49	11.22	-18.58	109.87	137.82	3.34	0.995
345.20	100.00	11.22	1.76	9.46	11.22	-18.31	110.46	137.46	3.32	0.995
345.30	100.00	11.22	1.78	9.44	11.22	-17.99	111.05	137.06	3.30	0.995
345.40	100.00	11.21	1.80	9.41	11.21	-17.65	111.63	136.63	3.28	0.995
345.50	100.00	11.21	1.82	9.39	11.21	-17.28	112.20	136.16	3.26	0.995
345.60	100.00	11.21	1.84	9.37	11.21	-16.89	112.75	135.66	3.24	0.995
345.70	100.00	11.21	1.86	9.35	11.21	-16.49	113.28	135.12	3.22	0.995
345.80	100.00	11.20	1.88	9.32	11.20	-16.09	113.79	134.54	3.20	0.995
345.90	100.00	11.20	1.89	9.31	11.20	-15.68	114.29	133.93	3.18	0.995
346.00	100.00	11.20	1.91	9.29	11.20	-15.27	114.76	133.28	3.16	0.995
346.10	100.00	11.20	1.92	9.28	11.20	-14.86	115.21	132.59	3.13	0.995
346.20	100.00	11.20	1.93	9.26	11.20	-14.46	115.63	131.85	3.11	0.995
346.30	100.00	11.20	1.95	9.25	11.20	-14.07	116.02	131.09	3.09	0.995
346.40	100.00	11.19	1.96	9.23	11.19	-13.68	116.38	130.29	3.06	0.995
346.50	100.00	11.19	1.96	9.23	11.19	-13.30	116.70	129.45	3.04	0.995
346.60	100.00	11.19	1.97	9.22	11.19	-12.93	116.99	128.57	3.02	0.995
346.70	100.00	11.19	1.98	9.21	11.19	-12.56	117.24	127.66	2.99	0.995
346.80	100.00	11.19	1.98	9.20	11.19	-12.21	117.44	126.71	2.97	0.995
346.90	100.00	11.19	1.98	9.21	11.19	-11.85	117.60	125.73	2.94	0.995
347.00	100.00	11.19	1.98	9.21	11.19	-11.51	117.71	124.72	2.92	0.995
347.10	100.00	11.19	1.98	9.21	11.19	-11.17	117.78	123.67	2.90	0.995
347.20	100.00	11.19	1.98	9.21	11.19	-10.84	117.78	122.60	2.87	0.995
347.30	100.00	11.19	1.98	9.21	11.19	-10.52	117.74	121.50	2.85	0.995
347.40	100.00	11.19	1.98	9.21	11.19	-10.20	117.63	120.37	2.82	0.995
347.50	100.00	11.19	1.97	9.22	11.19	-9.89	117.46	119.22	2.80	0.994
347.60	100.00	11.19	1.96	9.23	11.19	-9.59	117.22	118.05	2.78	0.994
347.70	100.00	11.19	1.96	9.23	11.19	-9.29	116.86	116.82	2.75	0.994
347.80	100.00	11.19	1.94	9.25	11.19	-8.99	116.56	115.66	2.73	0.994
347.90	100.00	11.19	1.93	9.26	11.19	-8.70	116.11	114.44	2.71	0.994
348.00	100.00	11.20	1.92	9.28	11.20	-8.42	115.62	113.16	2.68	0.994
348.10	100.00	11.20	1.90	9.30	11.20	-8.14	115.01	112.00	2.66	0.994
348.20	100.00	11.20	1.88	9.32	11.20	-7.87	114.34	110.77	2.64	0.994
348.30	100.00	11.21	1.86	9.34	11.21	-7.61	113.60	109.55	2.62	0.994
348.40	100.00	11.21	1.84	9.37	11.21	-7.35	112.77	108.34	2.61	0.994
348.50	100.00	11.21	1.82	9.39	11.21	-7.10	111.87	107.14	2.59	0.994
348.60	100.00	11.22	1.79	9.42	11.22	-6.85	110.91	105.98	2.57	0.994
348.70	100.00	11.22	1.76	9.46	11.22	-6.60	109.81	104.81	2.56	0.994
348.80	100.00	11.22	1.73	9.49	11.22	-6.36	108.66	103.68	2.54	0.994
348.90	100.00	11.23	1.70	9.53	11.23	-6.12	107.44	102.59	2.53	0.994
349.00	100.00	11.24	1.67	9.57	11.24	-5.89	106.13	101.53	2.52	0.994
349.10	100.00	11.24	1.63	9.61	11.24	-5.66	104.74	100.52	2.52	0.994
349.20	100.00	11.25	1.60	9.65	11.25	-5.44	103.28	99.56	2.51	0.994
349.30	100.00	11.25	1.55	9.70	11.25	-5.22	101.75	98.65	2.51	0.994
349.40	100.00	11.26	1.50	9.76	11.26	-5.01	100.14	97.80	2.51	0.994
349.50	100.00	11.27	1.46	9.82	11.27	-4.81	98.46	97.01	2.51	0.994
349.60	100.00	11.28	1.41	9.87	11.28	-4.62	96.72	96.29	2.52	0.994
349.70	100.00	11.29	1.35	9.94	11.29	-4.44	94.92	95.64	2.53	0.994
349.80	100.00	11.30	1.30	10.00	11.30	-4.27	93.07	95.04	2.54	0.994
349.90	100.00	11.31	1.24	10.07	11.31	-4.11	91.15	94.57	2.56	0.994
350.00	100.00	11.32	1.18	10.14	11.32	-3.97	89.19	94.16	2.58	0.994
350.10	100.00	11.33	1.11	10.22	11.33	-3.83	87.18	93.83	2.60	0.994
350.20	100.00	11.34	1.04	10.30	11.34	-3.70	85.14	93.59	2.64	0.994
350.30	100.00	11.35	0.97	10.38	11.35	-3.58	83.06	93.44	2.68	0.994
350.40	100.00	11.36	0.89	10.47	11.36	-3.45	80.95	93.38	2.73	0.994
350.50	100.00	11.37	0.81	10.56	11.37	-3.33	78.83	93.42	2.77	0.994
350.60	100.00	11.38	0.73	10.65	11.38	-3.21	76.68	93.54	2.83	0.994
350.70	100.00	11.40	0.64	10.76	11.40	-3.10	74.51	93.86	2.89	0.994
350.80	100.00	11.41	0.55	10.86	11.41	-3.00	72.36	94.08	2.97	0.994
350.90	100.00	11.42	0.45	10.97	11.42	-2.91	70.20	94.49	3.05	0.994
351.00	100.00	11.43	0.35	11.09	11.43	-2.83	68.02	95.00	3.13	0.994
351.10	100.00	11.45	0.24	11.21	11.45	-2.76	65.89	95.59	3.23	0.994
351.20	100.00	11.46	0.13	11.33	11.46	-2.70	63.75	96.27	3.34	0.994
351.30	100.00	11.48	0.01	11.47	11.48	-2.65	61.60	97.00	3.45	0.994
351.40	100.00	11.49	-0.11	11.60	11.49	-2.61	59.54	97.90	3.58	0.994
351.50	100.00	11.50	-0.23	11.73	11.50	-2.58	57.48	98.85	3.72	0.994
351.60	100.00	11.52	-0.34	11.87	11.52	-2.56	55.45	99.87	3.86	0.994
351.70	100.00	11.53	-0.50	12.03	11.53	-2.54	53.45	100.97	4.04	0.994
351.80	100.00	11.54	-0.64	12.18	11.54	-2.54	51.49	102.15	4.22	0.994
351.90	100.00	11.56	-0.78	12.35	11.56	-2.55	49.58	103.40	4.41	0.994
352.00	100.00	11.57	-0.93	12.50	11.57	-2.57	47.71	104.72	4.63	0.994
352.10	100.00	11.58	-1.08	12.66	11.58	-2.58	45.88	106.10	4.85	0.994
352.20	100.00	11.59	-1.23	12.83	11.59	-2.58	44.11	107.54	5.10	0.994
352.30	100.00	11.60	-1.39	12.99	11.60	-2.59	42.39	109.05	5.36	0.994
352.40	100.00	11.61	-1.54	13.15	11.61	-2.59	40.73	110.60	5.65	0.994
352.50	100.00	11.62	-1.70	13.31	11.62	-2.59	39.11	112.21	5.95	0.994
352.60	100.00	11.62	-1.84	13.46	11.62	-2.59	37.56	113.87	6.28	0.994
352.70	100.00	11.62	-1.99	13.61	11.62	-2.58	36.06	115.57	6.63	0.993
352.80	100.00	11.63	-2.14	13.77	11.63	-2.57	34.61	117.30	7.00	0.993
352.90	100.00	11.63	-2.24	13.87	11.63	-2.56	33.24	119.08	7.40	0.993
353.00	100.00	11.62	-2.35	13.97	11.62	-2.56	31.92	120.89	7.82	0.993
353.10	100.00	11.62	-2.45	14.05	11.62	-2.55	30.65	122.73	8.27	0.993
353.20	100.00	11.61	-2.49	14.10	11.61	-2.54	29.45	124.60	8.74	0.994
353.30	100.00	11.59	-2.53	14.12	11.59	-2.53	28.30	126.49	9.23	0.994
353.40	100.00	11.58	-2.58	14.13	11.58	-2.52	27.11	128.41	9.77	0.994
353.50	100.00	11.56	-2.50	14.06	11.56	-2.51	26.18	130.34	10.34	0.994
353.60	100.00	11.53	-2.43	13.96	11.53	-2.50	25.20	132.29	10.91	0.994
353.70	100.00	11.50	-2.35	13.83	11.50	-2.49	24.28	134.28	11.52	0.994
353.80	100.00	11.46	-2.28	13.64	11.46	-2.48	23.41	136.23	12.15	0.994
353.90	100.00	11.42	-2.20	13.42	11.42	-2.47	22.60	138.21	12.81	0.994
354.00	100.00	11.37	-2.12	13.17	11.37	-2.46	21.84	140.20	13.50	0.994
354.10	100.0									

359.60	100.00	-1.20	6.47	-7.67	4.56	-26.82	30.85	237.02	20.91	0.998
359.70	100.00	-1.47	6.47	-7.47	4.56	-31.07	31.50	238.38	20.68	0.998
359.80	100.00	-1.58	6.48	-8.06	4.43	-28.51	32.16	239.72	20.45	0.998
359.90	100.00	-1.76	6.48	-8.24	4.36	-28.51	32.83	241.05	20.23	0.998
360.00	100.00	-2.09	6.48	-8.41	4.31	-23.20	33.50	242.37	20.02	0.998
360.10	100.00	-2.09	6.48	-8.57	4.24	-23.20	34.19	243.68	19.80	0.998
360.20	100.00	-2.25	6.48	-8.73	4.17	-21.32	34.88	244.98	19.59	0.998
360.30	100.00	-2.39	6.48	-8.89	4.11	-19.80	35.58	246.27	19.39	0.998
360.40	100.00	-2.52	6.48	-9.00	4.06	-18.53	36.29	247.54	19.19	0.998
360.50	100.00	-2.65	6.47	-9.12	4.00	-17.46	37.00	248.81	18.99	0.998
360.60	100.00	-2.87	6.47	-9.23	3.95	-16.53	37.72	250.06	18.80	0.998
360.70	100.00	-2.87	6.47	-9.34	3.89	-15.72	38.44	251.30	18.61	0.998
360.80	100.00	-2.97	6.46	-9.43	3.83	-15.00	39.18	252.54	18.42	0.998
360.90	100.00	-3.06	6.45	-9.52	3.78	-14.35	39.91	253.76	18.24	0.998
361.00	100.00	-3.14	6.45	-9.59	3.73	-13.77	40.66	254.97	18.06	0.998
361.10	100.00	-3.22	6.45	-9.67	3.68	-13.25	41.41	256.17	17.89	0.998
361.20	100.00	-3.28	6.44	-9.72	3.63	-12.77	42.16	257.36	17.72	0.998
361.30	100.00	-3.34	6.44	-9.78	3.59	-12.33	42.92	258.55	17.55	0.998
361.40	100.00	-3.40	6.43	-9.83	3.58	-11.93	43.69	259.72	17.39	0.998
361.50	100.00	-3.45	6.43	-9.88	3.55	-11.56	44.46	260.88	17.23	0.998
361.60	100.00	-3.49	6.42	-9.91	3.52	-11.21	45.24	262.03	17.07	0.998
361.70	100.00	-3.53	6.41	-9.94	3.50	-10.89	46.02	263.17	16.92	0.998
361.80	100.00	-3.56	6.41	-9.97	3.55	-10.59	46.80	264.31	16.77	0.998
361.90	100.00	-3.59	6.40	-9.99	3.54	-10.31	47.59	265.43	16.62	0.998
362.00	100.00	-3.61	6.39	-10.00	3.53	-10.05	48.39	266.55	16.48	0.998
362.10	100.00	-3.63	6.38	-10.01	3.52	-9.81	49.19	267.65	16.34	0.998
362.20	100.00	-3.65	6.38	-10.03	3.51	-9.58	49.99	268.75	16.20	0.998
362.30	100.00	-3.66	6.37	-10.03	3.50	-9.36	50.80	269.84	16.07	0.998
362.40	100.00	-3.67	6.36	-10.02	3.49	-9.15	51.61	270.92	15.93	0.998
362.50	100.00	-3.67	6.35	-10.02	3.48	-8.96	52.43	271.98	15.80	0.998
362.60	100.00	-3.68	6.34	-10.02	3.46	-8.78	53.25	273.04	15.68	0.998
362.70	100.00	-3.68	6.33	-10.01	3.45	-8.61	54.08	274.08	15.55	0.998
362.80	100.00	-3.68	6.33	-10.01	3.44	-8.44	54.90	275.14	15.43	0.998
362.90	100.00	-3.67	6.32	-9.99	3.44	-8.28	55.74	276.17	15.31	0.998
363.00	100.00	-3.67	6.31	-9.97	3.43	-8.13	56.57	277.20	15.20	0.998
363.10	100.00	-3.67	6.30	-9.97	3.42	-7.99	57.41	278.22	15.08	0.998
363.20	100.00	-3.66	6.29	-9.95	3.43	-7.86	58.25	279.23	14.97	0.998
363.30	100.00	-3.65	6.28	-9.94	3.42	-7.74	59.10	280.23	14.86	0.998
363.40	100.00	-3.64	6.27	-9.91	3.42	-7.61	59.95	281.22	14.75	0.998
363.50	100.00	-3.63	6.27	-9.90	3.41	-7.49	60.80	282.21	14.64	0.998
363.60	100.00	-3.62	6.26	-9.88	3.41	-7.37	61.66	283.19	14.54	0.998
363.70	100.00	-3.61	6.25	-9.86	3.40	-7.27	62.52	284.16	14.44	0.998
363.80	100.00	-3.60	6.24	-9.84	3.39	-7.17	63.38	285.12	14.34	0.998
363.90	100.00	-3.59	6.23	-9.82	3.38	-7.07	64.24	286.07	14.24	0.998
364.00	100.00	-3.57	6.22	-9.79	3.38	-6.98	65.11	287.02	14.14	0.998
364.10	100.00	-3.56	6.21	-9.77	3.38	-6.89	65.98	287.96	14.05	0.998
364.20	100.00	-3.54	6.20	-9.74	3.37	-6.80	66.86	288.86	13.96	0.998
364.30	100.00	-3.53	6.19	-9.72	3.37	-6.72	67.73	289.81	13.87	0.998
364.40	100.00	-3.52	6.19	-9.71	3.36	-6.65	68.61	290.72	13.78	0.998
364.50	100.00	-3.50	6.18	-9.68	3.35	-6.58	69.49	291.63	13.69	0.998
364.60	100.00	-3.49	6.17	-9.66	3.35	-6.50	70.38	292.53	13.60	0.998
364.70	100.00	-3.48	6.16	-9.64	3.35	-6.43	71.26	293.43	13.52	0.998
364.80	100.00	-3.46	6.15	-9.61	3.34	-6.36	72.15	294.31	13.44	0.998
364.90	100.00	-3.45	6.14	-9.59	3.34	-6.30	73.04	295.19	13.36	0.998
365.00	100.00	-3.44	6.13	-9.57	3.34	-6.24	73.94	296.06	13.28	0.998
365.10	100.00	-3.42	6.12	-9.54	3.33	-6.18	74.83	296.93	13.20	0.998
365.20	100.00	-3.41	6.11	-9.52	3.34	-6.12	75.73	297.79	13.12	0.998
365.30	100.00	-3.40	6.10	-9.50	3.33	-6.06	76.63	298.64	13.04	0.998
365.40	100.00	-3.38	6.09	-9.48	3.33	-6.00	77.53	299.48	12.97	0.998
365.50	100.00	-3.37	6.09	-9.46	3.33	-5.96	78.44	300.32	12.90	0.998
365.60	100.00	-3.36	6.08	-9.44	3.32	-5.91	79.35	301.15	12.82	0.998
365.70	100.00	-3.35	6.07	-9.42	3.32	-5.85	80.25	301.97	12.75	0.998
365.80	100.00	-3.34	6.06	-9.40	3.32	-5.82	81.16	302.79	12.68	0.998
365.90	100.00	-3.33	6.05	-9.38	3.32	-5.77	82.08	303.60	12.60	0.998
366.00	100.00	-3.32	6.04	-9.36	3.31	-5.71	83.00	304.40	12.55	0.998
366.10	100.00	-3.30	6.03	-9.33	3.31	-5.69	83.91	305.20	12.48	0.998
366.20	100.00	-3.29	6.02	-9.31	3.31	-5.65	84.82	305.98	12.42	0.998
366.30	100.00	-3.28	6.01	-9.29	3.31	-5.62	85.74	306.77	12.35	0.998
366.40	100.00	-3.28	6.01	-9.29	3.31	-5.58	86.67	307.54	12.29	0.998
366.50	100.00	-3.27	6.00	-9.27	3.31	-5.54	87.59	308.31	12.23	0.998
366.60	100.00	-3.25	5.99	-9.25	3.31	-5.51	88.51	309.08	12.17	0.998
366.70	100.00	-3.25	5.98	-9.23	3.31	-5.48	89.44	309.83	12.11	0.998
366.80	100.00	-3.24	5.97	-9.21	3.30	-5.45	90.37	310.58	12.05	0.998
366.90	100.00	-3.23	5.96	-9.19	3.30	-5.41	91.30	311.33	11.99	0.998
367.00	100.00	-3.23	5.96	-9.19	3.30	-5.39	92.23	312.06	11.93	0.998
367.10	100.00	-3.22	5.95	-9.17	3.30	-5.36	93.16	312.80	11.87	0.998
367.20	100.00	-3.21	5.94	-9.15	3.30	-5.33	94.09	313.53	11.82	0.998
367.30	100.00	-3.21	5.93	-9.14	3.30	-5.30	95.02	314.24	11.76	0.998
367.40	100.00	-3.20	5.92	-9.12	3.30	-5.28	95.96	314.95	11.71	0.998
367.50	100.00	-3.19	5.91	-9.10	3.30	-5.25	96.89	315.66	11.66	0.998
367.60	100.00	-3.19	5.90	-9.09	3.30	-5.23	97.84	316.36	11.60	0.998
367.70	100.00	-3.18	5.90	-9.08	3.30	-5.21	98.78	317.06	11.55	0.998
367.80	100.00	-3.17	5.89	-9.07	3.30	-5.19	99.73	317.75	11.50	0.998
367.90	100.00	-3.17	5.88	-9.05	3.30	-5.16	100.66	318.43	11.45	0.998
368.00	100.00	-3.17	5.87	-9.04	3.30	-5.14	101.60	319.10	11.40	0.998
368.10	100.00	-3.16	5.86	-9.02	3.30	-5.11	102.54	319.77	11.35	0.998
368.20	100.00	-3.16	5.85	-9.01	3.30	-5.10	103.49	320.44	11.30	0.998
368.30	100.00	-3.16	5.85	-9.01	3.30	-5.09	104.44	321.10	11.26	0.998
368.40	100.00	-3.15	5.84	-9.00	3.30	-5.07	105.38	321.75	11.21	0.998
368.50	100.00	-3.15	5.83	-8.98	3.30	-5.05	106.33	322.40	11.16	0.998
368.60	100.00	-3.15	5.82	-8.97	3.30	-5.04	107.28	323.04	11.12	0.998
368.70	100.00	-3.15	5.81	-8.96	3.30	-5.03	108.23	323.68	11.07	0.998
368.80	100.00	-3.15	5.80	-8.95	3.30	-5.00	109.18	324.30	11.03	0.998
368.90	100.00	-3.14	5.80	-8.94	3.30	-4.99	110.13	324.93	10.99	0.998
369.00	100.00	-3.14	5.79	-8.93	3.30	-4.98	111.08	325.55	10.94	0.998
369.10	100.00	-3.14	5.78	-8.92	3.30	-4.96	112.03	326.16	10.90	0.998
369.20	100.00	-3.14	5.77	-8.91	3.30	-4.95	112.99	326.77	10.86	0.998
369.30	100.00	-3.14	5.76	-8.90	3.30	-4.93	113.94	327.37	10.82	0.998
369.40	100.00	-3.14	5.76	-8.90	3.30	-4.92	114.89	327.97	10.78	0.998
369.50	100.00	-3.14	5.75	-8.89	3.30	-4.91	115.85	328.56	10.74	0.998
369.60	100.00	-3.14	5.74	-8.88	3.30	-4.90	116.80	329.15	10.70	0.998
369.70	100.00	-3.14	5.73	-8.87	3.31	-4.89	117.76	329.72	10.66	0.998
369.80	100.00	-3.14	5.72	-8.86	3.31	-4.88	118.72	330.30	10.62	0.998
369.90	100.00	-3.14	5.71	-8.85	3.31	-4.86	119.67	330.87	10.58	0.998
370.00	100.00	-3.14	5.71	-8.85	3.31	-4.86	120.63	331.43	10.54	0.998
370.10	100.00	-3.14	5.70	-8.84	3.31	-4.85	121.59	331.99	10.51	0.998
370.20	100.00	-3.14	5.69	-8.83	3.31	-4.84	122.54	332.55	10.47	0.998
370.30	100.00	-3.14	5.68	-8.82	3.31	-4.83	123.51	333.09	10.43	0.998
370.40	100.00	-3.14	5.68	-8.82	3.31	-4.83	124.47			

375.80	100.00	-3.42	5.30	-8.72	4.41	-4.72	176.10	355.81	8.96	0.998
375.90	100.00	-3.43	5.29	-8.72	4.41	-4.72	177.04	356.10	8.94	0.998
376.00	100.00	-3.44	5.28	-8.72	4.42	-4.73	177.99	356.39	8.92	0.998
376.10	100.00	-3.45	5.28	-8.73	4.42	-4.73	178.93	356.67	8.90	0.998
376.20	100.00	-3.45	5.27	-8.73	4.42	-4.73	179.87	356.95	8.88	0.998
376.30	100.00	-3.46	5.26	-8.72	4.43	-4.73	180.81	357.23	8.86	0.998
376.40	100.00	-3.47	5.26	-8.73	4.43	-4.73	181.75	357.50	8.85	0.998
376.50	100.00	-3.48	5.25	-8.73	4.43	-4.74	182.68	357.77	8.83	0.998
376.60	100.00	-3.49	5.24	-8.73	4.43	-4.74	183.62	358.04	8.81	0.998
376.70	100.00	-3.49	5.24	-8.73	4.43	-4.74	184.56	358.30	8.79	0.998
376.80	100.00	-3.50	5.23	-8.73	4.44	-4.75	185.49	358.55	8.77	0.998
376.90	100.00	-3.51	5.23	-8.74	4.44	-4.75	186.42	358.81	8.75	0.998
377.00	100.00	-3.52	5.22	-8.74	4.44	-4.75	187.36	359.06	8.74	0.998
377.10	100.00	-3.53	5.21	-8.74	4.44	-4.75	188.29	359.30	8.72	0.998
377.20	100.00	-3.53	5.21	-8.74	4.45	-4.76	189.22	359.54	8.70	0.998
377.30	100.00	-3.54	5.20	-8.74	4.45	-4.76	190.15	359.78	8.68	0.998
377.40	100.00	-3.55	5.20	-8.75	4.45	-4.76	191.08	360.02	8.67	0.998
377.50	100.00	-3.56	5.19	-8.75	4.45	-4.76	192.00	360.25	8.65	0.998
377.60	100.00	-3.57	5.18	-8.75	4.45	-4.77	192.93	360.48	8.63	0.998
377.70	100.00	-3.58	5.18	-8.76	4.46	-4.77	193.86	360.70	8.62	0.998
377.80	100.00	-3.58	5.17	-8.75	4.46	-4.77	194.78	360.92	8.60	0.998
377.90	100.00	-3.59	5.16	-8.75	4.46	-4.77	195.70	361.14	8.58	0.998
378.00	100.00	-3.60	5.16	-8.76	4.46	-4.78	196.63	361.36	8.57	0.998
378.10	100.00	-3.61	5.15	-8.76	4.47	-4.78	197.55	361.57	8.55	0.998
378.20	100.00	-3.62	5.15	-8.77	4.47	-4.78	198.47	361.78	8.54	0.998
378.30	100.00	-3.63	5.14	-8.77	4.47	-4.79	199.39	361.98	8.52	0.998
378.40	100.00	-3.63	5.14	-8.77	4.48	-4.79	200.30	362.18	8.51	0.998
378.50	100.00	-3.64	5.13	-8.77	4.48	-4.79	201.22	362.38	8.49	0.998
378.60	100.00	-3.65	5.12	-8.78	4.48	-4.80	202.14	362.57	8.47	0.998
378.70	100.00	-3.66	5.12	-8.78	4.48	-4.80	203.05	362.76	8.46	0.998
378.80	100.00	-3.67	5.11	-8.78	4.48	-4.80	203.96	362.95	8.44	0.998
378.90	100.00	-3.68	5.11	-8.79	4.49	-4.81	204.88	363.13	8.43	0.998
379.00	100.00	-3.69	5.10	-8.79	4.49	-4.81	205.79	363.31	8.41	0.998
379.10	100.00	-3.70	5.09	-8.79	4.49	-4.82	206.70	363.49	8.40	0.998
379.20	100.00	-3.71	5.09	-8.79	4.49	-4.82	207.60	363.66	8.39	0.998
379.30	100.00	-3.71	5.08	-8.79	4.50	-4.82	208.51	363.84	8.37	0.998
379.40	100.00	-3.72	5.08	-8.80	4.50	-4.83	209.42	364.00	8.36	0.998
379.50	100.00	-3.73	5.07	-8.80	4.50	-4.83	210.33	364.17	8.34	0.998
379.60	100.00	-3.74	5.07	-8.81	4.50	-4.83	211.22	364.33	8.33	0.998
379.70	100.00	-3.75	5.06	-8.81	4.51	-4.84	212.13	364.49	8.31	0.998
379.80	100.00	-3.76	5.05	-8.82	4.51	-4.84	213.03	364.64	8.30	0.998
379.90	100.00	-3.77	5.05	-8.82	4.51	-4.85	213.93	364.80	8.29	0.998
380.00	100.00	-3.77	5.04	-8.81	4.51	-4.85	214.82	364.95	8.27	0.998
380.10	100.00	-3.78	5.04	-8.82	4.52	-4.85	215.71	365.09	8.26	0.998
380.20	100.00	-3.79	5.03	-8.82	4.52	-4.86	216.62	365.24	8.25	0.998
380.30	100.00	-3.80	5.03	-8.83	4.52	-4.86	217.51	365.38	8.23	0.998
380.40	100.00	-3.81	5.02	-8.83	4.52	-4.87	218.40	365.52	8.22	0.998
380.50	100.00	-3.82	5.01	-8.83	4.53	-4.87	219.30	365.65	8.21	0.998
380.60	100.00	-3.83	5.01	-8.84	4.53	-4.87	220.19	365.78	8.19	0.998
380.70	100.00	-3.84	5.00	-8.84	4.54	-4.88	221.08	365.91	8.18	0.998
380.80	100.00	-3.85	5.00	-8.85	4.54	-4.88	221.96	366.04	8.17	0.998
380.90	100.00	-3.86	4.99	-8.85	4.54	-4.89	222.85	366.16	8.16	0.998
381.00	100.00	-3.87	4.99	-8.85	4.54	-4.89	223.73	366.28	8.14	0.998
381.10	100.00	-3.87	4.98	-8.85	4.54	-4.90	224.62	366.40	8.13	0.998
381.20	100.00	-3.88	4.98	-8.86	4.55	-4.90	225.50	366.51	8.12	0.998
381.30	100.00	-3.89	4.97	-8.86	4.55	-4.90	226.38	366.62	8.11	0.998
381.40	100.00	-3.90	4.97	-8.87	4.55	-4.91	227.26	366.73	8.09	0.998
381.50	100.00	-3.91	4.96	-8.87	4.55	-4.91	228.14	366.84	8.08	0.998
381.60	100.00	-3.92	4.95	-8.87	4.55	-4.92	229.01	366.94	8.07	0.998
381.70	100.00	-3.93	4.95	-8.88	4.56	-4.92	229.89	367.04	8.06	0.998
381.80	100.00	-3.94	4.94	-8.88	4.56	-4.93	230.76	367.14	8.05	0.998
381.90	100.00	-3.95	4.94	-8.89	4.56	-4.93	231.64	367.24	8.04	0.998
382.00	100.00	-3.96	4.93	-8.89	4.56	-4.94	232.51	367.33	8.02	0.998
382.10	100.00	-3.97	4.93	-8.90	4.57	-4.94	233.38	367.42	8.01	0.998
382.20	100.00	-3.97	4.93	-8.90	4.57	-4.94	234.25	367.51	8.00	0.998
382.30	100.00	-3.98	4.92	-8.90	4.57	-4.95	235.11	367.59	7.99	0.998
382.40	100.00	-3.99	4.91	-8.90	4.57	-4.95	235.98	367.68	7.98	0.998
382.50	100.00	-4.00	4.91	-8.91	4.58	-4.96	236.84	367.76	7.97	0.998
382.60	100.00	-4.01	4.90	-8.91	4.58	-4.96	237.70	367.83	7.96	0.998
382.70	100.00	-4.02	4.90	-8.92	4.58	-4.97	238.56	367.91	7.95	0.998
382.80	100.00	-4.03	4.89	-8.92	4.58	-4.97	239.42	367.98	7.94	0.998
382.90	100.00	-4.04	4.89	-8.93	4.59	-4.98	240.28	368.05	7.92	0.998
383.00	100.00	-4.05	4.88	-8.93	4.59	-4.98	241.14	368.12	7.91	0.998
383.10	100.00	-4.06	4.88	-8.94	4.59	-4.99	242.00	368.19	7.90	0.998
383.20	100.00	-4.07	4.87	-8.94	4.59	-4.99	242.84	368.25	7.89	0.998
383.30	100.00	-4.08	4.87	-8.95	4.60	-4.99	243.70	368.31	7.88	0.998
383.40	100.00	-4.09	4.86	-8.95	4.60	-4.99	244.55	368.37	7.87	0.998
383.50	100.00	-4.09	4.86	-8.95	4.60	-5.00	245.40	368.42	7.86	0.998
383.60	100.00	-4.10	4.85	-8.95	4.61	-5.01	246.24	368.47	7.85	0.998
383.70	100.00	-4.11	4.85	-8.96	4.61	-5.01	247.09	368.52	7.84	0.998
383.80	100.00	-4.12	4.84	-8.96	4.61	-5.02	247.94	368.57	7.83	0.998
383.90	100.00	-4.13	4.84	-8.97	4.62	-5.02	248.78	368.62	7.82	0.998
384.00	100.00	-4.14	4.83	-8.97	4.62	-5.03	249.62	368.66	7.81	0.998
384.10	100.00	-4.15	4.83	-8.98	4.62	-5.03	250.46	368.70	7.80	0.998
384.20	100.00	-4.16	4.82	-8.98	4.62	-5.04	251.30	368.74	7.79	0.998
384.30	100.00	-4.17	4.82	-8.99	4.62	-5.04	252.14	368.78	7.78	0.998
384.40	100.00	-4.18	4.81	-8.99	4.63	-5.05	252.97	368.82	7.77	0.998
384.50	100.00	-4.19	4.81	-9.00	4.63	-5.05	253.80	368.85	7.76	0.998
384.60	100.00	-4.20	4.80	-9.00	4.63	-5.06	254.64	368.88	7.75	0.998
384.70	100.00	-4.21	4.80	-9.01	4.63	-5.06	255.47	368.91	7.75	0.998
384.80	100.00	-4.21	4.79	-9.00	4.63	-5.07	256.30	368.94	7.74	0.998
384.90	100.00	-4.22	4.79	-9.01	4.64	-5.08	257.13	368.97	7.73	0.998
385.00	100.00	-4.23	4.78	-9.01	4.64	-5.08	257.95	368.98	7.72	0.998
385.10	100.00	-4.24	4.78	-9.02	4.65	-5.08	258.78	369.00	7.71	0.998
385.20	100.00	-4.25	4.77	-9.02	4.65	-5.09	259.60	369.02	7.70	0.998
385.30	100.00	-4.26	4.77	-9.03	4.65	-5.09	260.42	369.04	7.69	0.998
385.40	100.00	-4.27	4.76	-9.03	4.65	-5.10	261.24	369.05	7.68	0.998
385.50	100.00	-4.28	4.76	-9.04	4.66	-5.11	262.06	369.07	7.67	0.998
385.60	100.00	-4.29	4.75	-9.04	4.66	-5.11	262.88	369.07	7.66	0.998
385.70	100.00	-4.30	4.75	-9.05	4.66	-5.12	263.70	369.08	7.66	0.998
385.80	100.00	-4.31	4.74	-9.05	4.67	-5.12	264.51	369.09	7.65	0.998
385.90	100.00	-4.32	4.74	-9.06	4.67	-5.12	265.32	369.09	7.64	0.998
386.00	100.00	-4.33	4.73	-9.06	4.67	-5.13	266.14	369.09	7.63	0.998
386.10	100.00	-4.34	4.73	-9.07	4.67	-5.13	266.95	369.09	7.62	0.998
386.20	100.00	-4.34	4.72	-9.07	4.67	-5.14	267.75	369.09	7.61	0.998
386.30	100.00	-4.35	4.72	-9.07	4.68	-5.14	268.56	369.09	7.61	0.998
386.40	100.00	-4.36	4.72	-9.08	4.68	-5.15	269.37	369.09	7.60	0.998
386.50	100.00	-4.37	4.71	-9.08	4.68	-5.15	270.17	369.07	7.59	0.998
386.60	100.00	-4.38	4.71	-9.09	4.68	-5.16	270.97	369.06	7.58	0.998
386.70	100.00	-4.								



392.00	100.00	-4.88	4.48	-9.36	3.82	-5.43	312.08	366.21	7.22	0.998
392.10	100.00	-4.88	4.47	-9.35	3.82	-5.43	312.80	366.12	7.22	0.998
392.20	100.00	-4.89	4.47	-9.36	3.82	-5.44	313.52	366.03	7.21	0.998
392.30	100.00	-4.90	4.47	-9.37	3.83	-5.44	314.24	365.94	7.21	0.998
392.40	100.00	-4.91	4.46	-9.37	3.83	-5.45	314.95	365.84	7.20	0.998
392.50	100.00	-4.92	4.46	-9.38	3.83	-5.45	315.67	365.75	7.20	0.998
392.60	100.00	-4.93	4.46	-9.39	3.83	-5.46	316.38	365.65	7.19	0.998
392.70	100.00	-4.94	4.45	-9.39	3.84	-5.46	317.10	365.56	7.18	0.998
392.80	100.00	-4.95	4.45	-9.40	3.84	-5.47	317.81	365.46	7.18	0.998
392.90	100.00	-4.96	4.44	-9.40	3.84	-5.47	318.52	365.36	7.17	0.998
393.00	100.00	-4.97	4.44	-9.41	3.84	-5.48	319.22	365.26	7.17	0.998
393.10	100.00	-4.97	4.44	-9.41	3.85	-5.49	319.93	365.16	7.16	0.998
393.20	100.00	-4.98	4.43	-9.41	3.85	-5.49	320.64	365.06	7.16	0.998
393.30	100.00	-4.99	4.43	-9.42	3.85	-5.50	321.34	364.95	7.15	0.998
393.40	100.00	-5.00	4.43	-9.43	3.85	-5.50	322.05	364.85	7.15	0.998
393.50	100.00	-5.01	4.42	-9.43	3.86	-5.51	322.75	364.74	7.14	0.998
393.60	100.00	-5.02	4.42	-9.44	3.86	-5.51	323.45	364.64	7.14	0.998
393.70	100.00	-5.03	4.41	-9.44	3.86	-5.52	324.15	364.53	7.13	0.998
393.80	100.00	-5.04	4.41	-9.45	3.86	-5.52	324.85	364.42	7.13	0.998
393.90	100.00	-5.05	4.41	-9.46	3.87	-5.53	325.54	364.32	7.13	0.998
394.00	100.00	-5.05	4.40	-9.45	3.87	-5.53	326.24	364.21	7.12	0.997
394.10	100.00	-5.06	4.40	-9.46	3.87	-5.54	326.93	364.10	7.12	0.997
394.20	100.00	-5.07	4.40	-9.47	3.87	-5.54	327.63	363.98	7.11	0.997
394.30	100.00	-5.08	4.39	-9.47	3.88	-5.55	328.32	363.87	7.11	0.997
394.40	100.00	-5.09	4.39	-9.48	3.88	-5.55	329.01	363.76	7.10	0.997
394.50	100.00	-5.10	4.39	-9.49	3.88	-5.56	329.70	363.64	7.10	0.997
394.60	100.00	-5.11	4.38	-9.49	3.88	-5.56	330.38	363.53	7.09	0.997
394.70	100.00	-5.12	4.38	-9.50	3.89	-5.57	331.07	363.41	7.09	0.997
394.80	100.00	-5.12	4.38	-9.50	3.89	-5.57	331.75	363.30	7.08	0.997
394.90	100.00	-5.13	4.37	-9.50	3.89	-5.58	332.44	363.18	7.08	0.997
395.00	100.00	-5.14	4.37	-9.51	3.89	-5.58	333.12	363.06	7.07	0.997
395.10	100.00	-5.15	4.36	-9.51	3.89	-5.59	333.80	362.94	7.07	0.997
395.20	100.00	-5.16	4.36	-9.52	3.90	-5.59	334.48	362.82	7.07	0.997
395.30	100.00	-5.17	4.36	-9.53	3.90	-5.60	335.16	362.70	7.06	0.997
395.40	100.00	-5.18	4.35	-9.53	3.91	-5.60	335.84	362.58	7.06	0.997
395.50	100.00	-5.19	4.35	-9.54	3.91	-5.61	336.51	362.45	7.05	0.997
395.60	100.00	-5.19	4.35	-9.54	3.91	-5.61	337.19	362.33	7.05	0.997
395.70	100.00	-5.20	4.34	-9.54	3.92	-5.62	337.86	362.20	7.04	0.997
395.80	100.00	-5.21	4.34	-9.55	3.92	-5.62	338.53	362.08	7.04	0.997
395.90	100.00	-5.22	4.34	-9.56	3.92	-5.63	339.20	361.95	7.04	0.997
396.00	100.00	-5.23	4.33	-9.56	3.92	-5.63	339.87	361.83	7.03	0.997
396.10	100.00	-5.24	4.33	-9.57	3.93	-5.64	340.54	361.70	7.03	0.997
396.20	100.00	-5.25	4.33	-9.58	3.93	-5.64	341.21	361.57	7.02	0.997
396.30	100.00	-5.26	4.32	-9.58	3.93	-5.65	341.88	361.44	7.02	0.997
396.40	100.00	-5.26	4.32	-9.58	3.93	-5.65	342.54	361.31	7.02	0.997
396.50	100.00	-5.27	4.32	-9.59	3.93	-5.66	343.20	361.18	7.01	0.997
396.60	100.00	-5.28	4.31	-9.59	3.94	-5.66	343.87	361.05	7.01	0.997
396.70	100.00	-5.29	4.31	-9.60	3.94	-5.67	344.53	360.92	7.00	0.997
396.80	100.00	-5.30	4.31	-9.61	3.94	-5.67	345.19	360.78	7.00	0.997
396.90	100.00	-5.31	4.30	-9.61	3.94	-5.68	345.85	360.65	7.00	0.997
397.00	100.00	-5.32	4.30	-9.62	3.94	-5.68	346.51	360.52	6.99	0.997
397.10	100.00	-5.32	4.30	-9.62	3.94	-5.69	347.16	360.38	6.99	0.997
397.20	100.00	-5.33	4.29	-9.62	3.95	-5.69	347.82	360.25	6.99	0.997
397.30	100.00	-5.34	4.29	-9.63	3.95	-5.70	348.47	360.11	6.98	0.997
397.40	100.00	-5.35	4.29	-9.64	3.95	-5.70	349.12	359.97	6.98	0.997
397.50	100.00	-5.36	4.28	-9.64	3.95	-5.71	349.78	359.83	6.97	0.997
397.60	100.00	-5.37	4.28	-9.65	3.96	-5.71	350.43	359.70	6.97	0.997
397.70	100.00	-5.38	4.28	-9.66	3.96	-5.72	351.08	359.56	6.97	0.997
397.80	100.00	-5.38	4.27	-9.65	3.96	-5.72	351.72	359.42	6.96	0.997
397.90	100.00	-5.39	4.27	-9.66	3.96	-5.73	352.37	359.28	6.96	0.997
398.00	100.00	-5.40	4.27	-9.67	3.97	-5.73	353.02	359.14	6.96	0.997
398.10	100.00	-5.41	4.27	-9.68	3.97	-5.74	353.66	358.99	6.95	0.997
398.20	100.00	-5.42	4.26	-9.68	3.97	-5.75	354.31	358.85	6.95	0.997
398.30	100.00	-5.43	4.26	-9.69	3.97	-5.75	354.95	358.71	6.95	0.997
398.40	100.00	-5.44	4.26	-9.70	3.98	-5.76	355.59	358.56	6.94	0.997
398.50	100.00	-5.44	4.25	-9.69	3.98	-5.76	356.23	358.42	6.94	0.997
398.60	100.00	-5.45	4.25	-9.70	3.98	-5.77	356.87	358.28	6.93	0.997
398.70	100.00	-5.46	4.25	-9.71	3.98	-5.78	357.51	358.13	6.93	0.997
398.80	100.00	-5.47	4.24	-9.71	3.99	-5.78	358.15	357.98	6.93	0.997
398.90	100.00	-5.48	4.24	-9.72	3.99	-5.79	358.78	357.84	6.92	0.997
399.00	100.00	-5.49	4.24	-9.73	3.99	-5.80	359.42	357.69	6.92	0.997
399.10	100.00	-5.49	4.23	-9.72	3.99	-5.80	360.05	357.54	6.92	0.997
399.20	100.00	-5.50	4.23	-9.73	4.00	-5.81	360.68	357.39	6.91	0.997
399.30	100.00	-5.51	4.23	-9.74	4.00	-5.82	361.32	357.24	6.91	0.997
399.40	100.00	-5.52	4.22	-9.74	4.00	-5.82	361.95	357.10	6.91	0.997
399.50	100.00	-5.53	4.22	-9.75	4.00	-5.83	362.58	356.94	6.91	0.997
399.60	100.00	-5.54	4.22	-9.76	4.01	-5.83	363.21	356.80	6.90	0.997
399.70	100.00	-5.55	4.22	-9.77	4.01	-5.84	363.83	356.64	6.90	0.997
399.80	100.00	-5.55	4.21	-9.76	4.01	-5.85	364.46	356.49	6.90	0.997
399.90	100.00	-5.56	4.21	-9.77	4.01	-5.85	365.09	356.34	6.89	0.997
400.00	100.00	-5.57	4.21	-9.78	4.01	-5.86	365.71	356.19	6.89	0.997

\*\*\*IMPORTANT NOTE: AVG PWR GAIN MUST BE IN THE RANGE 0.8-1.2 FOR A VALID NEC MODEL (IDEALLY = 1)!  
VALUES OUTSIDE THIS RANGE INDICATE A FLAWED MODEL, USUALLY A RESULT OF INCORRECT SEGMENTATION.  
SEE DISCUSSION, p.101, NEC 4.1 USER'S MANUAL, LLNL UCRL-MA-109338 Pt. I (Gerald J. Burke), 1992.

### Appendix III. Fixed Z<sub>0</sub> Yagi Performance

CM File: YAGI.NEC  
 CM YAGI ARRAY IN FREE SPACE  
 CM Band center Frequency, Fc = 299.8 MHZ  
 CM Freq step = 50 MHZ +/- Fc  
 CM Run ID: 07282011124011  
 CM Fitness function:  
 CM 2\*Gfwd(L)-4\*vsWR(L)+1\*Gfwd(M)-8\*vsWR(M)+  
 CM 1\*Gfwd(U)-8\*vsWR(U)  
 CM where L,M,U are lower/mid/upper frequencies  
 CM Z0=50 ohms  
 CM Notes: All dimensions are in METERS.  
 CM File ID 07282011180440  
 CM Nd= 12, p= 44, j= 49

FREE SPACE YAGI: SUMMARY NEC DATA

F(MHz)	Rad Eff (%)	Fwd Gain (dbi)	Rear Gain (dbi)	FB Ratio (dB)	Max Gain (dbi)	Min Gain (dbi)	Rin (ohms)	Xin (ohms)	VSWR/50	Avg Pwr	Gain**
200.00	100.00	2.72	1.99	0.72	2.72	1.45	24.58	-172.96	28.26	0.996	
200.10	100.00	2.71	1.99	0.72	2.71	1.45	24.61	-177.71	28.15	0.996	
200.20	100.00	2.72	1.99	0.73	2.72	1.45	24.64	-177.45	28.04	0.996	
200.30	100.00	2.72	1.99	0.73	2.72	1.45	24.67	-177.20	27.94	0.996	
200.40	100.00	2.72	1.99	0.73	2.72	1.45	24.70	-176.94	27.83	0.996	
200.50	100.00	2.72	1.99	0.73	2.72	1.45	24.73	-176.69	27.73	0.996	
200.60	100.00	2.72	1.99	0.73	2.72	1.45	24.76	-176.44	27.62	0.996	
200.70	100.00	2.73	1.99	0.74	2.73	1.45	24.79	-176.18	27.52	0.996	
200.80	100.00	2.73	1.99	0.74	2.73	1.45	24.82	-175.93	27.41	0.996	
200.90	100.00	2.73	1.99	0.74	2.73	1.45	24.85	-175.68	27.31	0.996	
201.00	100.00	2.73	1.99	0.74	2.73	1.45	24.88	-175.43	27.20	0.996	
201.10	100.00	2.73	1.99	0.74	2.73	1.45	24.91	-175.17	27.10	0.996	
201.20	100.00	2.73	2.00	0.74	2.74	1.44	24.94	-174.92	27.00	0.996	
201.30	100.00	2.74	1.99	0.75	2.74	1.44	24.98	-174.67	26.90	0.996	
201.40	100.00	2.74	2.00	0.74	2.74	1.44	25.01	-174.42	26.79	0.996	
201.50	100.00	2.74	2.00	0.75	2.74	1.44	25.04	-174.16	26.69	0.996	
201.60	100.00	2.74	2.00	0.74	2.74	1.44	25.07	-173.91	26.59	0.996	
201.70	100.00	2.74	2.00	0.74	2.74	1.44	25.10	-173.66	26.49	0.996	
201.80	100.00	2.74	2.00	0.75	2.75	1.44	25.13	-173.41	26.39	0.996	
201.90	100.00	2.75	2.00	0.75	2.75	1.44	25.16	-173.16	26.29	0.996	
202.00	100.00	2.75	2.00	0.75	2.75	1.44	25.19	-172.91	26.19	0.996	
202.10	100.00	2.75	2.00	0.75	2.75	1.44	25.22	-172.65	26.09	0.996	
202.20	100.00	2.75	2.00	0.75	2.75	1.44	25.25	-172.40	25.99	0.996	
202.30	100.00	2.75	2.00	0.75	2.75	1.44	25.28	-172.15	25.89	0.996	
202.40	100.00	2.76	2.00	0.76	2.76	1.44	25.31	-171.90	25.79	0.996	
202.50	100.00	2.76	2.00	0.76	2.76	1.44	25.34	-171.65	25.70	0.996	
202.60	100.00	2.76	2.00	0.76	2.76	1.44	25.37	-171.40	25.60	0.996	
202.70	100.00	2.76	2.00	0.76	2.76	1.44	25.40	-171.15	25.50	0.996	
202.80	100.00	2.76	2.00	0.76	2.76	1.44	25.43	-170.90	25.40	0.996	
202.90	100.00	2.77	2.00	0.77	2.77	1.44	25.46	-170.65	25.31	0.996	
203.00	100.00	2.77	2.00	0.77	2.77	1.44	25.49	-170.40	25.21	0.996	
203.10	100.00	2.77	2.00	0.77	2.77	1.43	25.52	-170.15	25.11	0.996	
203.20	100.00	2.77	2.00	0.77	2.77	1.43	25.56	-169.90	25.02	0.996	
203.30	100.00	2.77	2.01	0.77	2.77	1.43	25.59	-169.65	24.92	0.996	
203.40	100.00	2.78	2.01	0.77	2.78	1.43	25.62	-169.40	24.83	0.996	
203.50	100.00	2.78	2.01	0.77	2.78	1.43	25.65	-169.15	24.73	0.996	
203.60	100.00	2.78	2.01	0.77	2.78	1.43	25.68	-168.90	24.64	0.996	
203.70	100.00	2.78	2.01	0.77	2.78	1.43	25.71	-168.65	24.55	0.996	
203.80	100.00	2.78	2.01	0.77	2.78	1.43	25.74	-168.40	24.45	0.996	
203.90	100.00	2.78	2.01	0.77	2.78	1.43	25.77	-168.16	24.36	0.996	
204.00	100.00	2.79	2.01	0.78	2.79	1.43	25.80	-167.91	24.26	0.996	
204.10	100.00	2.79	2.01	0.78	2.79	1.43	25.83	-167.66	24.17	0.996	
204.20	100.00	2.79	2.01	0.78	2.79	1.43	25.86	-167.41	24.08	0.996	
204.30	100.00	2.79	2.01	0.78	2.79	1.43	25.90	-167.16	23.99	0.996	
204.40	100.00	2.79	2.01	0.78	2.79	1.43	25.93	-166.91	23.90	0.996	
204.50	100.00	2.80	2.01	0.79	2.80	1.42	25.96	-166.66	23.80	0.996	
204.60	100.00	2.80	2.01	0.79	2.80	1.42	25.99	-166.42	23.71	0.996	
204.70	100.00	2.80	2.01	0.79	2.80	1.42	26.02	-166.17	23.62	0.996	
204.80	100.00	2.80	2.01	0.79	2.80	1.42	26.05	-165.92	23.53	0.996	
204.90	100.00	2.80	2.01	0.79	2.80	1.42	26.08	-165.67	23.44	0.996	
205.00	100.00	2.81	2.01	0.80	2.81	1.42	26.11	-165.43	23.35	0.996	
205.10	100.00	2.81	2.02	0.79	2.81	1.42	26.14	-165.18	23.26	0.996	
205.20	100.00	2.81	2.02	0.79	2.81	1.42	26.18	-164.93	23.17	0.996	
205.30	100.00	2.81	2.02	0.79	2.81	1.42	26.21	-164.68	23.09	0.996	
205.40	100.00	2.81	2.02	0.79	2.81	1.42	26.24	-164.43	23.00	0.996	
205.50	100.00	2.82	2.02	0.80	2.82	1.42	26.27	-164.19	22.91	0.996	
205.60	100.00	2.82	2.02	0.80	2.82	1.42	26.30	-163.94	22.82	0.996	
205.70	100.00	2.82	2.02	0.80	2.82	1.42	26.33	-163.70	22.73	0.996	
205.80	100.00	2.82	2.02	0.80	2.82	1.42	26.37	-163.45	22.65	0.996	
205.90	100.00	2.82	2.02	0.80	2.82	1.42	26.40	-163.20	22.56	0.996	
206.00	100.00	2.83	2.02	0.81	2.83	1.41	26.43	-162.96	22.47	0.996	
206.10	100.00	2.83	2.02	0.81	2.83	1.41	26.46	-162.71	22.39	0.996	
206.20	100.00	2.83	2.02	0.81	2.83	1.41	26.49	-162.47	22.30	0.996	
206.30	100.00	2.83	2.02	0.81	2.83	1.41	26.52	-162.22	22.21	0.996	
206.40	100.00	2.83	2.02	0.81	2.83	1.41	26.56	-161.98	22.13	0.996	
206.50	100.00	2.84	2.03	0.82	2.84	1.41	26.59	-161.73	22.04	0.996	
206.60	100.00	2.84	2.03	0.81	2.84	1.41	26.62	-161.48	21.96	0.996	
206.70	100.00	2.84	2.03	0.81	2.84	1.41	26.65	-161.24	21.87	0.996	
206.80	100.00	2.84	2.03	0.81	2.84	1.41	26.68	-161.00	21.79	0.996	
206.90	100.00	2.84	2.03	0.81	2.84	1.41	26.71	-160.75	21.71	0.996	
207.00	100.00	2.85	2.03	0.82	2.85	1.41	26.75	-160.50	21.62	0.996	
207.10	100.00	2.85	2.03	0.82	2.85	1.41	26.78	-160.26	21.54	0.996	
207.20	100.00	2.85	2.03	0.82	2.85	1.41	26.81	-160.01	21.46	0.996	
207.30	100.00	2.85	2.03	0.82	2.85	1.41	26.84	-159.77	21.37	0.996	
207.40	100.00	2.85	2.03	0.82	2.85	1.41	26.87	-159.53	21.29	0.996	
207.50	100.00	2.86	2.03	0.83	2.86	1.40	26.91	-159.28	21.21	0.996	
207.60	100.00	2.86	2.03	0.83	2.86	1.40	26.94	-159.04	21.13	0.996	
207.70	100.00	2.86	2.03	0.83	2.86	1.40	26.97	-158.79	21.04	0.996	
207.80	100.00	2.86	2.03	0.83	2.86	1.40	27.00	-158.55	20.96	0.996	
207.90	100.00	2.86	2.03	0.83	2.86	1.40	27.03	-158.31	20.88	0.996	
208.00	100.00	2.87	2.04	0.84	2.87	1.40	27.07	-158.06	20.80	0.996	
208.10	100.00	2.87	2.04	0.83	2.87	1.40	27.10	-157.82	20.72	0.996	
208.20	100.00	2.87	2.04	0.83	2.87	1.40	27.13	-157.58	20.64	0.996	
208.30	100.00	2.87	2.04	0.83	2.87	1.40	27.16	-157.33	20.56	0.996	
208.40	100.00	2.87	2.04	0.83	2.87	1.40	27.19	-157.09	20.48	0.996	
208.50	100.00	2.88	2.04	0.84	2.88	1.40	27.23	-156.84	20.40	0.996	
208.60	100.00	2.88	2.04	0.84	2.88	1.40	27.26	-156.60	20.32	0.996	
208.70	100.00	2.88	2.04	0.84	2.88	1.40	27.29	-156.36	20.24	0.996	
208.80	100.00	2.88	2.04	0.84	2.88	1.40	27.32	-156.12	20.17	0.996	
208.90	100.00	2.88	2.04	0.84	2.88	1.40	27.36	-155.87	20.09	0.996	
209.00	100.00	2.89	2.04	0.85	2.89	1.39	27.39	-155.63	20.01	0.996	
209.10	100.00	2.89	2.04	0.85	2.89	1.39	27.42	-155.39	19.93	0.996	
209.20	100.00	2.89	2.04	0.85	2.89	1.39	27.45	-155.15	19.86	0.996	
209.30	100.00	2.89	2.04	0.85	2.89	1.39	27.49	-154.90	19.78	0.996	
209.40	100.00	2.89	2.05	0.84	2.89	1.39	27.52	-154.66	19.70	0.996	
209.50	100.00	2.90	2.05	0.85	2.90	1.39	27.55	-154.42	19.62	0.996	
209.60	100.00	2.90	2.05	0.85	2.90	1.39	27.58	-154.18	19.55	0.996	
209.70	100.00	2.90	2.05	0.85	2.90	1.39	27.62	-153.94	19.47	0.996	
209.80	100.00	2.90	2.05	0.85	2.90	1.39	27.65	-153.70	19.40	0.996	
209.90	100.00	2.91	2.05	0.86	2.91	1.37	27.68	-153.46	19.32	0.996	
210.00	100.00	2.91	2.05	0.86	2.91	1.39	27.72	-153.21	19.25	0.996	
210.10	100.00	2									



213.80	100.00	2.99	2.08	0.91	2.99	1.36	28.98	-144.13	16.58	0.996
213.90	100.00	2.99	2.08	0.91	2.99	1.36	29.02	-143.89	16.51	0.996
214.00	100.00	2.99	2.08	0.91	2.99	1.36	29.05	-143.65	16.45	0.996
214.10	100.00	3.00	2.09	0.91	3.00	1.36	29.08	-143.42	16.38	0.996
214.20	100.00	3.00	2.09	0.91	3.00	1.36	29.12	-143.18	16.32	0.996
214.30	100.00	3.00	2.09	0.91	3.00	1.36	29.15	-142.94	16.26	0.996
214.40	100.00	3.00	2.09	0.91	3.00	1.36	29.19	-142.71	16.19	0.996
214.50	100.00	3.01	2.09	0.92	3.01	1.35	29.22	-142.47	16.13	0.996
214.60	100.00	3.01	2.09	0.92	3.01	1.35	29.25	-142.24	16.06	0.996
214.70	100.00	3.01	2.09	0.92	3.01	1.35	29.29	-142.00	16.00	0.996
214.80	100.00	3.01	2.09	0.92	3.01	1.35	29.32	-141.76	15.94	0.996
214.90	100.00	3.02	2.09	0.93	3.02	1.35	29.36	-141.53	15.87	0.996
215.00	100.00	3.02	2.09	0.93	3.02	1.35	29.39	-141.29	15.81	0.996
215.10	100.00	3.02	2.10	0.92	3.02	1.35	29.43	-141.06	15.75	0.996
215.20	100.00	3.02	2.10	0.92	3.02	1.35	29.46	-140.82	15.69	0.996
215.30	100.00	3.02	2.10	0.92	3.02	1.35	29.49	-140.58	15.62	0.996
215.40	100.00	3.03	2.10	0.93	3.03	1.35	29.53	-140.35	15.56	0.996
215.50	100.00	3.03	2.10	0.93	3.03	1.35	29.56	-140.12	15.50	0.996
215.60	100.00	3.03	2.10	0.93	3.03	1.35	29.60	-139.88	15.44	0.996
215.70	100.00	3.04	2.10	0.94	3.04	1.34	29.74	-139.64	15.38	0.996
215.80	100.00	3.04	2.10	0.94	3.04	1.34	29.67	-139.41	15.32	0.996
215.90	100.00	3.04	2.10	0.94	3.04	1.34	29.70	-139.18	15.25	0.996
216.00	100.00	3.04	2.10	0.94	3.04	1.34	29.74	-138.94	15.19	0.996
216.10	100.00	3.04	2.11	0.93	3.04	1.34	29.77	-138.71	15.13	0.996
216.20	100.00	3.05	2.11	0.94	3.05	1.34	29.81	-138.47	15.07	0.996
216.30	100.00	3.05	2.11	0.94	3.05	1.34	29.84	-138.24	15.01	0.996
216.40	100.00	3.05	2.11	0.94	3.05	1.34	29.88	-138.00	14.95	0.996
216.50	100.00	3.05	2.11	0.94	3.05	1.34	29.91	-137.77	14.89	0.996
216.60	100.00	3.05	2.11	0.95	3.06	1.34	29.95	-137.53	14.83	0.996
216.70	100.00	3.06	2.11	0.95	3.06	1.34	29.98	-137.30	14.78	0.996
216.80	100.00	3.06	2.11	0.95	3.06	1.34	30.02	-137.07	14.72	0.996
216.90	100.00	3.06	2.11	0.94	3.06	1.34	30.05	-136.83	14.66	0.996
217.00	100.00	3.06	2.12	0.94	3.06	1.34	30.09	-136.60	14.60	0.996
217.10	100.00	3.07	2.12	0.95	3.07	1.33	30.12	-136.36	14.54	0.996
217.20	100.00	3.07	2.12	0.95	3.07	1.33	30.16	-136.13	14.48	0.996
217.30	100.00	3.07	2.12	0.95	3.07	1.33	30.19	-135.90	14.43	0.996
217.40	100.00	3.07	2.12	0.95	3.07	1.33	30.23	-135.66	14.37	0.996
217.50	100.00	3.08	2.12	0.96	3.08	1.33	30.27	-135.43	14.31	0.996
217.60	100.00	3.08	2.12	0.96	3.08	1.33	30.30	-135.20	14.25	0.996
217.70	100.00	3.08	2.12	0.96	3.08	1.33	30.33	-134.97	14.20	0.996
217.80	100.00	3.08	2.12	0.96	3.08	1.33	30.37	-134.73	14.14	0.996
217.90	100.00	3.09	2.13	0.96	3.09	1.33	30.40	-134.50	14.08	0.996
218.00	100.00	3.09	2.13	0.96	3.09	1.33	30.44	-134.27	14.03	0.996
218.10	100.00	3.09	2.13	0.96	3.09	1.33	30.47	-134.04	13.97	0.996
218.20	100.00	3.09	2.13	0.96	3.09	1.33	30.51	-133.80	13.91	0.996
218.30	100.00	3.10	2.13	0.97	3.10	1.32	30.54	-133.57	13.86	0.996
218.40	100.00	3.10	2.13	0.97	3.10	1.32	30.58	-133.34	13.80	0.996
218.50	100.00	3.10	2.13	0.97	3.10	1.32	30.61	-133.10	13.75	0.996
218.60	100.00	3.10	2.13	0.97	3.10	1.32	30.65	-132.87	13.69	0.996
218.70	100.00	3.10	2.13	0.97	3.10	1.32	30.69	-132.64	13.63	0.996
218.80	100.00	3.11	2.14	0.97	3.11	1.32	30.72	-132.41	13.58	0.996
218.90	100.00	3.11	2.14	0.97	3.11	1.32	30.76	-132.18	13.53	0.996
219.00	100.00	3.11	2.14	0.97	3.11	1.32	30.79	-131.95	13.47	0.996
219.10	100.00	3.11	2.14	0.97	3.11	1.32	30.83	-131.71	13.42	0.996
219.20	100.00	3.12	2.14	0.98	3.12	1.32	30.86	-131.48	13.37	0.996
219.30	100.00	3.12	2.14	0.98	3.12	1.32	30.90	-131.25	13.31	0.996
219.40	100.00	3.12	2.14	0.98	3.12	1.32	30.94	-131.02	13.26	0.996
219.50	100.00	3.12	2.14	0.98	3.12	1.31	30.97	-130.79	13.20	0.996
219.60	100.00	3.13	2.15	0.98	3.13	1.31	31.01	-130.55	13.15	0.996
219.70	100.00	3.13	2.15	0.98	3.13	1.31	31.04	-130.33	13.10	0.996
219.80	100.00	3.13	2.15	0.98	3.13	1.31	31.08	-130.10	13.05	0.996
219.90	100.00	3.13	2.15	0.98	3.13	1.31	31.12	-129.86	12.99	0.996
220.00	100.00	3.14	2.15	0.99	3.14	1.31	31.15	-129.63	12.94	0.996
220.10	100.00	3.14	2.15	0.99	3.14	1.31	31.19	-129.40	12.89	0.996
220.20	100.00	3.14	2.15	0.99	3.14	1.31	31.23	-129.17	12.84	0.996
220.30	100.00	3.14	2.15	0.99	3.14	1.31	31.26	-128.94	12.78	0.996
220.40	100.00	3.15	2.15	1.00	3.15	1.31	31.30	-128.71	12.73	0.996
220.50	100.00	3.15	2.15	1.00	3.15	1.31	31.34	-128.48	12.68	0.996
220.60	100.00	3.15	2.16	0.99	3.15	1.30	31.37	-128.25	12.63	0.996
220.70	100.00	3.15	2.16	0.99	3.15	1.30	31.40	-128.02	12.58	0.996
220.80	100.00	3.16	2.16	1.00	3.16	1.30	31.44	-127.79	12.53	0.996
220.90	100.00	3.16	2.16	1.00	3.16	1.30	31.48	-127.56	12.48	0.996
221.00	100.00	3.16	2.16	1.00	3.16	1.30	31.51	-127.33	12.43	0.996
221.10	100.00	3.16	2.16	1.00	3.16	1.30	31.55	-127.10	12.38	0.996
221.20	100.00	3.17	2.17	1.01	3.17	1.30	31.59	-126.87	12.33	0.996
221.30	100.00	3.17	2.17	1.01	3.17	1.30	31.62	-126.64	12.28	0.996
221.40	100.00	3.17	2.17	1.00	3.17	1.30	31.66	-126.41	12.23	0.996
221.50	100.00	3.17	2.17	1.00	3.17	1.30	31.70	-126.18	12.18	0.996
221.60	100.00	3.18	2.17	1.01	3.18	1.30	31.73	-125.95	12.13	0.996
221.70	100.00	3.18	2.17	1.01	3.18	1.30	31.77	-125.72	12.08	0.996
221.80	100.00	3.18	2.17	1.01	3.18	1.29	31.81	-125.50	12.03	0.996
221.90	100.00	3.18	2.17	1.01	3.18	1.29	31.84	-125.27	11.98	0.996
222.00	100.00	3.19	2.17	1.02	3.19	1.29	31.88	-125.04	11.93	0.996
222.10	100.00	3.19	2.17	1.02	3.19	1.29	31.92	-124.81	11.88	0.996
222.20	100.00	3.19	2.18	1.01	3.19	1.29	31.95	-124.58	11.83	0.996
222.30	100.00	3.19	2.18	1.01	3.19	1.29	31.99	-124.35	11.78	0.996
222.40	100.00	3.20	2.18	1.02	3.20	1.29	32.03	-124.12	11.74	0.996
222.50	100.00	3.20	2.18	1.02	3.20	1.29	32.06	-123.90	11.69	0.996
222.60	100.00	3.20	2.18	1.02	3.20	1.29	32.10	-123.67	11.64	0.996
222.70	100.00	3.21	2.18	1.03	3.21	1.29	32.14	-123.44	11.59	0.996
222.80	100.00	3.21	2.18	1.03	3.21	1.29	32.18	-123.21	11.55	0.996
222.90	100.00	3.21	2.18	1.03	3.21	1.28	32.21	-122.98	11.50	0.996
223.00	100.00	3.21	2.19	1.02	3.21	1.28	32.25	-122.76	11.45	0.996
223.10	100.00	3.22	2.19	1.03	3.22	1.28	32.29	-122.53	11.41	0.996
223.20	100.00	3.22	2.19	1.03	3.22	1.28	32.32	-122.30	11.36	0.996
223.30	100.00	3.22	2.19	1.03	3.22	1.28	32.36	-122.07	11.31	0.996
223.40	100.00	3.22	2.19	1.03	3.22	1.28	32.40	-121.84	11.27	0.996
223.50	100.00	3.23	2.19	1.04	3.23	1.28	32.44	-121.62	11.22	0.996
223.60	100.00	3.23	2.19	1.04	3.23	1.28	32.47	-121.39	11.17	0.996
223.70	100.00	3.23	2.19	1.04	3.23	1.28	32.51	-121.16	11.13	0.996
223.80	100.00	3.23	2.20	1.04	3.24	1.28	32.55	-120.94	11.08	0.996
223.90	100.00	3.24	2.20	1.04	3.24	1.28	32.59	-120.71	11.04	0.996
224.00	100.00	3.24	2.20	1.04	3.24	1.27	32.62	-120.48	10.99	0.996
224.10	100.00	3.24	2.20	1.04	3.24	1.27	32.66	-120.25	10.95	0.996
224.20	100.00	3.24	2.20	1.04	3.24	1.27	32.70	-120.03	10.90	0.996
224.30	100.00	3.25	2.20	1.05	3.25	1.27	32.74	-119.80	10.86	0.996
224.40	100.00	3.25	2.21	1.04	3.25	1.27	32.77	-119.57	10.81	0.996
224.50	100.00	3.25	2.21	1.04	3.25	1.27	32.81	-119.35	10.77	0.996
224.60	100.00	3.25	2.21	1.04	3.25	1.27	32.85	-119.12	10.72	0.996
224.70	100.00	3.								

230.00	100.00	3.40	2.28	1.12	3.40	1.22	34.95	-107.01	8.57	0.996
230.10	100.00	3.41	2.28	1.13	3.41	1.21	34.99	-106.79	8.53	0.996
230.20	100.00	3.41	2.28	1.13	3.41	1.21	35.03	-106.57	8.49	0.996
230.30	100.00	3.41	2.29	1.12	3.41	1.21	35.07	-106.35	8.46	0.996
230.40	100.00	3.42	2.29	1.13	3.42	1.21	35.11	-106.11	8.42	0.996
230.50	100.00	3.42	2.29	1.13	3.42	1.21	35.15	-105.90	8.39	0.996
230.60	100.00	3.42	2.29	1.13	3.42	1.21	35.19	-105.68	8.35	0.996
230.70	100.00	3.43	2.29	1.14	3.43	1.21	35.23	-105.47	8.32	0.996
230.80	100.00	3.43	2.29	1.14	3.43	1.21	35.27	-105.24	8.28	0.996
230.90	100.00	3.43	2.29	1.14	3.43	1.21	35.32	-105.02	8.25	0.996
231.00	100.00	3.43	2.30	1.14	3.43	1.20	35.36	-104.80	8.21	0.996
231.10	100.00	3.44	2.30	1.14	3.44	1.20	35.40	-104.58	8.18	0.996
231.20	100.00	3.44	2.30	1.14	3.44	1.20	35.44	-104.36	8.14	0.996
231.30	100.00	3.44	2.30	1.14	3.44	1.20	35.48	-104.13	8.10	0.996
231.40	100.00	3.45	2.30	1.15	3.45	1.20	35.52	-103.91	8.07	0.996
231.50	100.00	3.45	2.30	1.15	3.45	1.20	35.56	-103.69	8.04	0.996
231.60	100.00	3.45	2.30	1.15	3.45	1.20	35.60	-103.47	8.01	0.996
231.70	100.00	3.45	2.31	1.14	3.45	1.20	35.64	-103.25	7.97	0.996
231.80	100.00	3.46	2.31	1.15	3.46	1.20	35.68	-103.03	7.94	0.996
231.90	100.00	3.46	2.31	1.15	3.46	1.19	35.72	-102.81	7.91	0.996
232.00	100.00	3.46	2.31	1.15	3.46	1.19	35.76	-102.59	7.87	0.996
232.10	100.00	3.47	2.31	1.16	3.47	1.19	35.80	-102.37	7.84	0.996
232.20	100.00	3.47	2.31	1.16	3.47	1.19	35.85	-102.15	7.81	0.996
232.30	100.00	3.47	2.32	1.15	3.47	1.19	35.89	-101.93	7.77	0.996
232.40	100.00	3.48	2.32	1.16	3.48	1.19	35.93	-101.71	7.74	0.996
232.50	100.00	3.48	2.32	1.16	3.48	1.19	35.97	-101.49	7.71	0.996
232.60	100.00	3.48	2.32	1.16	3.48	1.19	36.01	-101.27	7.67	0.996
232.70	100.00	3.48	2.32	1.16	3.48	1.19	36.05	-101.05	7.64	0.996
232.80	100.00	3.49	2.32	1.17	3.49	1.18	36.09	-100.83	7.61	0.996
232.90	100.00	3.49	2.32	1.17	3.49	1.18	36.13	-100.61	7.58	0.996
233.00	100.00	3.49	2.33	1.16	3.49	1.18	36.18	-100.39	7.54	0.996
233.10	100.00	3.50	2.33	1.17	3.50	1.18	36.22	-100.17	7.51	0.996
233.20	100.00	3.50	2.33	1.17	3.50	1.18	36.26	-99.95	7.48	0.996
233.30	100.00	3.50	2.33	1.17	3.50	1.18	36.30	-99.73	7.45	0.996
233.40	100.00	3.51	2.33	1.18	3.51	1.18	36.34	-99.51	7.42	0.996
233.50	100.00	3.51	2.33	1.18	3.51	1.18	36.38	-99.29	7.39	0.996
233.60	100.00	3.51	2.33	1.18	3.51	1.18	36.43	-99.07	7.35	0.996
233.70	100.00	3.52	2.34	1.18	3.52	1.17	36.47	-98.85	7.32	0.996
233.80	100.00	3.52	2.34	1.18	3.52	1.17	36.51	-98.63	7.29	0.996
233.90	100.00	3.52	2.34	1.18	3.52	1.17	36.55	-98.42	7.26	0.996
234.00	100.00	3.52	2.34	1.18	3.52	1.17	36.59	-98.20	7.23	0.996
234.10	100.00	3.53	2.34	1.19	3.53	1.17	36.63	-97.98	7.20	0.996
234.20	100.00	3.53	2.34	1.19	3.53	1.17	36.68	-97.76	7.17	0.996
234.30	100.00	3.53	2.34	1.19	3.53	1.17	36.72	-97.54	7.14	0.996
234.40	100.00	3.54	2.35	1.19	3.54	1.17	36.76	-97.32	7.11	0.996
234.50	100.00	3.54	2.35	1.19	3.54	1.17	36.80	-97.10	7.08	0.996
234.60	100.00	3.54	2.35	1.19	3.54	1.17	36.84	-96.88	7.05	0.996
234.70	100.00	3.55	2.35	1.20	3.55	1.16	36.89	-96.67	7.02	0.996
234.80	100.00	3.55	2.35	1.20	3.55	1.16	36.93	-96.45	6.99	0.996
234.90	100.00	3.55	2.35	1.20	3.55	1.16	36.97	-96.23	6.96	0.996
235.00	100.00	3.56	2.36	1.21	3.56	1.16	37.01	-96.01	6.93	0.996
235.10	100.00	3.56	2.36	1.20	3.56	1.16	37.06	-95.79	6.90	0.996
235.20	100.00	3.56	2.36	1.20	3.56	1.16	37.10	-95.57	6.87	0.996
235.30	100.00	3.56	2.36	1.20	3.56	1.16	37.14	-95.36	6.84	0.996
235.40	100.00	3.57	2.36	1.21	3.57	1.16	37.18	-95.14	6.81	0.996
235.50	100.00	3.57	2.36	1.21	3.57	1.16	37.23	-94.92	6.78	0.996
235.60	100.00	3.57	2.36	1.21	3.57	1.15	37.27	-94.70	6.75	0.996
235.70	100.00	3.58	2.37	1.21	3.58	1.15	37.31	-94.49	6.72	0.996
235.80	100.00	3.58	2.37	1.21	3.58	1.15	37.35	-94.27	6.69	0.996
235.90	100.00	3.58	2.37	1.21	3.58	1.15	37.40	-94.05	6.67	0.996
236.00	100.00	3.59	2.37	1.22	3.59	1.15	37.44	-93.83	6.64	0.996
236.10	100.00	3.59	2.37	1.22	3.59	1.15	37.48	-93.62	6.61	0.996
236.20	100.00	3.59	2.37	1.22	3.59	1.15	37.53	-93.40	6.58	0.996
236.30	100.00	3.60	2.37	1.23	3.60	1.15	37.57	-93.18	6.55	0.996
236.40	100.00	3.60	2.38	1.22	3.60	1.14	37.61	-92.97	6.52	0.996
236.50	100.00	3.60	2.38	1.22	3.60	1.14	37.66	-92.75	6.50	0.996
236.60	100.00	3.61	2.38	1.23	3.61	1.14	37.70	-92.53	6.47	0.996
236.70	100.00	3.61	2.38	1.23	3.61	1.14	37.74	-92.31	6.44	0.996
236.80	100.00	3.61	2.38	1.23	3.61	1.14	37.79	-92.10	6.41	0.996
236.90	100.00	3.62	2.38	1.24	3.62	1.14	37.83	-91.88	6.39	0.996
237.00	100.00	3.62	2.38	1.24	3.62	1.14	37.87	-91.66	6.36	0.996
237.10	100.00	3.62	2.39	1.23	3.62	1.14	37.92	-91.45	6.33	0.996
237.20	100.00	3.63	2.39	1.24	3.63	1.13	37.96	-91.23	6.30	0.996
237.30	100.00	3.63	2.39	1.24	3.63	1.13	38.00	-91.01	6.27	0.996
237.40	100.00	3.63	2.39	1.24	3.63	1.13	38.05	-90.80	6.25	0.996
237.50	100.00	3.64	2.39	1.25	3.64	1.13	38.09	-90.58	6.22	0.996
237.60	100.00	3.64	2.39	1.25	3.64	1.13	38.13	-90.36	6.19	0.996
237.70	100.00	3.64	2.39	1.25	3.64	1.13	38.18	-90.15	6.17	0.996
237.80	100.00	3.65	2.40	1.25	3.65	1.13	38.22	-89.93	6.14	0.996
237.90	100.00	3.65	2.40	1.25	3.65	1.13	38.26	-89.72	6.12	0.996
238.00	100.00	3.65	2.40	1.25	3.65	1.13	38.31	-89.50	6.09	0.996
238.10	100.00	3.66	2.40	1.26	3.66	1.12	38.35	-89.28	6.06	0.996
238.20	100.00	3.66	2.40	1.26	3.66	1.12	38.40	-89.07	6.04	0.996
238.30	100.00	3.66	2.40	1.26	3.66	1.12	38.44	-88.85	6.01	0.996
238.40	100.00	3.67	2.41	1.26	3.67	1.12	38.48	-88.64	5.98	0.996
238.50	100.00	3.67	2.41	1.26	3.67	1.12	38.53	-88.42	5.96	0.996
238.60	100.00	3.67	2.41	1.26	3.67	1.12	38.57	-88.21	5.93	0.996
238.70	100.00	3.68	2.41	1.27	3.68	1.12	38.62	-87.99	5.91	0.996
238.80	100.00	3.68	2.41	1.27	3.68	1.11	38.66	-87.77	5.88	0.996
238.90	100.00	3.68	2.41	1.27	3.68	1.11	38.71	-87.56	5.86	0.996
239.00	100.00	3.68	2.42	1.27	3.68	1.11	38.75	-87.34	5.83	0.996
239.10	100.00	3.69	2.42	1.28	3.69	1.11	38.79	-87.13	5.81	0.996
239.20	100.00	3.69	2.42	1.28	3.69	1.11	38.84	-86.91	5.78	0.996
239.30	100.00	3.70	2.42	1.28	3.70	1.11	38.88	-86.70	5.76	0.996
239.40	100.00	3.70	2.42	1.28	3.70	1.11	38.93	-86.48	5.73	0.996
239.50	100.00	3.70	2.42	1.28	3.70	1.11	38.97	-86.27	5.71	0.996
239.60	100.00	3.71	2.42	1.29	3.71	1.10	39.02	-86.05	5.68	0.996
239.70	100.00	3.71	2.42	1.29	3.71	1.10	39.06	-85.84	5.66	0.996
239.80	100.00	3.71	2.43	1.28	3.71	1.10	39.11	-85.62	5.63	0.996
239.90	100.00	3.72	2.43	1.29	3.72	1.10	39.15	-85.41	5.61	0.996
240.00	100.00	3.72	2.43	1.29	3.72	1.10	39.20	-85.20	5.58	0.996
240.10	100.00	3.72	2.43	1.29	3.72	1.10	39.24	-84.98	5.56	0.996
240.20	100.00	3.73	2.43	1.30	3.73	1.10	39.29	-84.77	5.54	0.996
240.30	100.00	3.73	2.43	1.30	3.73	1.09	39.33	-84.55	5.51	0.996
240.40	100.00	3.73	2.43	1.30	3.73	1.09	39.38	-84.34	5.49	0.996
240.50	100.00	3.74	2.44	1.30	3.74	1.09	39.42	-84.12	5.46	0.996
240.60	100.00	3.74	2.44	1.30	3.74	1.09	39.47	-83.91	5.44	0.996
240.70	100.00	3.74	2.44	1.30	3.74	1.09	39.51	-83.70	5.42	0.996
240.80	100.00	3.75	2.44	1.31	3.75	1.09	39.56	-83.48	5.39	0.996
240.90	100.00	3.75	2.44	1.31	3.75	1.08	39.60	-83.27	5.37	0.996
241.00	100.00	3.75	2.44	1.31	3.75	1.08	39.65	-83.05	5.35	0.9

246.20	100.00	3.94	2.51	1.43	3.94	1.00	42.09	-72.03	4.26	0.996
246.30	100.00	3.94	2.51	1.43	3.94	1.00	42.14	-71.82	4.24	0.996
246.40	100.00	3.95	2.51	1.44	3.95	1.00	42.18	-71.61	4.22	0.996
246.50	100.00	3.95	2.52	1.43	3.95	1.00	42.23	-71.40	4.20	0.996
246.60	100.00	3.96	2.52	1.44	3.96	0.99	42.27	-71.19	4.19	0.996
246.70	100.00	3.96	2.52	1.44	3.96	0.99	42.33	-70.98	4.17	0.996
246.80	100.00	3.96	2.52	1.44	3.96	0.99	42.38	-70.77	4.15	0.996
246.90	100.00	3.97	2.52	1.45	3.97	0.99	42.43	-70.56	4.13	0.996
247.00	100.00	3.97	2.52	1.45	3.97	0.99	42.48	-70.35	4.11	0.996
247.10	100.00	3.97	2.52	1.45	3.97	0.99	42.52	-70.14	4.10	0.996
247.20	100.00	3.98	2.52	1.46	3.98	0.98	42.57	-69.93	4.08	0.996
247.30	100.00	3.98	2.53	1.45	3.98	0.98	42.62	-69.72	4.06	0.996
247.40	100.00	3.99	2.53	1.46	3.99	0.98	42.67	-69.51	4.04	0.996
247.50	100.00	3.99	2.53	1.46	3.99	0.98	42.72	-69.30	4.02	0.996
247.60	100.00	3.99	2.53	1.46	3.99	0.98	42.77	-69.09	4.01	0.996
247.70	100.00	4.00	2.53	1.47	4.00	0.97	42.82	-68.88	3.99	0.996
247.80	100.00	4.00	2.53	1.47	4.00	0.97	42.87	-68.67	3.97	0.996
247.90	100.00	4.00	2.53	1.47	4.00	0.97	42.92	-68.46	3.95	0.996
248.00	100.00	4.01	2.53	1.48	4.01	0.97	42.97	-68.25	3.94	0.996
248.10	100.00	4.01	2.54	1.47	4.01	0.97	43.02	-68.04	3.92	0.996
248.20	100.00	4.02	2.54	1.48	4.02	0.97	43.07	-67.83	3.90	0.996
248.30	100.00	4.02	2.54	1.48	4.02	0.97	43.12	-67.62	3.89	0.996
248.40	100.00	4.02	2.54	1.48	4.02	0.96	43.17	-67.42	3.87	0.996
248.50	100.00	4.03	2.54	1.49	4.03	0.96	43.21	-67.21	3.85	0.996
248.60	100.00	4.03	2.54	1.49	4.03	0.96	43.26	-67.00	3.84	0.996
248.70	100.00	4.04	2.54	1.50	4.04	0.96	43.31	-66.79	3.82	0.996
248.80	100.00	4.04	2.54	1.50	4.04	0.96	43.36	-66.58	3.80	0.996
248.90	100.00	4.04	2.54	1.50	4.04	0.96	43.41	-66.37	3.79	0.996
249.00	100.00	4.05	2.55	1.50	4.05	0.95	43.46	-66.16	3.77	0.996
249.10	100.00	4.05	2.55	1.50	4.05	0.95	43.51	-65.96	3.75	0.996
249.20	100.00	4.06	2.55	1.51	4.06	0.95	43.56	-65.75	3.74	0.996
249.30	100.00	4.06	2.55	1.51	4.06	0.95	43.61	-65.54	3.72	0.996
249.40	100.00	4.06	2.55	1.51	4.06	0.95	43.66	-65.33	3.70	0.996
249.50	100.00	4.07	2.55	1.52	4.07	0.94	43.71	-65.12	3.69	0.996
249.60	100.00	4.07	2.55	1.52	4.07	0.94	43.77	-64.91	3.67	0.996
249.70	100.00	4.08	2.55	1.53	4.08	0.94	43.82	-64.71	3.66	0.996
249.80	100.00	4.08	2.55	1.53	4.08	0.94	43.87	-64.50	3.64	0.996
249.90	100.00	4.08	2.55	1.53	4.08	0.94	43.92	-64.29	3.62	0.996
250.00	100.00	4.09	2.56	1.53	4.09	0.94	43.97	-64.08	3.61	0.996
250.10	100.00	4.09	2.56	1.53	4.09	0.93	44.02	-63.87	3.59	0.996
250.20	100.00	4.10	2.56	1.54	4.10	0.93	44.07	-63.67	3.58	0.996
250.30	100.00	4.10	2.56	1.54	4.10	0.93	44.12	-63.46	3.56	0.996
250.40	100.00	4.10	2.56	1.54	4.10	0.93	44.17	-63.25	3.54	0.996
250.50	100.00	4.11	2.56	1.55	4.11	0.93	44.22	-63.04	3.53	0.996
250.60	100.00	4.11	2.56	1.55	4.11	0.93	44.27	-62.84	3.51	0.996
250.70	100.00	4.12	2.56	1.56	4.12	0.92	44.32	-62.63	3.50	0.996
250.80	100.00	4.12	2.56	1.56	4.12	0.92	44.37	-62.42	3.48	0.996
250.90	100.00	4.12	2.56	1.56	4.12	0.92	44.42	-62.22	3.47	0.996
251.00	100.00	4.13	2.57	1.56	4.13	0.92	44.48	-62.01	3.45	0.996
251.10	100.00	4.13	2.57	1.57	4.13	0.92	44.53	-61.80	3.44	0.996
251.20	100.00	4.14	2.57	1.57	4.14	0.91	44.58	-61.59	3.42	0.996
251.30	100.00	4.14	2.57	1.57	4.14	0.91	44.63	-61.39	3.41	0.996
251.40	100.00	4.14	2.57	1.58	4.14	0.91	44.68	-61.19	3.39	0.996
251.50	100.00	4.15	2.57	1.58	4.15	0.91	44.73	-60.99	3.38	0.996
251.60	100.00	4.15	2.57	1.58	4.15	0.91	44.78	-60.77	3.36	0.996
251.70	100.00	4.16	2.57	1.59	4.16	0.91	44.84	-60.56	3.35	0.996
251.80	100.00	4.16	2.57	1.59	4.16	0.90	44.89	-60.35	3.33	0.996
251.90	100.00	4.17	2.57	1.60	4.17	0.90	44.94	-60.15	3.32	0.996
252.00	100.00	4.17	2.58	1.59	4.17	0.90	44.99	-59.94	3.31	0.996
252.10	100.00	4.17	2.58	1.59	4.17	0.90	45.04	-59.73	3.29	0.996
252.20	100.00	4.18	2.58	1.60	4.18	0.90	45.09	-59.53	3.28	0.996
252.30	100.00	4.18	2.58	1.60	4.18	0.90	45.15	-59.32	3.26	0.996
252.40	100.00	4.19	2.58	1.61	4.19	0.89	45.20	-59.12	3.25	0.996
252.50	100.00	4.19	2.58	1.61	4.19	0.89	45.25	-58.91	3.23	0.996
252.60	100.00	4.19	2.58	1.61	4.19	0.89	45.30	-58.70	3.22	0.996
252.70	100.00	4.20	2.58	1.62	4.20	0.89	45.36	-58.50	3.21	0.996
252.80	100.00	4.20	2.58	1.62	4.20	0.89	45.41	-58.29	3.19	0.996
252.90	100.00	4.21	2.58	1.63	4.21	0.89	45.46	-58.09	3.18	0.996
253.00	100.00	4.21	2.58	1.63	4.21	0.88	45.51	-57.88	3.17	0.996
253.10	100.00	4.22	2.58	1.64	4.22	0.88	45.56	-57.67	3.15	0.996
253.20	100.00	4.22	2.59	1.63	4.22	0.88	45.62	-57.47	3.14	0.996
253.30	100.00	4.22	2.59	1.63	4.22	0.88	45.67	-57.26	3.12	0.996
253.40	100.00	4.23	2.59	1.64	4.23	0.88	45.72	-57.06	3.11	0.996
253.50	100.00	4.23	2.59	1.64	4.23	0.87	45.78	-56.85	3.10	0.996
253.60	100.00	4.24	2.59	1.65	4.24	0.87	45.83	-56.65	3.08	0.996
253.70	100.00	4.24	2.59	1.65	4.24	0.87	45.88	-56.44	3.07	0.996
253.80	100.00	4.24	2.59	1.65	4.24	0.87	45.93	-56.24	3.06	0.996
253.90	100.00	4.25	2.59	1.66	4.25	0.87	45.99	-56.03	3.04	0.996
254.00	100.00	4.25	2.59	1.66	4.25	0.87	46.04	-55.83	3.03	0.996
254.10	100.00	4.26	2.59	1.67	4.26	0.86	46.09	-55.62	3.02	0.996
254.20	100.00	4.26	2.59	1.67	4.26	0.86	46.15	-55.42	3.00	0.996
254.30	100.00	4.27	2.59	1.68	4.27	0.86	46.20	-55.21	2.99	0.996
254.40	100.00	4.27	2.59	1.68	4.27	0.86	46.26	-55.01	2.98	0.996
254.50	100.00	4.28	2.59	1.69	4.28	0.86	46.31	-54.80	2.97	0.996
254.60	100.00	4.28	2.60	1.68	4.28	0.85	46.36	-54.60	2.95	0.996
254.70	100.00	4.28	2.60	1.68	4.28	0.85	46.41	-54.39	2.94	0.996
254.80	100.00	4.29	2.60	1.69	4.29	0.85	46.47	-54.19	2.93	0.996
254.90	100.00	4.29	2.60	1.69	4.29	0.85	46.52	-53.98	2.92	0.996
255.00	100.00	4.30	2.60	1.70	4.30	0.85	46.57	-53.78	2.90	0.996
255.10	100.00	4.30	2.60	1.70	4.30	0.85	46.63	-53.57	2.89	0.996
255.20	100.00	4.31	2.60	1.71	4.31	0.84	46.68	-53.37	2.88	0.996
255.30	100.00	4.31	2.60	1.71	4.31	0.84	46.73	-53.17	2.87	0.996
255.40	100.00	4.31	2.60	1.71	4.31	0.84	46.79	-52.96	2.85	0.996
255.50	100.00	4.32	2.60	1.72	4.32	0.84	46.84	-52.76	2.84	0.996
255.60	100.00	4.32	2.60	1.72	4.32	0.84	46.90	-52.55	2.83	0.996
255.70	100.00	4.33	2.60	1.73	4.33	0.83	46.95	-52.35	2.82	0.996
255.80	100.00	4.33	2.60	1.73	4.33	0.83	47.00	-52.15	2.80	0.996
255.90	100.00	4.34	2.60	1.74	4.34	0.83	47.06	-51.94	2.79	0.996
256.00	100.00	4.34	2.60	1.74	4.34	0.83	47.11	-51.74	2.78	0.996
256.10	100.00	4.35	2.60	1.75	4.35	0.83	47.17	-51.53	2.77	0.996
256.20	100.00	4.35	2.61	1.75	4.35	0.82	47.22	-51.32	2.76	0.996
256.30	100.00	4.35	2.61	1.74	4.35	0.82	47.28	-51.13	2.74	0.996
256.40	100.00	4.36	2.61	1.75	4.36	0.82	47.33	-50.92	2.73	0.996
256.50	100.00	4.36	2.61	1.75	4.36	0.82	47.38	-50.72	2.72	0.996
256.60	100.00	4.37	2.61	1.76	4.37	0.82	47.44	-50.52	2.71	0.996
256.70	100.00	4.37	2.61	1.76	4.37	0.82	47.49	-50.31	2.70	0.996
256.80	100.00	4.38	2.61	1.77	4.38	0.81	47.55	-50.11	2.69	0.996
256.90	100.00	4.38	2.61	1.77	4.38	0.81	47.60	-49.91	2.68	0.996
257.00	100.00	4.39	2.61	1.78	4.39	0.81	47.66	-49.70	2.66	0.996
257.10	100.00	4.39	2.61	1.78	4.39	0.81	47.71	-49.50	2.65	0.996
257.20	100.00	4.39	2.61	1.78	4.39	0.81	47.77	-49.30	2.64	0.996
257.30	100.00									

262.40	100.00	4.64	2.62	2.02	4.64	0.71	50.71	-38.85	2.12	0.996
262.50	100.00	4.65	2.62	2.03	4.65	0.70	50.83	-38.65	2.11	0.996
262.60	100.00	4.66	2.62	2.04	4.66	0.70	50.89	-38.25	2.10	0.996
262.80	100.00	4.66	2.61	2.05	4.68	0.70	50.94	-38.05	2.09	0.996
262.90	100.00	4.67	2.61	2.06	4.67	0.70	51.00	-37.85	2.08	0.996
263.00	100.00	4.67	2.61	2.06	4.67	0.70	51.06	-37.65	2.07	0.996
263.10	100.00	4.68	2.61	2.07	4.68	0.70	51.12	-37.45	2.07	0.996
263.20	100.00	4.68	2.61	2.07	4.68	0.69	51.18	-37.25	2.06	0.996
263.30	100.00	4.69	2.61	2.08	4.69	0.69	51.24	-37.06	2.05	0.996
263.40	100.00	4.69	2.61	2.08	4.69	0.69	51.30	-36.86	2.04	0.996
263.50	100.00	4.70	2.61	2.09	4.70	0.69	51.35	-36.66	2.03	0.996
263.60	100.00	4.70	2.61	2.09	4.70	0.69	51.41	-36.46	2.02	0.996
263.70	100.00	4.71	2.61	2.10	4.71	0.68	51.47	-36.26	2.02	0.996
263.80	100.00	4.71	2.61	2.10	4.71	0.68	51.53	-36.06	2.01	0.996
263.90	100.00	4.72	2.61	2.11	4.72	0.68	51.59	-35.87	2.00	0.996
264.00	100.00	4.72	2.61	2.11	4.72	0.68	51.65	-35.67	1.99	0.996
264.10	100.00	4.73	2.61	2.12	4.73	0.68	51.71	-35.47	1.98	0.996
264.20	100.00	4.73	2.61	2.12	4.73	0.67	51.77	-35.27	1.98	0.996
264.30	100.00	4.74	2.61	2.13	4.74	0.67	51.83	-35.07	1.97	0.996
264.40	100.00	4.74	2.61	2.13	4.74	0.67	51.89	-34.88	1.96	0.996
264.50	100.00	4.75	2.61	2.14	4.75	0.67	51.95	-34.68	1.95	0.996
264.60	100.00	4.75	2.61	2.14	4.75	0.67	52.01	-34.48	1.94	0.996
264.70	100.00	4.76	2.61	2.15	4.76	0.67	52.07	-34.28	1.94	0.996
264.80	100.00	4.76	2.61	2.15	4.76	0.66	52.12	-34.09	1.93	0.996
264.90	100.00	4.77	2.61	2.16	4.77	0.66	52.18	-33.89	1.92	0.996
265.00	100.00	4.77	2.61	2.16	4.77	0.66	52.24	-33.69	1.91	0.996
265.10	100.00	4.78	2.60	2.18	4.78	0.66	52.30	-33.49	1.91	0.996
265.20	100.00	4.78	2.60	2.18	4.78	0.65	52.36	-33.30	1.90	0.996
265.30	100.00	4.79	2.60	2.19	4.79	0.65	52.42	-33.10	1.89	0.996
265.40	100.00	4.79	2.60	2.19	4.79	0.65	52.48	-32.90	1.88	0.996
265.50	100.00	4.80	2.60	2.20	4.80	0.65	52.54	-32.71	1.88	0.996
265.60	100.00	4.80	2.60	2.20	4.80	0.65	52.60	-32.51	1.87	0.996
265.70	100.00	4.81	2.60	2.21	4.81	0.65	52.66	-32.31	1.86	0.996
265.80	100.00	4.81	2.60	2.21	4.81	0.65	52.72	-32.12	1.85	0.996
265.90	100.00	4.82	2.60	2.22	4.82	0.64	52.78	-31.92	1.85	0.996
266.00	100.00	4.83	2.60	2.23	4.83	0.64	52.84	-31.72	1.84	0.996
266.10	100.00	4.83	2.60	2.23	4.83	0.64	52.90	-31.53	1.83	0.996
266.20	100.00	4.84	2.60	2.24	4.84	0.64	52.96	-31.33	1.83	0.996
266.30	100.00	4.84	2.60	2.24	4.84	0.64	53.02	-31.13	1.82	0.996
266.40	100.00	4.85	2.60	2.25	4.85	0.64	53.09	-30.94	1.81	0.996
266.50	100.00	4.85	2.59	2.26	4.85	0.63	53.15	-30.74	1.81	0.996
266.60	100.00	4.86	2.59	2.27	4.86	0.63	53.21	-30.55	1.80	0.996
266.70	100.00	4.86	2.59	2.27	4.86	0.63	53.27	-30.35	1.79	0.996
266.80	100.00	4.87	2.59	2.28	4.87	0.63	53.33	-30.15	1.78	0.996
266.90	100.00	4.87	2.59	2.28	4.87	0.62	53.39	-29.96	1.78	0.996
267.00	100.00	4.88	2.59	2.29	4.88	0.62	53.45	-29.76	1.77	0.996
267.10	100.00	4.88	2.59	2.29	4.88	0.62	53.51	-29.57	1.76	0.996
267.20	100.00	4.89	2.59	2.30	4.89	0.62	53.57	-29.37	1.76	0.996
267.30	100.00	4.89	2.59	2.30	4.89	0.61	53.63	-29.18	1.75	0.996
267.40	100.00	4.90	2.59	2.31	4.90	0.61	53.69	-28.98	1.74	0.996
267.50	100.00	4.91	2.58	2.33	4.91	0.61	53.75	-28.78	1.74	0.996
267.60	100.00	4.91	2.58	2.33	4.91	0.61	53.81	-28.59	1.73	0.996
267.70	100.00	4.92	2.58	2.34	4.92	0.61	53.88	-28.39	1.73	0.996
267.80	100.00	4.92	2.58	2.34	4.92	0.61	53.94	-28.20	1.72	0.996
267.90	100.00	4.93	2.58	2.35	4.93	0.61	54.00	-28.00	1.71	0.996
268.00	100.00	4.93	2.58	2.35	4.93	0.60	54.06	-27.81	1.71	0.996
268.10	100.00	4.94	2.58	2.36	4.94	0.60	54.12	-27.61	1.70	0.996
268.20	100.00	4.94	2.58	2.36	4.94	0.60	54.18	-27.42	1.69	0.996
268.30	100.00	4.95	2.58	2.37	4.95	0.60	54.24	-27.22	1.69	0.996
268.40	100.00	4.95	2.58	2.37	4.95	0.60	54.31	-27.03	1.68	0.996
268.50	100.00	4.96	2.59	2.39	4.96	0.59	54.37	-26.84	1.67	0.996
268.60	100.00	4.97	2.57	2.40	4.97	0.59	54.43	-26.64	1.67	0.996
268.70	100.00	4.97	2.57	2.40	4.97	0.59	54.49	-26.45	1.66	0.996
268.80	100.00	4.98	2.57	2.41	4.98	0.59	54.55	-26.25	1.65	0.996
268.90	100.00	4.98	2.57	2.41	4.98	0.59	54.61	-26.06	1.65	0.996
269.00	100.00	4.99	2.57	2.42	4.99	0.59	54.68	-25.86	1.64	0.996
269.10	100.00	4.99	2.57	2.42	4.99	0.58	54.74	-25.67	1.64	0.996
269.20	100.00	5.00	2.57	2.43	5.00	0.58	54.80	-25.48	1.63	0.996
269.30	100.00	5.00	2.56	2.44	5.00	0.58	54.86	-25.28	1.63	0.996
269.40	100.00	5.01	2.56	2.45	5.01	0.58	54.92	-25.09	1.62	0.996
269.50	100.00	5.02	2.56	2.46	5.02	0.57	54.99	-24.89	1.62	0.996
269.60	100.00	5.02	2.56	2.46	5.02	0.57	55.05	-24.70	1.61	0.996
269.70	100.00	5.03	2.56	2.47	5.03	0.57	55.11	-24.51	1.60	0.996
269.80	100.00	5.03	2.56	2.47	5.03	0.57	55.17	-24.31	1.60	0.996
269.90	100.00	5.04	2.56	2.48	5.04	0.57	55.24	-24.12	1.59	0.996
270.00	100.00	5.04	2.55	2.49	5.05	0.57	55.30	-23.93	1.58	0.996
270.10	100.00	5.05	2.55	2.50	5.05	0.56	55.36	-23.73	1.58	0.996
270.20	100.00	5.06	2.55	2.51	5.06	0.56	55.42	-23.54	1.58	0.996
270.30	100.00	5.06	2.55	2.51	5.06	0.56	55.48	-23.35	1.57	0.996
270.40	100.00	5.07	2.55	2.52	5.07	0.56	55.55	-23.15	1.57	0.996
270.50	100.00	5.07	2.55	2.52	5.07	0.56	55.61	-22.96	1.56	0.996
270.60	100.00	5.08	2.54	2.54	5.08	0.55	55.67	-22.77	1.55	0.996
270.70	100.00	5.08	2.54	2.54	5.08	0.55	55.74	-22.57	1.55	0.996
270.80	100.00	5.09	2.54	2.55	5.09	0.55	55.80	-22.38	1.54	0.996
270.90	100.00	5.10	2.54	2.56	5.10	0.55	55.86	-22.19	1.54	0.996
271.00	100.00	5.10	2.54	2.56	5.10	0.55	55.92	-22.00	1.53	0.996
271.10	100.00	5.11	2.54	2.57	5.11	0.55	55.99	-21.80	1.53	0.996
271.20	100.00	5.11	2.53	2.58	5.12	0.54	56.05	-21.61	1.52	0.996
271.30	100.00	5.12	2.53	2.59	5.12	0.54	56.11	-21.42	1.52	0.996
271.40	100.00	5.12	2.53	2.59	5.12	0.54	56.18	-21.23	1.51	0.996
271.50	100.00	5.13	2.53	2.60	5.13	0.54	56.24	-21.04	1.51	0.996
271.60	100.00	5.14	2.53	2.61	5.14	0.54	56.30	-20.84	1.50	0.996
271.70	100.00	5.14	2.53	2.61	5.14	0.54	56.36	-20.65	1.50	0.996
271.80	100.00	5.15	2.52	2.62	5.15	0.53	56.43	-20.45	1.49	0.996
271.90	100.00	5.15	2.52	2.63	5.15	0.53	56.49	-20.27	1.49	0.996
272.00	100.00	5.16	2.52	2.64	5.16	0.53	56.55	-20.07	1.48	0.996
272.10	100.00	5.17	2.52	2.65	5.17	0.53	56.62	-19.88	1.48	0.996
272.20	100.00	5.17	2.52	2.65	5.17	0.53	56.68	-19.69	1.47	0.996
272.30	100.00	5.18	2.51	2.67	5.18	0.53	56.74	-19.50	1.47	0.996
272.40	100.00	5.18	2.51	2.67	5.18	0.52	56.81	-19.31	1.46	0.996
272.50	100.00	5.19	2.51	2.68	5.19	0.52	56.87	-19.12	1.46	0.996
272.60	100.00	5.19	2.51	2.68	5.19	0.52	56.93	-18.92	1.46	0.996
272.70	100.00	5.20	2.51	2.69	5.20	0.52	57.00	-18.73	1.45	0.996
272.80	100.00	5.21	2.50	2.71	5.21	0.52	57.06	-18.54	1.45	0.996
272.90	100.00	5.21	2.50	2.71	5.21	0.52	57.12	-18.35	1.44	0.996
273.00	100.00	5.22	2.50	2.72	5.22	0.52	57.19	-18.15	1.44	0.996
273.10	100.00	5.22	2.50	2.72	5.22	0.51	57.25	-17.97	1.43	0.996
273.20	100.00	5.23	2.50	2.73	5.23	0.51	57.32	-17.78	1.43	0.996
273.30	100.00	5.24	2.49	2.75	5.24	0.51	57.38	-17.59	1.43	0.996
273.40	100.00	5.24	2.49	2.75	5.24	0.51	57.44	-17.40	1.42	0.996
273.50	100.00	5.25	2.49	2.76	5.25	0.51	57.51	-17.21	1.42	0.996
273.60	100.00									

278.60	100.00	5.57	2.35	3.22	5.57	0.42	60.81	-7.59	1.27	0.996
278.70	100.00	5.57	2.35	3.22	5.57	0.42	60.87	-7.40	1.27	0.996
278.80	100.00	5.58	2.34	3.24	5.58	0.42	60.94	-7.21	1.27	0.996
278.90	100.00	5.59	2.34	3.25	5.59	0.42	61.00	-7.03	1.27	0.996
279.00	100.00	5.59	2.34	3.25	5.59	0.42	61.07	-6.84	1.26	0.996
279.10	100.00	5.60	2.33	3.27	5.60	0.41	61.13	-6.65	1.26	0.996
279.20	100.00	5.61	2.33	3.28	5.61	0.41	61.20	-6.47	1.26	0.996
279.30	100.00	5.61	2.32	3.28	5.61	0.41	61.26	-6.28	1.26	0.996
279.40	100.00	5.62	2.32	3.30	5.62	0.41	61.33	-6.10	1.26	0.996
279.50	100.00	5.63	2.32	3.31	5.63	0.40	61.40	-5.91	1.26	0.996
279.60	100.00	5.63	2.32	3.31	5.63	0.40	61.46	-5.72	1.26	0.996
279.70	100.00	5.64	2.31	3.33	5.64	0.40	61.53	-5.54	1.26	0.996
279.80	100.00	5.65	2.31	3.34	5.65	0.40	61.59	-5.35	1.26	0.996
279.90	100.00	5.65	2.30	3.35	5.65	0.40	61.66	-5.17	1.26	0.996
280.00	100.00	5.66	2.30	3.36	5.66	0.39	61.72	-4.98	1.26	0.996
280.10	100.00	5.67	2.30	3.37	5.67	0.39	61.79	-4.79	1.26	0.996
280.20	100.00	5.67	2.29	3.38	5.67	0.39	61.85	-4.61	1.26	0.996
280.30	100.00	5.68	2.29	3.39	5.68	0.39	61.92	-4.42	1.26	0.996
280.40	100.00	5.69	2.29	3.40	5.69	0.38	61.99	-4.24	1.26	0.996
280.50	100.00	5.69	2.28	3.41	5.69	0.38	62.05	-4.05	1.26	0.996
280.60	100.00	5.70	2.28	3.42	5.70	0.38	62.12	-3.87	1.26	0.996
280.70	100.00	5.71	2.27	3.44	5.71	0.38	62.18	-3.68	1.26	0.996
280.80	100.00	5.71	2.27	3.44	5.71	0.38	62.25	-3.50	1.26	0.996
280.90	100.00	5.72	2.27	3.45	5.72	0.37	62.31	-3.31	1.26	0.996
281.00	100.00	5.73	2.26	3.47	5.73	0.37	62.38	-3.13	1.26	0.996
281.10	100.00	5.73	2.26	3.47	5.73	0.37	62.45	-2.94	1.26	0.996
281.20	100.00	5.74	2.26	3.48	5.74	0.37	62.51	-2.76	1.26	0.996
281.30	100.00	5.75	2.25	3.50	5.75	0.37	62.58	-2.57	1.26	0.996
281.40	100.00	5.75	2.25	3.50	5.75	0.37	62.64	-2.39	1.26	0.996
281.50	100.00	5.76	2.24	3.52	5.76	0.36	62.71	-2.20	1.26	0.996
281.60	100.00	5.77	2.24	3.53	5.77	0.36	62.77	-2.02	1.26	0.996
281.70	100.00	5.78	2.23	3.55	5.78	0.36	62.84	-1.83	1.26	0.996
281.80	100.00	5.78	2.23	3.55	5.78	0.36	62.90	-1.65	1.26	0.996
281.90	100.00	5.79	2.23	3.56	5.79	0.35	62.97	-1.47	1.26	0.996
282.00	100.00	5.80	2.22	3.58	5.80	0.35	63.04	-1.28	1.26	0.996
282.10	100.00	5.80	2.22	3.58	5.80	0.35	63.10	-1.10	1.26	0.996
282.20	100.00	5.81	2.21	3.60	5.81	0.35	63.17	-0.91	1.26	0.996
282.30	100.00	5.82	2.21	3.61	5.82	0.34	63.23	-0.73	1.27	0.996
282.40	100.00	5.82	2.21	3.61	5.82	0.34	63.30	-0.55	1.27	0.996
282.50	100.00	5.83	2.20	3.63	5.83	0.34	63.36	-0.36	1.27	0.996
282.60	100.00	5.84	2.20	3.64	5.84	0.34	63.43	-0.18	1.27	0.996
282.70	100.00	5.84	2.19	3.65	5.84	0.34	63.50	0.01	1.27	0.996
282.80	100.00	5.85	2.19	3.66	5.85	0.34	63.56	0.19	1.27	0.996
282.90	100.00	5.86	2.18	3.67	5.86	0.33	63.63	0.37	1.27	0.996
283.00	100.00	5.87	2.18	3.69	5.87	0.33	63.69	0.56	1.27	0.996
283.10	100.00	5.87	2.18	3.69	5.87	0.33	63.76	0.74	1.28	0.996
283.20	100.00	5.88	2.17	3.72	5.88	0.33	63.82	0.92	1.28	0.996
283.30	100.00	5.89	2.17	3.72	5.89	0.33	63.89	1.11	1.28	0.996
283.40	100.00	5.89	2.16	3.73	5.89	0.32	63.96	1.29	1.28	0.996
283.50	100.00	5.90	2.16	3.74	5.90	0.32	64.02	1.48	1.28	0.996
283.60	100.00	5.91	2.15	3.76	5.91	0.32	64.09	1.66	1.28	0.996
283.70	100.00	5.91	2.15	3.76	5.91	0.32	64.15	1.84	1.29	0.996
283.80	100.00	5.92	2.14	3.78	5.92	0.32	64.22	2.02	1.29	0.996
283.90	100.00	5.93	2.14	3.79	5.93	0.31	64.28	2.21	1.29	0.996
284.00	100.00	5.94	2.13	3.81	5.94	0.31	64.35	2.39	1.29	0.996
284.10	100.00	5.94	2.13	3.81	5.94	0.31	64.42	2.57	1.29	0.996
284.20	100.00	5.95	2.13	3.82	5.95	0.31	64.48	2.76	1.30	0.996
284.30	100.00	5.96	2.12	3.84	5.96	0.31	64.55	2.94	1.30	0.996
284.40	100.00	5.96	2.12	3.84	5.96	0.30	64.61	3.12	1.30	0.996
284.50	100.00	5.97	2.11	3.86	5.97	0.30	64.68	3.31	1.30	0.996
284.60	100.00	5.98	2.11	3.87	5.98	0.30	64.74	3.49	1.30	0.996
284.70	100.00	5.99	2.10	3.89	5.99	0.30	64.81	3.67	1.31	0.996
284.80	100.00	5.99	2.10	3.89	5.99	0.30	64.87	3.85	1.31	0.996
284.90	100.00	6.00	2.09	3.91	6.00	0.30	64.94	4.04	1.31	0.996
285.00	100.00	6.01	2.09	3.92	6.01	0.29	65.01	4.22	1.31	0.996
285.10	100.00	6.02	2.08	3.94	6.02	0.29	65.07	4.40	1.32	0.996
285.20	100.00	6.02	2.08	3.94	6.02	0.29	65.14	4.58	1.32	0.996
285.30	100.00	6.03	2.07	3.96	6.03	0.29	65.20	4.77	1.32	0.996
285.40	100.00	6.04	2.07	3.97	6.04	0.29	65.27	4.95	1.32	0.996
285.50	100.00	6.04	2.06	3.98	6.04	0.28	65.33	5.13	1.33	0.996
285.60	100.00	6.05	2.06	3.98	6.05	0.28	65.40	5.31	1.33	0.996
285.70	100.00	6.06	2.05	4.01	6.06	0.28	65.46	5.50	1.33	0.996
285.80	100.00	6.07	2.05	4.02	6.07	0.28	65.53	5.68	1.33	0.996
285.90	100.00	6.07	2.04	4.03	6.07	0.28	65.59	5.86	1.34	0.996
286.00	100.00	6.08	2.04	4.04	6.08	0.28	65.66	6.04	1.34	0.996
286.10	100.00	6.09	2.03	4.06	6.09	0.27	65.72	6.22	1.34	0.996
286.20	100.00	6.10	2.03	4.07	6.10	0.27	65.79	6.41	1.34	0.996
286.30	100.00	6.10	2.02	4.08	6.10	0.27	65.86	6.59	1.35	0.996
286.40	100.00	6.11	2.02	4.09	6.11	0.27	65.92	6.77	1.35	0.996
286.50	100.00	6.12	2.01	4.11	6.12	0.27	65.99	6.95	1.35	0.996
286.60	100.00	6.13	2.01	4.12	6.13	0.26	66.05	7.13	1.36	0.996
286.70	100.00	6.13	2.00	4.13	6.13	0.26	66.12	7.32	1.36	0.996
286.80	100.00	6.14	2.00	4.14	6.14	0.26	66.18	7.50	1.36	0.996
286.90	100.00	6.15	1.99	4.16	6.15	0.26	66.25	7.68	1.36	0.996
287.00	100.00	6.15	1.99	4.16	6.15	0.26	66.31	7.86	1.37	0.996
287.10	100.00	6.16	1.98	4.18	6.16	0.26	66.38	8.04	1.37	0.996
287.20	100.00	6.17	1.97	4.20	6.17	0.25	66.44	8.22	1.37	0.996
287.30	100.00	6.18	1.97	4.21	6.18	0.25	66.51	8.41	1.38	0.996
287.40	100.00	6.18	1.96	4.22	6.18	0.25	66.57	8.59	1.38	0.996
287.50	100.00	6.19	1.96	4.23	6.19	0.25	66.64	8.77	1.38	0.996
287.60	100.00	6.20	1.95	4.25	6.20	0.25	66.70	8.95	1.39	0.996
287.70	100.00	6.21	1.95	4.26	6.21	0.25	66.77	9.13	1.39	0.996
287.80	100.00	6.21	1.94	4.27	6.21	0.24	66.83	9.31	1.39	0.996
287.90	100.00	6.22	1.94	4.28	6.22	0.24	66.90	9.50	1.40	0.996
288.00	100.00	6.23	1.93	4.30	6.23	0.24	66.96	9.68	1.40	0.996
288.10	100.00	6.24	1.93	4.31	6.24	0.24	67.03	9.86	1.40	0.996
288.20	100.00	6.25	1.92	4.33	6.25	0.24	67.09	10.04	1.41	0.996
288.30	100.00	6.25	1.91	4.34	6.25	0.24	67.16	10.22	1.41	0.996
288.40	100.00	6.26	1.91	4.35	6.26	0.23	67.22	10.40	1.41	0.996
288.50	100.00	6.27	1.90	4.37	6.27	0.23	67.29	10.58	1.42	0.996
288.60	100.00	6.28	1.90	4.38	6.28	0.23	67.35	10.76	1.42	0.996
288.70	100.00	6.28	1.89	4.39	6.28	0.23	67.42	10.95	1.42	0.996
288.80	100.00	6.29	1.89	4.40	6.29	0.23	67.48	11.13	1.43	0.996
288.90	100.00	6.30	1.88	4.43	6.30	0.23	67.54	11.31	1.43	0.996
289.00	100.00	6.31	1.87	4.44	6.31	0.22	67.61	11.49	1.43	0.996
289.10	100.00	6.31	1.87	4.44	6.31	0.22	67.67	11.67	1.44	0.996
289.20	100.00	6.32	1.86	4.47	6.32	0.22	67.74	11.85	1.44	0.996
289.30	100.00	6.33	1.86	4.47	6.33	0.22	67.80	12.03	1.44	0.996
289.40	100.00	6.34	1.85	4.49	6.34	0.22	67.87	12.21	1.45	0.996
289.50	100.00	6.34	1.85	4.49	6.34	0.22	67.93	12.40	1.45	0.996
289.60	100.00	6.35	1.84	4.51	6.35	0.21	68.00	12.58	1.45	0.996
289.70	100.00	6.36	1.83	4.53	6.36	0.21	68.06	12.76	1.46	0.996
289.8										

294.80	100.00	6.77	1.52	5.25	6.77	-0.07	71.29	22.01	1.66	0.996
294.90	100.00	6.78	1.52	5.26	6.78	-0.08	71.35	22.01	1.67	0.996
295.00	100.00	6.79	1.51	5.28	6.79	-0.08	71.42	22.38	1.67	0.996
295.10	100.00	6.80	1.50	5.30	6.80	-0.09	71.48	22.56	1.67	0.996
295.20	100.00	6.80	1.50	5.30	6.80	-0.10	71.54	22.74	1.68	0.996
295.30	100.00	6.81	1.49	5.32	6.81	-0.10	71.60	22.93	1.68	0.996
295.40	100.00	6.82	1.49	5.33	6.82	-0.11	71.66	23.11	1.69	0.996
295.50	100.00	6.83	1.48	5.35	6.83	-0.12	71.73	23.29	1.69	0.996
295.60	100.00	6.84	1.47	5.37	6.84	-0.13	71.79	23.48	1.70	0.996
295.70	100.00	6.85	1.47	5.38	6.85	-0.13	71.85	23.66	1.70	0.996
295.80	100.00	6.85	1.46	5.39	6.85	-0.14	71.91	23.84	1.71	0.996
295.90	100.00	6.86	1.46	5.40	6.86	-0.15	71.97	24.03	1.71	0.996
296.00	100.00	6.87	1.45	5.42	6.87	-0.16	72.04	24.21	1.71	0.996
296.10	100.00	6.88	1.44	5.44	6.88	-0.16	72.10	24.39	1.72	0.996
296.20	100.00	6.89	1.44	5.45	6.89	-0.17	72.16	24.58	1.72	0.996
296.30	100.00	6.90	1.43	5.47	6.90	-0.18	72.22	24.76	1.73	0.996
296.40	100.00	6.91	1.42	5.49	6.91	-0.19	72.28	24.94	1.73	0.996
296.50	100.00	6.91	1.42	5.49	6.91	-0.19	72.34	25.13	1.74	0.996
296.60	100.00	6.92	1.41	5.51	6.92	-0.20	72.41	25.31	1.74	0.996
296.70	100.00	6.93	1.41	5.52	6.93	-0.21	72.47	25.50	1.75	0.996
296.80	100.00	6.94	1.40	5.54	6.94	-0.22	72.53	25.68	1.75	0.996
296.90	100.00	6.95	1.40	5.55	6.95	-0.23	72.59	25.86	1.76	0.996
297.00	100.00	6.96	1.39	5.57	6.96	-0.23	72.65	26.05	1.76	0.996
297.10	100.00	6.97	1.38	5.59	6.97	-0.24	72.71	26.23	1.76	0.996
297.20	100.00	6.97	1.38	5.59	6.97	-0.25	72.77	26.42	1.77	0.996
297.30	100.00	6.98	1.37	5.61	6.98	-0.26	72.84	26.60	1.77	0.996
297.40	100.00	6.99	1.37	5.62	6.99	-0.27	72.90	26.79	1.78	0.996
297.50	100.00	7.00	1.36	5.64	7.00	-0.27	72.96	26.97	1.78	0.996
297.60	100.00	7.01	1.35	5.66	7.01	-0.28	73.02	27.16	1.79	0.996
297.70	100.00	7.02	1.35	5.67	7.02	-0.29	73.08	27.34	1.79	0.996
297.80	100.00	7.03	1.34	5.69	7.03	-0.30	73.14	27.53	1.80	0.996
297.90	100.00	7.03	1.34	5.69	7.03	-0.31	73.20	27.71	1.80	0.996
298.00	100.00	7.04	1.33	5.71	7.04	-0.32	73.27	27.90	1.81	0.996
298.10	100.00	7.05	1.33	5.72	7.05	-0.32	73.33	28.09	1.81	0.996
298.20	100.00	7.06	1.32	5.74	7.06	-0.33	73.40	28.27	1.82	0.996
298.30	100.00	7.07	1.31	5.76	7.07	-0.34	73.45	28.46	1.82	0.996
298.40	100.00	7.08	1.31	5.77	7.08	-0.35	73.51	28.64	1.83	0.996
298.50	100.00	7.09	1.30	5.79	7.09	-0.36	73.57	28.83	1.83	0.996
298.60	100.00	7.10	1.30	5.80	7.10	-0.37	73.63	29.02	1.84	0.996
298.70	100.00	7.10	1.29	5.81	7.10	-0.38	73.69	29.20	1.84	0.996
298.80	100.00	7.11	1.29	5.82	7.11	-0.39	73.76	29.38	1.85	0.996
298.90	100.00	7.12	1.28	5.84	7.12	-0.39	73.82	29.58	1.85	0.996
299.00	100.00	7.13	1.28	5.85	7.13	-0.40	73.88	29.76	1.86	0.996
299.10	100.00	7.14	1.27	5.87	7.14	-0.41	73.94	29.95	1.86	0.996
299.20	100.00	7.15	1.27	5.88	7.15	-0.42	74.00	30.14	1.86	0.996
299.30	100.00	7.16	1.26	5.90	7.16	-0.43	74.06	30.33	1.87	0.996
299.40	100.00	7.17	1.26	5.91	7.17	-0.44	74.12	30.51	1.87	0.996
299.50	100.00	7.17	1.25	5.92	7.17	-0.45	74.18	30.70	1.88	0.996
299.60	100.00	7.18	1.25	5.93	7.18	-0.46	74.24	30.89	1.88	0.996
299.70	100.00	7.19	1.24	5.95	7.19	-0.47	74.30	31.07	1.89	0.996
299.80	100.00	7.20	1.24	5.96	7.20	-0.48	74.37	31.27	1.89	0.996
299.90	100.00	7.21	1.23	5.98	7.21	-0.48	74.43	31.45	1.90	0.996
300.00	100.00	7.22	1.22	5.99	7.22	-0.49	74.49	31.64	1.90	0.996
300.10	100.00	7.23	1.22	6.01	7.23	-0.50	74.55	31.83	1.91	0.996
300.20	100.00	7.24	1.22	6.02	7.24	-0.51	74.61	32.02	1.92	0.996
300.30	100.00	7.25	1.21	6.04	7.25	-0.52	74.67	32.21	1.92	0.996
300.40	100.00	7.26	1.21	6.05	7.26	-0.53	74.73	32.40	1.93	0.996
300.50	100.00	7.26	1.20	6.06	7.26	-0.54	74.79	32.59	1.93	0.996
300.60	100.00	7.27	1.20	6.07	7.27	-0.55	74.85	32.77	1.94	0.996
300.70	100.00	7.28	1.19	6.09	7.28	-0.56	74.92	32.97	1.94	0.996
300.80	100.00	7.29	1.19	6.10	7.29	-0.57	74.98	33.16	1.95	0.996
300.90	100.00	7.30	1.18	6.12	7.30	-0.58	75.04	33.35	1.95	0.996
301.00	100.00	7.31	1.18	6.13	7.31	-0.59	75.10	33.54	1.96	0.996
301.10	100.00	7.32	1.18	6.14	7.32	-0.60	75.16	33.73	1.96	0.996
301.20	100.00	7.33	1.17	6.16	7.33	-0.61	75.22	33.92	1.97	0.996
301.30	100.00	7.34	1.17	6.17	7.34	-0.62	75.28	34.11	1.97	0.996
301.40	100.00	7.35	1.16	6.19	7.35	-0.63	75.34	34.31	1.98	0.996
301.50	100.00	7.35	1.16	6.20	7.35	-0.64	75.41	34.50	1.98	0.996
301.60	100.00	7.36	1.16	6.20	7.36	-0.65	75.47	34.69	1.99	0.996
301.70	100.00	7.37	1.15	6.22	7.37	-0.66	75.53	34.88	1.99	0.996
301.80	100.00	7.38	1.15	6.23	7.38	-0.67	75.59	35.07	2.00	0.996
301.90	100.00	7.39	1.14	6.25	7.39	-0.68	75.65	35.27	2.00	0.996
302.00	100.00	7.40	1.14	6.26	7.40	-0.69	75.71	35.46	2.01	0.996
302.10	100.00	7.41	1.14	6.27	7.41	-0.70	75.77	35.65	2.01	0.996
302.20	100.00	7.42	1.13	6.29	7.42	-0.72	75.84	35.85	2.02	0.996
302.30	100.00	7.43	1.13	6.30	7.43	-0.73	75.90	36.04	2.03	0.996
302.40	100.00	7.44	1.13	6.31	7.44	-0.74	75.96	36.23	2.03	0.996
302.50	100.00	7.45	1.12	6.33	7.45	-0.75	76.02	36.43	2.04	0.996
302.60	100.00	7.46	1.12	6.34	7.46	-0.76	76.08	36.62	2.04	0.996
302.70	100.00	7.47	1.12	6.35	7.47	-0.77	76.14	36.81	2.05	0.996
302.80	100.00	7.47	1.12	6.35	7.47	-0.78	76.21	37.01	2.05	0.996
302.90	100.00	7.48	1.11	6.37	7.48	-0.79	76.27	37.21	2.06	0.996
303.00	100.00	7.49	1.11	6.38	7.49	-0.80	76.33	37.40	2.06	0.996
303.10	100.00	7.50	1.11	6.39	7.50	-0.82	76.39	37.60	2.07	0.996
303.20	100.00	7.51	1.10	6.41	7.51	-0.83	76.45	37.79	2.07	0.996
303.30	100.00	7.52	1.10	6.42	7.52	-0.84	76.52	37.98	2.07	0.996
303.40	100.00	7.53	1.10	6.43	7.53	-0.85	76.58	38.19	2.09	0.996
303.50	100.00	7.54	1.10	6.44	7.54	-0.86	76.64	38.38	2.09	0.996
303.60	100.00	7.55	1.10	6.45	7.55	-0.87	76.70	38.57	2.10	0.996
303.70	100.00	7.56	1.09	6.47	7.56	-0.89	76.77	38.78	2.10	0.996
303.80	100.00	7.57	1.09	6.48	7.57	-0.90	76.83	38.97	2.11	0.996
303.90	100.00	7.58	1.09	6.49	7.58	-0.91	76.89	39.17	2.11	0.996
304.00	100.00	7.58	1.09	6.49	7.58	-0.92	76.96	39.37	2.12	0.996
304.10	100.00	7.59	1.09	6.50	7.59	-0.94	77.02	39.57	2.13	0.996
304.20	100.00	7.60	1.08	6.52	7.60	-0.95	77.08	39.77	2.13	0.996
304.30	100.00	7.61	1.08	6.53	7.61	-0.96	77.14	39.97	2.14	0.996
304.40	100.00	7.62	1.08	6.54	7.62	-0.97	77.21	40.16	2.14	0.996
304.50	100.00	7.63	1.08	6.55	7.63	-0.98	77.27	40.36	2.15	0.996
304.60	100.00	7.64	1.08	6.56	7.64	-1.00	77.34	40.56	2.15	0.996
304.70	100.00	7.65	1.08	6.57	7.65	-1.01	77.40	40.76	2.16	0.996
304.80	100.00	7.66	1.08	6.58	7.66	-1.02	77.46	40.96	2.17	0.996
304.90	100.00	7.67	1.08	6.59	7.67	-1.04	77.53	41.17	2.17	0.996
305.00	100.00	7.68	1.08	6.60	7.68	-1.05	77.59	41.37	2.18	0.996
305.10	100.00	7.69	1.08	6.61	7.69	-1.06	77.66	41.57	2.18	0.996
305.20	100.00	7.70	1.08	6.62	7.70	-1.08	77.72	41.77	2.19	0.996
305.30	100.00	7.71	1.08	6.63	7.71	-1.09	77.78	41.97	2.20	0.996
305.40	100.00	7.72	1.08	6.64	7.72	-1.11	77.85	42.17	2.20	0.996
305.50	100.00	7.73	1.08	6.65	7.73	-1.12	77.91	42.38	2.21	0.996
305.60	100.00	7.74	1.08	6.66	7.74	-1.13	77.98	42.58	2.21	0.996
305.70	100.00	7.75	1.08	6.67	7.75	-1.14	78.04	42.78	2.22	0.996
305.80	100.00	7.75	1.08	6.67	7.75	-1.16	78.11	42.99	2.23	0.996
305.90	100.00									



311.00	100.00	8.26	1.32	6.94	8.26	-2.03	81.88	54.09	2.57	0.995
311.10	100.00	8.27	1.33	6.94	8.27	-2.03	81.96	54.31	2.58	0.995
311.20	100.00	8.28	1.34	6.94	8.28	-2.08	82.05	54.53	2.59	0.995
311.30	100.00	8.29	1.35	6.94	8.29	-2.10	82.13	54.76	2.60	0.995
311.40	100.00	8.30	1.36	6.94	8.30	-2.12	82.21	54.99	2.61	0.995
311.50	100.00	8.31	1.37	6.94	8.31	-2.14	82.30	55.21	2.61	0.995
311.60	100.00	8.32	1.38	6.94	8.32	-2.16	82.39	55.44	2.62	0.995
311.70	100.00	8.33	1.39	6.94	8.33	-2.18	82.47	55.66	2.63	0.995
311.80	100.00	8.34	1.40	6.94	8.34	-2.20	82.56	55.89	2.63	0.995
311.90	100.00	8.35	1.41	6.94	8.35	-2.23	82.65	56.12	2.64	0.995
312.00	100.00	8.36	1.42	6.94	8.36	-2.25	82.74	56.35	2.65	0.995
312.10	100.00	8.37	1.43	6.94	8.37	-2.27	82.82	56.58	2.66	0.995
312.20	100.00	8.38	1.45	6.93	8.38	-2.29	82.91	56.81	2.66	0.995
312.30	100.00	8.39	1.46	6.93	8.39	-2.32	83.00	57.04	2.67	0.995
312.40	100.00	8.40	1.47	6.93	8.40	-2.34	83.09	57.27	2.68	0.995
312.50	100.00	8.41	1.48	6.93	8.41	-2.36	83.18	57.50	2.69	0.995
312.60	100.00	8.42	1.49	6.93	8.42	-2.39	83.28	57.73	2.70	0.995
312.70	100.00	8.43	1.51	6.92	8.43	-2.41	83.37	57.96	2.70	0.995
312.80	100.00	8.44	1.52	6.92	8.44	-2.43	83.46	58.19	2.71	0.995
312.90	100.00	8.45	1.53	6.92	8.45	-2.46	83.56	58.42	2.72	0.995
313.00	100.00	8.46	1.55	6.91	8.46	-2.48	83.65	58.65	2.73	0.995
313.10	100.00	8.47	1.56	6.91	8.47	-2.51	83.75	58.89	2.73	0.995
313.20	100.00	8.48	1.57	6.91	8.48	-2.53	83.84	59.12	2.74	0.995
313.30	100.00	8.49	1.59	6.90	8.49	-2.56	83.94	59.35	2.75	0.995
313.40	100.00	8.50	1.60	6.90	8.50	-2.58	84.04	59.59	2.76	0.995
313.50	100.00	8.51	1.62	6.89	8.51	-2.61	84.14	59.82	2.77	0.995
313.60	100.00	8.52	1.63	6.89	8.52	-2.63	84.24	60.06	2.77	0.995
313.70	100.00	8.53	1.64	6.89	8.53	-2.66	84.34	60.29	2.78	0.995
313.80	100.00	8.54	1.66	6.88	8.54	-2.68	84.44	60.53	2.79	0.995
313.90	100.00	8.55	1.67	6.88	8.55	-2.71	84.54	60.77	2.80	0.995
314.00	100.00	8.56	1.69	6.87	8.56	-2.74	84.64	61.00	2.81	0.995
314.10	100.00	8.57	1.70	6.87	8.57	-2.77	84.75	61.24	2.81	0.995
314.20	100.00	8.58	1.72	6.86	8.58	-2.79	84.85	61.48	2.82	0.995
314.30	100.00	8.59	1.74	6.85	8.59	-2.82	84.96	61.72	2.83	0.995
314.40	100.00	8.60	1.75	6.85	8.60	-2.85	85.06	61.95	2.84	0.995
314.50	100.00	8.61	1.77	6.84	8.61	-2.87	85.17	62.19	2.85	0.995
314.60	100.00	8.62	1.78	6.84	8.62	-2.90	85.28	62.43	2.86	0.995
314.70	100.00	8.63	1.80	6.83	8.63	-2.92	85.39	62.67	2.87	0.995
314.80	100.00	8.64	1.82	6.82	8.64	-2.96	85.50	62.91	2.87	0.995
314.90	100.00	8.65	1.83	6.82	8.65	-2.99	85.61	63.15	2.88	0.995
315.00	100.00	8.66	1.84	6.82	8.66	-3.02	85.72	63.39	2.89	0.995
315.10	100.00	8.67	1.87	6.80	8.67	-3.05	85.83	63.64	2.90	0.995
315.20	100.00	8.68	1.89	6.79	8.68	-3.08	85.95	63.88	2.91	0.995
315.30	100.00	8.69	1.90	6.79	8.69	-3.11	86.06	64.12	2.91	0.995
315.40	100.00	8.70	1.92	6.78	8.70	-3.14	86.18	64.36	2.92	0.995
315.50	100.00	8.71	1.94	6.77	8.71	-3.17	86.29	64.60	2.93	0.995
315.60	100.00	8.72	1.96	6.76	8.72	-3.20	86.41	64.85	2.94	0.995
315.70	100.00	8.73	1.98	6.75	8.73	-3.23	86.53	65.09	2.95	0.995
315.80	100.00	8.74	1.99	6.75	8.74	-3.26	86.65	65.33	2.96	0.995
315.90	100.00	8.75	2.03	6.74	8.75	-3.29	86.77	65.58	2.97	0.995
316.00	100.00	8.76	2.03	6.73	8.76	-3.33	86.90	65.82	2.97	0.995
316.10	100.00	8.77	2.05	6.72	8.77	-3.36	87.02	66.07	2.98	0.995
316.20	100.00	8.78	2.07	6.71	8.78	-3.40	87.15	66.31	2.99	0.995
316.30	100.00	8.79	2.09	6.70	8.79	-3.42	87.27	66.56	3.00	0.995
316.40	100.00	8.80	2.11	6.69	8.80	-3.46	87.40	66.81	3.01	0.995
316.50	100.00	8.81	2.13	6.68	8.81	-3.49	87.53	67.05	3.02	0.995
316.60	100.00	8.82	2.15	6.67	8.82	-3.52	87.66	67.30	3.03	0.995
316.70	100.00	8.83	2.17	6.66	8.83	-3.56	87.79	67.54	3.04	0.995
316.80	100.00	8.84	2.19	6.65	8.84	-3.59	87.92	67.79	3.05	0.995
316.90	100.00	8.85	2.21	6.64	8.85	-3.63	88.06	68.04	3.05	0.995
317.00	100.00	8.86	2.23	6.63	8.86	-3.66	88.19	68.29	3.06	0.995
317.10	100.00	8.87	2.25	6.62	8.87	-3.69	88.33	68.53	3.07	0.995
317.20	100.00	8.88	2.27	6.61	8.88	-3.74	88.47	68.78	3.08	0.995
317.30	100.00	8.89	2.29	6.60	8.89	-3.77	88.60	69.03	3.09	0.995
317.40	100.00	8.90	2.31	6.59	8.90	-3.81	88.74	69.28	3.10	0.995
317.50	100.00	8.91	2.34	6.57	8.91	-3.85	88.89	69.53	3.11	0.995
317.60	100.00	8.92	2.36	6.56	8.92	-3.88	89.03	69.78	3.11	0.995
317.70	100.00	8.93	2.38	6.55	8.93	-3.92	89.18	70.03	3.12	0.995
317.80	100.00	8.94	2.40	6.54	8.94	-3.96	89.32	70.28	3.13	0.995
317.90	100.00	8.95	2.42	6.53	8.95	-4.00	89.47	70.53	3.14	0.995
318.00	100.00	8.96	2.44	6.52	8.96	-4.04	89.62	70.78	3.15	0.995
318.10	100.00	8.97	2.47	6.50	8.97	-4.08	89.77	71.03	3.16	0.995
318.20	100.00	8.98	2.49	6.49	8.98	-4.12	89.92	71.28	3.17	0.995
318.30	100.00	8.99	2.53	6.48	8.99	-4.16	90.08	71.53	3.18	0.995
318.40	100.00	9.00	2.53	6.47	9.00	-4.20	90.23	71.78	3.19	0.995
318.50	100.00	9.01	2.56	6.45	9.01	-4.24	90.39	72.03	3.20	0.995
318.60	100.00	9.02	2.58	6.44	9.02	-4.28	90.55	72.28	3.21	0.995
318.70	100.00	9.03	2.60	6.43	9.03	-4.32	90.71	72.53	3.21	0.995
318.80	100.00	9.04	2.63	6.41	9.04	-4.37	90.87	72.78	3.22	0.995
318.90	100.00	9.05	2.65	6.40	9.05	-4.41	91.04	73.03	3.23	0.995
319.00	100.00	9.06	2.67	6.39	9.06	-4.45	91.20	73.29	3.24	0.995
319.10	100.00	9.07	2.69	6.38	9.07	-4.50	91.37	73.54	3.25	0.995
319.20	100.00	9.08	2.72	6.37	9.08	-4.54	91.54	73.79	3.26	0.995
319.30	100.00	9.09	2.74	6.35	9.09	-4.58	91.71	74.04	3.27	0.995
319.40	100.00	9.10	2.77	6.33	9.10	-4.63	91.88	74.29	3.28	0.995
319.50	100.00	9.11	2.79	6.32	9.11	-4.68	92.06	74.54	3.29	0.995
319.60	100.00	9.12	2.81	6.31	9.12	-4.72	92.23	74.79	3.30	0.995
319.70	100.00	9.13	2.84	6.29	9.13	-4.77	92.41	75.04	3.31	0.995
319.80	100.00	9.14	2.86	6.28	9.14	-4.81	92.59	75.29	3.31	0.995
319.90	100.00	9.15	2.89	6.26	9.15	-4.86	92.77	75.55	3.32	0.995
320.00	100.00	9.16	2.91	6.25	9.16	-4.91	92.96	75.80	3.33	0.995
320.10	100.00	9.17	2.94	6.23	9.17	-4.96	93.14	76.05	3.34	0.995
320.20	100.00	9.18	2.96	6.22	9.18	-5.01	93.33	76.30	3.35	0.995
320.30	100.00	9.19	2.98	6.21	9.19	-5.06	93.52	76.55	3.36	0.995
320.40	100.00	9.20	3.01	6.20	9.20	-5.11	93.71	76.80	3.37	0.995
320.50	100.00	9.21	3.03	6.18	9.21	-5.16	93.91	77.05	3.38	0.995
320.60	100.00	9.22	3.06	6.16	9.22	-5.21	94.11	77.30	3.39	0.995
320.70	100.00	9.23	3.08	6.15	9.23	-5.26	94.30	77.55	3.40	0.995
320.80	100.00	9.24	3.11	6.13	9.24	-5.32	94.51	77.80	3.41	0.995
320.90	100.00	9.25	3.13	6.12	9.25	-5.37	94.71	78.05	3.42	0.995
321.00	100.00	9.26	3.16	6.10	9.26	-5.42	94.91	78.30	3.43	0.995
321.10	100.00	9.27	3.18	6.09	9.27	-5.48	95.12	78.54	3.43	0.995
321.20	100.00	9.28	3.21	6.07	9.28	-5.53	95.33	78.79	3.44	0.995
321.30	100.00	9.29	3.24	6.05	9.29	-5.59	95.54	79.04	3.45	0.995
321.40	100.00	9.30	3.26	6.04	9.30	-5.64	95.76	79.29	3.46	0.995
321.50	100.00	9.31	3.29	6.02	9.31	-5.70	95.97	79.53	3.47	0.995
321.60	100.00	9.32	3.31	6.01	9.32	-5.76	96.19	79.78	3.48	0.995
321.70	100.00	9.33	3.34	5.99	9.33	-5.82	96.41	80.02	3.49	0.995
321.80	100.00	9.34	3.36	5.98	9.34	-5.88	96.64	80.27	3.50	0.995
321.90	100.00	9.35	3.39	5.96	9.35	-5.94	96.86	80.51	3.51	0.995
322.00	100.00	9.36	3.42	5.94	9.36	-6.00	97.09	80.76	3.52	0.995
322.10	100.00	9.36	3.44	5.92	9.36	-6.06	97.32	81.00	3.52	0.995
322.20	100.00	9.37								

327.20	100.00	9.81	4.77	5.04	9.81	-10.20	113.04	91.35	3.92	0.995
327.30	100.00	9.82	4.79	5.04	9.82	-10.40	113.40	91.48	3.93	0.995
327.40	100.00	9.83	4.82	5.01	9.83	-10.40	113.83	91.61	3.94	0.995
327.50	100.00	9.83	4.84	4.99	9.83	-10.50	114.23	91.73	3.94	0.995
327.60	100.00	9.84	4.87	4.97	9.84	-10.70	114.64	91.85	3.95	0.995
327.70	100.00	9.85	4.89	4.96	9.85	-10.70	115.05	91.96	3.95	0.995
327.80	100.00	9.86	4.92	4.94	9.86	-10.80	115.46	92.07	3.96	0.995
327.90	100.00	9.86	4.94	4.94	9.86	-11.00	115.88	92.18	3.96	0.995
328.00	100.00	9.87	4.96	4.91	9.87	-11.00	116.29	92.28	3.97	0.995
328.10	100.00	9.88	4.99	4.89	9.88	-11.10	116.72	92.37	3.97	0.995
328.20	100.00	9.89	5.01	4.88	9.89	-11.20	117.14	92.46	3.98	0.995
328.30	100.00	9.89	5.04	4.85	9.89	-11.30	117.57	92.55	3.98	0.995
328.40	100.00	9.90	5.06	4.84	9.90	-11.39	118.01	92.62	3.99	0.995
328.50	100.00	9.91	5.08	4.83	9.91	-11.49	118.44	92.70	3.99	0.995
328.60	100.00	9.91	5.11	4.80	9.91	-11.58	118.88	92.76	4.00	0.995
328.70	100.00	9.92	5.13	4.79	9.92	-11.68	119.33	92.82	4.00	0.995
328.80	100.00	9.93	5.16	4.77	9.93	-11.77	119.77	92.88	4.00	0.995
328.90	100.00	9.94	5.18	4.76	9.94	-11.86	120.22	92.93	4.01	0.995
329.00	100.00	9.94	5.20	4.74	9.94	-11.94	120.67	92.97	4.01	0.995
329.10	100.00	9.95	5.23	4.72	9.95	-12.03	121.13	93.00	4.01	0.995
329.20	100.00	9.96	5.25	4.71	9.96	-12.11	121.59	93.03	4.02	0.995
329.30	100.00	9.96	5.27	4.69	9.96	-12.19	122.05	93.05	4.02	0.995
329.40	100.00	9.97	5.29	4.68	9.97	-12.27	122.52	93.07	4.02	0.995
329.50	100.00	9.98	5.32	4.66	9.98	-12.34	122.98	93.08	4.03	0.995
329.60	100.00	9.98	5.34	4.64	9.98	-12.41	123.45	93.08	4.03	0.995
329.70	100.00	9.99	5.36	4.63	9.99	-12.47	123.93	93.07	4.03	0.995
329.80	100.00	10.00	5.38	4.62	10.00	-12.53	124.40	93.05	4.03	0.995
329.90	100.00	10.00	5.41	4.59	10.00	-12.59	124.88	93.03	4.04	0.995
330.00	100.00	10.01	5.43	4.58	10.01	-12.64	125.36	93.00	4.04	0.995
330.10	100.00	10.01	5.45	4.56	10.01	-12.69	125.84	92.96	4.04	0.995
330.20	100.00	10.02	5.47	4.55	10.02	-12.73	126.33	92.92	4.04	0.995
330.30	100.00	10.03	5.49	4.54	10.03	-12.78	126.82	92.86	4.04	0.995
330.40	100.00	10.03	5.51	4.52	10.03	-12.79	127.31	92.80	4.04	0.995
330.50	100.00	10.04	5.54	4.50	10.04	-12.82	127.80	92.72	4.05	0.995
330.60	100.00	10.04	5.56	4.48	10.04	-12.84	128.29	92.64	4.05	0.995
330.70	100.00	10.05	5.58	4.47	10.05	-12.85	128.78	92.55	4.05	0.995
330.80	100.00	10.06	5.60	4.46	10.06	-12.86	129.28	92.45	4.05	0.995
330.90	100.00	10.06	5.62	4.45	10.06	-12.87	129.78	92.34	4.05	0.995
331.00	100.00	10.07	5.64	4.43	10.07	-12.85	130.28	92.22	4.05	0.995
331.10	100.00	10.07	5.66	4.41	10.07	-12.83	130.78	92.09	4.05	0.995
331.20	100.00	10.08	5.68	4.40	10.08	-12.82	131.28	91.95	4.05	0.995
331.30	100.00	10.08	5.70	4.38	10.08	-12.79	131.78	91.80	4.05	0.995
331.40	100.00	10.09	5.72	4.37	10.09	-12.75	132.28	91.64	4.05	0.995
331.50	100.00	10.10	5.74	4.36	10.10	-12.72	132.79	91.47	4.05	0.995
331.60	100.00	10.10	5.76	4.34	10.10	-12.67	133.29	91.29	4.04	0.995
331.70	100.00	10.11	5.78	4.33	10.11	-12.62	133.79	91.10	4.04	0.995
331.80	100.00	10.11	5.80	4.32	10.11	-12.57	134.29	90.90	4.04	0.995
331.90	100.00	10.12	5.82	4.30	10.12	-12.50	134.80	90.68	4.04	0.995
332.00	100.00	10.12	5.84	4.28	10.12	-12.43	135.30	90.46	4.04	0.995
332.10	100.00	10.13	5.86	4.27	10.13	-12.36	135.80	90.22	4.04	0.995
332.20	100.00	10.13	5.87	4.26	10.13	-12.27	136.30	89.97	4.03	0.995
332.30	100.00	10.14	5.89	4.25	10.14	-12.19	136.80	89.71	4.03	0.995
332.40	100.00	10.14	5.91	4.23	10.14	-12.10	137.29	89.44	4.03	0.995
332.50	100.00	10.14	5.93	4.21	10.14	-12.00	137.79	89.15	4.02	0.995
332.60	100.00	10.15	5.95	4.20	10.15	-11.91	138.28	88.86	4.02	0.995
332.70	100.00	10.15	5.96	4.19	10.15	-11.80	138.77	88.55	4.02	0.995
332.80	100.00	10.16	5.98	4.18	10.16	-11.70	139.26	88.23	4.01	0.995
332.90	100.00	10.16	6.00	4.16	10.16	-11.59	139.74	87.89	4.01	0.995
333.00	100.00	10.17	6.02	4.15	10.17	-11.47	140.22	87.53	4.00	0.995
333.10	100.00	10.17	6.03	4.14	10.17	-11.60	140.70	87.18	4.00	0.995
333.20	100.00	10.17	6.05	4.12	10.17	-11.66	141.17	86.81	3.99	0.995
333.30	100.00	10.18	6.07	4.11	10.18	-11.72	141.64	86.43	3.99	0.995
333.40	100.00	10.18	6.08	4.10	10.18	-11.77	142.10	86.03	3.98	0.995
333.50	100.00	10.19	6.10	4.09	10.19	-11.82	142.56	85.61	3.98	0.995
333.60	100.00	10.19	6.11	4.08	10.19	-11.86	143.02	85.19	3.97	0.995
333.70	100.00	10.19	6.13	4.06	10.19	-11.90	143.46	84.75	3.97	0.995
333.80	100.00	10.20	6.14	4.06	10.20	-11.94	143.91	84.30	3.96	0.995
333.90	100.00	10.20	6.16	4.04	10.20	-11.97	144.34	83.83	3.95	0.995
334.00	100.00	10.20	6.18	4.02	10.20	-11.99	144.77	83.35	3.95	0.995
334.10	100.00	10.21	6.19	4.02	10.21	-12.01	145.19	82.86	3.94	0.995
334.20	100.00	10.21	6.20	4.01	10.21	-12.02	145.60	82.35	3.93	0.995
334.30	100.00	10.21	6.22	3.99	10.21	-12.03	146.01	81.83	3.93	0.995
334.40	100.00	10.22	6.23	3.99	10.22	-12.03	146.40	81.30	3.92	0.995
334.50	100.00	10.22	6.24	3.97	10.22	-12.03	146.79	80.75	3.91	0.995
334.60	100.00	10.22	6.26	3.96	10.22	-12.02	147.17	80.19	3.90	0.995
334.70	100.00	10.23	6.27	3.96	10.23	-12.00	147.54	79.61	3.89	0.995
334.80	100.00	10.23	6.29	3.94	10.23	-11.98	147.89	78.98	3.88	0.995
334.90	100.00	10.23	6.30	3.93	10.23	-11.95	148.24	78.43	3.87	0.995
335.00	100.00	10.24	6.31	3.93	10.24	-11.92	148.57	77.81	3.86	0.995
335.10	100.00	10.24	6.33	3.91	10.24	-11.88	148.90	77.18	3.85	0.995
335.20	100.00	10.24	6.34	3.90	10.24	-11.83	149.21	76.54	3.84	0.995
335.30	100.00	10.24	6.35	3.89	10.24	-11.78	149.51	75.89	3.83	0.995
335.40	100.00	10.25	6.36	3.88	10.25	-11.72	149.79	75.22	3.82	0.995
335.50	100.00	10.25	6.37	3.88	10.25	-11.67	150.06	74.55	3.81	0.995
335.60	100.00	10.25	6.39	3.86	10.25	-11.60	150.32	73.86	3.80	0.995
335.70	100.00	10.25	6.40	3.85	10.25	-11.53	150.56	73.15	3.79	0.995
335.80	100.00	10.25	6.41	3.84	10.25	-11.46	150.79	72.44	3.78	0.995
335.90	100.00	10.26	6.42	3.84	10.26	-11.38	151.00	71.71	3.77	0.995
336.00	100.00	10.26	6.43	3.83	10.26	-11.30	151.20	70.97	3.75	0.995
336.10	100.00	10.26	6.44	3.82	10.26	-11.21	151.38	70.23	3.74	0.995
336.20	100.00	10.26	6.45	3.81	10.26	-11.12	151.54	69.47	3.73	0.995
336.30	100.00	10.26	6.46	3.80	10.26	-11.03	151.69	68.70	3.72	0.995
336.40	100.00	10.27	6.47	3.80	10.27	-10.93	151.82	67.92	3.70	0.995
336.50	100.00	10.27	6.48	3.79	10.27	-10.83	151.93	67.13	3.69	0.995
336.60	100.00	10.27	6.49	3.78	10.27	-10.73	152.02	66.33	3.68	0.995
336.70	100.00	10.27	6.50	3.77	10.27	-10.62	152.09	65.52	3.66	0.995
336.80	100.00	10.27	6.51	3.76	10.27	-10.52	152.14	64.71	3.65	0.995
336.90	100.00	10.27	6.51	3.75	10.27	-10.41	152.18	63.88	3.63	0.995
337.00	100.00	10.27	6.52	3.75	10.27	-10.30	152.19	63.05	3.62	0.995
337.10	100.00	10.27	6.53	3.74	10.27	-10.19	152.18	62.21	3.60	0.995
337.20	100.00	10.28	6.53	3.74	10.28	-10.07	152.15	61.37	3.57	0.995
337.30	100.00	10.28	6.55	3.73	10.28	-9.96	152.10	60.52	3.57	0.995
337.40	100.00	10.28	6.55	3.73	10.28	-9.84	152.03	59.66	3.56	0.995
337.50	100.00	10.28	6.56	3.72	10.28	-9.72	151.93	58.80	3.54	0.995
337.60	100.00	10.28	6.57	3.71	10.28	-9.61	151.82	57.94	3.52	0.995
337.70	100.00	10.28	6.57	3.71	10.28	-9.49	151.68	57.07	3.51	0.995
337.80	100.00	10.28	6.58	3.70	10.28	-9.38	151.51	56.20	3.49	0.995
337.90	100.00	10.28	6.59	3.69	10.28	-9.25	151.33	55.32	3.47	



343.40	100.00	10.24	6.51	3.73	10.24	-5.82	108.60	22.01	2.28	0.995
343.50	100.00	10.24	6.50	3.75	10.24	-5.71	107.44	21.93	2.27	0.995
343.60	100.00	10.24	6.49	3.75	10.24	-5.66	106.29	21.87	2.24	0.995
343.70	100.00	10.24	6.48	3.76	10.24	-5.66	105.13	21.83	2.22	0.995
343.80	100.00	10.24	6.47	3.77	10.24	-5.61	103.97	21.80	2.19	0.995
343.90	100.00	10.24	6.46	3.78	10.24	-5.56	102.81	21.82	2.18	0.995
344.00	100.00	10.24	6.45	3.79	10.24	-5.51	101.65	21.85	2.15	0.995
344.10	100.00	10.23	6.44	3.79	10.23	-5.46	100.49	21.90	2.13	0.995
344.20	100.00	10.23	6.43	3.80	10.23	-5.41	99.32	21.97	2.11	0.995
344.30	100.00	10.23	6.42	3.81	10.23	-5.36	98.16	22.06	2.09	0.995
344.40	100.00	10.23	6.41	3.82	10.23	-5.31	97.01	22.18	2.08	0.995
344.50	100.00	10.23	6.40	3.83	10.23	-5.26	95.85	22.31	2.06	0.995
344.60	100.00	10.23	6.39	3.84	10.23	-5.21	94.69	22.47	2.04	0.995
344.70	100.00	10.23	6.37	3.86	10.23	-5.16	93.54	22.64	2.02	0.995
344.80	100.00	10.23	6.36	3.87	10.23	-5.11	92.39	22.84	2.00	0.995
344.90	100.00	10.23	6.35	3.88	10.23	-5.06	91.25	23.05	1.99	0.995
345.00	100.00	10.23	6.34	3.89	10.23	-5.01	90.11	23.29	1.97	0.995
345.10	100.00	10.23	6.33	3.90	10.23	-4.97	88.97	23.54	1.95	0.995
345.20	100.00	10.23	6.31	3.92	10.23	-4.92	87.84	23.81	1.94	0.995
345.30	100.00	10.23	6.30	3.93	10.23	-4.87	86.71	24.10	1.93	0.995
345.40	100.00	10.23	6.29	3.94	10.23	-4.82	85.59	24.41	1.91	0.995
345.50	100.00	10.23	6.27	3.96	10.23	-4.78	84.47	24.74	1.90	0.995
345.60	100.00	10.23	6.26	3.97	10.23	-4.73	83.36	25.09	1.89	0.995
345.70	100.00	10.23	6.24	3.99	10.23	-4.68	82.26	25.45	1.88	0.995
345.80	100.00	10.23	6.23	4.00	10.23	-4.64	81.16	25.83	1.87	0.995
345.90	100.00	10.23	6.22	4.01	10.23	-4.59	80.07	26.23	1.86	0.995
346.00	100.00	10.23	6.20	4.03	10.23	-4.55	78.99	26.64	1.85	0.995
346.10	100.00	10.23	6.19	4.04	10.23	-4.50	77.91	27.08	1.85	0.995
346.20	100.00	10.23	6.18	4.06	10.23	-4.47	76.84	27.54	1.84	0.995
346.30	100.00	10.23	6.16	4.07	10.23	-4.42	75.78	27.98	1.84	0.995
346.40	100.00	10.23	6.14	4.09	10.23	-4.37	74.73	28.46	1.84	0.995
346.50	100.00	10.23	6.12	4.11	10.23	-4.33	73.68	28.95	1.83	0.995
346.60	100.00	10.23	6.11	4.12	10.23	-4.29	72.65	29.46	1.84	0.995
346.70	100.00	10.23	6.09	4.14	10.23	-4.25	71.62	29.98	1.84	0.995
346.80	100.00	10.23	6.08	4.17	10.23	-4.21	70.60	30.51	1.84	0.995
346.90	100.00	10.23	6.06	4.17	10.23	-4.16	69.59	31.06	1.85	0.995
347.00	100.00	10.23	6.04	4.19	10.23	-4.12	68.59	31.62	1.85	0.995
347.10	100.00	10.24	6.03	4.21	10.24	-4.08	67.59	32.18	1.85	0.995
347.20	100.00	10.24	6.01	4.23	10.24	-4.05	66.61	32.79	1.87	0.995
347.30	100.00	10.24	5.99	4.25	10.24	-4.01	65.63	33.39	1.88	0.995
347.40	100.00	10.24	5.97	4.27	10.24	-3.97	64.67	34.07	1.90	0.995
347.50	100.00	10.24	5.96	4.28	10.24	-3.93	63.71	34.63	1.91	0.995
347.60	100.00	10.25	5.94	4.31	10.25	-3.90	62.76	35.26	1.93	0.995
347.70	100.00	10.25	5.92	4.33	10.25	-3.86	61.82	35.91	1.95	0.995
347.80	100.00	10.25	5.90	4.35	10.25	-3.82	60.89	36.57	1.97	0.995
347.90	100.00	10.25	5.89	4.36	10.25	-3.79	59.98	37.24	1.99	0.995
348.00	100.00	10.26	5.87	4.38	10.26	-3.75	59.05	37.92	2.02	0.995
348.10	100.00	10.26	5.85	4.41	10.26	-3.72	58.16	38.61	2.05	0.995
348.20	100.00	10.26	5.83	4.43	10.26	-3.69	57.27	39.31	2.08	0.995
348.30	100.00	10.27	5.82	4.45	10.27	-3.65	56.42	40.03	2.11	0.995
348.40	100.00	10.27	5.80	4.47	10.27	-3.62	55.52	40.73	2.14	0.995
348.50	100.00	10.27	5.78	4.49	10.27	-3.59	54.66	41.46	2.18	0.995
348.60	100.00	10.28	5.76	4.52	10.28	-3.56	53.82	42.21	2.22	0.995
348.70	100.00	10.28	5.74	4.54	10.28	-3.53	52.97	42.95	2.26	0.995
348.80	100.00	10.29	5.72	4.57	10.29	-3.60	52.13	43.70	2.30	0.995
348.90	100.00	10.29	5.71	4.58	10.29	-3.62	51.31	44.46	2.34	0.995
349.00	100.00	10.30	5.69	4.61	10.30	-3.61	50.50	45.23	2.39	0.995
349.10	100.00	10.30	5.67	4.63	10.30	-3.62	49.69	46.01	2.44	0.995
349.20	100.00	10.31	5.65	4.65	10.31	-3.63	48.89	46.80	2.49	0.995
349.30	100.00	10.31	5.63	4.68	10.31	-3.63	48.11	47.59	2.55	0.995
349.40	100.00	10.32	5.62	4.70	10.32	-3.64	47.34	48.39	2.61	0.995
349.50	100.00	10.33	5.60	4.73	10.33	-3.65	46.57	49.27	2.67	0.995
349.60	100.00	10.33	5.58	4.75	10.33	-3.65	45.81	50.02	2.73	0.995
349.70	100.00	10.34	5.56	4.78	10.34	-3.68	45.07	50.84	2.80	0.994
349.80	100.00	10.35	5.55	4.80	10.35	-3.70	44.32	51.67	2.87	0.994
349.90	100.00	10.35	5.53	4.82	10.35	-3.70	43.60	52.50	2.94	0.994
350.00	100.00	10.36	5.51	4.85	10.36	-3.85	42.88	53.34	3.02	0.994
350.10	100.00	10.37	5.49	4.87	10.37	-3.97	42.17	54.19	3.11	0.994
350.20	100.00	10.38	5.48	4.90	10.38	-3.97	41.47	55.04	3.18	0.994
350.30	100.00	10.38	5.46	4.92	10.38	-4.03	40.78	55.90	3.27	0.994
350.40	100.00	10.39	5.45	4.94	10.39	-4.03	40.09	56.76	3.36	0.994
350.50	100.00	10.40	5.43	4.97	10.40	-4.16	39.42	57.63	3.45	0.994
350.60	100.00	10.41	5.42	4.99	10.41	-4.23	38.75	58.51	3.55	0.994
350.70	100.00	10.42	5.40	5.02	10.42	-4.36	38.09	59.39	3.64	0.994
350.80	100.00	10.43	5.39	5.04	10.43	-4.36	37.45	60.27	3.76	0.994
350.90	100.00	10.44	5.37	5.07	10.44	-4.43	36.81	61.16	3.87	0.994
351.00	100.00	10.45	5.36	5.09	10.45	-4.45	36.18	62.06	3.98	0.994
351.10	100.00	10.46	5.35	5.11	10.46	-4.57	35.55	62.95	4.10	0.994
351.20	100.00	10.47	5.33	5.14	10.47	-4.64	34.94	63.86	4.23	0.994
351.30	100.00	10.48	5.32	5.16	10.48	-4.72	34.32	64.77	4.36	0.994
351.40	100.00	10.49	5.31	5.18	10.49	-4.79	33.74	65.68	4.49	0.994
351.50	100.00	10.51	5.30	5.21	10.51	-4.87	33.15	66.59	4.63	0.994
351.60	100.00	10.52	5.29	5.23	10.52	-4.94	32.57	67.52	4.78	0.994
351.70	100.00	10.53	5.28	5.25	10.53	-5.02	32.00	68.44	4.93	0.994
351.80	100.00	10.54	5.27	5.27	10.54	-5.10	31.43	69.37	5.08	0.994
351.90	100.00	10.56	5.26	5.29	10.56	-5.17	30.87	70.30	5.25	0.994
352.00	100.00	10.57	5.26	5.31	10.57	-5.27	30.33	71.23	5.42	0.994
352.10	100.00	10.59	5.25	5.33	10.59	-5.35	29.79	72.17	5.59	0.994
352.20	100.00	10.60	5.24	5.35	10.60	-5.44	29.26	73.12	5.78	0.994
352.30	100.00	10.62	5.23	5.37	10.62	-5.53	28.73	74.06	5.97	0.994
352.40	100.00	10.63	5.25	5.38	10.63	-5.62	28.21	75.01	6.16	0.994
352.50	100.00	10.65	5.25	5.40	10.65	-5.70	27.69	75.96	6.37	0.994
352.60	100.00	10.66	5.25	5.41	10.66	-5.81	27.20	76.92	6.58	0.994
352.70	100.00	10.68	5.25	5.43	10.68	-5.90	26.71	77.88	6.80	0.994
352.80	100.00	10.69	5.25	5.44	10.69	-5.99	26.22	78.84	7.03	0.994
352.90	100.00	10.71	5.25	5.46	10.71	-6.10	25.74	79.81	7.27	0.994
353.00	100.00	10.73	5.26	5.47	10.73	-6.20	25.27	80.78	7.52	0.994
353.10	100.00	10.75	5.27	5.48	10.75	-6.31	24.80	81.75	7.77	0.994
353.20	100.00	10.77	5.28	5.49	10.77	-6.41	24.34	82.72	8.04	0.994
353.30	100.00	10.78	5.29	5.49	10.78	-6.52	23.89	83.70	8.31	0.994
353.40	100.00	10.80	5.30	5.50	10.80	-6.62	23.45	84.68	8.58	0.994
353.50	100.00	10.82	5.31	5.51	10.82	-6.74	23.01	85.66	8.90	0.994
353.60	100.00	10.84	5.33	5.51	10.84	-6.85	22.58	86.65	9.21	0.994
353.70	100.00	10.86	5.34	5.52	10.86	-6.97	22.16	87.63	9.53	0.994
353.80	100.00	10.88	5.36	5.52	10.88	-7.08	21.75	88.63	9.86	0.994
353.90	100.00	10.90	5.38	5.52	10.90	-7.20	21.34	89.62	10.20	0.994
354.00	100.00	10.92	5.41	5.52	10.92	-7.32	20.94	90.62	10.54	0.994
354.10	100.00	10.95	5.43	5.52	10.95	-7.44	20.54	91.61	10.93	0.994
354.20	100.00	10.97	5.46	5.51	10.97	-7.56	20.15	92.62	11.31	0.994
354.30	100.00	10.99	5.49	5.49	10.99	-7.69	19.77	93.62	11.70	0.994
354.40	10									

359.60	100.00	11.97	9.72	2.25	11.97	-17.61	8.33	149.93	60.09	0.994
359.70	100.00	11.96	9.71	2.15	11.96	-18.09	8.23	151.04	61.30	0.994
359.80	100.00	11.95	9.69	2.06	11.95	-14.59	8.23	152.16	62.49	0.994
359.90	100.00	11.93	9.98	1.95	11.93	-13.37	8.19	153.29	63.65	0.994
360.00	100.00	11.91	10.05	1.86	11.91	-13.37	8.15	154.79	64.79	0.994
360.10	100.00	11.89	10.13	1.76	11.89	-11.63	8.12	155.54	65.89	0.994
360.20	100.00	11.86	10.21	1.65	11.86	-11.25	8.10	156.66	66.96	0.994
360.30	100.00	11.84	10.28	1.56	11.84	-10.86	8.08	157.79	67.99	0.994
360.40	100.00	11.81	10.35	1.46	11.81	-10.45	8.07	158.92	68.98	0.994
360.50	100.00	11.78	10.42	1.36	11.78	-10.04	8.06	160.06	69.93	0.994
360.60	100.00	11.74	10.48	1.26	11.74	-9.64	8.07	161.19	70.84	0.994
360.70	100.00	11.70	10.54	1.16	11.70	-9.34	8.07	162.33	71.68	0.994
360.80	100.00	11.66	10.60	1.06	11.66	-9.00	8.08	163.47	72.44	0.994
360.90	100.00	11.62	10.65	0.97	11.62	-8.62	8.10	164.61	73.24	0.994
361.00	100.00	11.57	10.70	0.87	11.57	-8.22	8.12	165.75	73.98	0.995
361.10	100.00	11.53	10.75	0.78	11.53	-7.81	8.16	166.89	74.58	0.995
361.20	100.00	11.47	10.80	0.67	11.47	-7.39	8.19	168.04	75.17	0.995
361.30	100.00	11.42	10.84	0.58	11.42	-6.98	8.24	169.19	75.70	0.995
361.40	100.00	11.36	10.88	0.48	11.36	-6.65	8.29	170.34	76.17	0.995
361.50	100.00	11.30	10.91	0.39	11.30	-6.34	8.35	171.49	76.59	0.995
361.60	100.00	11.24	10.95	0.29	11.24	-6.03	8.41	172.64	76.95	0.995
361.70	100.00	11.18	10.98	0.20	11.18	-5.74	8.48	173.80	77.25	0.995
361.80	100.00	11.11	11.00	0.11	11.11	-5.42	8.56	174.95	77.49	0.995
361.90	100.00	11.05	11.03	0.02	11.05	-5.95	8.65	176.11	77.68	0.995
362.00	100.00	10.97	11.05	-0.08	10.97	-6.07	8.74	177.27	77.81	0.995
362.10	100.00	10.90	11.07	-0.17	10.90	-6.17	8.84	178.43	77.89	0.995
362.20	100.00	10.83	11.08	-0.25	10.83	-6.46	8.94	179.60	77.91	0.995
362.30	100.00	10.75	11.10	-0.35	10.75	-6.75	9.05	180.76	77.88	0.996
362.40	100.00	10.67	11.11	-0.44	10.67	-7.01	9.11	181.93	77.80	0.996
362.50	100.00	10.59	11.12	-0.53	10.59	-7.26	9.30	183.10	77.68	0.996
362.60	100.00	10.51	11.12	-0.61	10.51	-7.47	9.43	184.26	77.50	0.996
362.70	100.00	10.43	11.12	-0.69	10.43	-7.65	9.57	185.47	77.24	0.996
362.80	100.00	10.34	11.12	-0.78	10.34	-7.79	9.71	186.61	77.03	0.996
362.90	100.00	10.25	11.12	-0.87	10.25	-7.89	9.87	187.78	76.73	0.996
363.00	100.00	10.17	11.12	-0.95	10.17	-7.95	10.03	188.96	76.39	0.996
363.10	100.00	10.08	11.11	-1.03	10.08	-7.97	10.19	190.13	76.02	0.996
363.20	100.00	9.99	11.10	-1.11	9.99	-7.94	10.37	191.31	75.61	0.996
363.30	100.00	9.91	11.09	-1.19	9.91	-7.88	10.58	192.48	75.17	0.996
363.40	100.00	9.80	11.08	-1.28	9.80	-7.78	10.74	193.67	74.70	0.996
363.50	100.00	9.71	11.07	-1.36	9.71	-7.64	10.94	194.85	74.21	0.996
363.60	100.00	9.62	11.05	-1.45	9.62	-7.43	11.14	196.03	73.69	0.996
363.70	100.00	9.52	11.04	-1.52	9.52	-7.30	11.35	197.22	73.14	0.997
363.80	100.00	9.43	11.02	-1.59	9.43	-7.10	11.57	198.40	72.58	0.997
363.90	100.00	9.33	11.00	-1.67	9.33	-6.85	11.80	199.59	71.99	0.997
364.00	100.00	9.24	10.98	-1.74	9.24	-6.66	12.03	200.77	71.40	0.997
364.10	100.00	9.14	10.96	-1.82	9.14	-6.43	12.27	201.96	70.78	0.997
364.20	100.00	9.05	10.95	-1.88	9.05	-6.19	12.52	203.15	70.15	0.997
364.30	100.00	8.95	10.91	-1.96	8.95	-5.95	12.78	204.34	69.51	0.997
364.40	100.00	8.85	10.88	-2.03	8.85	-5.70	13.04	205.53	68.86	0.997
364.50	100.00	8.76	10.86	-2.10	8.76	-5.47	13.31	206.72	68.20	0.997
364.60	100.00	8.66	10.83	-2.17	8.66	-5.23	13.59	207.91	67.54	0.997
364.70	100.00	8.56	10.80	-2.24	8.56	-4.99	13.88	209.10	66.87	0.997
364.80	100.00	8.47	10.77	-2.31	8.47	-4.77	14.18	210.29	66.19	0.997
364.90	100.00	8.37	10.74	-2.37	8.37	-4.66	14.48	211.49	65.51	0.997
365.00	100.00	8.28	10.71	-2.43	8.28	-4.56	14.79	212.68	64.83	0.997
365.10	100.00	8.18	10.68	-2.50	8.18	-4.46	15.11	213.86	64.14	0.997
365.20	100.00	8.09	10.64	-2.55	8.09	-4.36	15.44	215.07	63.46	0.997
365.30	100.00	7.99	10.61	-2.62	7.99	-4.27	15.77	216.27	62.78	0.997
365.40	100.00	7.90	10.58	-2.68	7.90	-4.18	16.10	217.46	62.09	0.997
365.50	100.00	7.80	10.54	-2.74	7.80	-4.09	16.47	218.66	61.41	0.997
365.60	100.00	7.71	10.51	-2.80	7.71	-4.00	16.83	219.86	60.74	0.997
365.70	100.00	7.62	10.48	-2.85	7.62	-3.91	17.20	221.05	60.06	0.997
365.80	100.00	7.52	10.44	-2.92	7.52	-3.83	17.57	222.25	59.39	0.997
365.90	100.00	7.43	10.41	-2.98	7.43	-3.75	17.96	223.44	58.73	0.997
366.00	100.00	7.33	10.37	-3.03	7.33	-3.67	18.33	224.64	58.07	0.997
366.10	100.00	7.25	10.33	-3.08	7.25	-3.59	18.75	225.83	57.41	0.998
366.20	100.00	7.16	10.30	-3.14	7.16	-3.52	19.16	227.03	56.76	0.998
366.30	100.00	7.07	10.26	-3.19	7.07	-3.45	19.58	228.22	56.12	0.998
366.40	100.00	6.99	10.22	-3.23	6.99	-3.38	20.01	229.42	55.49	0.998
366.50	100.00	6.90	10.19	-3.29	6.90	-3.31	20.45	230.61	54.86	0.998
366.60	100.00	6.81	10.15	-3.34	6.81	-3.24	20.89	231.84	54.24	0.998
366.70	100.00	6.72	10.11	-3.39	6.72	-3.18	21.34	233.09	53.62	0.998
366.80	100.00	6.64	10.08	-3.44	6.64	-3.12	21.80	234.38	53.01	0.998
366.90	100.00	6.56	10.04	-3.48	6.56	-3.06	22.27	235.66	52.41	0.998
367.00	100.00	6.47	10.00	-3.53	6.47	-3.00	22.75	236.95	51.82	0.998
367.10	100.00	6.39	9.96	-3.57	6.39	-2.95	23.24	238.25	51.24	0.998
367.20	100.00	6.31	9.93	-3.62	6.31	-2.90	23.74	239.59	50.69	0.998
367.30	100.00	6.23	9.89	-3.66	6.23	-2.84	24.24	240.93	50.09	0.998
367.40	100.00	6.14	9.85	-3.71	6.14	-2.79	24.76	242.31	49.53	0.998
367.50	100.00	6.07	9.82	-3.75	6.07	-2.75	25.28	243.74	48.98	0.998
367.60	100.00	5.99	9.78	-3.79	5.99	-2.69	25.81	245.68	48.44	0.998
367.70	100.00	5.91	9.74	-3.83	5.91	-2.64	26.36	244.86	47.90	0.998
367.80	100.00	5.83	9.70	-3.87	5.83	-2.61	26.81	246.03	47.37	0.998
367.90	100.00	5.75	9.67	-3.92	5.75	-2.56	27.46	247.21	46.85	0.998
368.00	100.00	5.68	9.63	-3.95	5.68	-2.51	28.03	248.39	46.34	0.998
368.10	100.00	5.60	9.59	-3.99	5.60	-2.47	28.61	249.57	45.84	0.998
368.20	100.00	5.53	9.56	-4.03	5.53	-2.43	29.20	250.73	45.34	0.998
368.30	100.00	5.46	9.52	-4.06	5.46	-2.40	29.79	251.90	44.85	0.998
368.40	100.00	5.39	9.48	-4.10	5.39	-2.36	30.39	253.06	44.37	0.998
368.50	100.00	5.31	9.45	-4.14	5.31	-2.32	31.01	254.23	43.90	0.998
368.60	100.00	5.24	9.41	-4.17	5.24	-2.29	31.63	255.39	43.43	0.998
368.70	100.00	5.17	9.37	-4.20	5.17	-2.26	32.26	256.55	42.97	0.998
368.80	100.00	5.10	9.34	-4.24	5.10	-2.25	32.90	257.70	42.52	0.998
368.90	100.00	5.04	9.30	-4.26	5.04	-2.24	33.55	258.86	42.08	0.998
369.00	100.00	4.97	9.26	-4.29	4.97	-2.23	34.21	260.01	41.64	0.998
369.10	100.00	4.90	9.23	-4.33	4.90	-2.24	34.88	261.16	41.22	0.998
369.20	100.00	4.84	9.19	-4.35	4.84	-2.23	35.55	262.30	40.79	0.998
369.30	100.00	4.77	9.16	-4.39	4.77	-2.23	36.24	263.44	40.38	0.998
369.40	100.00	4.71	9.12	-4.41	4.71	-2.22	36.94	264.58	39.97	0.998
369.50	100.00	4.64	9.09	-4.45	4.64	-2.21	37.64	265.71	39.57	0.998
369.60	100.00	4.58	9.05	-4.47	4.58	-2.21	38.35	266.84	39.18	0.998
369.70	100.00	4.52	9.02	-4.50	4.52	-2.20	39.08	267.97	38.79	0.998
369.80	100.00	4.45	8.98	-4.53	4.45	-2.20	39.81	269.09	38.41	0.998
369.90	100.00	4.39	8.95	-4.56	4.39	-2.19	40.55	270.21	38.02	0.998
370.00	100.00	4.33	8.91	-4.58	4.33	-2.19	41.30	271.33	37.66	0.998
370.10	100.00	4.27	8.88	-4.61	4.27	-2.18	42.06	272.44	37.30	0.998
370.20	100.00	4.22	8.85	-4.63	4.22	-2.18	42.82	273.54	36.94	0.998
370.30	100.00	4.16	8.81	-4.65	4.16	-2.17	43.60	274.65	36.59	0.998
370.40	100.00</									

375.80	100.00	1.74	7.22	-5.48	4.65	-2.04	98.61	325.09	23.87	0.998
375.90	100.00	1.70	7.19	-5.47	4.65	-2.04	99.79	325.76	23.77	0.998
376.00	100.00	1.67	7.17	-5.50	4.65	-2.04	100.97	326.43	23.58	0.998
376.10	100.00	1.63	7.14	-5.51	4.66	-2.04	102.16	327.09	23.46	0.998
376.20	100.00	1.60	7.12	-5.52	4.66	-2.04	103.34	327.74	23.29	0.998
376.30	100.00	1.57	7.10	-5.53	4.66	-2.04	104.54	328.37	23.16	0.998
376.40	100.00	1.54	7.07	-5.53	4.66	-2.05	105.74	329.00	23.02	0.998
376.50	100.00	1.50	7.05	-5.54	4.66	-2.05	106.94	329.61	22.88	0.998
376.60	100.00	1.47	7.02	-5.55	4.66	-2.05	108.14	330.22	22.75	0.998
376.70	100.00	1.44	7.00	-5.56	4.66	-2.05	109.34	330.81	22.62	0.998
376.80	100.00	1.41	6.98	-5.57	4.67	-2.05	110.56	331.40	22.49	0.998
376.90	100.00	1.38	6.95	-5.57	4.67	-2.06	111.77	331.96	22.36	0.998
377.00	100.00	1.34	6.93	-5.59	4.67	-2.06	112.98	332.53	22.23	0.998
377.10	100.00	1.31	6.91	-5.60	4.67	-2.06	114.20	333.08	22.11	0.998
377.20	100.00	1.28	6.89	-5.61	4.67	-2.07	115.42	333.62	21.98	0.998
377.30	100.00	1.25	6.86	-5.61	4.67	-2.07	116.64	334.15	21.86	0.998
377.40	100.00	1.22	6.84	-5.62	4.67	-2.07	117.87	334.67	21.74	0.998
377.50	100.00	1.19	6.82	-5.63	4.67	-2.07	119.09	335.18	21.62	0.998
377.60	100.00	1.16	6.80	-5.64	4.68	-2.08	120.32	335.68	21.51	0.998
377.70	100.00	1.13	6.77	-5.64	4.68	-2.08	121.55	336.17	21.39	0.998
377.80	100.00	1.10	6.75	-5.65	4.68	-2.08	122.78	336.64	21.28	0.998
377.90	100.00	1.07	6.73	-5.66	4.69	-2.09	124.01	337.11	21.16	0.998
378.00	100.00	1.04	6.71	-5.67	4.69	-2.09	125.25	337.57	21.05	0.998
378.10	100.00	1.01	6.69	-5.68	4.69	-2.10	126.48	338.01	20.94	0.998
378.20	100.00	0.98	6.66	-5.68	4.70	-2.10	127.72	338.45	20.84	0.998
378.30	100.00	0.95	6.64	-5.69	4.70	-2.10	128.95	338.87	20.73	0.998
378.40	100.00	0.93	6.62	-5.69	4.70	-2.11	130.19	339.29	20.62	0.998
378.50	100.00	0.90	6.60	-5.70	4.70	-2.11	131.43	339.69	20.52	0.998
378.60	100.00	0.87	6.58	-5.71	4.71	-2.12	132.66	340.08	20.42	0.998
378.70	100.00	0.84	6.56	-5.72	4.71	-2.12	133.90	340.46	20.32	0.998
378.80	100.00	0.81	6.54	-5.73	4.71	-2.13	135.14	340.83	20.22	0.998
378.90	100.00	0.78	6.52	-5.74	4.72	-2.13	136.38	341.19	20.12	0.998
379.00	100.00	0.76	6.50	-5.74	4.72	-2.13	137.61	341.54	20.02	0.998
379.10	100.00	0.73	6.48	-5.75	4.72	-2.14	138.85	341.88	19.92	0.998
379.20	100.00	0.70	6.46	-5.76	4.73	-2.14	140.09	342.21	19.82	0.998
379.30	100.00	0.67	6.44	-5.77	4.73	-2.15	141.32	342.53	19.73	0.998
379.40	100.00	0.65	6.42	-5.77	4.73	-2.15	142.56	342.84	19.64	0.998
379.50	100.00	0.62	6.40	-5.78	4.73	-2.16	143.79	343.14	19.55	0.998
379.60	100.00	0.59	6.38	-5.79	4.74	-2.16	145.02	343.42	19.46	0.998
379.70	100.00	0.56	6.36	-5.80	4.74	-2.17	146.25	343.70	19.37	0.998
379.80	100.00	0.54	6.34	-5.81	4.74	-2.18	147.48	344.00	19.28	0.998
379.90	100.00	0.51	6.32	-5.81	4.74	-2.18	148.71	344.22	19.19	0.998
380.00	100.00	0.48	6.30	-5.82	4.75	-2.18	149.94	344.47	19.10	0.998
380.10	100.00	0.46	6.28	-5.83	4.75	-2.19	151.16	344.71	19.02	0.998
380.20	100.00	0.43	6.26	-5.83	4.75	-2.20	152.38	344.94	18.94	0.998
380.30	100.00	0.40	6.24	-5.84	4.75	-2.20	153.60	345.15	18.86	0.998
380.40	100.00	0.38	6.22	-5.85	4.76	-2.21	154.82	345.36	18.77	0.998
380.50	100.00	0.35	6.20	-5.85	4.76	-2.21	156.04	345.56	18.69	0.998
380.60	100.00	0.33	6.18	-5.85	4.76	-2.22	157.25	345.74	18.61	0.998
380.70	100.00	0.30	6.16	-5.87	4.76	-2.23	158.46	345.92	18.53	0.998
380.80	100.00	0.27	6.14	-5.87	4.76	-2.23	159.67	346.09	18.46	0.998
380.90	100.00	0.25	6.13	-5.88	4.77	-2.24	160.88	346.25	18.38	0.998
381.00	100.00	0.22	6.11	-5.89	4.77	-2.24	162.08	346.40	18.30	0.998
381.10	100.00	0.20	6.09	-5.89	4.77	-2.25	163.28	346.54	18.23	0.998
381.20	100.00	0.17	6.07	-5.90	4.77	-2.25	164.47	346.67	18.15	0.998
381.30	100.00	0.15	6.05	-5.90	4.78	-2.25	165.67	346.79	18.08	0.998
381.40	100.00	0.12	6.03	-5.91	4.78	-2.27	166.86	346.90	18.01	0.998
381.50	100.00	0.10	6.02	-5.92	4.78	-2.27	168.04	347.01	17.93	0.998
381.60	100.00	0.07	6.00	-5.93	4.78	-2.27	169.22	347.10	17.86	0.998
381.70	100.00	0.05	5.98	-5.93	4.78	-2.29	170.40	347.19	17.79	0.998
381.80	100.00	0.02	5.96	-5.94	4.79	-2.29	171.58	347.26	17.72	0.998
381.90	100.00	-0.00	5.95	-5.95	4.79	-2.30	172.75	347.33	17.65	0.998
382.00	100.00	-0.03	5.93	-5.96	4.79	-2.31	173.91	347.39	17.57	0.998
382.10	100.00	-0.05	5.91	-5.96	4.79	-2.31	175.08	347.44	17.52	0.998
382.20	100.00	-0.08	5.89	-5.97	4.79	-2.32	176.25	347.48	17.45	0.998
382.30	100.00	-0.10	5.88	-5.98	4.80	-2.33	177.39	347.52	17.39	0.998
382.40	100.00	-0.13	5.86	-5.99	4.80	-2.33	178.54	347.54	17.32	0.998
382.50	100.00	-0.15	5.84	-5.99	4.80	-2.33	179.68	347.56	17.26	0.998
382.60	100.00	-0.18	5.83	-6.01	4.80	-2.35	180.82	347.57	17.20	0.998
382.70	100.00	-0.20	5.81	-6.01	4.80	-2.35	181.96	347.57	17.13	0.998
382.80	100.00	-0.22	5.79	-6.02	4.81	-2.36	183.09	347.57	17.07	0.998
382.90	100.00	-0.25	5.78	-6.03	4.81	-2.37	184.21	347.55	17.01	0.998
383.00	100.00	-0.27	5.76	-6.03	4.81	-2.38	185.33	347.53	16.95	0.998
383.10	100.00	-0.30	5.74	-6.04	4.81	-2.38	186.45	347.50	16.89	0.998
383.20	100.00	-0.32	5.73	-6.05	4.81	-2.39	187.56	347.47	16.83	0.998
383.30	100.00	-0.34	5.71	-6.05	4.81	-2.40	188.67	347.42	16.77	0.998
383.40	100.00	-0.37	5.69	-6.07	4.82	-2.41	189.77	347.37	16.72	0.998
383.50	100.00	-0.39	5.68	-6.07	4.82	-2.41	190.86	347.31	16.66	0.998
383.60	100.00	-0.42	5.66	-6.08	4.82	-2.42	191.95	347.25	16.60	0.998
383.70	100.00	-0.44	5.65	-6.09	4.82	-2.42	193.03	347.18	16.55	0.998
383.80	100.00	-0.46	5.63	-6.09	4.82	-2.44	194.12	347.10	16.49	0.998
383.90	100.00	-0.49	5.62	-6.11	4.82	-2.44	195.19	347.01	16.44	0.998
384.00	100.00	-0.51	5.60	-6.11	4.83	-2.45	196.26	346.92	16.38	0.998
384.10	100.00	-0.53	5.58	-6.11	4.83	-2.47	197.32	346.82	16.33	0.998
384.20	100.00	-0.56	5.57	-6.13	4.83	-2.47	198.38	346.72	16.28	0.998
384.30	100.00	-0.58	5.55	-6.13	4.83	-2.48	199.43	346.61	16.23	0.998
384.40	100.00	-0.60	5.54	-6.14	4.83	-2.48	200.48	346.49	16.17	0.998
384.50	100.00	-0.63	5.52	-6.15	4.83	-2.49	201.51	346.37	16.12	0.998
384.60	100.00	-0.65	5.51	-6.16	4.84	-2.49	202.55	346.24	16.07	0.998
384.70	100.00	-0.67	5.49	-6.16	4.84	-2.51	203.58	346.10	16.02	0.998
384.80	100.00	-0.70	5.48	-6.18	4.84	-2.52	204.60	345.96	15.97	0.998
384.90	100.00	-0.72	5.46	-6.18	4.84	-2.53	205.61	345.82	15.92	0.998
385.00	100.00	-0.74	5.45	-6.19	4.84	-2.53	206.62	345.66	15.88	0.998
385.10	100.00	-0.77	5.43	-6.20	4.84	-2.54	207.63	345.51	15.83	0.998
385.20	100.00	-0.79	5.42	-6.21	4.84	-2.55	208.62	345.44	15.78	0.998
385.30	100.00	-0.81	5.41	-6.22	4.85	-2.56	209.62	345.35	15.74	0.998
385.40	100.00	-0.83	5.39	-6.22	4.85	-2.57	210.60	345.00	15.69	0.998
385.50	100.00	-0.86	5.38	-6.24	4.85	-2.57	211.58	344.83	15.64	0.998
385.60	100.00	-0.88	5.36	-6.24	4.85	-2.58	212.55	344.64	15.60	0.998
385.70	100.00	-0.90	5.35	-6.25	4.85	-2.59	213.52	344.46	15.55	0.998
385.80	100.00	-0.92	5.33	-6.25	4.85	-2.59	214.48	344.27	15.50	0.998
385.90	100.00	-0.95	5.32	-6.27	4.85	-2.61	215.44	344.07	15.47	0.998
386.00	100.00	-0.97	5.31	-6.28	4.85	-2.62	216.38	343.87	15.42	0.998
386.10	100.00	-1.00	5.29	-6.28	4.86	-2.63	217.32	343.66	15.38	0.998
386.20	100.00	-1.02	5.28	-6.30	4.86	-2.63	218.26	343.46	15.34	0.998
386.30	100.00	-1.04	5.27	-6.31	4.86	-2.64	219.19	343.24	15.30	0.998
386.40	100.00	-1.06	5.25	-6.32	4.86	-2.65	220.11	343.02	15.26	0.998
386.50	100.00	-1.08	5.24	-6.32	4.86	-2.66	221.03	342.80	15.21	0.998
386.60	100.00	-1.11								

392.00	100.00	-2.29	4.61	-6.90	4.91	-3.35	262.09	327.24	13.53	0.998
392.10	100.00	-2.31	4.60	-6.91	4.91	-3.36	262.68	326.94	13.51	0.998
392.20	100.00	-2.33	4.59	-6.92	4.91	-3.37	263.27	326.64	13.49	0.998
392.30	100.00	-2.35	4.58	-6.93	4.91	-3.39	263.85	326.33	13.46	0.998
392.40	100.00	-2.37	4.57	-6.94	4.91	-3.40	264.42	326.03	13.44	0.998
392.50	100.00	-2.40	4.56	-6.96	4.91	-3.41	265.00	325.73	13.42	0.998
392.60	100.00	-2.42	4.55	-6.97	4.91	-3.43	265.56	325.42	13.40	0.998
392.70	100.00	-2.44	4.54	-6.98	4.91	-3.44	266.12	325.12	13.38	0.998
392.80	100.00	-2.46	4.54	-7.00	4.91	-3.46	266.68	324.82	13.36	0.998
392.90	100.00	-2.48	4.53	-7.01	4.92	-3.47	267.24	324.52	13.34	0.998
393.00	100.00	-2.50	4.52	-7.02	4.92	-3.48	267.78	324.22	13.32	0.998
393.10	100.00	-2.52	4.51	-7.03	4.92	-3.50	268.33	323.93	13.30	0.998
393.20	100.00	-2.55	4.50	-7.05	4.92	-3.51	268.87	323.63	13.28	0.998
393.30	100.00	-2.57	4.49	-7.06	4.92	-3.53	269.40	323.33	13.26	0.998
393.40	100.00	-2.59	4.48	-7.07	4.93	-3.54	269.93	323.04	13.24	0.998
393.50	100.00	-2.61	4.47	-7.08	4.93	-3.55	270.46	322.74	13.22	0.998
393.60	100.00	-2.63	4.47	-7.10	4.93	-3.57	270.98	322.45	13.20	0.998
393.70	100.00	-2.65	4.46	-7.11	4.93	-3.58	271.50	322.16	13.18	0.998
393.80	100.00	-2.68	4.45	-7.13	4.93	-3.60	272.01	321.86	13.17	0.998
393.90	100.00	-2.70	4.44	-7.14	4.94	-3.61	272.52	321.57	13.15	0.998
394.00	100.00	-2.72	4.43	-7.15	4.94	-3.62	273.03	321.28	13.13	0.998
394.10	100.00	-2.74	4.42	-7.16	4.94	-3.64	273.53	320.99	13.11	0.998
394.20	100.00	-2.76	4.41	-7.17	4.94	-3.65	274.03	320.71	13.09	0.998
394.30	100.00	-2.78	4.41	-7.19	4.94	-3.67	274.52	320.42	13.08	0.998
394.40	100.00	-2.81	4.40	-7.21	4.95	-3.68	275.01	320.14	13.06	0.998
394.50	100.00	-2.83	4.39	-7.22	4.95	-3.69	275.50	319.85	13.04	0.998
394.60	100.00	-2.85	4.38	-7.23	4.95	-3.71	275.98	319.57	13.02	0.998
394.70	100.00	-2.87	4.37	-7.24	4.95	-3.72	276.46	319.29	13.01	0.998
394.80	100.00	-2.89	4.37	-7.26	4.95	-3.74	276.93	319.01	12.99	0.998
394.90	100.00	-2.91	4.36	-7.27	4.95	-3.75	277.40	318.73	12.98	0.998
395.00	100.00	-2.93	4.35	-7.28	4.96	-3.77	277.87	318.45	12.96	0.998
395.10	100.00	-2.96	4.34	-7.30	4.96	-3.78	278.33	318.18	12.94	0.998
395.20	100.00	-2.98	4.33	-7.31	4.96	-3.79	278.79	317.90	12.93	0.998
395.30	100.00	-3.00	4.33	-7.33	4.96	-3.81	279.25	317.63	12.91	0.998
395.40	100.00	-3.02	4.32	-7.34	4.96	-3.82	279.70	317.36	12.90	0.998
395.50	100.00	-3.04	4.31	-7.35	4.97	-3.84	280.15	317.09	12.88	0.998
395.60	100.00	-3.06	4.30	-7.36	4.97	-3.85	280.60	316.82	12.87	0.998
395.70	100.00	-3.09	4.30	-7.37	4.97	-3.87	281.04	316.55	12.85	0.998
395.80	100.00	-3.11	4.29	-7.40	4.97	-3.88	281.48	316.29	12.84	0.998
395.90	100.00	-3.13	4.28	-7.41	4.97	-3.90	281.92	316.02	12.82	0.998
396.00	100.00	-3.15	4.27	-7.42	4.97	-3.91	282.35	315.76	12.81	0.998
396.10	100.00	-3.17	4.27	-7.44	4.98	-3.92	282.78	315.50	12.79	0.998
396.20	100.00	-3.19	4.26	-7.45	4.98	-3.94	283.20	315.24	12.78	0.998
396.30	100.00	-3.22	4.25	-7.47	4.98	-3.95	283.63	314.98	12.77	0.998
396.40	100.00	-3.24	4.25	-7.49	4.98	-3.97	284.05	314.73	12.75	0.998
396.50	100.00	-3.26	4.24	-7.50	4.98	-3.98	284.46	314.47	12.74	0.998
396.60	100.00	-3.28	4.23	-7.51	4.98	-4.00	284.88	314.22	12.73	0.998
396.70	100.00	-3.30	4.22	-7.52	4.99	-4.01	285.29	313.97	12.71	0.998
396.80	100.00	-3.33	4.22	-7.55	4.99	-4.03	285.70	313.72	12.70	0.998
396.90	100.00	-3.35	4.21	-7.56	4.99	-4.04	286.10	313.47	12.69	0.998
397.00	100.00	-3.37	4.20	-7.57	4.99	-4.06	286.51	313.23	12.67	0.998
397.10	100.00	-3.39	4.20	-7.59	4.99	-4.07	286.91	312.98	12.66	0.998
397.20	100.00	-3.41	4.19	-7.60	4.99	-4.09	287.30	312.74	12.65	0.998
397.30	100.00	-3.43	4.18	-7.61	4.99	-4.10	287.70	312.50	12.64	0.998
397.40	100.00	-3.46	4.18	-7.64	5.00	-4.12	288.09	312.26	12.63	0.998
397.50	100.00	-3.48	4.17	-7.65	5.00	-4.13	288.48	312.02	12.61	0.998
397.60	100.00	-3.50	4.16	-7.66	5.00	-4.14	288.86	311.79	12.60	0.998
397.70	100.00	-3.52	4.16	-7.68	5.00	-4.16	289.25	311.55	12.59	0.998
397.80	100.00	-3.54	4.15	-7.69	5.00	-4.17	289.63	311.32	12.58	0.998
397.90	100.00	-3.57	4.14	-7.71	5.00	-4.19	290.01	311.09	12.57	0.998
398.00	100.00	-3.59	4.14	-7.73	5.00	-4.20	290.38	310.86	12.56	0.998
398.10	100.00	-3.61	4.13	-7.74	5.01	-4.22	290.76	310.64	12.54	0.998
398.20	100.00	-3.63	4.13	-7.76	5.01	-4.23	291.13	310.41	12.53	0.998
398.30	100.00	-3.65	4.12	-7.77	5.01	-4.25	291.50	310.19	12.52	0.998
398.40	100.00	-3.67	4.11	-7.78	5.01	-4.26	291.87	309.97	12.51	0.998
398.50	100.00	-3.70	4.11	-7.81	5.01	-4.28	292.23	309.75	12.50	0.998
398.60	100.00	-3.72	4.10	-7.82	5.01	-4.29	292.59	309.53	12.49	0.998
398.70	100.00	-3.74	4.09	-7.83	5.01	-4.31	292.95	309.32	12.48	0.998
398.80	100.00	-3.76	4.09	-7.85	5.02	-4.32	293.31	309.10	12.47	0.998
398.90	100.00	-3.78	4.08	-7.86	5.02	-4.34	293.67	308.89	12.46	0.998
399.00	100.00	-3.81	4.08	-7.89	5.02	-4.36	294.02	308.68	12.45	0.998
399.10	100.00	-3.83	4.07	-7.90	5.02	-4.37	294.37	308.47	12.44	0.998
399.20	100.00	-3.85	4.07	-7.92	5.02	-4.39	294.72	308.27	12.43	0.998
399.30	100.00	-3.87	4.06	-7.93	5.02	-4.40	295.07	308.06	12.42	0.998
399.40	100.00	-3.89	4.05	-7.94	5.02	-4.42	295.42	307.86	12.41	0.998
399.50	100.00	-3.92	4.05	-7.97	5.03	-4.43	295.76	307.66	12.40	0.998
399.60	100.00	-3.94	4.04	-7.98	5.03	-4.45	296.10	307.46	12.40	0.998
399.70	100.00	-3.96	4.04	-8.00	5.03	-4.46	296.44	307.26	12.39	0.998
399.80	100.00	-3.98	4.03	-8.01	5.03	-4.48	296.78	307.07	12.38	0.998
399.90	100.00	-4.01	4.03	-8.04	5.03	-4.49	297.11	306.88	12.37	0.998
400.00	100.00	-4.03	4.02	-8.05	5.03	-4.51	297.45	306.69	12.36	0.998

\*\*\*IMPORTANT NOTE: AVG PWR GAIN MUST BE IN THE RANGE 0.8-1.2 FOR A VALID NEC MODEL (IDEALLY = 1)!  
VALUES OUTSIDE THIS RANGE INDICATE A FLAWED MODEL, USUALLY A RESULT OF INCORRECT SEGMENTATION.  
SEE DISCUSSION, p.101, NEC 4.1 USER'S MANUAL, LLNL UCRL-MA-109338 Pt. I (Gerald J. Burke), 1992.