

Study of normal modes and symmetry breaking in a two-dimensional pendulum

Paramdeep Singh,^{1,*} R. C. Singh,^{2,†} Mandip Singh,^{1,‡} and Arvind^{1,§}

¹*Indian Institute of Science Education & Research (IISER) Mohali, Sector 81 Mohali, 140306 India*

²*Guru Nanak Dev University Amritsar, Punjab India 143005*

(Dated: June 19, 2018)

We present an experimental setup to demonstrate normal modes and symmetry breaking in a two-dimensional pendulum. In our experiment we have used two modes of a single oscillator to demonstrate normal modes, as opposed to two single oscillators used in standard setups of two-dimensional pendulums. Breaking of the cylindrical symmetry of the pendulum is achieved by attaching a spring in the suspension. This leads to interesting visual patterns in the motion, wherein the plane of the oscillator shifts with time, the motion then becomes elliptical, shifts back again to planar, before finally returning to planar motion in the original plane. The symmetry breaking leads to non-degenerate normal modes of oscillation, whose interplay gives rise to the observed motion patterns. This also explains why for a real pendulum, the plane of motion always shifts, unlike the ideal two-dimensional pendulum where the plane of oscillation is supposed to remain fixed. This curious fact also contributes to the difficulties involved in building a Foucault's pendulum, where the plane of rotation due to Coriolis force needs to be accurately measured. The strength of the symmetry breaking in our system can be quantified by a parameter the "return time", which is defined as the time over which the pendulum returns to its original motion pattern. We propose this setup as a pedagogical tool to introduce the concepts of normal modes and symmetry breaking in a physics laboratory.

I. INTRODUCTION

A simple pendulum hanging from a point suspension is in reality a two-dimensional pendulum^{1–5}. For a long pendulum length and a small angular displacement, the bob can be visualized as moving in a two-dimensional horizontal plane. The oscillation can be started in any direction and the pendulum will oscillate in the same plane with a frequency dictated by its length and the acceleration due to gravity. The system has a complete cylindrical symmetry and therefore oscillations in all planes are completely identical.

In practice, if one sets up a pendulum, the plane typically moves in a certain interval of time and the pendulum acquires an elliptical character to its motion. These effects are usually ignored in most experiments as arising from errors in initial conditions and random perturbations. In fact, a careful study of such a system reveals that these effects have a certain systematic character and that the plane of oscillation of the pendulum moves and after some time comes back to its original direction in a somewhat mysterious way^{6,7}.

It turns out that this is due to the non-cylindrically symmetric restoring force arising out of imperfections in the suspension. The symmetry breaking leads to non-degenerate normal modes of oscillation whose interplay gives rise to these effects. This is also a major problem while building a Foucault's pendulum where we would like to have the cylindrical symmetry to an extent that such effects do not show up even over several hours^{8–13}.

Our aim is to systematically study this phenomenon and convert it into a pedagogical tool. In order to achieve this, we explicitly break the symmetry of the pendulum by attaching a spring with a very small force constant to the suspension along one direction. We show how this

leads to the interesting phenomenon of the pendulum becoming non-planar, being set into elliptical motion, moving into an entirely different plane and coming back to its original plane with a certain time period. We demonstrate that this time period that we call the return time, is associated with the amount of symmetry breaking in the system and can be changed by using springs of varying spring constants.

We use a pendulum with a length of around 2 m and the corresponding time period of about 3 s. The symmetry breaking springs are chosen such that the symmetry breaking is small and the associated return times are between 190 s and 800 s. This clear separation of time scales is useful to ensure that a number of oscillations take place before any tangible effect of the symmetry breaking sets in. Since the effect of the symmetry breaking adds up over the fast oscillations, it becomes visible eventually. We also find it very useful that the pattern of the motion unfolds over 10-15 minutes, allowing a discussion with students around the experiment. The bob weight is chosen to be about 0.8 kg so that it stores sufficient energy and allows the system to perform a large number of oscillations with negligible damping. We would like to emphasize that we have used two coupled modes of a single oscillator in our experiments to demonstrate the normal modes, which in standard setups is typically achieved by employing the coupling between two physical oscillators.

This experiment can be used to teach three concepts: normal modes, symmetry breaking and appreciating the difficulties associated with building a Foucault's pendulum. The experiment has qualitative as well as quantitative aspects to it. While different aspects of the experiments can be demonstrated to a group of students as the motion unfolds, there are specific quantitative obser-

variations that the students are expected to make. They can experimentally identify normal modes, measure normal mode frequencies and the return time. The measurements can be carried out by hand where one can use a mobile phone as a time measuring device or one can record the video of the motion and then use open source tracking software to extract information.

The material in the paper is arranged as follows: In section II we discuss the design of the apparatus and the theoretical analysis. In III we detail the experiments that can be performed using our setup and we also provide the details of the measurements taken from the setup. Section IV contains conceptual points that can be brought out through the experiment and can be taken up with students while they perform the experiment. Section V contain conclusions and future prospects.

II. APPARATUS DESIGN AND ANALYSIS

The two-dimensional asymmetric oscillator system that we intend to study is the pendulum oscillating under the effect of gravity. The frequency can be chosen by adjusting the length of the pendulum. The cylindrical symmetry is broken by attaching a spring toward one side of the suspension so that if the pendulum is pulled in that direction, apart from gravity, the spring also provides an additional restoring force. The linearity of equations of motion is achieved by restricting to small angular amplitudes.

A photograph of the actual oscillator setup is depicted in Figure 1 in three parts. The left upper photograph shows the suspension which is a combination of a cylindrically symmetric suspension and a spring arrangement aimed at breaking this symmetry. The left lower photograph shows the bob and the sheet with angles marked below it. The right hand side photo is of the entire setup. The length of the system was kept fixed at 2 m. A bob of mass 0.8 kg was used and copper wire was used for the suspension. Springs of different strengths can be attached to change the strength of symmetry breaking. A laser pointer was attached below the bob and the laser spot moves on a sheet of paper pre-marked with angle markings. We could start the oscillator by giving it a push in any desired direction. The system is designed such that the size and the time periods lead to a visual observation of the motion. The time period is about 2.8 s, which means that we can easily observe the system and its motion. On the one hand we want the system to be slow enough so that we can see the motion, on the other hand the system must perform a large number of oscillations to achieve a cumulative effect of symmetry breaking before dissipation becomes dominant. Spring constants k' of springs have to be chosen such that the force due to spring is much smaller than gravity. A longer length also allows one to remain in the linear domain even for visually large bob amplitudes. The springs were made by winding copper wires thicknesses ranging from 0.9 mm

and 0.56 mm. on pencils or other cylindrical objects and the number of turns one winds determine the strength of the spring.

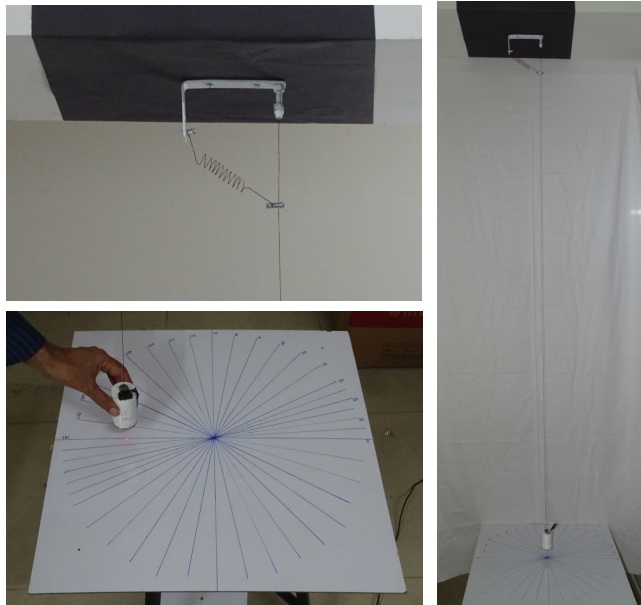


FIG. 1. The top left photograph shows the suspension of the pendulum with a spring attached to break symmetry. The pendulum bob being released at a particular angle is shown in the photograph on the bottom left. The photograph on the right shows the entire setup.

The various forces acting on the pendulum bob are shown explicitly in the diagram shown in Figure II. In the small oscillation approximation when θ is small we can consider the pendulum motion in the $x-y$ plane as shown. In this plane the gravity acts like a central force and is proportional to the displacement r in the plane. On the other hand the detail of the force due to spring is more interesting. Since the spring is fastened from a location in the $x-z$ plane at distance x_0 away from the origin O along the $-\hat{x}$ direction and the movement of the spring is very small compared to the distance x_0 . One can easily show that to first order the force due to the spring is not central in character and is proportional only to the displacement of the spring along the \hat{x} direction. This situation is shown in the picture given in Figure II(a). The $x-y$ plane projection of details of the spring configuration and its connection to the suspension are shown Figure II(b).

The effective Hamiltonian of the bob in terms of its coordinates x and y and corresponding momenta to first order can be written as

$$H(p_x, p_y, x, y) = \frac{1}{2m}(p_x^2 + p_y^2) + \frac{1}{2}(k_1 x^2 + k_2 y^2) \quad (1)$$

$$k_1 = \frac{mg}{l} + k \quad \text{and} \quad k_2 = \frac{mg}{l}$$

Therefore, the system does not have cylindrical symmetry and the symmetry is broken because of the presence of the spring. In case the spring is removed we recover the cylindrical symmetric situation with $k_1 = k_2 = k_0$.

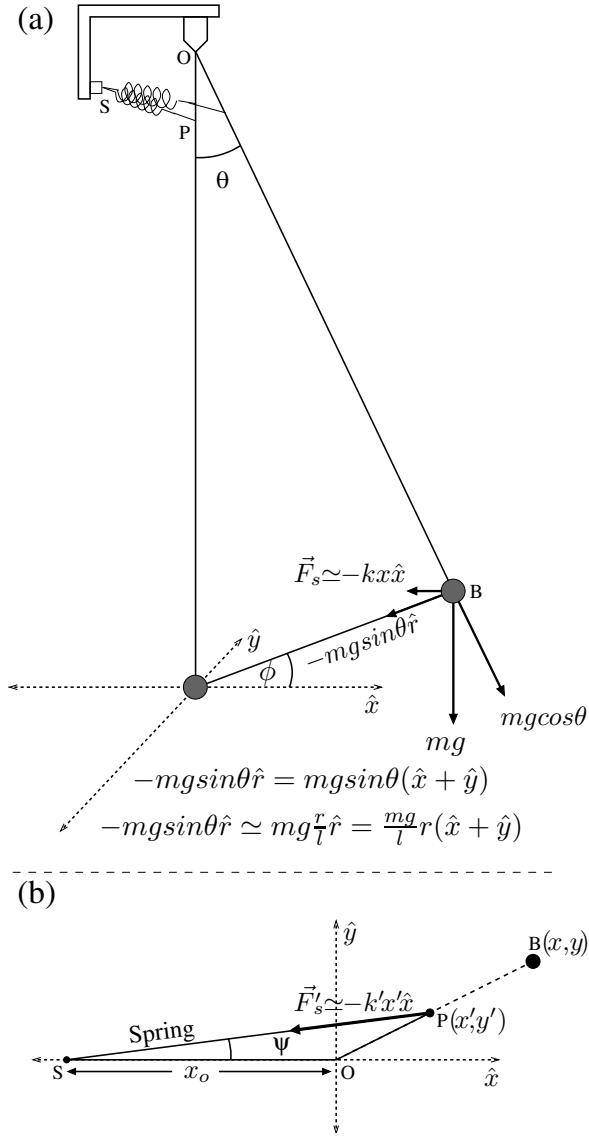


FIG. 2. (a) Schematic diagram of the pendulum including the effect of gravitation and spring in the suspension on the bob. The bob motion can be considered to happen in the $x - y$ plane for small values of θ and the effect of gravity to first order is that of a central linear force in the $x - y$ plane as shown. Since the spring is fastened at a point S in the $x - z$ plane which is a distance x_0 away from the point of suspension O of the pendulum its effect on the bob upto first order is that of a force proportional to x along $-\hat{x}$ direction. (b) The detailed configuration of the spring fastened at S and connected to the suspension wire at P and its force which for small ψ ($x_0 \gg x'$) is proportional to x' and is along $-\hat{x}$ direction. The view shown is the projection in the $x - y$ plane

The amount of symmetry breaking can be adjusted by using springs of different spring constants. This can also be thought of as if mass m attached to two springs, one along x and other along y , and each spring is of a different spring constant. For the symmetric case when $k_1 = k_2 = k_0$ If we displace the bob by some distance

d in the $x - y$ plane in any direction and let it oscillate, then the frequency of oscillation is independent of the direction in which we pull it, and is given by $\omega_0 = \sqrt{\frac{k_0}{m}}$. The oscillator moves back and forth in the same direction forever, without the direction of oscillation changing in time. Therefore there are an infinite number of linear polarization modes that we can begin this oscillatory motion in. We can also start the oscillator in a circular or elliptical motion and in that case the motion pattern will again remain the same as time passes, as there is only one frequency of oscillation in the system. Another way to think about this system is to think of two independent modes of the oscillator, one along x and one along y , which are independent and have the same frequency.

What is the motion pattern of such a system when $k_1 \neq k_2$ (the spring is present) and the symmetry is broken? Let us write the equations of motion:

$$\begin{aligned} m\ddot{x} &= -k_1 x \\ m\ddot{y} &= -k_2 y \end{aligned} \quad (2)$$

This means that if we pull the oscillator in the x direction it oscillates with the frequency $\omega_1 = \sqrt{\frac{k_1}{m}}$ and if we pull it along the y direction it oscillates with the frequency $\omega_2 = \sqrt{\frac{k_2}{m}}$. There are two fundamental frequencies in the system namely ω_1 and ω_2 . Since these motions are decoupled, the motion pattern does not change and the direction of oscillation remains the same with the passage of time.

Consider starting the oscillator in a direction which is not along either x or y . What is the motion in this case? Let us imagine that the oscillator is pulled by an amount d along some general direction making an angle θ with respect to the x axis. This means that the initial condition of the oscillator is $X_0 = d \cos \theta$ and $Y_0 = d \sin \theta$. The equations of motion given in equation (2) immediately tell us what the solution is going to be. The general solution of the equations (2) is

$$\begin{aligned} x(t) &= A \cos(\omega_1 t + \phi_1) \\ y(t) &= B \cos(\omega_2 t + \phi_2) \end{aligned} \quad (3)$$

For the initial conditions that we have started the oscillator with, the solution reduces to

$$\begin{aligned} x(t) &= X_0 \cos(\omega_1 t) \\ y(t) &= Y_0 \cos(\omega_2 t) \end{aligned} \quad (4)$$

The displacement in the plane can thus be written as

$$\vec{r}(t) = X_0 \cos(\omega_1 t) \hat{x} + Y_0 \cos(\omega_2 t) \hat{y} \quad (5)$$

Clearly if $\omega_1 = \omega_2 = \omega$, the motion will be oscillatory along a straight line and the solution reduces to

$$\vec{r}(t) = \vec{R}_0 \cos(\omega t) \quad (6)$$

with $\vec{R}_0 = X_0 \hat{x} + Y_0 \hat{y}$. However for the case when symmetry is broken and $\omega_1 \neq \omega_2$ what is the motion pattern? It

turns out that the motion pattern in this case has interesting features. Consider the case when the difference in ω_1 and ω_2 is small. Which means that the amount of symmetry breaking is small. In this case, Equation 5 implies that if we start the oscillator in a straight line oscillatory motion at an angle $\theta/2$ with the x axis, after sometime the motion acquires a somewhat elliptical character with its semi-major axis not along $\theta/2$. The semi-major axis slowly moves toward x and the semi-minor axis slowly grows. After the semi-major axis crosses the x axis, the semi-minor axis begins to decrease and the motion settles into straight line path again on the opposite side at an angle $-\theta/2$. From this position the pattern repeats in the reverse direction and so on. The motion described above is in fact a demonstration of normal modes. There are two normal frequencies in the system which are ω_1 and ω_2 and the normal mode motion corresponds to starting the system in either the x or the y direction. For such a motion, the trajectory remains the same over time. However if we start the oscillator in a different direction which is not one of the normal modes, the motion does not remain planar and the motion pattern oscillates between two planes on a time scale which depends upon the coupling strength of the modes represented, via the difference in frequency of the two normal modes.

When we start the motion in a non normal mode condition, the time scale over which the direction of oscillation comes back which we call the T_R to its original direction is inversely proportional to the frequency difference $\Delta\omega = |\omega_1 - \omega_2|$ between the modes.

$$T_R = \frac{2\pi}{\Delta\omega} \quad (7)$$

The amount by which the direction turns accumulates over the oscillation process. Therefore however small the turning per oscillation may be, its additive effect over many oscillations is appreciable and even a small asymmetry will eventually turn the plane of oscillation of the bob.

III. EXPERIMENTS TO BE PERFORMED

We propose the following measurements using our setup, which systematically bring out the various aspects of the experiment.

A. Motion pattern

The pendulum is hung with one of the springs attached in the suspension. The oscillations are started in different directions the motion is observed alongwith the students. The qualitative features of the motion are to be documented. One observes how for a typical initial condition, the bob starts to oscillate along the direction that it was started in, the bob then leaves the original direction of motion, the motion pattern becomes elliptical,

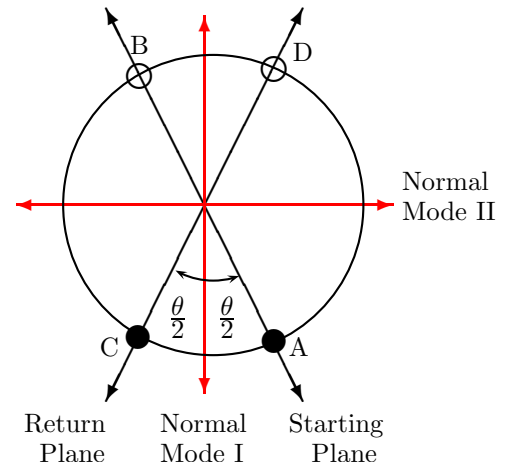


FIG. 3. The procedure for determination of normal modes. If the pendulum is started in a planar motion in the plane AB it oscillates, changes its motion to an elliptical one, and again settles into a planar motion along CD at a later time. If we mark these planes on a diagram then we can compute the normal mode by computing the bisector of the angle between these planes. The second normal mode is orthogonal to this direction.

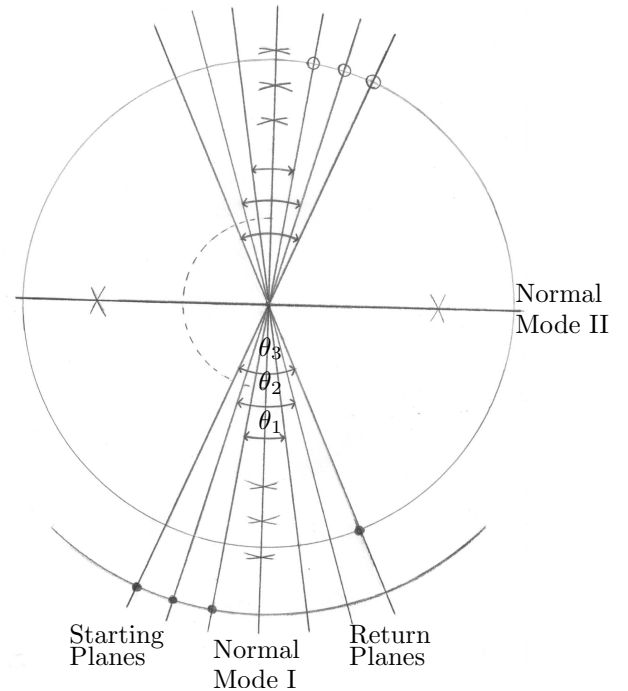


FIG. 4. Experimental determination of normal modes. The trace is taken on a plane paper which is scanned and reproduce for reference. This is a result of the procedure described in Figure 3

then over time the bob settles into another direction and again motion becomes elliptical and then returns back to the original direction. This pattern then repeats itself. The direction of angular momentum when the motion is elliptical in the different phases of the motion is important. It is noticed that angular momentum flips direction in the second half of the return cycle, which is indicated by the switch of motion from clockwise to anticlockwise direction of vice versa. This will happen for typical initial conditions, for two specific directions which are the normal modes the motion remains planar and does not shift direction.

B. Determination of normal modes

The pendulum is started in some direction and the direction is marked on the sheet below. The pendulum then oscillates and changes its motion pattern as indicated above. It finally settles again into linear motion in a different direction which we again marked on the sheet. This situation is shown in Figure 3, where we indicate that if the initial plane of motion is along A-B and the final plane of motion is along C-D then the pendulum turns by a total angle of θ during its motion. The direction that bisects these two lines is one of the normal modes of motion. The second normal mode is along the direction perpendicular to this direction. The normal mode directions thus computed are indicated in the figure. Having determined the normal mode directions, we can verify that indeed we have found the normal modes correctly, by starting the pendulum along any one of the normal mode directions, and observing the motion which then remains planar for a very long time, without turning at all. The actual sheet on which these observations are made is shown in Figure 4 and from this sheet one is then able to obtain the normal modes.

C. Return time measurement

Having determined the normal modes, we know the basic characteristics of the motion. As given in Figure 3, if we start the pendulum along AB, over time the motion becomes elliptical and finally settles along CD and then returns to the original direction AB. Return time is defined as the time that the pendulum takes to go from AB to CD and back to AB. The return time was measured for different angles and the results are tabulated in Table I. Return time turns out to be independent of the angle with respect to the normal mode from which we release the bob. The return time in fact is a measure of the amount by which the symmetry is broken. We will see in the next subsection how it relates to the normal mode frequencies.

Spring 1

Return Angle degrees	Return Time Sec	Frequency rad/sec
17	192.12	0.0327
32	192.00	0.0327
46	192.09	0.0327

TABLE I. Time and frequency data for the movement of the plane of oscillation of the pendulum. The time quoted here is the time taken for the pendulum started with its plane of oscillation at a certain angle to return to the same plane after going through the full cycle.

D. Determination of normal mode frequencies

Next we start the pendulum in each of the normal modes and measure the time periods of oscillations for the two normal modes. The results are tabulated in Table II. The time periods and the associated frequencies will be different. This difference has developed because of symmetry breaking and can be related to the extent to which symmetry is broken. This difference in frequency of the two normal modes is directly related to the return time. As mentioned earlier return time is related to the

Spring 1

Direction	Time for 20 Osc	Time for 40 Osc	Time for 60 Osc	Time for 80 Osc	Time for 100 Osc
Mode 1	57.21	114.38	171.54	228.78	285.98
Mode 2	56.43	112.81	169.23	225.69	282.07

Mode	Time Period (s)	ω (rad/sec)
Mode 1	2.8598 \pm 0.0015	2.1971 \pm 0.0011
Mode 2	2.8207 \pm 0.0016	2.2275 \pm 0.0012

$\Delta\omega$	0.0304 \pm 0.0023 rad/sec
----------------	-----------------------------

TABLE II. Measurement of normal mode frequencies after the symmetry is broken by connecting a spring (No. 1) to the suspension.

strength of symmetry breaking which is reflected in its relationship through the frequency difference $\Delta\omega$ between the two normal modes. For this spring the frequency difference suggests an associated time $\frac{2\pi}{\Delta\omega} = 207 \pm 15$ s and the measured return times are close to this number within experimental error.

E. Repeating with a set of different springs

Finally, the entire set of observations is to be repeated for different springs, i.e. for different amounts of symmetry breaking. With the qualitative observations remain-

ing the same, the quantitative results change, indicating a different amount of broken symmetry. We present the data for two additional springs which are weaker than the first spring that we used. Table III contains the return time measurements and Table IV contains the normal mode frequency measurements for the second spring. Tables V and VI contain similar data for the third spring.

Spring 2

Return Angle degrees	Return Time Sec	Frequency rad/sec
28	459.12	0.0137
49	462.45	0.0136
58	464.95	0.0136

TABLE III. Time and frequency data for the movement of the plane of oscillation of the pendulum. The time quoted here is the time taken for the pendulum started with its plane of oscillation at a certain angle to return to the same plane after going through the full cycle.

Spring 2

Direction	Time for 20 Osc	Time for 40 Osc	Time for 60 Osc	Time for 80 Osc	Time for 100 Osc
Mode 1	57.24	114.43	171.68	228.94	286.15
Mode 2	56.87	113.71	170.63	227.55	284.86

Mode	Time Period (s)	ω (rad/sec)
Mode 1	2.8615 ± 0.0013	2.1958 ± 0.001
Mode 2	2.8446 ± 0.0017	2.2088 ± 0.0013

$$\Delta\omega \parallel 0.013 \pm 0.0023 \text{ rad/sec}$$

TABLE IV. Measurement of normal mode frequencies after the symmetry is broken by connecting a spring (No. 2) to the suspension.

Spring 3

Return Angle degrees	Return Time Sec	Frequency rad/sec
23	849.02	0.0074
32	827.66	0.0076
50	811.84	0.0077

TABLE V. Time and frequency data for the movement of the plane of oscillation of the pendulum. The time quoted here is the time taken for the pendulum started with its plane of oscillation at a certain angle to return to the same plane after going through the full cycle.

Spring 3

Direction	Time for 20 Osc	Time for 40 Osc	Time for 60 Osc	Time for 80 Osc	Time for 100 Osc
Mode 1	57.32	114.65	171.9	229.2	286.46
Mode 2	57.05	114.13	171.21	228.31	285.44

Mode	Time Period (s)	ω (rad/sec)
Mode 1	2.8646 ± 0.0018	2.1934 ± 0.0014
Mode 2	2.8544 ± 0.0015	2.2012 ± 0.0012

$$\Delta\omega \parallel 0.0078 \pm 0.0026 \text{ rad/sec}$$

TABLE VI. Measurement of normal mode frequencies after the symmetry is broken by connecting another spring (No.3) to the suspension.

For the second spring the frequency difference suggests an associated time $\frac{2\pi}{\Delta\omega} = 483 \pm 85$ s which again is close to the measured times and for the third spring the value $\frac{2\pi}{\Delta\omega} = 805 \pm 268$ s. This clearly demonstrates the energy transfer between the normal modes at a frequency dictated by the frequency difference between the modes.

It is clear from the analysis that for a weaker spring when the return time is long and the difference in the frequency of the normal modes is small it is difficult to make observations and the errors are large. It is worth mentioning that our system is stable and has sufficiently low dissipation so that we are able to measure the effect of such weak springs. We have given these results as a demonstration of this fact and the fact that errors grow when one is trying to measure a small effect. In actual lab experiment for students one may not want to use such weak springs.

F. Pendulum base frequency

As the last measurement, we remove the spring and measure the time period of oscillation of the oscillator as it is released from different angles with respect to the x axis. The data is displayed in Table VII. The frequency of oscillations can be calculated for different angles and are tabulated in Table VIII.

G. Automation aspects

The experiments described in the previous section where data is taken by hand using a stopwatch can also be automated. We have taken the data in an automated fashion. We used a webcam to take the video of the motion and then used tracking software to track the pendulum coordinates as a function of time during the motion. The data then can be analyzed at leisure and various aspects of the motion can be studied. All the four exper-

Angle	Time for 20 Osc	Time for 40 Osc	Time for 60 Osc	Time for 80 Osc	Time for 100 Osc
0°	57.29	114.52	171.83	229.04	286.28
30°	57.18	114.38	171.69	228.94	286.19
60°	57.24	114.46	171.76	229.04	286.21
90°	57.15	114.35	171.64	228.87	286.17
120°	57.37	114.58	171.83	229.11	286.35
150°	57.27	114.53	171.86	229.07	286.28

TABLE VII. Values of time measured for a cylindrical symmetric oscillator for different numbers of oscillations and for different values of the angle of oscillation with respect to the x axis.

Angle	Time Period(s)	ω (rad/s)
0°	2.8628 ± 0.0021	2.1948 ± 0.0016
30°	2.8619 ± 0.0025	2.1955 ± 0.0019
60°	2.8621 ± 0.0029	2.1953 ± 0.0022
90°	2.8617 ± 0.0031	2.1956 ± 0.0024
120°	2.8635 ± 0.0031	2.1942 ± 0.0023
150°	2.8628 ± 0.0025	2.1948 ± 0.0019

TABLE VIII. The values of frequency for oscillation of the pendulum in different directions. The data shows that the situation is very close to symmetric and all the polarization modes of oscillation are degenerate within experimental errors. Hence the frequency of oscillation is the same along all directions within experimental errors. The frequency is 2.1950 ± 0.0005 rad/sec.

imental aspects carried out by hand can be done with this automated setup. We analyzed the data on a Linux based system using the open source physics software *tracker*¹⁴. In Figure 5 we present a graph based on such an analysis. In this we have chosen to extract the amplitude of motion perpendicular to the initial direction in which the bob was set in motion. The amplitude along the perpendicular direction first increases and then decreases and finally again comes to zero when the bob returns to its original oscillation direction. From this graph we can easily measure the return time. In this case the return time is 300 s which reflects the strength of the spring. The time period along different directions, normal mode frequencies can also be measured by recording the corresponding video and extracting data using the tracking software. The identification of normal modes can also be done by inspecting the video. We have indicated how the entire experiment can be carried forward and automation aspects can be explored. However we ourselves found that actually observing and measuring engages the student better with the experiment than recording a video and analysis is offline and therefore should not be used as a substitute for hand measurements. On the other hand the video provides you with data that can analyzed in

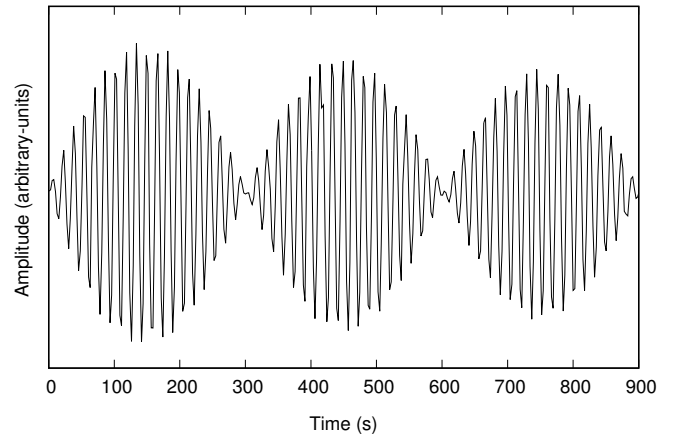


FIG. 5. Plot of projection of amplitude along a direction perpendicular to the initial direction motion as function of time. This data is extracted from the video and since the data set is large we have plotted only sample data points. The return time of 300 s is easily extracted from the graph. The graph also indicates that the effect of dissipation is very small even upto 900 s.

many different ways later. You can ask a question and answer it by extracting a different aspect of data from the video.

IV. DISCUSSION

In this section we take up several discussion points that emerge out of performing the experiment.

A. Quadratic Hamiltonians

An interesting point to note here is regarding quadratic Hamiltonians. A general quadratic Hamiltonian for a two-dimensional oscillator can be written as

$$H(p_x, p_y, x, y) = \frac{1}{2m}(p_x^2 + p_y^2) + \frac{1}{2}(k_x x^2 + k_y y^2 + 2k_{xy}xy) \quad (8)$$

This Hamiltonian has a structure where the kinetic energy part is invariant under rotation and the potential energy part can be diagonalized by going to an appropriate frame which is related to the original frame by a rotation. Let us look at the potential energy term in quadratic form

$$k_x x^2 + k_y y^2 + 2k_{xy}xy = \begin{bmatrix} x & y \end{bmatrix} \begin{bmatrix} k_x & k_{xy} \\ k_{xy} & k_y \end{bmatrix} \begin{bmatrix} x \\ y \end{bmatrix} \quad (9)$$

Since the coupling matrix is symmetric, we can always find a frame in which the matrix is diagonal by perform-

ing a rotation namely

$$\begin{bmatrix} \cos \theta & \sin \theta \\ -\sin \theta & \cos \theta \end{bmatrix} \begin{bmatrix} k_x & k_{xy} \\ k_{xy} & k_y \end{bmatrix} \begin{bmatrix} \cos \theta & -\sin \theta \\ \sin \theta & \cos \theta \end{bmatrix} = \begin{bmatrix} k'_x & 0 \\ 0 & k'_y \end{bmatrix} \quad (10)$$

The rotation matrix given above corresponds to a rotation of the coordinate system such that the new coordinates are given by

$$\begin{bmatrix} x' \\ y' \end{bmatrix} = \begin{bmatrix} \cos \theta & \sin \theta \\ -\sin \theta & \cos \theta \end{bmatrix} \begin{bmatrix} x \\ y \end{bmatrix} \quad (11)$$

The novel aspect of our experiment is that this rotation matrix and the normal modes can be found experimentally! We start the oscillator in any arbitrary direction, observe its motion and mark the point of return. The normal mode direction lies half-way between the starting direction and final direction from which the oscillator returns. This allows us to find the angle θ of the rotation which diagonalizes the potential energy term and takes us to the normal coordinates.

B. Attaching several springs

What if we attach more than one spring in the suspension pointing in different directions? Will that make the motion pattern more complicated? It can be easily done, the best is to attach several things and observe the motion pattern experimentally. It turns out that since spring forces add like vectors we do not see any difference in the motion pattern and several springs act like one resultant spring. Still we have two normal modes and a single return time. This can be left for the performers to do and figure out the reasons for it. In other words the sum total of the effect of many springs attached in different directions is represented by a quadratic Hamiltonian of the form given in equation (8). As long as the springs are linear, there is no further complexity to the problem, and we can always find the normal modes of the system by following the same experimental procedure. In other words the cylindrical symmetry in two dimensions can be broken only in one way.

C. Angular momentum conservation

Another very interesting and peculiar observation one makes while the pendulum oscillates under broken symmetry (i.e. when not initially in a normal mode) is that while the pendulum motion becomes elliptical the sense of the motion also changes. The sense of the motion begins as either clockwise or anti-clockwise (depending upon where the pendulum started) and after sometime it changes sense during the return path. This is clearly an indication of the flip of sign of the angular momentum of the system and implies that the angular momentum is

not conserved. Where does this change in angular momentum come from and who is applying the torque? A careful analysis reveals that torque is actually coming from the suspension and that the angular momentum is in fact exchanged with the Earth through the suspension!

D. Single two-mode oscillator vs two oscillators

We have used two modes of a single oscillator and coupled them in our experiment. In typical setups, where normal modes are demonstrated and measured, two physical oscillators are employed. Our experimental design is easier to implement as compared to the standard experimental setups, where if we want to start with two identical oscillators with the same frequency, it requires tuning, adjusting the lengths etc. Another advantage of our setup is that it also breaks the conceptual barrier in the mind of a student that we do not need two physical objects for introducing the coupling and the concept of normal modes, we basically need two degrees of freedom which can be of the same physical object.

E. Connection with Foucault's pendulum

One observes that the symmetry breaking leads to rotation of the plane of the oscillator over a time scale related to the strength of symmetry breaking. What if we want to build a Foucault's pendulum? In that case the oscillator plane should not shift at least over one day in the absence of the Coriolis force. Let us do an order of magnitude calculation regarding the required precision for the system. The time period of shift is related to $\Delta\omega$ and demanding stability over a period of 24 hours implies that the suspension should be such that the frequencies should be the same up to parts per million, in order to observe the effects of Coriolis force!

F. Connection with Quantum Mechanics

The two normal modes of a single pendulum system that we have presented, where the motion can be a general superposition of the two modes, is analogous to a two-level quantum system. Consider a two-level quantum system with the two eigen states of the Hamiltonian being the stationary states; they correspond to the two normal modes of our pendulum system. If we start the quantum system in one of the eigen states, the state does not change, which corresponds to the time invariant motion pattern for the pendulum when started along either of the normal modes. A general quantum state will be a linear combination of the two eigen states and that corresponds to the situation where we do not start the pendulum in one of the normal modes and in this case we have a motion pattern which changes with time. This analogy

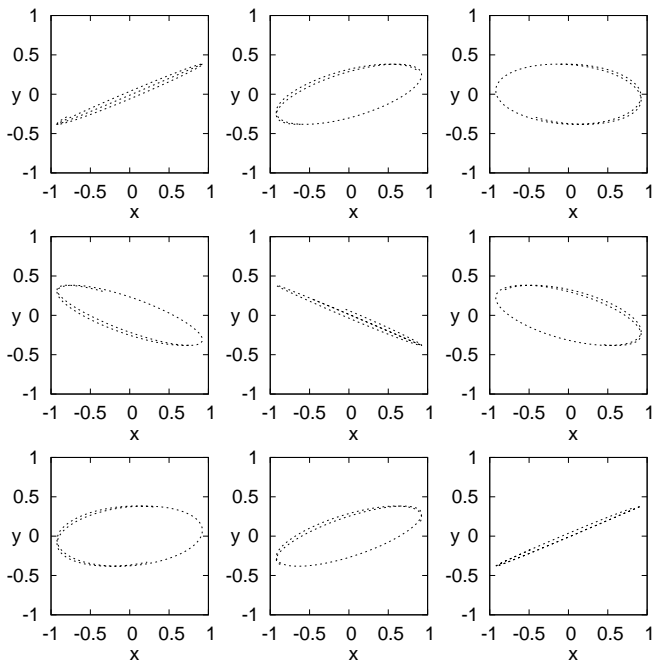


FIG. 6. Simulation of the motion of a two-dimensional oscillator where $\omega_1 \neq \omega_2$. The difference in frequencies is very small. The motion is analogous to the experiment.

can be used as a pedagogical tool to introduce the concept of stationary and non-stationary states of a quantum system to students. The analogy can be taken even further if we consider the two-level system to be a spin-1/2 system with a spin magnetic moment, in this case it is the magnetic field that breaks symmetry and makes the energy eigen states non-degenerate. In the absence of a magnetic field, all the states have same energy, corresponding to the cylindrical symmetric pendulum and the switching on of the magnetic field corresponds to the introduction of the spring in the suspension.

G. Simulation

The motion of the pendulum can be simulated where we take the basic equations given in Equations 4 and generate the trajectory on a computer. In Figure 6 we present the results of such a simulation. The oscillation is started at an angle of $\pi/8$ with respect to the x axis.

Several snapshots of the motion are displayed for progressive values of time. In the beginning the oscillator oscillates in a straight line, with the passage of time the oscillations become elliptical and, the direction of oscillation gradually rotates and the motion again becomes straight line motion at a certain time along $-\pi/8$. From this the oscillation slowly comes back to the original motion pattern.

V. CONCLUDING REMARKS

In this paper we have presented an experiment which involves a two-dimensional pendulum with possibility of breaking the cylindrical symmetry in a tunable manner. The experiment has a visual appeal and a group of students can be engaged with it while demonstrating the different motion patterns that unfold. The set of experiments that we have described on the setup involve determination of the normal modes, measuring the normal mode frequencies and measurement of the return time. The notion of symmetry breaking in a tunable fashion is central to the experiment and we demonstrate how even a small amount of asymmetry in the potential leads to measurable effects over time as the effects accumulate and build up. The experiment has many implications that are taken up in the discussion section and we hope that this experiment will prove to be an interesting pedagogical tool for physics laboratories. We have worked with several sets of students with our setup in about half a dozen institutions and the response has been very good.

In an extension of this experiment, we want to explore this interplay in detail. We plan to build a suspension which is non-rigidly connected with the Earth and therefore a part of it will rotate, compensating the angular momentum gained or lost by the pendulum. Furthermore, by making the angular motion sufficiently dissipative, we will kill the angular part of the motion. In that case the pendulum will be left with no choice but to settle along one of the normal modes. This notion can be experimentally connected to the solving of the eigenvalue problem of a 2×2 Hamiltonian. This will mean that if you start the oscillator anywhere, it will find and settle along an eigenvector of the 2×2 potential matrix, thereby computing the eigenvector for you. After the pendulum settles into the normal mode, we can immediately obtain the corresponding eigenvalue by measuring its frequency. The details of this experiment will be presented elsewhere.

* chandi@iisermohali.ac.in

† rc.phy@gndu.ac.in

‡ mandip@iisermohali.ac.in

§ arvind@iisermohali.ac.in

¹ R. D. Peters, "Student-friendly precision pendulum," *Phys. Teach.* **37**, 390 (1999).

² R. S. Worland and M. J. Moelter, "Two-dimensional pendulum experiments using a spark generator," *Phys. Teach.*

38, 489 (2000).

³ M. R. Mathews, "How pendulum studies can promote knowledge of the nature of science," *J. Sci. Educ. Tech.* **10**, 359 (2001).

⁴ D. Candel, K. M. Martini, R. V. Krotkov, and K. H. Langley, "Bessel's improved kater pendulum in the teaching lab," *Am. J. Phys.* **69**, 714 (2001).

⁵ R. J. Whitaker, "Types of two-dimensional pendulums and

- their uses in education,” *Sci. Educ.* **13**, 401 (2004).
- ⁶ R. Newburgh and G. A. Newburgh, “Finding the equation for a vibrating car antenna,” *Phys. Teach.* **38**, 31 (2000).
 - ⁷ T. B. Greenslade, “The double-elliptic harmonograph,” *Phys. Teach.* **36**, 90 (1998).
 - ⁸ C. Criado and N. Alamo, “Thomas rotation and foucault pendulum under a simple unifying geometrical point of view,” *Int. J. Nonlin. Mech.* **44**, 923 (2009).
 - ⁹ A. D. Crowell, “Motion of the earth as viewed from the moon and the y-suspended pendulum,” *Am. J. Phys.* **49**, 452 (1981).
 - ¹⁰ J. B. Hart, R. E. Miller, and R. L. Mills, “A simple geometric model for visualizing the motion of a foucault pendulum,” *Am. J. Phys.* **55**, 67 (1987).
 - ¹¹ T. F. Jordan and J. Maps, “Change of the plane of oscillation of a foucault pendulum from simple pictures,” *Am. J. Phys.* **78**, 1188 (2010).
 - ¹² J. Von Bergmann and H. Von Bergmann, “Foucault pendulum through basic geometry,” *Am. J. Phys.* **75**, 888 (2007).
 - ¹³ A. G. Rojo and D. Garfinkle, “The parallelometer: a mechanical device to study curvature,” *Can. J. Phys.* **87**, 615 (2009).
 - ¹⁴ Douglas Brown, “Tracker video analysis and modeling tool,” (2018).