

Non-linear impedance spectroscopy applied to thermoelectric measurements: beyond the ZT estimation.

E. Thiébaud¹, F. Pesty¹, C. Goupil², G. Guegan³, and P. Lecoœur¹

¹*Centre de Nanosciences et de Nanotechnologies, CNRS, Univ. Paris-Sud, Université Paris-Saclay, C2N-Orsay, 91405 Orsay, France*

²*Laboratoire Interdisciplinaire des Energies de Demain (LIED),*

UMR 8236 Université Paris Diderot, CNRS, 5 Rue Thomas Mann, 75013 Paris, France

³*STMICROELECTRONICS TOURS, 10 Rue Thales de Milet, CS97155, 37071 Tours Cedex 2, France*

Thermoelectric measurement of dimensionless zT parameter requires multiple physical quantities to be measured, therefore there is great interest to find an experimental setup capable of measuring all these properties at once. Previous work on impedance spectroscopy have shown promising results in this direction, however, this technique does not lead to a complete characterization of the thermoelectric system without additional measurement. In order to extend impedance spectroscopy, we have investigated the simultaneous measurement of the first and the second harmonic response of a Peltier device subjected to a sinusoidal excitation. The experiments are analyzed using an analytic model obtained by solving the heat equation in the frequency regime. By fitting the experimental results with our model we are capable to extract all thermoelectric properties from one electrical setup.

I. INTRODUCTION

Thermoelectric materials are ideal to develop energy harvesting and cooling systems without any mechanical moving parts. The performance of a thermoelectric material or system depends on its figure of merit (zT). The higher the zT , the more efficient the material is and the better the system will perform.[1] As the zT is a combination of three intrinsic properties ($zT = \alpha^2 T \sigma / \kappa$), characterization of thermoelectric materials or systems requires more than to extract the figure of merit. Individual measurement of thermal conductivity κ , Seebeck coefficient α and electrical conductivity σ are then needed. This usually requires the use of several experimental setups and different boundaries conditions in order to measure all properties increasing the complexity for accurate thermoelectric measurements.

The main used technique to study thermoelectric materials is the Harman method,[2] it allows simultaneous measurements of both the zT and the electrical resistivity. The difference between thermal and electrical time constants is at the core of this method in which the electrical response of the system is investigated in the time domain. However, the Seebeck coefficient and the thermal conductivity cannot be obtained from this technique.

The existence of distinct thermal and electrical time constants can also be investigated in the frequency domain using impedance spectroscopy. While other techniques are preferred for thermoelectric measurements, impedance spectroscopy is a widely used technique in other domains.[3] Impedance spectroscopy measurements consist of measuring the in-phase and out-of-phase AC voltage responses to a small AC excitation current as functions of the frequency. The impedance spectrum of a thermoelectric sample is characterized by a cutoff frequency corresponding to the time constant of the thermal diffusion across the system. At low frequency, below

the thermal cutoff frequency, the response is the sum of the ohmic response and the thermoelectric response. At high frequency, above the cutoff frequency, the response is equal to the ohmic response.

Recent works on impedance spectroscopy have shown that this is a powerful technique to characterize thermoelectric systems. The first attempt in 2002 by Dihlaire et al. [4] showed that all physical properties (Seebeck coefficient, electric conductivity, thermal conductivity and figure of merit) can be extracted from one single measurement on a PN thermoelectric junction but require the thermal heat capacity to be known. An analytic model of the system, obtained by solving the heat equation in the harmonic regime with the quadripole method, is used to fit the impedance spectrum and to extract the desired physical properties.

The impedance spectra can also be fitted based on equivalent electrical circuits.[5, 6] The latter method allows a simpler analysis, however, the number of quantities that can be extracted is lower and additional work is needed to obtain the physical properties from the fitting parameters.

It must be noted that the impedance spectrum of a thermoelectric system is sensitive on the presence of thermal contacts, heat loss by convection and the boundaries conditions,[7–10] therefore it is not simply limited to the study of the properties of the thermoelectric material. This gives another advantage for impedance spectroscopy as it allows to study how the system will interact with the heat and cold sources which are known to impact the performance of the system.[11]

Linear impedance spectroscopy is a powerful tool to characterize thermoelectric systems, an accuracy better than 1% [12] was estimated for the determination of the figure of merit. Therefore, it can be used for a precise evaluation of the figure of merit of both a single material and a Peltier module. However, alone it cannot give a complete characterization of the system, it has the same

limitation as of the Harman method. The thermal conductivity and the Seebeck coefficient cannot be obtained without additional measurement.

To overcome this limitation, we propose the use of non-linearity which is directly related to irreversibility in the system. The non-linearity of a thermoelectric system during impedance spectroscopy measurement takes the form of the presence of a second harmonic in the response.

Linear impedance spectroscopy restrains the measurement to the first harmonic alone. However, if the nonlinear response is measured, additional information about the system can be extracted.

In this work, we describe the use of nonlinear impedance spectroscopy to separate each component of the zT parameter and obtain a complete characterization of a thermoelectric system with a single measurement. The document is organized as follows. At first, the description of the origin of the first and the second harmonic response of a thermoelectric system submitted to a periodic excitation is given. By solving the heat equation for the unileg system in the frequency domain with nonlinear effect and isothermal boundary conditions an analytic solution is derived.

The origin of the second harmonic is explained by Joule and Peltier effects. The equivalent circuit model is derived from the analytic solution and used to fit the out of phase component of the impedance spectra for both first and second harmonics. Based on this method the complete characterization of a thermoelectric system is obtained.

II. THERMAL AND ELECTRICAL RESPONSE OF A PELTIER MODULE

In a general scheme, a Peltier module is composed of several junctions constructed with N and P materials electrically associated in series and thermally in parallel. The description of the module then reduces as a one-dimensional model equivalent to a single unileg system.

The unileg system is composed of a single thermoelectric element inserted between two electrical contacts and two thermal contacts. In fig. 1 a schematic view of a Peltier module and of the associated unileg system is shown.

For the sake of simplification in this model, the thermal influence of selectrical contacts is considered negligible as they are thin and highly conductive.

We suppose that material properties are temperature independent as the measurement applies a small variation of temperature. This last hypothesis implies that the Thomson effect is considered negligible. Under these assumptions, the heat equation is expressed by:

$$c\rho\frac{\partial T}{\partial t}(x) = \kappa\frac{\partial^2 T}{\partial x^2}(x) + \frac{J^2}{\sigma} \quad (1)$$

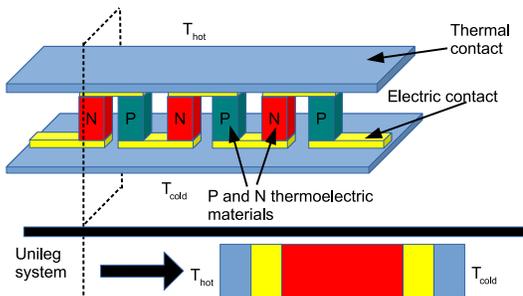


FIG. 1: Schematic view of a Peltier module and the associated one-dimensional model (unileg system). The unileg system is composed of one thermoelectric element, two electrical and two thermal contacts.

Where T is the temperature, J the current density, c is the massic heat capacity, ρ is the volumic mass, κ the thermal conductivity, and σ the electrical conductivity. The heat equation is composed of three terms. The first term (in the left member) corresponds to the heat capacity of the material. The second term is the heat transport through conduction and the third term comes from the Joule effect. In this model two thermal sources are considered: the Peltier effect that occurs at the interface of two materials with different Seebeck coefficients, and the Joule contribution that appears in the heat equation as $\frac{J^2}{\sigma}$.

The current excitation is given in Eq. 2 with ω the angular frequency.

$$J(t) = \frac{J_0}{2}(exp(j\omega t) + exp(-j\omega t)) \quad (2)$$

The system of equations for the first (T_1) and second (T_2) order components (first and second harmonic respectively) of the temperature is given in Eq. (3).

$$\begin{aligned} \rho c \omega T_1 &= \kappa \frac{\partial^2 T_1}{\partial x^2} \\ 2\rho c \omega T_2 &= \kappa \frac{\partial^2 T_2}{\partial x^2} + \frac{J_0^2}{2\sigma} \end{aligned} \quad (3)$$

Solution for T_1 and T_2 as functions of the position (x) are given in Eq. (4).

$$\begin{aligned} T_1(x) &= a_1 sh(q_1 x) + b_1 ch(q_1 x) \\ T_2(x) &= a_2 sh(q_2 x) + b_2 ch(q_2 x) + \frac{J_0^2}{4j\sigma\rho c\omega} \\ q_1 &= \sqrt{\frac{j\rho c\omega}{\kappa}}, \quad q_2 = \sqrt{\frac{2j\rho c\omega}{\kappa}} \end{aligned} \quad (4)$$

Where a_1 , b_1 , a_2 and b_2 have the dimension of a temperature and q_1 and q_2 are thermal wavenumber.

The Joule effect is non-linear, it depends on the square of the current intensity. Therefore the associated thermal

response in the harmonic regime will be at twice the frequency of the current excitation. The Peltier effect gives the quantity of heat that is absorbed or released at the interface between two materials when a current crosses the interface: $Q = \Delta\alpha TI$. Where $\Delta\alpha$ is the difference of Seebeck coefficients between both material, I is the electrical current and T the temperature of the junction.

In our case, the first and second order terms of the Peltier effect are given by Eq. (5). The first-order Peltier effect depends on the room temperature (T_0). The second-order depends on the first-order temperature response (T_1) at the junction. The first-order temperature component is linear with respect to the current excitation ($T_1 = h(\omega)I$). Therefore the non-linear Peltier varies as the square of the current intensity and the temperature response at twice the excitation frequency (second harmonic) will be the sum of the Joule and the second order Peltier effect.

$$\begin{aligned} Q_1 &= \Delta\alpha T_0 I \\ Q_2 &= \Delta\alpha T_1 I = \Delta\alpha h(\omega) I^2 \end{aligned} \quad (5)$$

For a given excitation frequency f , Joule effect induces thermal excitation at $2f$ noted T_{J2} . The Peltier effect induces thermal excitation of the system at f noted T_1 and a thermal excitation at $2f$ noted T_{P2} . The total thermal response of the system at $2f$ is noted $T_2 = T_{P2} + T_{J2}$. The voltage response of the system to the current excitation will be composed of a pure electrical term (the ohmic response) and the thermoelectric response ($V = \Delta\alpha\Delta T$).

The first and second-order terms of the impedance are given by Eq. (6) as functions of the first and second order temperature response respectively.

$$\begin{aligned} Z_1 &= R + \frac{\Delta\alpha\Delta T_1}{I} \\ Z_2 &= \frac{\Delta\alpha\Delta T_2}{I} \end{aligned} \quad (6)$$

Previous works on Peltier module characterization with impedance spectroscopy were mostly performed in adiabatic conditions. [5, 8, 9, 12] In this configuration, the sum of the thermal sources is zero. The heating at one junction is canceled by the cooling at the other junction. This symmetry of the Peltier effect allows to considering a steady state solution in adiabatic condition. However the Joule effect is always positive, therefore, we consider isotherm boundary condition at one side of the unileg and adiabatic boundary condition at the other end.

III. LINEAR IMPEDANCE SPECTROSCOPY RESPONSE

A. Adiabatic boundary conditions.

The linear response of a Peltier module in adiabatic condition has already been obtained (for example in [13]) based on the resolution of the heat equation in the frequency domain. In the linear approximation, only the thermal response at f is considered. In this case, the impedance (Z) is given by Eq. (7).

$$\begin{aligned} Z(\omega) &= R \left(1 + \frac{zT}{F_a(\omega)} \right) \\ F_a(\omega) &= \sqrt{\frac{j\omega}{\omega_t}} \coth \left(\sqrt{\frac{j\omega}{\omega_t}} \right) + \frac{A}{2} \sqrt{\frac{j\omega}{\omega_c}} \tanh \left(\sqrt{\frac{j\omega}{\omega_c}} \right) \end{aligned} \quad (7)$$

The impedance depends on a dimensionless number (F_a), the figure of merit (zT) and the electric resistance of the system (R). The dimensionless number (F_a) is a function of ω_t , ω_c and A . ω_t is the characteristic angular frequency related to the thermal diffusion in the thermoelectric material. ω_c is the characteristic angular frequency related to the thermal diffusion in the thermal contacts. A is a dimensionless number related to the quotient of the thermal conductance in the contact divided by the thermal conductance in the thermoelectric material.

$$\begin{aligned} zT &= \frac{\sigma\alpha^2 T_0}{\kappa_t}, \quad R = \frac{L_t}{\sigma S}, \quad A = \frac{\kappa_c L_t}{\kappa_t L_c} \\ \omega_t &= \frac{4\kappa_t}{\rho_t c_t L_t^2}, \quad \omega_c = \frac{\kappa_c}{\rho_c c_c L_c^2} \end{aligned} \quad (8)$$

All five parameters given in Eq. (8) are extracted when the experimental data are fitted with the model. We wish to point out that $A = \frac{\kappa_c}{\kappa_t}$ plays an important role in the evaluation of the maximum power of a thermoelectric generator as shown in [11]. The fitting parameters are functions of the section of the thermoelectric system (S), the length of the thermoelectric element (L_t), the length of the thermal contact (L_c) and thermal and electrical properties of both the thermal contacts and the thermoelectric materials.

B. Isotherm boundary condition

The Impedance spectrum of a Peltier module when one side is in direct contact with a thermostat and one side in adiabatic condition is given by Eq. (9). This analytic solution is obtained when the thermal contact between the thermoelectric material and the thermostat is neglected.

$$Z_1 = R \left(1 + \frac{zT}{F_i(\omega)} \right)$$

$$F_i(\omega) = \sqrt{\frac{j4\omega}{\omega_t}} \coth \left(\sqrt{\frac{j4\omega}{\omega_t}} \right) + A \sqrt{\frac{j\omega}{\omega_c}} \operatorname{th} \left(\sqrt{\frac{j\omega}{\omega_c}} \right) \quad (9)$$

At low frequencies both adiabatic and isotherm measurements can be approximated by an equivalent circuit model. In table I we compare the characteristic time in both cases. With a RC model only three quantities can be extracted from the fit, the ohmic resistance R the figure of merit zT and a characteristic time τ . The characteristic time (τ) of the RC model is a function of ω_t , ω_c and A from the analytic model.

Impedance (Z)	RC model $R \left(1 + \frac{zT}{1+j\omega\tau} \right)$	Heat equation solution
Adiabatic	$\tau = \frac{1}{3\omega_t} + \frac{A}{2\omega_c}$	Eq. (7)
Isotherm	$\tau = \frac{4}{3\omega_t} + \frac{A}{\omega_c}$	Eq. (9)

TABLE I: Low frequency limits of the impedance, for adiabatic and isotherm boundary.

IV. NON LINEAR RESPONSE

The nonlinear response of a Peltier module is the sum of two effects: the Joule effect and the Peltier effect. The Peltier effect induces heating or cooling given by $Q = \Delta\alpha IT$. In the linear approximation, the temperature of the junction is approximated by T_0 which gives a linear Peltier response of $Q_1 = \Delta\alpha IT_0$. The second-order Peltier effect is given by $Q_2 = \Delta\alpha IT_1$, where T_1 is the first order temperature response at the junction.

To study the effect of non-linearity we consider the case of a unileg system in isotherm condition where the bottom contact is neglected.

The second order thermal response is composed of Joule (ΔT_{2J}) and second order Peltier (ΔT_{2P}). The analytic contribution of both effects is given in Eq. (10).

Both nonlinear Peltier and Joule responses depend on F and G functions as defined in Eq. (10).

$$\Delta T_{2P} = \frac{\alpha^2 I^2 T_0}{F(\omega) F(2\omega) K_t^2}$$

$$\Delta T_{2J} = \frac{RI^2}{K_t} \frac{G(2\omega)}{F(2\omega) 2}$$

$$F(\omega) = \sqrt{\frac{j4\omega}{\omega_t}} \coth \left(\sqrt{\frac{j4\omega}{\omega_t}} \right) + A \sqrt{\frac{j\omega}{\omega_c}} \operatorname{th} \left(\sqrt{\frac{j\omega}{\omega_c}} \right)$$

$$G(\omega) = \frac{ch \left(\sqrt{\frac{j4\omega}{\omega_t}} \right) - 1}{\sqrt{\frac{j4\omega}{\omega_t}} sh \left(\sqrt{\frac{j4\omega}{\omega_t}} \right)} \quad (10)$$

The second order impedance is given in Eq. (11). The high-frequency limit of the second order impedance is zero.

The low-frequency response is the sum of the stationary solution for the Joule and the second order Peltier effects ($\alpha RI(1 + 4zT)/(4K_t)$).

$$Z_2 = \frac{\alpha(\Delta T_{2P} + \Delta T_{2J})}{I}$$

$$Z_2 = \frac{\alpha RI}{2K_t F(2\omega)} \left(G(2\omega) + \frac{2zT}{F(\omega)} \right) \quad (11)$$

The analytic solution is given in Eq. (11) can be approximated by an equivalent circuit model at low frequencies.

The equivalent RC model is given in Eq. (12).

$$Z_2 = \frac{(1 + 4zT) \alpha RI}{4K_t (1 + j\omega\tau)}$$

$$\tau = \frac{8}{3\omega_t} + A \frac{2}{\omega_c} + \frac{4zT}{1 + 4zT} \frac{4}{3\omega_t} + A \frac{4zT}{1 + 4zT} \frac{1}{\omega_c} \quad (12)$$

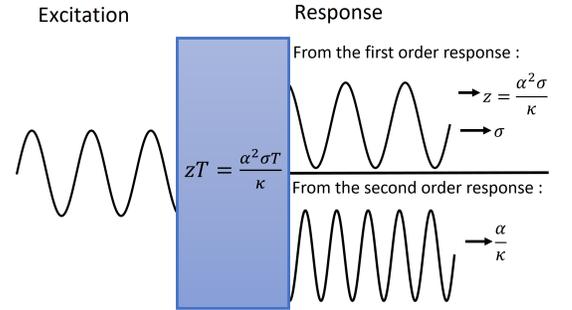


FIG. 2: Linear and nonlinear contributions of the thermoelectric response to an harmonic excitation.

In Fig. 2 the quantities extracted by fitting the experimental results of the first and second order response with the equivalent circuit model are summarized. This method gives a complete characterization of the thermoelectric system since all thermoelectric properties (α , κ , σ and zT) can be extracted.

V. EXPERIMENTAL RESULTS

The impedance response at $1f$ and $2f$ of a thermoelectric module is obtained with a DSP lock-in amplifier (model 7230 from AMETEK). The measured Peltier module is a commercial mini Peltier module (03201-9U30-08RA) from Custom thermoelectric. The imaginary part of the impedance ($Y = \operatorname{Im}(Z)$) is plotted in Fig. (3) in both the adiabatic and the isotherm cases with their associated fit. A frequency shift is expected with a higher characteristic frequency for the adiabatic

case. Indeed this behavior is observed with a characteristic frequency of 70 mHz in the adiabatic case and of 37 mHz in the isotherm case. However the adiabatic characteristic time multiplied by two (29s) is higher than the characteristic time in the isotherm case (27s). This is incoherent with respect to the theoretical values given in Table I.

This inconstancy is explained by the asymmetry of the Peltier module. When measured in an adiabatic condition the measured characteristic frequency is a combination of both thermal contact and of the thermoelectric material characteristic frequencies. However in isotherm condition only the thermoelectric material and the thermal contact which is not in contact with the thermostat influences the characteristic frequency. When the system is measured in isotherm condition with the second thermal contact as the contact between the system and the thermostat a characteristic frequency of 33 mHz is obtained. These results are coherent with an asymmetric system.

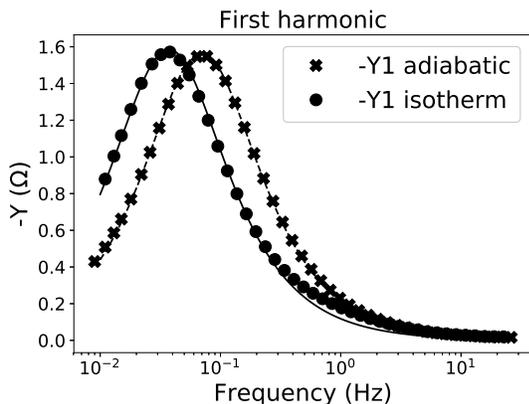


FIG. 3: The plot of the measured out of the imaginary part of the impedance as a function of the frequency. The adiabatic case is plotted in blue and the isotherm case in red. Both were fitted with equivalent circuit model and their associated fit is plot as a straight line.

A shift of frequency is clearly visible with a lower characteristic frequency for the isotherm case.

The first harmonic measurement gives an ohmic resistance of 4.24Ω and a figure of merit of 0.75. These results are consistent with the properties of the measured system. The second harmonic response is measured to evaluate the Seebeck coefficient and the thermal conductivity of the system. The experimental results and the associated fit are plotted in Fig. (4). The fit of the second order response gives a characteristic frequency of 15 mHz and $\alpha RI(1 + 4zT)/(4K_t) = 97 m\Omega$. From the first and the second order response the Seebeck coefficient of the system is $9.8 mV.K^{-1}$ and the thermal conductance is $K_t = 9.1 mWK^{-1}$. These results are coherent with the datasheet of the measured Peltier cooler. As the measured Peltier device is composed of 32 thermoelectric

couples the Seebeck coefficient difference between the P and Second harmonic

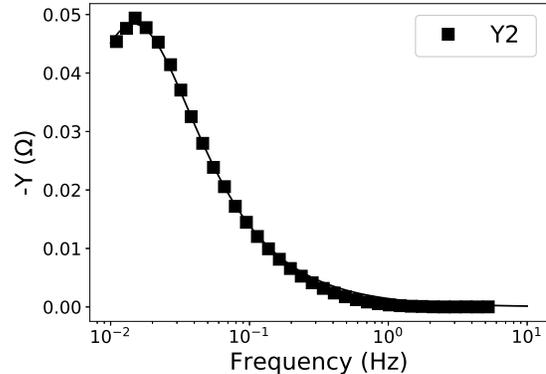


FIG. 4: Imaginary part of the second order impedance as a function of the frequency and the fit with an equivalent circuit model.

and the N material is $310 \mu VK^{-1}$ which is an expected value for a thermoelectric material at room temperature.

VI. CONCLUSION

Impedance spectroscopy is an interesting technique to characterize thermoelectric systems. By separating the thermal and the electrical response in the frequency domain, one impedance spectroscopy measurement provides all key parameters to evaluate thermoelectric systems. The electric resistance and the zT are easily extracted with linear impedance spectroscopy. However complete characterization is not possible without additional measurement. In this work, we have investigated the nonlinear impedance by taking into account the Joule heating and nonlinear Peltier effects. The nonlinearity of the Joule effect implies the appearance of higher harmonic in the impedance response. In our example, we studied the first and second harmonic responses.

The second order response is investigated in the isotherm configuration and fitting the first and second order response with our model allows extraction of all key parameters of the thermoelectric device without any other measurement. The results of the measurement are coherent with what is expected from the measured device. The results of our work show the interest to consider the nonlinear response of the system during impedance spectroscopy measurement, and the possibility of using the simultaneous measurement of the first and second order impedance measurement as a standalone technique for thermoelectric characterization.

ACKNOWLEDGMENTS

The authors thank ANRT (CIFRE) for the funding of doctoral studies by E. Thiebaut and ST Microelectronics TOURS for their support.

-
- [1] F Ioffe. *Physics of Semiconductors*. Infosearch Ltd. London, 1957.
- [2] TC Harman. Special techniques for measurement of thermoelectric properties. *Journal of Applied Physics*, 29(9):1373–1374, 1958.
- [3] Evgenij Barsoukov and J Ross Macdonald. *Impedance spectroscopy: theory, experiment, and applications*. John Wiley & Sons, 2005.
- [4] Stefan Dilhaire, L-D Patino-Lopez, S Grauby, J-M Rampnoux, S Jorez, and W Claeys. Determination of z_t of pn thermoelectric couples by ac electrical measurement. In *Thermoelectrics, 2002. Proceedings ICT'02. Twenty-First International Conference on*, pages 321–324. IEEE, 2002.
- [5] Adam D Downey, Timothy P Hogan, and Bruce Cook. Characterization of thermoelectric elements and devices by impedance spectroscopy. *Review of Scientific Instruments*, 78(9):093904, 2007.
- [6] Jorge García-Cañadas and Gao Min. Low frequency impedance spectroscopy analysis of thermoelectric modules. *Journal of Electronic Materials*, 43(6):2411–2414, 2014.
- [7] Francesco Casalegno, Andrea De Marchi, and Valter Giaretto. Frequency domain analysis of spreading-constriction thermal impedance. *Review of Scientific Instruments*, 84(2):024901, 2013.
- [8] Andrea De Marchi and Valter Giaretto. The peltier driven frequency domain approach in thermal analysis. *Review of Scientific Instruments*, 85(10):103904, 2014.
- [9] Jorge García-Cañadas and Gao Min. Impedance spectroscopy models for the complete characterization of thermoelectric materials. *Journal of Applied Physics*, 116(17):174510, 2014.
- [10] Braulio Beltrán-Pitarch and Jorge García-Cañadas. Influence of convection at outer ceramic surfaces on the characterization of thermoelectric modules by impedance spectroscopy. *Journal of Applied Physics*, 123(8):084505, 2018.
- [11] Y Apertet, H Ouerdane, O Glavatskaya, C Goupil, and Ph Lecoer. Optimal working conditions for thermoelectric generators with realistic thermal coupling. *EPL (Europhysics Letters)*, 97(2):28001, 2012.
- [12] Andrea De Marchi and Valter Giaretto. An accurate new method to measure the dimensionless figure of merit of thermoelectric devices based on the complex impedance porcupine diagram. *Review of Scientific Instruments*, 82(10):104904, 2011.
- [13] Jorge García-Cañadas and G Min. Thermal dynamics of thermoelectric phenomena from frequency resolved methods. *AIP Advances*, 6(3):035008, 2016.