

PREPARED FOR SUBMISSION TO JINST

THE 7th INTERNATIONAL CONFERENCE ON MICRO PATTERN GASEOUS DETECTORS 2022

DECEMBER 11-16, 2022

WEIZMANN INSTITUTE OF SCIENCE, REHOVOT, ISRAEL

Techniques for mass production of large-sized GEM foil in Korea for CMS phase-2 upgrade

I. Yoon, on behalf of CMS Muon Group

Seoul National University,

1 Gwanak-ro, Gwanak-gu, Seoul 08826, Republic of Korea

E-mail: inseok.yoon@cern.ch

ABSTRACT: This study presents techniques for the mass production of large-sized GEM foils for the CMS phase-2 upgrade in Korea. The foil production facility is designed with a focus on mass production, including the adoption of the double-mask technique. A polyimide wet etching technology that uses mono ethanolamine is reported, providing a safer working environment due to its lower inhalation toxicity compared to ethylene diamine. The study also covers the denaturation of the etchant over time and the process of retuning. Finally, R&D results on soldering surface mount resistors with hot air for faster production are discussed.

KEYWORDS: GEM, CMS, Double-mask technique, Mass production

¹Corresponding author.

Contents

1	GEM foil production by Korea	1
2	Production processes	1
2.1	Bipolar photolithography	1
2.2	Development and copper etching	2
2.3	Dry film resist striping	2
2.4	Polyimide etching	2
3	Low-cost soldering technique for mass production	2

1 GEM foil production by Korea

Several upgrades of the CMS detector are ongoing for the luminosity upgrade of the Large Hadron Collider (HL-LHC). One of these upgrades is the installation of three detector stations based on the Gas Electron Multiplier (GEM) technology, known as the ME0, GE1/1, and GE2/1 stations, in order of their distance from the interaction point. The production and the installation of the GE1/1 system was completed in 2020. Production and assembly of the GE2/1 detectors has begun and will be followed by the production of the ME0 detectors.

The Korean CMS group (KCMS) has been designated as the second supplier of large-sized GEM foils together with the CERN Micro Pattern Technologies workshop (MPT) for the CMS GEM upgrades. KCMS is contributing significantly to the upgrade by producing GEM foils equivalent to half of the GE2/1 and all of the ME0 stations. So far, KCMS has produced 285 GE2/1 foils that have passed the quality control criteria established by the CMS GEM upgrade projects.

2 Production processes

KCMS's GEM foil production facilities have been optimized for faster mass production. In the next section, we will discuss the specific aspects of KCMS's GEM foil production technology that distinguish it from that of CERN MPT.

2.1 Bipolar photolithography

KCMS uses the double-mask technique for producing large-sized GEM foils, whereas CERN MPT is focusing the single-mask GEM foil production only [1]. The definitions of the double and single-mask technique are described in [1]. The double-mask technique simplifies the production process and enables faster production than the single-mask technique. However, mask alignment becomes crucial. The left side of Figure 1 shows a large-size bipolar UV exposure machine that not only transcribes patterns but also aligns the top and bottom sides of the masks. The machine can

align masks with a misalignment of less than $5\text{ }\mu\text{m}$, while the maximum allowed misalignment for optimal operation is $7\text{ }\mu\text{m}$ (10 % of the hole diameter). Emulsion glass masks are required for the alignment process. The machine can form patterns of up to $125\text{ cm} \times 58\text{ cm}$ in size.

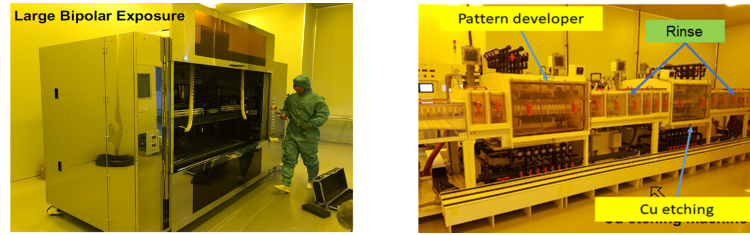


Figure 1. (Left) A large-sized bipolar UV exposure. (Right) A pattern developer and Cu etcher.

2.2 Development and copper etching

On the right side of Figure 1, the pattern developer and copper (Cu) etcher machines are integrated, with a built-in conveyor belt to enable faster production. When the flexible Cu clad laminate (FCCL) that has completed the photo process is inserted, it reacts with the reactant sprayed while moving on the conveyor belt. The diameter of the developed hole can be adjusted by the moving speed of the belt, the concentration, and spray pressure of the reactant.

2.3 Dry film resist striping

To strip the dry film resist, the processed FCCL is manually dipped into a bath filled with sodium hydroxide (NaOH). During the stripping process, the progress should be checked continuously to avoid damage to the Cu layer by NaOH. NaOH is chosen for its fast reaction rate.

2.4 Polyimide etching

Polyimide (PI) etching is done by manually dipping the processed FCCL into a bath filled with an etchant mixture of potassium hydroxide (KOH) and monoethanolamine (MEA). Like ethylenediamine (EDA) [1], MEA exhibits anisotropic etching properties. By adjusting the ratio of MEA and KOH, which is an isotropic etchant, the geometry of the developed hole can be tuned. The geometry is not too sensitive to the duration of etching. MEA is chosen for a safer working condition because the acute lethal concentration (LC) for mice exposed to MEA vapor is greater than 2430 mg m^{-3} [2], while the median LC of EDA vapor is 300 mg m^{-3} [3]. The etchant should be calibrated before use because the etchant exposed to air is slowly denatured by reacting with carbon dioxide. The etchant can be calibrated through a few sample etchings. Figure 2 shows the cross-sectional view of the produced GEM foil with a PI hole of proper geometry, indicating acceptable mask alignment.

3 Low-cost soldering technique for mass production

GEM foils typically require surface mount resistors for high voltage protection. However, soldering these small resistors onto FCCL can be challenging as they are easily pushed out by soldering tips, and excessive solder may reduce the gap between foils and cause sparks.

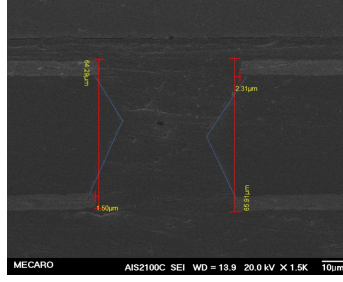


Figure 2. A cross-sectional view of the produced GEM foil, where the blue lines were added by the author to enhance the visibility of the PI edge after taking the SEM image.

To address these challenges, KCMS has developed a low-cost soldering technique using a cream solder dispenser and hot air rework station. The air pressure-operated solder dispenser deploys a uniform and accurate amount of cream solder, and a jig helps align the resistors and prevent GEM foils from sagging during the soldering process. With this technique, the soldering process, which was once a bottleneck for GEM foil production, can now be completed more quickly and accurately with less work fatigue.

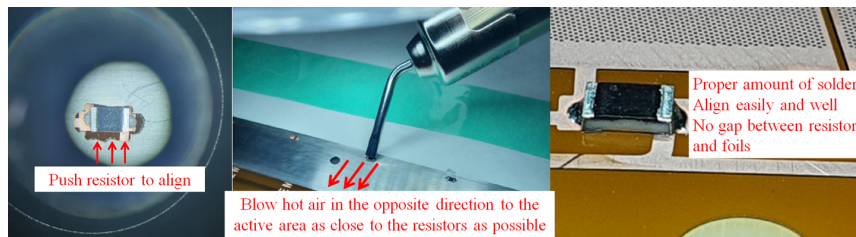


Figure 3. These photographs illustrate the processes used for soldering resistors to GEM foils, with a silver jig seen covering the foils in the images.

Acknowledgments

We would like to express our gratitude to Dr. Rui De Oliveira (CERN) for his invaluable assistance. We also extend our thanks to Taeseong Jeong and Inseung Jeong (Mecaro) for their support. This study was supported by the National Research Foundation of Korea

References

- [1] S Duarte Pinto et al, *Progress on large area GEMs*, *JINST* **4** (2009) P12009.
- [2] NCBI, *PubChem Compound Summary for CID 700, Ethanolamine*.
- [3] NCBI, *PubChem Compound Summary for CID 3301, Ethylenediamine*.