

IoT-enabled Stability Chamber for the Pharmaceutical Industry

Nitol Saha[†]
Mechanical Engineering
University of South Carolina
Columbia, South Carolina, USA
nsaha@email.sc.edu

Md Masruk Aulia[†]
Computer Science and Engineering
Military Institute of Science & Technology
(MIST)
Dhaka, Bangladesh
masruk.aulia@gmail.com

Dibakar Das[†]
Mechanical Engineering
Bangladesh University of Engineering &
Technology (BUET)
Dhaka, Bangladesh
dibakarsunny@yahoo.com

Md. Mostafizur Rahman[†]
Mechanical Engineering
Khulna University of Engineering &
Technology (KUET)
Dhaka, Bangladesh
mostafiz.kuetme@gmail.com

ABSTRACT

A stability chamber is a critical piece of equipment for any pharmaceutical facility to retain the manufactured product for testing the stability and quality of the products over a certain period of time by keeping the products in different sets of environmental conditions. In this paper, we proposed an IoT-enabled stability chamber for the pharmaceutical industry. We developed four stability chambers by using the existing utilities of a manufacturing facility. The state-of-the-art automatic PID controlling system of Siemens S7-1200 PLC was used to control each chamber. Seven precise temperature and humidity sensors were used to monitor the environment of each chamber. PC-based Siemens WinCC Runtime Advanced visualization platform was used to visualize the data of the chamber which is FDA 21 CFR Part 11 Compliant. Sensor data of the chamber are stored in the database in a periodic manner and also have report generation features. This chamber also has an alarm management system. The critical alarms are automatically emailed to the user to take action. Additionally, an Internet of Things-based (IoT-based) application was also developed to monitor the sensor's data remotely using any client application.

[†]Authors with equal contribution

CCS CONCEPTS

• Computer systems organization • Embedded and cyber-physical systems • Sensors and actuators

KEYWORDS

Stability chamber, IoT, Internet of Things, Pharmaceutical Manufacturing, SCADA.

1 Introduction

The pharmaceutical industry is an ever-growing industry that is continuously striving to enhance product quality, efficacy, and safety. The storage and maintenance of drugs is one of the most critical aspects of it. The efficacy and safety of pharmaceutical products can be greatly influenced by the loss of potency during storage of the product [1]. Proper environmental control (i.e., proper temperature, light, and humidity, conditions of sanitation, ventilation, and segregation) must be maintained wherever drugs and supplies are stored on the premises [2]. Stability chambers play a pivotal role in this process by providing controlled environments to simulate various temperature and humidity conditions, mimicking real-world scenarios encountered during storage and transportation. In Saudi Arabia, a study was carried out where 1000 people participated. Among them, more than 30% were not able to identify the most suitable storage conditions and 10% were unaware of the fact that storage conditions have an impact on the shelf-life of the products [3]. The temperature and humidity are also important for other products such as seeds. It has been found that, if the soybean seeds are stored in a place where the temperature is maintained at 10°C and humidity is below 40%, the seeds can be used for two seasons

[4]. This leads us to the fact that the stability studies of the product are important as they have a critical impact on the condition of the products.

To ensure the maintenance of pharmaceutical product safety, stability studies are routine procedures throughout the shelf life. Stability testing provides evidence that the quality of a drug product under the influence of various environmental factors changes with time [5]. Stability studies are also very important for the development and commercialization of a new medicine [6]. To have all these stability studies and for the maintenance of pharmaceutical products, stability chambers come into practice.

Stability chambers are a type of laboratory equipment used to simulate stable temperature and humidity-controlled conditions for product testing and storage purposes. Traditional stability chambers are effective, but they lack modern features like real-time remote monitoring and control functions which lead to potential risks to the product. With the integration of IoT, these difficulties have been overcome without a major increase in the manufacturing cost of these stability chambers.

The integrated system discussed in [7] is capable of providing reliable information about the quality of the packed products during their storage period. To attain this, a variety of sensors are used for monitoring the quality and safety of food products by recording parameters like the number of pathogen agents, gasses, temperature, humidity, and storage period. With the integration of IoT, this technology is able to provide a lot more information than conventional food inspection technologies, which are limited to weight, volume, color, and aspect inspection. The original system described in this work is built on a simple but effective method of integrated food monitoring. It consists of the IoT concept and is able to create a network of devices that are interconnected. By using this approach, actuators and sensing devices can be combined and also provide a common operating picture (COP) by sharing information over the platforms. More precisely, the stated system comprises of gas, temperature, and humidity sensors, which provide the essential information needed for evaluating the quality of the packed product. This information is transmitted wirelessly to a computer system providing an interface where the user can observe the evolution of the product quality over time.

The temperature and humidity chamber, (climate chamber) discussed in [8] is a device located at the Technobothnia Education and Research Center which is used to simulate different climate conditions. The simulated environment is used to test the capabilities of electrical equipment in different temperature and humidity conditions. The climate chamber, among other things, houses a dedicated computer, the control PC, and control software running in it which together are

responsible for running and controlling the defined simulations.

In the paper [9], a system has been introduced for the calibration of thermohygrometers. For this purpose, it is necessary to have a means of generating temperature and relative humidity. In this development, a climatic chamber has been built which generates and controls these two magnitudes. For the generation of temperature, thermoresistance has been used and the decrease of relative humidity has been performed through a silica gel trap through which the air inside the chamber is recirculated with the use of a vacuum pump. On the other hand, an ultrasonic humidity generator also known as a fogger has been introduced to increase the relative humidity. For the construction of the chamber, acrylic has been used as the main material for translucency and facilitates the visualization of the thermohygrometers' indications. For the control of the process variables such as temperature and relative humidity, an Arduino card has been used, which through PWM pulse width modulation, the control has been performed achieving a variation of 0.3 °C and 2 %RH.

An environmental chamber has been developed in [10] for housing standard resistors under controlled temperature and humidity conditions during calibration in air. Temperature is controlled at 23°C with a tolerance of 2°C by a proportional, integral, and derivative (PID) processor for proportional heating. Relative humidity is maintained at 35% with a 5% tolerance by aqueous salt solutions.

The above-mentioned systems have been built for different products. However, pharmaceutical products are prone to be found out of desired properties if not maintained within the optimum temperature and relative humidity. For this purpose, an IoT-based stability chamber has been introduced in this paper with the inclusion of sensors, actuators, valves, PID control, and 21 CFR part 11 compliant for electronic data integrity[11]. This system enables continuous monitoring and precise control of environmental parameters such as temperature, and humidity and can proactively identify deviations from desired conditions, allowing for timely intervention to prevent product degradation or loss. There are also features like enhanced monitoring, user-level authorization, audit trail, digital alarm notification, and recording of data.

2 Mechanical System Development

The developed stability testing chamber consists of four different chambers denoted by A, B, C, and D, having different environmental conditions in each cell which is illustrated in Fig. 1. in the Cartesian coordinate system. The width of each chamber is 1.47 m with a length and height of 3.4 m and 2.74 m respectively. The total volume taken by the stability testing chamber is 13.76 m³.

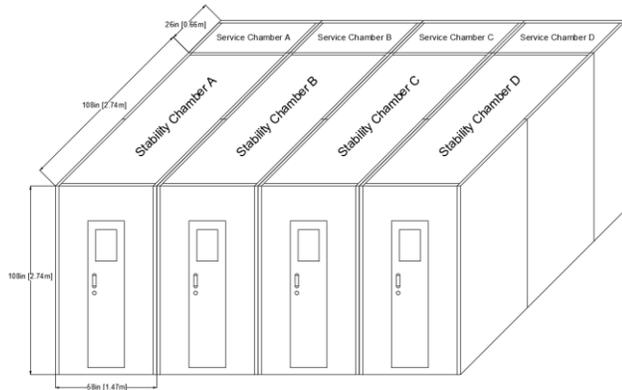


Figure 1: Schematic Diagram of Stability Testing Chamber

Temperature (T) and Relative Humidity (RH) are the primary parameters of environmental conditions, which are maintained very precisely in each chamber. The environmental conditions maintained in the stability testing chamber are listed in Table 1.

Table 1. Environmental Conditions of the Stability Testing Chamber in Each Compartment

Chamber	Temperature (°C)	Relative Humidity (%)
A	25	60
B	30	65
C	30	75
D	40	75

These four chambers are equal in size, and each having an internal volume of 9.57 m³ for testing purposes. Access to these chambers is facilitated through front doors, with each chamber containing seven racks of different sizes. These racks offer the flexibility to accommodate up to 78 trays for the storage of manufactured samples intended for long-term testing. Moreover, users have the convenience of easily repositioning trays within the racks for accessibility. Furthermore, a dedicated passage is provided to allow comfortable movement for personnel tasked with product handling within the chambers.

The sandwich panel of the stability testing chamber is constructed using SS304 and expanded polystyrene (with a density of 20). Air, serving as the working fluid within these chambers, is circulated by a twin blower. This blower intakes air from the rear part of the chamber, while the airflow returns through a duct positioned beneath the racks. The duct features seven openings beneath the racks for air recirculation to the blower. The system operates at a static pressure of 125 Pa. According to the performance graph of the blower, the airflow is 2375 m³/hour.

The position of the door, rack and tray, duct, passage for movement, air flow direction, and the service chamber are depicted in Fig. 2.

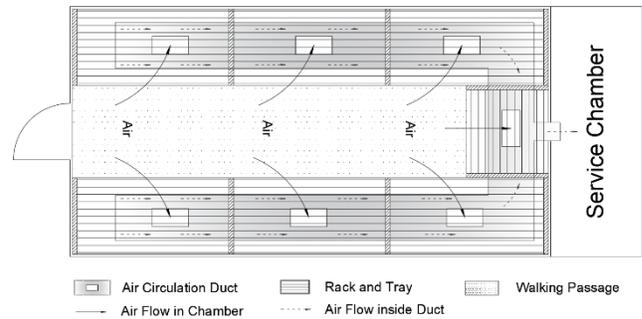


Figure 2: Schematic Diagram of the Top view of the Stability Chamber

The return air undergoes cooling and heating processes within the service chamber before reentering the blower (Fig. 3). The whole unit operates on a feedback mechanism wherein temperature fluctuations trigger the activation of either a cooling coil or a heater to maintain the desired temperature. The cooling coil is connected with a chilled water line, with coolant temperatures typically ranging between 7°C and 8°C. A solenoid valve regulates the flow of chilled water as needed. The capacity of the cooling coil is 2.5 TR which ensures precise temperature control. Meanwhile, the heater boasts a capacity of 4.2 kW for efficient heating of the working fluid. Controlled by a solid-state relay, the heater optimizes power usage. The stability testing chamber is located within an environment set to a controlled temperature of 24°C. The relative humidity is controlled by a steam generator located at the relative humidity is regulated by a steam generator located at the service chamber at the rear end of the stability testing chamber. Upon activation prompted by the feedback system of the stability chamber, the steam produced by the generator is directed through a perforated pipe into the air-steam mixing zone. Processed air from the cooling coil and heater combines with the steam as per the demand of the chamber. Subsequently, the air-steam mixture is drawn by the blower

and circulated into the chamber to control the environment. The heater of the steam generator is governed by a current control valve, regulating the current range between 0 A to 25 A through the analog method. With a steam output capacity of 7.2 liters per hour, the steam generator adequately maintains the desired relative humidity levels within the chamber.

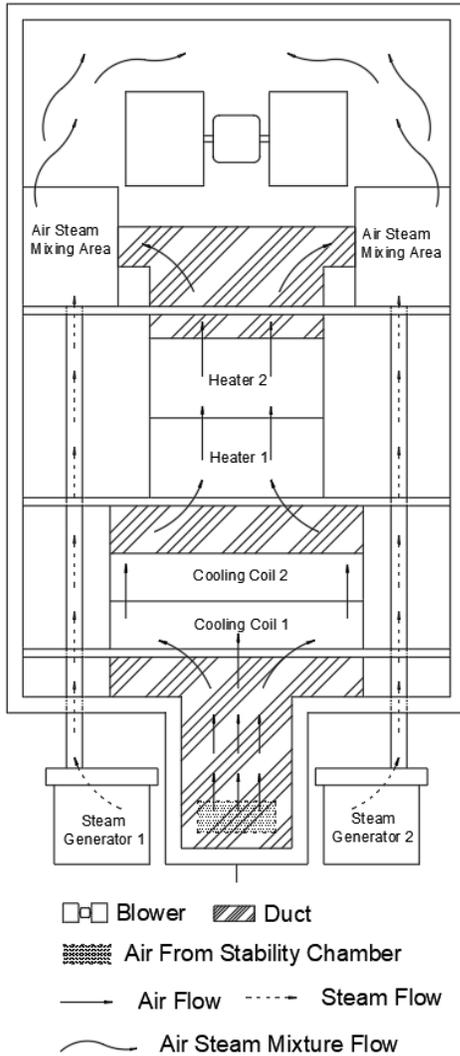


Figure 3: Schematic Diagram of the Utility of the Stability Testing Chamber

Each cooling coil, heater, and steam generator (Cooling Coil 1, Heater 1, and Steam Generator 1) is paired with a backup cooling coil, heater, and steam generator (Cooling Coil 2, Heater 2, and Steam Generator 2) to ensure continuous operation in the event of a breakdown of the main system. The placement of the cooling coil facilitates easy separation of condensate, directing it smoothly into the drainage system. Designed with compactness and professionalism in mind, the stability testing

chamber offers a volume of approximately 10,000 liters within a modest footprint of just 53 square feet.

Fig. 4 depicts the practical implementation of the proposed system. The system was designed according to the schematics described previously.



Figure 4: Practical Implementation of the Stability Chambers

3 Electrical System Development

The stability chamber's utility system is controlled by a PLC-based control system, with a Siemens S7-1200 PLC serving as the main control unit. All logic in TIA Portal V15.1 is expressed in ladder language.

The electrical heater is managed using the PID control algorithm of the S7-1200, which provides PID-based pulse output connected to a Solid-State Relay (SSR) that controls the output of the electrical heater. Feedback for the PID control is obtained from one of the seven Rotronic temperature and humidity sensors (HF132-WB1XX1XX) readings. To control the cooling coil, a chilled water valve is controlled by a solenoid valve using PID control with a Solid-State Relay (SSR). To control the chamber's humidity, the steam generator is controlled by a power controller, HANYOUNG NUX TPR-2N, that controls the current of the water heater of the steam generator using analog PID control.

Through pre-tuning and fine-tuning phases, PID parameters were established for PID control, and sensor readings were used as the feedback of the system. The system maintains a tolerance of $\pm 5\%$ humidity and $\pm 2^\circ\text{C}$ temperature.

Table 2. List of electrical components

Component	Specification
PLC	Brand: Siemens, Model: S7-1200,
Temperature and Humidity Sensor	Brand: Rotronic, Model: HF132-WB1XX1XX
Tubular heaters with fins	Quantity: 1000Watts X 6 pieces
Solid State Relay	Brand: Fotek Model: SSR-40 Spec: Input: 3-32 VDC Output: 24-380 VAC
Power Supply	Brand: Schneider electric Model: RXM Spec: Output 100-240 VAC, 2.8-1.4 A Input 24VDC, 5A, 120W
Power Controller	Brand: HANYOUNG NUX Model: TPR-2N Spec: Source 220V, 50-60 HZ Ratings: 25 A Input: 4-20 mA
Magnetic Contactor	Brand: Siemens Model: 3RT2025-1BB40 Spec: Coil - 24 VDC Output: 3 Phase 440V
Circuit Breaker	Brand: ABB, Model: SH203-C25, Spec: 3Phase, 25A
Pressure Transmitter	Brand: Dwyer Model: 616KD-B-04-AT Range: 0-10 WC
Single Phasing Preventor	Brand: Mimilec Model: VSP 3 Spec: 415 VAC, 50 Hz, NO
Blower	Brand: EBM-PAPST Type: Centrifugal blower Power supply: 300W, 1.31A Model no: D2E146-AP47-97

The specifications of the electrical components are listed in Table 2. The magnetic contactor (Siemens 3RT2025-1BB40) handles the switching of the 3-phase 440V output, controlled by a 24VDC coil signal from the PLC. To ensure safety and manage power integrity, ABB SH203-C25 circuit breakers are used to protect against overloads and short circuits. A centrifugal blower facilitates air circulation within the stability chamber. A Dwyer pressure transmitter is utilized to monitor pressure within the chamber. The pressure reading indicates the state of the blower, whether it is running or not, and

provides an alarm if the blower fails to function. The control system of actual implementation is depicted in Fig. 5. All the sensors' values can be retrieved from PLC and are monitored using a user interface.

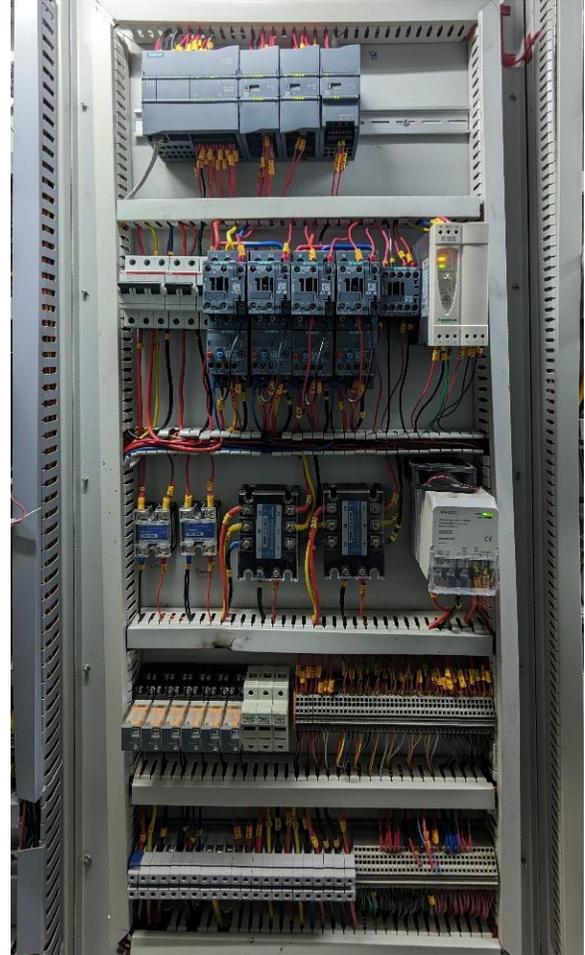


Figure 5: Control System of the Proposed System

5 User Interface Development

The user interface was developed using the Siemens WinCC Runtime Advanced V15.1 visualization platform, which includes capabilities like data monitoring, user authentication, report printing, and alarm history in accordance with the FDA 21 CFR Part 11 regulation, the front end for system administration is designed. Fig. 6 depicts the monitoring interface of the chambers where the temperature and relative humidity can be monitored from a single screen which is convenient for the users.

There are three user levels for user management: Administrator, Supervisor, and Operator. Administrators have

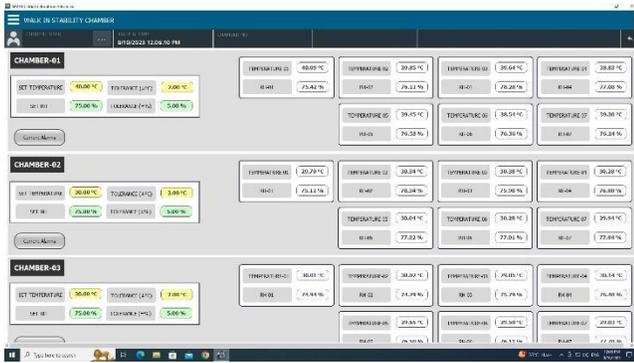


Figure 6: Chamber Monitoring Screen

the highest level of access to the system and can modify different critical parameters whereas Operators have only the access to monitor the temperature and relative humidity. Supervisors can set the parameters of the temperature and relative humidity and monitor the system parameters and sensor reading. The user list screen is shown in Fig. 7 (some parts are blurred to protect user information). A script is developed that is integrated with the user interface that has the capability to send the monitored data to the Microsoft SQL database. Historical data reports can be generated using Microsoft SQL Server Reporting Service (SSRS).

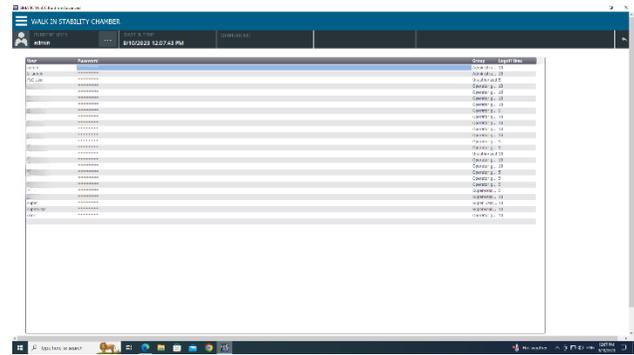


Figure 7: User management Screen

6 IoT System Development

A Python-based application has been developed to retrieve PLC data, using the CYPES Python Wrapper for SNAP7 which can interface with Siemens S7 PLCs, including newer CPU types like the S7-1200 and S7-1500. SNAP7 is an open-source, multi-platform Ethernet communication suite designed for native interaction with Siemens S7-PLCs [12].

Real-time data monitoring is achieved using the MQTT protocol, ensuring minimal latency for any IoT applications. MQTT's efficiency, with a smaller header compared to HTTP, optimizes performance in bandwidth-limited environments.

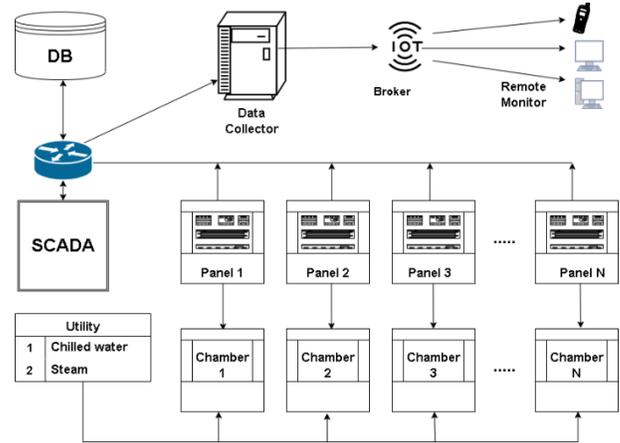


Figure 7: IoT Architecture of the Proposed System

The real-time data is sent to the public Mosquitto MQTT broker to a specific topic using JSON format. Any client can subscribe to a specific topic for real-time data updates. Subscribers receive updated data from the broker periodically. Additionally, a Django 3.4.1 Restful API has been implemented to store data on cloud servers. Authorized users can access data via a website or any client application through the broker. The IoT architecture of the proposed system is depicted in Fig. 7.

5 Results

The developed system in this paper has demonstrated robust performance throughout the running phase. Key parameters like temperature and humidity have been monitored continuously and controlled with high efficiency. The data report from the SSRS shows that sensor data is within the range (Fig. 8). The system has the feature to view the real-time graphical plot of the temperature and the relative humidity (Fig. 9). Any error in the system can also be monitored using the alarm management feature of the system. The system

Temperature & RH data of Walk-in Chamber-01
Data Report from 5/2/2024 3:30:00 PM to 5/3/2024 3:30:00 PM (Time Interval: 60 min)

Serial	Formatted Time	T1	RH1	T2	RH2	T3	RH3	T4	RH4	T5	RH5	T6	RH6	T7	RH7
1	5/2/2024 3:45:30 PM	39.74	76.14	39.76	74.38	40.33	75.44	40.13	74.66	39.37	76.01	40.45	75.52	39.08	77.00
2	5/2/2024 4:45:30 PM	39.79	76.12	39.64	74.51	40.41	75.59	40.15	74.69	39.36	76.03	40.51	75.64	39.08	77.15
3	5/2/2024 5:45:30 PM	39.83	76.07	39.84	74.42	40.44	75.16	40.26	74.64	39.47	75.88	40.54	75.38	39.20	76.75
4	5/2/2024 6:45:30 PM	39.86	75.89	39.87	74.06	40.45	75.38	40.30	74.40	39.48	75.88	40.56	75.21	39.19	76.61
5	5/2/2024 7:45:30 PM	39.80	76.79	39.74	75.03	40.43	76.28	40.24	75.44	39.51	76.68	40.53	76.34	39.19	77.42
6	5/2/2024 8:45:30 PM	39.73	76.14	39.66	74.50	40.43	75.64	40.27	74.76	39.47	76.11	40.56	75.65	39.19	77.16
7	5/2/2024 9:45:30 PM	39.73	76.52	39.77	74.69	40.34	76.05	40.12	75.06	39.37	76.28	40.44	75.91	38.99	77.30
8	5/2/2024 10:45:30 PM	39.65	76.16	39.76	74.52	40.27	75.91	40.12	75.03	39.41	76.30	40.41	75.84	39.05	77.00
9	5/2/2024 11:45:30 PM	39.82	76.41	39.85	74.64	40.34	75.85	40.17	75.05	39.37	76.30	40.42	76.03	39.08	77.14
10	5/3/2024 12:45:30 AM	39.71	76.16	39.74	74.66	40.27	76.12	40.12	74.96	39.37	76.32	40.46	75.90	39.08	77.14

Figure 8: Data Report of Stability Chamber

IoT-based Stability Chamber for the Pharmaceutical Industry

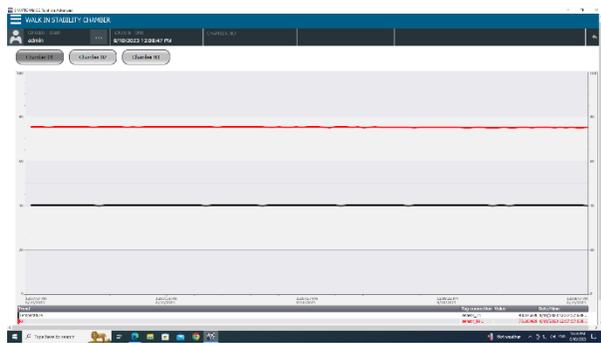


Figure 9: Real-time Graphical Plot of Temperature and Humidity

notifies the user regarding the using email and it can also be viewed using the alarm screen (Fig. 10).

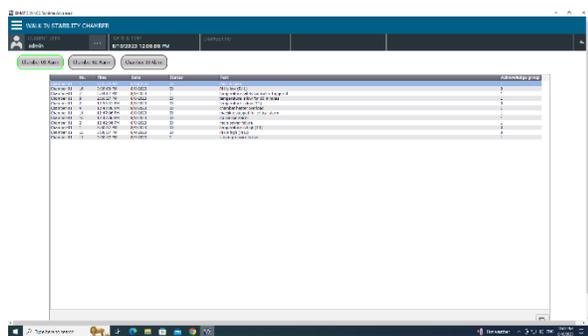


Figure 10: Alarm Management Screen

As previously described, the IoT architecture utilizes SNAP7, wrapper to directly retrieve and handle the temperature and relative humidity data from the PLC. Data is then transmitted to a public Mosquitto Message Queuing Telemetry Transport (MQTT) broker using JSON format [13]. To test the functionality of the IoT feature, MQTTfx, a PC-based MQTT client, was used. The MQTT client is successfully receiving the data directly from the PLC via MQTT broker. The output of the MQTT client is depicted in Fig. 11.

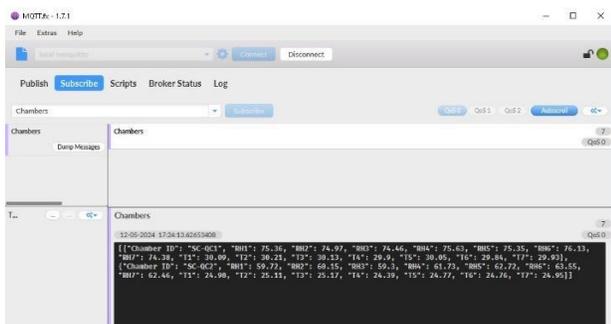


Figure 11: Output of the MQTT client

6 Conclusion

In conclusion, the developed stability testing chamber presented in this paper demonstrates effective control and environmental monitoring (Temperature and Relative Humidity) across four distinct chambers. The integration of advanced technologies such as PLC-based control, PID algorithms, and IoT architecture to retrieve data directly from PLC has enhanced the system's capability in monitoring the sensor's readings. The user interface, compliant with the FDA 21 CFR Part 11 guidelines, offers comprehensive data visualization and management capabilities, ensuring user-friendly operation. However, there are scopes of improvement in this work with the implementation of machine learning in this system to improve the accuracy of the sensor reading and detect the failure of the system before breakdown. Additionally, the IoT capability is tested using MQTTfx software and in the future, a complete client application will be developed which will include advanced data analytics and more diverse control capabilities.

ACKNOWLEDGMENTS

This research project is funded by Renata Limited, Bangladesh.

REFERENCES

- [1] K. Shafaat, A. Hussain, B. Kumar, R. Hasan, and V. Yadav, "AN OVERVIEW: STORAGE OF PHARMACEUTICAL PRODUCTS," 2013.
- [2] S. Bajaj, D. Singla, and N. Sakhuja, "Stability Testing of Pharmaceutical Products," *J Appl Pharm Sci*, vol. ., no. Issue, pp. 129–138, Mar. 2012, doi: 10.7324/JAPS.2012.2322.
- [3] A. Alqurshi, "Household storage of pharmaceutical products in Saudi Arabia; A call for utilising smart packaging solutions," *Saudi Pharmaceutical Journal*, vol. 28, no. 11, pp. 1411–1419, Nov. 2020, doi: 10.1016/J.JSPS.2020.09.006.
- [4] G. C. Y. Mbofung, A. Susana Goggi, L. F. S. Leandro, and R. E. Mullen, "Effects of Storage Temperature and Relative Humidity on Viability and Vigor of Treated Soybean Seeds," *Crop Sci*, vol. 53, no. 3, pp. 1086–1095, May 2013, doi: 10.2135/CROPSCI2012.09.0530.
- [5] S. Sultana and S. Mohammed, "A Review on Stability Studies of Pharmaceutical Products," *International Journal for Pharmaceutical Research Scholars*, vol. 7, no. 1, pp. 28–49, 2018, doi: 10.31638/IJPRS.V7.I1.00003.
- [6] K. Huynh-Ba, "Handbook of stability testing in pharmaceutical development: Regulations, methodologies, and best practices," *Handbook of Stability Testing in Pharmaceutical Development: Regulations, Methodologies, and Best Practices*, pp. 1–389, 2009, doi: 10.1007/978-0-387-85627-8/COVER.
- [7] A. Popa *et al.*, "An Intelligent IoT-Based Food Quality Monitoring Approach Using Low-Cost Sensors," *Symmetry 2019*, Vol. 11, Page 374, vol. 11, no. 3, p. 374, Mar. 2019, doi: 10.3390/SYM11030374.
- [8] S. Tibebe, "The Design of Temperature and Humidity Chamber Monitor and Controller," 2016, Accessed: May 11, 2024. [Online]. Available: <https://www.theseus.fi/handle/10024/109750>
- [9] J. S. Malpica Gutierrez, I. A. Fernandez Pena, and F. M. I. Santa, "Design, construction and implementation of relative humidity and temperature climatic chamber for metrology laboratory," *J Phys Conf*

Ser, vol. 2135, no. 1, p. 012003, Dec. 2021, doi: 10.1088/1742-6596/2135/1/012003.

- [10] P. G. Dean Jarrett and D. G. Jarrett, "Constant Temperature and Humidity Chamber for Standard Resistors." pp. 501–505, 1995. Accessed: May 11, 2024. [Online]. Available: <https://www.nist.gov/publications/constant-temperature-and-humidity-chamber-standard-resistors>
- [11] "Part 11, Electronic Records; Electronic Signatures - Scope and Application | FDA." Accessed: May 12, 2024. [Online]. Available: <https://www.fda.gov/regulatory-information/search-fda-guidance-documents/part-11-electronic-records-electronic-signatures-scope-and-application>
- [12] "python-snap7 · PyPI." Accessed: May 13, 2024. [Online]. Available: <https://pypi.org/project/python-snap7/>
- [13] "MQTT - The Standard for IoT Messaging." Accessed: May 13, 2024. [Online]. Available: <https://mqtt.org/>