

GenAU: Language-Grounded Industrial Anomaly Understanding with Vision-Language Models

Hongkuan Zhou^{1,2} Tristan Rehm² Nadeem Nazer³ Lavdim Halilaj¹
Jingcheng Wu² Steffen Staab^{2,4}

¹ Corporate Research, Robert Bosch GmbH, Renningen, Germany

² Institute for Artificial Intelligence University of Stuttgart, Stuttgart, Germany

³ Otto-von-Guericke-University Magdeburg, Magdeburg, Germany

⁴ University of Southampton, Southampton, UK

Abstract

Industrial inspection requires more than binary anomaly detection: a practical system should determine whether an anomaly exists, localize the defective region, identify the defect type, and provide interpretable visual evidence. Existing CLIP-based methods detect and localize anomalies well but offer limited language-level defect understanding, while instruction-tuned vision-language models can describe defects but do not natively produce pixel-level masks. We introduce GenAU, a **Generalist** vision-language framework for industrial Anomaly Understanding that unifies image-level detection, pixel-level segmentation, multi-type anomaly detection, and defect analysis in a single instruction-following model. GenAU augments a vision-language model with two segmentation tokens, `[SEG_defect]` and `[SEG_normal]`, whose hidden states act as language-grounded queries over multi-scale visual features for pixel-level localization; the image-level score fuses this map with the decoder’s textual normal/defect decision, while the language decoder produces structured defect-aware responses. Trained with a joint language-modeling and segmentation objective, GenAU covers all four tasks within one architecture and recipe, adding zero-shot multi-type detection and language-grounded defect analysis at a quantified cost to detection and segmentation. Across cross-dataset benchmarks, GenAU attains the strongest image-level detection among CLIP-based zero-shot methods on VisA and Real-IAD, with segmentation approaching but not surpassing specialized CLIP baselines.

1. Introduction

Industrial anomaly detection (AD) is fundamental to modern manufacturing, ensuring product quality, operational reli-

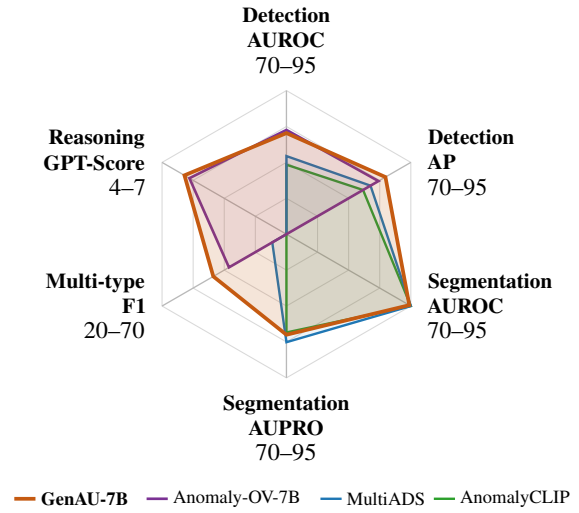


Figure 1. Motivation of GenAU. Industrial inspection poses four questions per image (is there an anomaly, where, what type, and why), mapped to six metrics: image-level Detection (AUROC, AP), pixel-level Segmentation (AUROC, AUPRO), Multi-type recognition (F1), and Reasoning (GPT-Score). Each axis is scaled to the range beneath its label; a vertex at the center marks a task the model cannot perform (e.g., AnomalyCLIP and MultiADS emit no language; Anomaly-OV produces no segmentation). **GenAU is the only model in our study spanning all four**, though on segmentation it does not surpass the specialized CLIP baselines and on VisA image-level detection it trails the reasoning specialist Anomaly-OV. Detection is on VisA, Segmentation averaged over VisA/MPDD/Real-IAD, Multi-type over VisA/MPDD, and Reasoning the VisA-D&R GPT-Score.

ability, and safety. Automated visual inspection systems prevent defective products from reaching customers, thereby reducing financial losses, reputational risks, and safety hazards [9, 12], while reducing reliance on human operators and supporting earlier intervention in production pipelines.

However, real-world industrial inspection involves more than simply deciding whether an image is normal or not. Instead, in practice, users often care about four closely related questions: 1) Is there an anomaly? 2) Where is it? 3) What type of anomaly is it? 4) Why are they anomalies? Therefore, a practical system should not only detect anomalies, but also localize them, recognize their types, and provide evidence for decisions.

Despite this progress, most methods address only part of these needs. Recent zero-shot approaches [5, 6, 25, 27, 35] build on CLIP [26] to distinguish normal from anomalous samples and derive anomaly maps, but remain focused on visual discrimination and localization, with limited support for semantic understanding; even multi-type extensions like MultiADS [27] do not explain *why* a region is anomalous.

Large instruction-following VLMs (e.g., LLaVA [21], Qwen-VL [2], and NVILA [22]) offer a complementary direction with strong multimodal reasoning, but their potential for industrial anomaly understanding is underexplored. Existing VLM approaches such as AnomalyGPT [10] obtain localization from an external detector rather than the VLM itself, so prior methods emphasize either localization or language reasoning without tightly unifying detection, segmentation, type recognition, and explanation in one model.

To address this gap, we present GenAU, a Generalist vision-language framework for industrial Anomaly Understanding. GenAU unifies anomaly detection, anomaly segmentation, multi-type anomaly recognition, and defect analysis within a single instruction-following architecture and training recipe (cf. Figure 1). Specifically, we extend an instruction-following VLM with two dedicated segmentation tokens, `[SEG_defect]` and `[SEG_normal]`, which act as text-based anchors for defective and normal regions. By aligning their embeddings with multi-scale visual features from the visual encoder, GenAU produces fine-grained anomaly maps while preserving the model’s ability to recognize and describe specific defect types in natural language. In this way, GenAU combines the reasoning capabilities of large VLMs with pixel-level localization, moving beyond text-only defect recognition toward joint semantic understanding and spatial grounding.

We construct instruction-response data from standard benchmarks, training on MVTec-AD [3] and evaluating cross-dataset on VisA [36], MPDD [15], and Real-IAD [29] under distribution shift. At inference GenAU is single-image, requiring no reference images or task-specific retraining. Our contributions are summarized as follows:

- We introduce GenAU, a generalist vision-language framework for industrial anomaly understanding. Through a unified instruction interface, GenAU supports image-level anomaly detection, pixel-level anomaly segmentation, multi-type anomaly detection, and textual defect analysis through a single instruction-following architecture and

training recipe.

- We propose a language-grounded segmentation mechanism that extends an instruction-following VLM with dedicated `[SEG_defect]` and `[SEG_normal]` tokens. The hidden states of these tokens are aligned with multi-scale visual features, enabling the model to ground defect-aware language representations into pixel-level anomaly maps.
- We evaluate GenAU on public industrial anomaly benchmarks under cross-dataset distribution shift, covering binary anomaly detection, anomaly segmentation, and zero-shot multi-type anomaly detection. The results show that a single autoregressive VLM can jointly perform detection, segmentation, multi-type recognition, and defect reasoning (reaching the best image-level detection among CLIP-based zero-shot methods on VisA and Real-IAD), and we explicitly characterize the segmentation–reasoning trade-off incurred when the same recipe additionally learns to reason.

2. Related Work

2.1. CLIP-based Prompt Adaptation for Anomaly Detection and Segmentation

Most zero-shot industrial AD adapts CLIP [26], despite it not being designed for inspection. Prompt-based methods craft or learn normal/abnormal prompts: WinCLIP [14] (window aggregation), AnomalyCLIP [35] (object-agnostic prompts), and PromptAD [20]/AdaCLIP [4] (learnable prompt tokens). For localization, APRIL-GAN [6], AnoCLIP [8], and SimCLIP [7] improve patch-level visual–text alignment; CLIP-SAM [18] and FiLo [11] add external segmentation/grounding modules; and MultiADS [27] adds defect-aware supervision for multi-type segmentation, while DAPO [24] learns hybrid defect-aware prompts via progressive tuning for multi-type detection and localization under distribution shift. Others rely on patch comparison or reconstruction [1, 19, 28]. These methods largely depend on CLIP-style embedding comparison or external modules, making them less suited to unified defect reasoning and analysis.

2.2. Autoregressive VLMs for Anomaly Detection and Reasoning

Autoregressive VLMs offer a different paradigm, enabling open-ended visual reasoning and instruction following instead of fixed-prompt embedding comparison. AnomalyGPT [10] is an early effort, but it relies on an external CLIP-based anomaly map combined with the input image and fed to the LLM, so the VLM mainly serves as a reasoning interface over a separately generated map. More recently, Anomaly-OV [30] specializes MLLMs for zero-shot anomaly detection and reasoning via the Anomaly-Instruct-125k instruction set, but targets image-level detection and explanation, with pixel-level segmentation not grounded in

the decoding process.

In contrast, GenAU treats the autoregressive VLM as the core anomaly understanding model rather than as a reasoning interface over externally generated anomaly maps. Building on the reasoning-segmentation paradigm of LISA [16], in which a VLM emits a segmentation token whose hidden state drives a mask, GenAU uses decoder hidden states of dedicated `[SEG_normal]` and `[SEG_defect]` tokens as language-grounded anchors, aligning them directly with frozen multi-scale visual features (without an external mask decoder) to generate pixel-level anomaly maps. This design unifies image-level anomaly detection, anomaly segmentation, multi-type anomaly detection, and textual defect analysis in a single instruction-following framework. Grounding visual features in language is consistent with broader evidence that aligning visual representations with language or structured knowledge improves generalization under distribution shift [31] and open-domain visual recognition [32]. An extended discussion is provided in Appendix.

3. Preliminaries

We address three tasks under a common cross-dataset protocol. A model is trained only on a source dataset $\mathcal{D}_{\text{train}} = \{(\mathbf{x}_i, \mathbf{y}_i)\}_{i=1}^{N_1}$ with inputs $\mathbf{x}_i \sim \mathcal{P}(\mathcal{X})$, and evaluated, without retraining, on a target dataset $\mathcal{D}_{\text{target}}$ whose inputs are drawn from a different distribution $\mathcal{P}(\mathcal{X}') \approx \mathcal{P}(\mathcal{X})$ (a distribution shift). At test time the model may optionally use target-domain metadata such as a product description, but no target labels. What the literature calls *zero-shot* anomaly detection/segmentation is, more precisely, binary detection/segmentation under this category-level distribution shift; we use the terms interchangeably and retain *zero-shot* for comparability with prior work.

Binary anomaly detection. Each image $\mathbf{x} \in \mathbb{R}^{H \times W}$ carries a label $y \in \{0, 1\}$ indicating anomaly presence; the model classifies each target image as normal or anomalous.

Binary anomaly segmentation. Each image is paired with a pixel mask $\mathbf{y} \in \{0, 1\}^{H \times W}$; the model classifies each target pixel as normal or anomalous.

Zero-shot multi-type detection. Each image carries a multi-label vector over one normal class and K defect types $\{d_1, \dots, d_K\}$. The target defect vocabulary partially overlaps the training one, $C_{\text{train}} \cap C_{\text{target}} \neq \emptyset$ and $C_{\text{target}} \setminus C_{\text{train}} \neq \emptyset$, so the target mixes seen and novel defect types. The model predicts $\hat{\mathbf{y}}' \in \{0, 1\}^{K_2+1}$ over the target vocabulary. Full formal definitions are given in Appendix G.

4. Methodology

We present an overview of the proposed framework, followed by detailed descriptions of the anomaly detection and anomaly segmentation components, the training objectives, and the inference process.

4.1. Framework Overview

GenAU couples two jointly-trained pathways (Figure 2): (1) a *text* pathway that generates text conversation and (2) a *visual grounding* pathway that uses the hidden states of the generated `[SEG_normal]`/`[SEG_defect]` tokens as language-grounded anchors, aligned with multi-scale visual features to produce pixel-level anomaly maps; the image-level score fuses the map maximum with the decoder’s normal/defect decision.

4.2. Anomaly Segmentation

GenAU performs anomaly localization by grounding visual features with the hidden states of generated segmentation tokens. Given an image $\mathbf{X}_v$ and an instruction $\mathbf{X}_q$, the autoregressive decoder generates a structured response containing the special tokens `[SEG_normal]` and `[SEG_defect]`. Let $\mathbf{h}_{\text{normal}}, \mathbf{h}_{\text{defect}} \in \mathbb{R}^D$ denote their final-layer decoder hidden states. These two vectors serve as language-grounded anchors for the normal and defective states:

$$\mathbf{T} = [\mathbf{h}_{\text{normal}}, \mathbf{h}_{\text{defect}}] \in \mathbb{R}^{2 \times D}. \quad (1)$$

The input image is processed by the frozen vision encoder to obtain multi-scale patch features from intermediate and final stages, $\{\mathbf{V}_i\}_{i=1}^m$, where $\mathbf{V}_i \in \mathbb{R}^{H_i W_i \times C_i}$ denotes the patch features from the i -th stage. Since the visual features and decoder hidden states lie in different representation spaces, each stage is equipped with its own *linear* projection layer $\phi_i : \mathbb{R}^{C_i} \rightarrow \mathbb{R}^D$, producing

$$\mathbf{Z}_i = \phi_i(\mathbf{V}_i) \in \mathbb{R}^{H_i W_i \times D}. \quad (2)$$

For each stage, we compute cosine-similarity logs between every projected patch feature and the two segmentation-token anchors:

$$\mathbf{S}_i = \gamma \cdot \frac{\mathbf{Z}_i}{\|\mathbf{Z}_i\|_2} \left(\frac{\mathbf{T}}{\|\mathbf{T}\|_2} \right)^\top, \quad \mathbf{S}_i \in \mathbb{R}^{H_i W_i \times 2}, \quad (3)$$

where γ is a fixed temperature scale. The two channels of $\mathbf{S}_i$ correspond to the normal and defect scores. After reshaping $\mathbf{S}_i$ to spatial resolution $H_i \times W_i$, the maps are upsampled to the target mask resolution and normalized with a channel-wise softmax. The defect-channel probability gives the pixel-level anomaly map:

$$\mathbf{A}_i = \text{Softmax}(\text{UP}(\mathbf{S}_i))_{[\text{defect}]} \in [0, 1]^{H \times W}. \quad (4)$$

The stage-wise maps are aggregated by summation across the m stages to form the final anomaly map $\mathbf{A}$, where higher values indicate a higher probability that the corresponding pixels belong to defective regions.

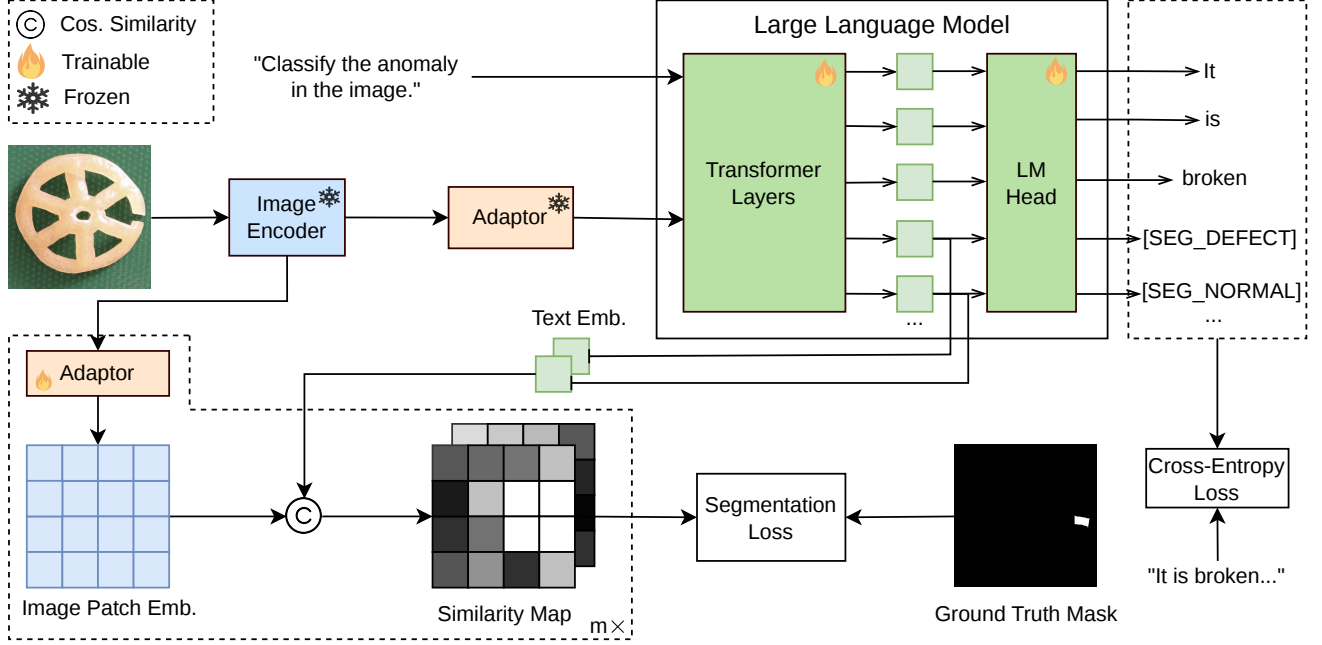


Figure 2. Overview of the training phase of GenAU. The model architecture processes visual information through two distinct pathways for anomaly classification and segmentation. First, the query image is processed by a frozen image encoder. The features from the final encoder layer are projected into the LLM’s embedding space and combined with the prompt’s token embeddings. This combined input is fed to the LLM, which is trained to generate the defect type and specialized [SEG] tokens. This classification path is supervised using a cross-entropy loss. Concurrently, image patch features from the intermediate and final encoder layers are routed through separate projection heads (one per layer). The projected visual features are compared with the [SEG] token’s hidden state from the last transformer layer (pre-LM head) to produce a similarity map. This segmentation path is supervised using a combination of focal, Tversky, and Dice losses.

AnyRes high-resolution readout. The backbone encodes high-resolution inputs with an AnyRes scheme that, besides a global low-resolution view, splits the image into a grid of higher-resolution tiles. Applying the readout above to the global view alone yields a coarse low-resolution grid. To recover fine spatial detail, GenAU reassembles the patch features of the AnyRes tiles into a single high-resolution feature grid and computes the same anchor-grounded similarity maps on it. At inference, the high-resolution map $\mathbf{A}^{\text{hi}}$ and the global-view map $\mathbf{A}^{\text{g}}$ are fused per stage as $\mathbf{A} = (1 - \beta) \mathbf{A}^{\text{g}} + \beta \mathbf{A}^{\text{hi}}$ with a fixed weight β . This high-resolution readout is used for all reported segmentation results.

4.3. Image-level Anomaly Scoring

Building on the segmentation map above, GenAU computes the image-level anomaly score without training a separate image-level classifier. Let $\mathbf{A}$ denote the final anomaly map of Section 4.2 (the stage-aggregated defect response). The image-level anomaly score is its spatial maximum,

$$s_{\text{img}} = \max_{(u,v)} \mathbf{A}(u,v), \quad (5)$$

where a larger s_{img} indicates a higher probability that the image contains an anomaly. This score introduces no addi-

tional trainable parameters and is obtained entirely from the language-grounded segmentation readout.

Fused image-level score. The map maximum s_{img} is a purely visual readout. Because the decoder additionally emits an explicit normal/defect decision, the image-level score we report is

$$s_{\text{fused}} = \frac{1}{2} \tilde{s}_{\text{img}} + \frac{1}{2} \tilde{\ell}_{\text{nd}}, \quad (6)$$

where the visual score $\tilde{s}_{\text{img}}$ and the decoder’s normal/defect log-odds $\tilde{\ell}_{\text{nd}}$ are each standardized by a frozen calibration estimated once on MVTec (Appendix B); no target-domain labels are used. Unless stated otherwise, all reported image-level results use s_{fused} .

4.4. Textual Reasoning and Multi-Type Anomaly Detection

For zero-shot multi-type anomaly detection, given a target image $\mathbf{X}_v$, a language instruction $\mathbf{X}_q$, and the target-domain defect vocabulary $C_{\text{target}} = \{d'_1, \dots, d'_{K_2}\}$, GenAU generates a structured response $\mathbf{X}_a$ with an autoregressive VLM. A deterministic parser $\pi(\cdot)$ maps the response to a multi-type anomaly label $\hat{\mathbf{y}}' \in \{0, 1\}^{K_2+1}$, where the entries correspond to the normal class and the K_2 target defect types.

4.5. Training Objective

GenAU is optimized with a joint objective that supervises textual reasoning and pixel-level anomaly segmentation. For each training sample, the model receives an image $\mathbf{X}_v$ and an instruction $\mathbf{X}_q$, and is trained to generate a structured response $\mathbf{X}_a = (a_1, \dots, a_T)$ containing the predicted defect type and the grounding tokens [SEG_normal] and [SEG_defect]. The overall objective is

$$\mathcal{L} = \mathcal{L}_{\text{txt}} + \lambda_{\text{seg}} \mathcal{L}_{\text{seg}}, \quad (7)$$

where λ_{seg} balances the language-modeling and pixel-level supervision terms. The image-level anomaly score is read off the segmentation map at inference and thus requires no dedicated training term.

Text generation loss. The textual reasoning objective is the standard autoregressive cross-entropy loss over the target response tokens:

$$\mathcal{L}_{\text{txt}} = - \sum_{t=1}^T \log p_{\theta}(a_t \mid a_{<t}, \mathbf{X}_v, \mathbf{X}_q). \quad (8)$$

This term trains the model to generate domain-specific inspection responses, including defect-type descriptions and the required segmentation tokens. Prompt tokens and inserted visual tokens are excluded from the language modeling loss.

Pixel-level segmentation loss. For anomaly segmentation, GenAU predicts stage-wise similarity maps $\{\mathbf{S}_i\}_{i=1}^m$, where each $\mathbf{S}_i$ contains normal and defect logits for visual patches at stage i . Let $\mathbf{A}_i$ and $\mathbf{A}_i^n$ denote the defect- and normal-channel probability maps after upsampling and channel-wise softmax. Given a binary ground-truth mask $\mathbf{M}_x \in \{0, 1\}^{H \times W}$, the segmentation loss is summed over all visual stages:

$$\mathcal{L}_{\text{seg}} = \sum_{i=1}^m \left(\mathcal{L}_{\text{focal}}(\text{UP}(\mathbf{S}_i), \mathbf{M}_x) + \mathcal{L}_{\text{Tversky}}(\mathbf{A}_i, \mathbf{M}_x) + \mathcal{L}_{\text{dice}}(\mathbf{A}_i^n, \mathbf{1} - \mathbf{M}_x) \right). \quad (9)$$

The focal term mitigates the severe foreground/background imbalance; the Tversky term on the defect channel up-weights false negatives over false positives, improving region recall and AUPRO; and the Dice term on the normal channel suppresses false positives. For anomalous images $\mathbf{M}_x$ is the annotated mask; for normal images it is all-zero, giving negative supervision.

Trainable parameters. We use parameter-efficient fine-tuning: the vision encoder and cross-modal projector

stay frozen, while LoRA [13] on the decoder, the token-embedding table and LM head (for the two segmentation tokens), the m stage-wise projectors $\{\phi_i\}$, and the decoder layer-norms are trained jointly under Eq. 7.

4.6. Inference

GenAU uses the same instruction format as in training. For binary detection and segmentation the instruction names the object category and asks, via natural-language paraphrases, ‘‘Is there any anomaly on the {object}? If yes, segment it.’’ For zero-shot multi-type detection it is instead conditioned on the product type and lists the target object’s candidate defect types (its coarse classes under the taxonomy of Appendix D), so different products receive different option sets: ‘‘Identify the defect type. Choose exactly one option from this list: {defect list}.’’

The model autoregressively generates a textual answer immediately followed by the two segmentation tokens, e.g. {defect} [SEG_defect] [SEG_normal] for an anomalous image, and a statement of normality followed by the same tokens for a normal one. Crucially, both [SEG_normal] and [SEG_defect] are *always* emitted, so their final-layer hidden states are available as language-grounded anchors regardless of the textual prediction. From these anchors we read off the three task outputs: (i) binary detection thresholds the fused image-level score s_{fused} , while threshold-free metrics such as image-level AUROC are computed directly from it; (ii) segmentation forms the AnyRes-fused defect-probability map of Sec. 4.2, where high responses mark defective regions and normal images are expected to yield low maps everywhere (they are supervised with all-zero masks during training); and (iii) a deterministic parser $\pi(\cdot)$ maps the multi-type response to $\hat{\mathbf{y}}' \in \{0, 1\}^{K_2+1}$ over the normal class and the K_2 target defect types.

5. Experiments

In this section, we describe the experimental setup, datasets, and evaluation metrics used to assess the performance of GenAU. We also present the baseline methods and key implementation details.

5.1. Datasets

We use four public industrial anomaly benchmarks (MVTec-AD [3], VisA [36], MPDD [15], and Real-IAD [29]), plus VisA-D&R [30] for defect reasoning, covering the three tasks of Sec. 3 and defect reasoning/analysis. Additional details are in Appendix.

5.2. Experimental Settings

We build GenAU on LLaVA-OneVision [17], which pairs a Qwen2 language backbone with a frozen SigLIP-so400m-

patch14-384 vision encoder, and report results at the 0.5B and 7B scales. Following prior zero-shot protocols [6, 27, 35], GenAU is fine-tuned on the test split of MVTec-AD (its only split carrying anomaly masks and defect-type labels, the train split being normal-only) and evaluated, without retraining, on VisA, MPDD, and Real-IAD; MVTec-AD is thus purely the source domain and is disjoint from every evaluation target. High-resolution inputs use AnyRes (anyres_max_9, up to a 6×6 grid of 384-px tiles); the segmentation readout reassembles the tiles into a high-resolution feature grid, fused with the global view ($\beta = 0.25$, temperature 20) using patch features from vision-encoder layers 6, 12, 18, 27. We adapt only LoRA [13] ($r = 16$, $\alpha = 32$) on the LLM, the token embeddings and LM head (to add the two segmentation tokens), and the per-stage projectors and decoder layer-norms; the encoder and cross-modal projector stay frozen. The segmentation loss combines focal, Tversky ($\alpha = 0.3$, $\beta = 0.7$), and Dice, with $\lambda = 1$ (Eq. 7) and no separate image-level loss; the image score fuses the defect-map maximum with the decoder log-odds via a frozen MVTec calibration (mixing weight 0.5). We train one epoch at effective batch size 32 ($lr = 10^{-4}$ cosine, warmup 0.03, no weight decay; 8 GPUs, ZeRO-3). Further details, including the multi-type prompt and parser, are in Appendix.

5.3. Evaluation Metrics

We report image-level AUROC and AP for detection; pixel-level AUROC and AUPRO for segmentation; weighted Precision/Recall/F1 for multi-type detection (to handle class imbalance); and, for reasoning, the VisA-D&R GPT-Score [30], where GPT-4o rates each response 1–10 for low-level (perception) and complex (causal-reasoning) questions separately (full definitions in Appendix).

5.4. Baselines

All baselines, like GenAU, access only the query image at test time: no reference, support, or exemplar images. As CLIP-based zero-shot detectors and segmenters we compare against CLIP, CLIP-AC [26], WinCLIP [14], APRIL-GAN [6], CoOp [33], CoCoOp [34], AnomalyCLIP [35], AdaCLIP [4], FiLo [11], and MultiADS together with its variant MultiADS-F [27], the only CLIP-based baseline that additionally performs multi-type detection. For the multi-type and reasoning tasks we further compare against vision-language baselines: the anomaly-reasoning specialist Anomaly-OV [30] and our LLaVA-OneVision [17] backbone, both at the 0.5B and 7B scales. Methods without public implementations (e.g., SimCLIP [7]) are excluded for reproducible comparison.

5.5. Results

Next, we present and discuss results for binary anomaly detection and segmentation under distribution shift, multi-

type zero-shot anomaly detection, and defect reasoning, the four tasks GenAU addresses within a single architecture and training recipe.

5.5.1. Binary Detection and Segmentation under Distribution Shift

Table 1 reports the performance of GenAU on VisA, MPDD, and Real-IAD, compared with state-of-the-art CLIP-based methods. Pixel-level metrics (AUROC, AUPRO) and image-level metrics (AUROC, AP) are reported.

On VisA, the 7B model achieves the best image-level AUROC (87.6%) among the CLIP-based zero-shot methods in Table 1, together with competitive pixel-level scores (94.7% AUROC); the VLM reasoning specialist Anomaly-OV-7B reports a higher VisA image-AUROC (88.9%) but is trained under an instruction-tuning rather than our cross-dataset protocol and produces no segmentation, so we note it here only for context. We note, further, that GenAU’s pixel-level AUROC does not surpass the strongest CLIP-based segmenters on any of the three datasets. The 0.5B variant remains competitive. On MPDD, the 7B model attains high pixel-level AUROC/AUPRO but lower image-level AUROC (70.3%, against 79.7% for MultiADS-F), reflecting the logical and large-area anomalies characteristic of this dataset. On Real-IAD, the 7B model reaches an image-level AUROC of 84.7%. Across datasets, pixel-level AUPRO is consistently the lowest-scoring metric. Overall, GenAU demonstrates that a single instruction-following VLM can achieve strong binary detection and segmentation performance under distribution shift. Qualitative results of GenAU and the best overall performer, MultiADS, are shown in Figure 3 (and, for a failure case, Figure 4). GenAU accurately segments visually salient defects such as *hole*, *broken*, and *crack*, and produces cleaner, lower-noise segmentation maps than MultiADS. However, global-context or logic-dependent defects such as *missing* components remain challenging. For these cases, similarity maps are low-confidence, often resulting in incomplete localization or misclassification of normal regions for both models (Figure 4).

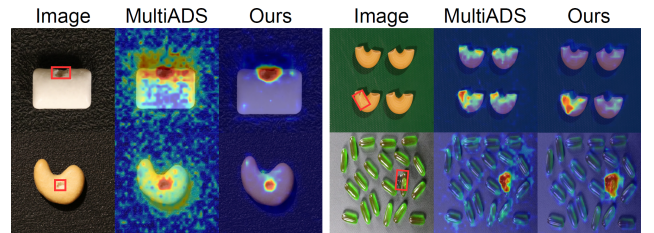


Figure 3. Visualization of anomaly segmentation under distribution shift from VisA. Results are compared with MultiADS.

Ablation Studies. Table 2 varies one factor at a time from our default GenAU-7B on VisA. Removing the LM fusion (*map-max only*) lowers image-AUROC by 2.3 points

Table 1. Results for binary anomaly detection and segmentation under distribution shift of GenAU and baselines. All metrics are in %. **Bold** represents the best performer and underline indicates the second best performer. Baseline results are taken from the MultiADS [27] and FiLo [11] papers and are not recomputed in our harness.

Dataset	Method	Pixel-Level		Image-Level	
		AUROC	AUPRO	AUROC	AP
VisA	CLIP	46.6	14.8	66.4	71.5
	CLIP-AC	47.8	17.3	65.0	70.1
	CoOp	24.2	3.8	62.8	68.1
	CoCoOp	93.6	-	78.1	-
	WinCLIP	79.6	56.8	78.1	81.2
	APRIL-GAN	94.2	86.8	78.0	81.4
	AnomalyCLIP	<u>95.5</u>	87.0	82.1	85.4
	AdaCLIP	95.0	-	75.4	79.3
	FiLo	95.9	-	<u>83.9</u>	-
	MultiADS	95.0	89.7	83.6	<u>86.9</u>
	MultiADS-F	94.5	87.4	82.5	86.5
	GenAU-0.5b	91.7	83.2	79.6	85.0
	GenAU-7b	94.7	<u>88.2</u>	87.6	89.9
MPDD	CLIP	62.1	33.0	54.3	65.4
	CLIP-AC	58.7	29.1	56.2	66.0
	CoOp	15.4	2.3	55.1	64.2
	CoCoOp	95.2	-	61.0	-
	WinCLIP	76.4	48.9	63.6	69.9
	APRIL-GAN	94.1	83.2	73.0	80.2
	AnomalyCLIP	96.5	88.7	77.0	82.0
	AdaCLIP	<u>96.3</u>	-	66.3	75.0
	MultiADS	95.8	89.7	<u>78.3</u>	78.4
	MultiADS-F	<u>96.3</u>	<u>89.5</u>	79.7	<u>80.5</u>
	GenAU-0.5b	92.0	84.5	66.0	73.5
	GenAU-7b	94.5	87.1	70.3	78.5
Real-IAD	WinCLIP	87.1	59.9	75.0	72.3
	APRIL-GAN	96.0	86.8	75.7	73.5
	AnomalyCLIP	96.2	85.7	78.4	76.7
	AdaCLIP	95.3	-	70.1	68.5
	MultiADS	96.6	<u>87.1</u>	<u>78.7</u>	<u>79.1</u>
	MultiADS-F	<u>96.3</u>	87.2	78.2	78.5
	GenAU-0.5b	87.4	73.3	76.6	78.1
	GenAU-7b	94.8	<u>87.1</u>	84.7	85.2

(87.6 $\rightarrow$ 85.3); the segmentation-map maximum alone is already a competitive detector (above the CLIP baselines), with the decoder log-odds adding a consistent refinement rather than carrying the score. Adding the *reasoning* instruction mix to training (the setting also used for defect reasoning in Table 4) costs only 2.9 image-AUROC and 2.6 pixel-AUPRO, so the model retains most of its detection and localization while gaining reasoning, the segmentation-

Table 2. GenAU-7B ablations on VisA. The top (shaded) row is our default; each subsequent row changes a single factor relative to it. Fusion affects only the image score, so its pixel columns are unchanged. All metrics in %.

	Pixel		Image	
	AUROC	AUPRO	AUROC	AP
GenAU-7B	94.7	88.2	87.6	89.9
w/o LM fusion	94.7	88.2	85.3	87.6
w/ reasoning mix	95.1	85.6	84.7	87.7
w/o LoRA	94.8	87.1	85.4	87.1

reasoning trade-off. Dropping LoRA on the LLM costs a further 2.2 image-AUROC and 1.1 pixel-AUPRO, confirming its contribution to detection and localization. The ablation studies of hyper-parameters are in Appendix.

5.5.2. Zero-Shot Multi-Type Detection

We evaluate zero-shot multi-type defect classification on VisA and MPDD (Table 3), conditioning the model on the target object’s candidate defect list (a candidate-list-conditioned zero-shot setting in Appendix). F1 ranges from $\sim 29\%$ on VisA to $\sim 70\%$ on MPDD, the latter higher owing to its fewer defect types. Most prior methods target only binary detection, limiting comparison; MultiADS is the only multi-type-capable baseline. GenAU-7B achieves the best F1 on both datasets, outperforming MultiADS and the reasoning specialist Anomaly-OV at both scales (Anomaly-OV-0.5b/7b are our MVTec-trained reproductions, prompted in a two-turn detect-then-classify format), despite spending no training budget on reasoning; Anomaly-OV is comparatively strong on MPDD (few types, where Anomaly-OV-7B even leads on recall) but weaker on VisA, whose finer taxonomy is harder. One caveat tempers the MultiADS comparison: MultiADS, designed for multi-type *segmentation*, is converted to detection by thresholding its per-type channels at a single fixed value of 0.5, an operating point that may understate it. GenAU’s advantage is driven mainly by precision (e.g., 50.3 vs MultiADS’s 17.4 on VisA and 90.4 vs 34.0 on MPDD), reflecting fewer spurious defect predictions under candidate-list-constrained decoding. Absolute scores remain low partly because VisA has 14 defect types and, with multi-defect images, 56 unique combinations to predict.

5.5.3. Defect Reasoning and Analysis

Beyond detecting and localizing defects, GenAU answers open-ended questions about them. We evaluate on VisA-D&R [30] (low-level perception and complex causal-reasoning questions) against the reasoning specialist Anomaly-OV [30]; here GenAU augments its segmentation training with a reasoning instruction mix, so one model both localizes and explains, whereas Anomaly-OV produces no segmentation.

Table 3. Multi-type zero-shot detection performance on VisA and MPDD. All metrics are in %. **Bold** marks the best performer per column (within each dataset). Anomaly-OV-0.5b and -7b are our MVTec-trained reproductions, prompted in a two-turn detect-then-classify format suited to their conversational training.

Dataset	Model	Precision	Recall	F1
VisA	MultiADS	17.4	57.7	18.6
	Anomaly-OV-0.5b	18.4	11.1	9.3
	Anomaly-OV-7b	42.1	30.9	21.1
	GenAU-0.5b	14.8	17.2	11.1
	GenAU-7b	50.3	34.1	29.0
MPDD	MultiADS	34.0	51.3	32.7
	Anomaly-OV-0.5b	60.1	30.5	29.9
	Anomaly-OV-7b	87.1	65.8	65.1
	GenAU-0.5b	65.2	40.4	38.8
	GenAU-7b	90.4	64.2	69.8

As shown in Table 4, GenAU improves markedly over its own LLaVA-OneVision backbone (at 7B, low-level perception rises from 3.57 to 5.22 and complex reasoning from 5.44 to 6.43) and exceeds the dedicated specialist Anomaly-OV at both scales. Strikingly, even GenAU-0.5B (5.01/6.13) surpasses the 7B specialist (4.26/6.34) on low-level perception, showing the reasoning instruction mix is effective even at small scale. This indicates that augmenting a segmentation-capable VLM with a lightweight reasoning instruction mix yields strong conversational ability without training a dedicated reasoning model, while still emitting the segmentation tokens needed for localization. These baseline scores, including our LLaVA-OneVision backbone, are taken from [30] under a separate GPT-4o judge instance, so the absolute comparison is indicative rather than strictly controlled; the consistent margin across both question types and both scales is what we rely on. More importantly, once trained with the reasoning instruction mix, GenAU is the only model in our study that performs binary detection, pixel-level segmentation, multi-type recognition, *and* defect reasoning (Table 2): the CLIP baselines emit no language and the reasoning specialist no masks. This supports our central claim that one *architecture and training recipe*, with an explicit segmentation-reasoning trade-off, covers the full inspection stack rather than a bespoke model per task.

6. Discussion

This section provides the performance analyses of GenAU, highlighting challenges and insights that are often unexplored in prior studies.

6.1. Local vs. Global Context Segmentation

GenAU excels at visually salient anomalies (distinct texture or color deviations), where strong local cues align with the defect-token anchors. Segmentation degrades for globally-

Table 4. Defect reasoning on VisA-D&R [30], scored by GPT-4o on a 1–10 scale. VisA-D&R poses two question categories per image: *Low-level* perception questions, which ask the model to describe the anomaly, and *Complex* causal-reasoning questions about its significance, likely cause, and prevention; we report the GPT-Score separately for each. [†]LLaVA-OV and Anomaly-OV scores as reported in the Anomaly-OV paper [30]. For this task GenAU augments its segmentation training with a reasoning instruction mix, and is evaluated as a single model that both localizes and explains anomalies.

Model	GPT-Score	
	Low-level	Complex
LLaVA-OV-0.5B [†]	2.54	4.34
LLaVA-OV-7B [†]	3.57	5.44
Anomaly-OV-0.5B [†]	3.87	5.67
Anomaly-OV-7B [†]	4.26	6.34
GenAU-0.5B	5.01	6.13
GenAU-7B	5.22	6.43

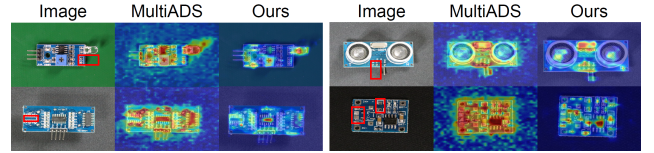


Figure 4. Anomaly segmentation on VisA for the *missing* defect, a globally-defined anomaly, with MultiADS for comparison. Both methods yield low-confidence, incomplete maps.

defined or logical anomalies (e.g., *missing* or *misplaced* components; Figure 4), which look normal at the patch level and, in the zero-shot setting, give no prior on expected placement; few-shot or domain priors could help.

6.2. Challenges in Defect-Type Classification

Fine-grained classification exposes the limits of the VLM’s pre-trained knowledge: the same label varies widely across objects (a *missing cable* is a conspicuous void, a *missing LED* blends in; cracks range from large openings to fine lines), so generalization is hard when training shows one instance of a defect. Logical defects further require reasoning about expected structure that the model cannot encode without domain knowledge; broader exposure to each defect would help.

7. Conclusion

We presented GenAU, a single instruction-following architecture and training recipe that unifies the four questions of industrial inspection (is there an anomaly, where, what type, and why). Across VisA, MPDD, and Real-IAD it achieves competitive zero-shot detection and segmentation under distribution shift and, when the same recipe additionally learns to reason, adds multi-type recognition and defect analysis

at a small, quantified cost. Globally-defined anomalies and fine-grained, object-dependent defect types remain open, pointing to few-shot adaptation and richer domain priors.

Acknowledgments

The authors thank the International Max Planck Research School for Intelligent Systems (IMPRS-IS) for supporting Hongkuan Zhou and Jingcheng Wu.

References

- [1] Toshimichi Aota, Lloyd Teh Tzer Tong, and Takayuki Okatani. Zero-shot versus many-shot: Unsupervised texture anomaly detection. In *Proceedings of the IEEE/CVF Winter Conference on Applications of Computer Vision*, pages 5564–5572, 2023. [2](#), [15](#)
- [2] Jinze Bai, Shuai Bai, Shusheng Yang, Shijie Wang, Sinan Tan, Peng Wang, Junyang Lin, Chang Zhou, and Jingren Zhou. Qwen-vl: A versatile vision-language model for understanding, localization, text reading, and beyond, 2023. [2](#)
- [3] Paul Bergmann, Michael Fauser, David Sattlegger, and Carsten Steger. Mvtec ad – a comprehensive real-world dataset for unsupervised anomaly detection. In *Proceedings of the IEEE/CVF Conference on Computer Vision and Pattern Recognition (CVPR)*, 2019. [2](#), [5](#), [10](#), [11](#)
- [4] Yunkang Cao, Jiangning Zhang, Luca Frittoli, Yuqi Cheng, Weiming Shen, and Giacomo Boracchi. *AdaCLIP: Adapting CLIP with Hybrid Learnable Prompts for Zero-Shot Anomaly Detection*, page 55–72. Springer Nature Switzerland, 2024. [2](#), [6](#), [15](#)
- [5] Varun Chandola, Arindam Banerjee, and Vipin Kumar. Anomaly detection: A survey. *ACM Comput. Surv.*, 41(3), 2009. [2](#)
- [6] Xuhai Chen, Yue Han, and Jiangning Zhang. A zero-/fewshot anomaly classification and segmentation method for cvpr 2023 vand workshop challenge tracks 1&2: 1st place on zero-shot ad and 4th place on few-shot ad. *arXiv preprint arXiv:2305.17382*, 2(4), 2023. [2](#), [6](#), [15](#)
- [7] Chenghao Deng, Haote Xu, Xiaolu Chen, Haodi Xu, Xiaotong Tu, Xinghao Ding, and Yue Huang. Simclip: Refining image-text alignment with simple prompts for zero-/few-shot anomaly detection. In *Proceedings of the 32nd ACM International Conference on Multimedia*, page 1761–1770, New York, NY, USA, 2024. Association for Computing Machinery. [2](#), [6](#), [15](#)
- [8] Hanqiu Deng, Zhaoxiang Zhang, Jinan Bao, and Xingyu Li. Bootstrap fine-grained vision-language alignment for unified zero-shot anomaly localization, 2024. [2](#), [15](#)
- [9] Xiang Fang, Xiaoyu Wang, Yingying Shao, and Pramit Banerjee. Examining the effect of a firm’s product recall on financial values of its competitors. *Journal of Business Research*, 176: 114586, 2024. [1](#)
- [10] Zhaopeng Gu, Bingke Zhu, Guibo Zhu, Yingying Chen, Ming Tang, and Jinqiao Wang. Anomalygpt: Detecting industrial anomalies using large vision-language models, 2023. [2](#), [15](#)
- [11] Zhaopeng Gu, Bingke Zhu, Guibo Zhu, Yingying Chen, Hao Li, Ming Tang, and Jinqiao Wang. Filo: Zero-shot anomaly detection by fine-grained description and high-quality localization, 2024. [2](#), [6](#), [7](#), [15](#)
- [12] Manpreet Hora, Hari Bapuji, and Aleda V. Roth. Safety hazard and time to recall: The role of recall strategy, product defect type, and supply chain player in the u.s. toy industry. *Journal of Operations Management*, 29(7):766–777, 2011. Special Issue: Product Safety and Security on the Global Supply Chain. [1](#)
- [13] Edward J. Hu, Yelong Shen, Phillip Wallis, Zeyuan Allen-Zhu, Yuanzhi Li, Shean Wang, Lu Wang, and Weizhu Chen. Lora: Low-rank adaptation of large language models, 2021. [5](#), [6](#)
- [14] Jongheon Jeong, Yang Zou, Taewan Kim, Dongqing Zhang, Avinash Ravichandran, and Onkar Dabeer. Winclip: Zero-/few-shot anomaly classification and segmentation. In *Proceedings of the IEEE/CVF Conference on Computer Vision and Pattern Recognition*, pages 19606–19616, 2023. [2](#), [6](#), [15](#)
- [15] Stepan Jezek, Martin Jonak, Radim Burget, Pavel Dvorak, and Milos Skotak. Deep learning-based defect detection of metal parts: evaluating current methods in complex conditions. In *2021 13th International Congress on Ultra Modern Telecommunications and Control Systems and Workshops (ICUMT)*, pages 66–71, 2021. [2](#), [5](#), [10](#)
- [16] Xin Lai, Zhuotao Tian, Yukang Chen, Yanwei Li, Yuhui Yuan, Shu Liu, and Jiaya Jia. Lisa: Reasoning segmentation via large language model, 2024. [3](#)
- [17] Bo Li, Yuanhan Zhang, Dong Guo, Renrui Zhang, Feng Li, Hao Zhang, Kaichen Zhang, Peiyuan Zhang, Yanwei Li, Ziwei Liu, and Chunyuan Li. LLaVA-onevision: Easy visual task transfer. *Transactions on Machine Learning Research*, 2025. [5](#), [6](#), [10](#)
- [18] Shengze Li, Jianjian Cao, Peng Ye, Yuhan Ding, Chongjun Tu, and Tao Chen. Clipsam: Clip and sam collaboration for zero-shot anomaly segmentation, 2024. [2](#), [15](#)
- [19] Xurui Li, Ziming Huang, Feng Xue, and Yu Zhou. Musc: Zero-shot industrial anomaly classification and segmentation with mutual scoring of the unlabeled images, 2024. [2](#), [15](#)
- [20] Yiting Li, Adam Goodge, Fayao Liu, and Chuan-Sheng Foo. Promptad: Zero-shot anomaly detection using text prompts. In *Proceedings of the IEEE/CVF Winter Conference on Applications of Computer Vision (WACV)*, pages 1093–1102, 2024. [2](#), [15](#)
- [21] Haotian Liu, Chunyuan Li, Qingyang Wu, and Yong Jae Lee. Visual instruction tuning, 2023. [2](#)
- [22] Zhijian Liu, Ligeng Zhu, Baifeng Shi, Zhuoyang Zhang, Yuming Lou, Shang Yang, Haocheng Xi, Shiyi Cao, Yuxian Gu, Dacheng Li, Xiuyu Li, Yunhao Fang, Yukang Chen, Cheng-Yu Hsieh, De-An Huang, An-Chieh Cheng, Vishwesh Nath, Jinyi Hu, Sifei Liu, Ranjay Krishna, Daguang Xu, Xiaolong Wang, Pavlo Molchanov, Jan Kautz, Hongxu Yin, Song Han, and Yao Lu. Nvlla: Efficient frontier visual language models, 2025. [2](#)
- [23] Sassan Mokhtar, Arian Mousakhan, Silvio Galesso, Jawad Tayyub, and Thomas Brox. Detect, classify, act: Categorizing industrial anomalies with multi-modal large language models, 2025. [11](#)
- [24] Nadeem Nazer, Hongkuan Zhou, Lavdim Halilaj, Ylli Sadikaj, and Steffen Staab. Defect-aware hybrid prompt optimization

via progressive tuning for zero-shot multi-type anomaly detection and segmentation. *arXiv preprint arXiv:2512.09446*, 2025. 2

- [25] Guansong Pang, Chunhua Shen, Longbing Cao, and Anton Van Den Hengel. Deep learning for anomaly detection: A review. *ACM Comput. Surv.*, 54(2), 2021. 2
- [26] Alec Radford, Jong Wook Kim, Chris Hallacy, Aditya Ramesh, Gabriel Goh, Sandhini Agarwal, Girish Sastry, Amanda Askell, Pamela Mishkin, Jack Clark, et al. Learning transferable visual models from natural language supervision. In *International conference on machine learning*, pages 8748–8763. PMLR, 2021. 2, 6
- [27] Ylli Sadikaj, Hongkuan Zhou, Lavdim Halilaj, Stefan Schmid, Steffen Staab, and Claudia Plant. Multiads: Defect-aware supervision for multi-type anomaly detection and segmentation in zero-shot learning. *arXiv preprint arXiv:2504.06740*, 2025. 2, 6, 7, 11, 15
- [28] Eli Schwartz, Assaf Arbel, Leonid Karlinsky, Sivan Harary, Florian Scheidegger, Sivan Doveh, and Raja Giryes. Maeday: Mae for few-and zero-shot anomaly-detection. *Computer Vision and Image Understanding*, 241:103958, 2024. 2, 15
- [29] Chengjie Wang, Wenbing Zhu, Bin-Bin Gao, Zhenye Gan, Jianning Zhang, Zhihao Gu, Shuguang Qian, Mingang Chen, and Lizhuang Ma. Real-iad: A real-world multi-view dataset for benchmarking versatile industrial anomaly detection, 2024. 2, 5, 10, 11
- [30] Jiacong Xu, Shao-Yuan Lo, Bardia Safaei, Vishal M Patel, and Isht Dwivedi. Towards zero-shot anomaly detection and reasoning with multimodal large language models. *arXiv preprint arXiv:2502.07601*, 2025. 2, 5, 6, 7, 8, 15
- [31] Hongkuan Zhou, Lavdim Halilaj, Sebastian Monka, Stefan Schmid, Yuqicheng Zhu, Bo Xiong, and Steffen Staab. Robust visual representation learning with multi-modal prior knowledge for image classification under distribution shift. *arXiv preprint arXiv:2410.15981*, 2024. 3
- [32] Hongkuan Zhou, Lavdim Halilaj, Sebastian Monka, Stefan Schmid, Yuqicheng Zhu, Jingcheng Wu, Nadeem Nazer, and Steffen Staab. Seeing and knowing in the wild: Open-domain visual entity recognition with large-scale knowledge graphs via contrastive learning. In *Proceedings of the AAAI Conference on Artificial Intelligence*, pages 13638–13646, 2026. 3
- [33] Kaiyang Zhou, Jingkan Yang, Chen Change Loy, and Ziwei Liu. Learning to prompt for vision-language models. *International Journal of Computer Vision*, 130(9):2337–2348, 2022. 6
- [34] Kaiyang Zhou, Jingkan Yang, Chen Change Loy, and Ziwei Liu. Conditional prompt learning for vision-language models, 2022. 6
- [35] Qihang Zhou, Guansong Pang, Yu Tian, Shibo He, and Jiming Chen. Anomalyclip: Object-agnostic prompt learning for zero-shot anomaly detection, 2024. 2, 6, 15
- [36] Yang Zou, Jongheon Jeong, Latha Pemula, Dongqing Zhang, and Onkar Dabeer. Spot-the-difference self-supervised pre-training for anomaly detection and segmentation. In *Computer Vision – ECCV 2022*, pages 392–408, Cham, 2022. Springer Nature Switzerland. 2, 5, 10, 11

A. Datasets

Due to space limitations in the main manuscript, we provide here a detailed description of the industrial anomaly detection datasets used in our experiments: MVTec-AD [3], VisA [36], MPDD [15], and Real-IAD [29]. Key dataset statistics, including the number of defect types, object categories, and the proportion of single- and multi-defect images, are summarized in Tab. 5. For all datasets, each defect instance is mapped to a unified defect taxonomy as defined in Tabs. 6 to 12. MVTec-AD includes common industrial items such as bottles, cables, zippers, and hazelnuts. VisA contains a mixture of everyday products such as chewing gum and macaroni, as well as more complex components like printed circuit boards. MPDD focuses primarily on industrial parts, including metal brackets, tubes, and machined components. Real-IAD contains a broad range of real-world consumer and industrial items such as audio jacks, switches, bottle caps, and plastic toys.

B. Implementation Details

We build GenAU on the LLaVA-OneVision family [17], which couples a Qwen2 language backbone with a SigLIP-so400m-patch14-384 vision encoder, and report the 0.5B and 7B scales. High-resolution inputs use the AnyRes scheme (`anyres_max_9`) with an image grid of up to 6×6 tiles of 384 pixels, in addition to a global low-resolution view. For the segmentation readout we take patch features from four vision-encoder stages (layers 6, 12, 18, and the final layer) and equip each stage with its own linear projection into the decoder hidden space.

Trainable parameters. The vision encoder and the original cross-modal projector are frozen. The LLM is adapted with rank-stabilized LoRA (rank $r = 16$, $\alpha = 32$, dropout 0). The token-embedding table and language-modeling head are fully fine-tuned to integrate the two added segmentation tokens [SEG_normal] and [SEG_defect], and the four segmentation projectors together with the decoder layer-norms are trainable.

Optimization. Training runs for a single epoch with an effective batch size of 32 (per-device batch 1, gradient accumulation 4, across 8 GPUs with DeepSpeed ZeRO-3), a learning rate of 10^{-4} with cosine decay, a warmup ratio of 0.03, and no weight decay. The segmentation objective sums, over the four stages, a focal term on the upsampled logits, a Tversky term ($\alpha = 0.3$, $\beta = 0.7$) on the defect channel that up-weights false negatives, and a Dice term on the complementary normal channel; the text-to-segmentation weight is $\lambda = 1$.

Table 5. Overview of the datasets used for evaluation. The third column lists distinct defects, while the fourth column counts compound defects treated as separate categories.

Dataset	Objects	Unique Defect Types	Defect Types Incl. Combinations	Single Defect Images	Multi Defect Images
MVTec-AD	15	16	38	1,200	58
VisA	12	14	56	923	277
MPDD	6	6	7	265	17
Real-IAD	30	9	9	51,329	0

High-resolution readout and image-level fusion. At inference the high-resolution and global-view anomaly maps are fused per stage as $\mathbf{A} = (1-\beta) \mathbf{A}^g + \beta \mathbf{A}^{\text{hi}}$ with $\beta = 0.25$ and a similarity temperature of 20. The image-level score fuses the spatial maximum of $\mathbf{A}$ with the decoder’s normal/defect log-odds: the two are each z -score standardized with statistics estimated once on the MVTec calibration split and summed with a mixing weight of 0.5; the standardization is frozen and shared across target datasets, so no target-domain labels are used.

C. Training Data Construction

Training data are derived from established anomaly detection and segmentation benchmarks [3, 29, 36]. We retain the original images and segmentation masks and augment them with instruction–response pairs designed for instruction tuning; this augmentation is the only modification to the original data. Each sample thus consists of the original image, its segmentation mask, a textual instruction, and the corresponding response. The instruction asks, via natural-language paraphrases, whether the named object contains an anomaly and requests its localization, e.g. ‘‘Is there any anomaly on the {object}? If yes, segment it.’’

The response describes the anomaly in natural language and terminates with the two segmentation tokens [SEG_defect] and [SEG_normal], from which the localization read-out is taken; for a normal image it instead states that no anomaly is present. An example response is:

‘‘Yes, there is an anomaly on the capsule. Specifically, there is a dent on the orange side, affecting the clarity and smoothness of the numeral ‘0’ in the printed number ‘500.’ [SEG_defect] [SEG_normal]’’

D. Defect Taxonomy

Industrial AD datasets often define highly specific defect categories, which can lead to overfitting and inconsistent label usage [23]. To improve generalization, we map product-specific labels to a unified, coarser taxonomy, following MultiADS [27]: e.g., *liquid* and *metal contamination* are merged into *contamination*, and *broken large*/*broken small* are unified as *broken*. The taxonomy is defined per object, so the

candidate defect set differs across product categories. This reclassification promotes abstraction over product-specific anomalies and mitigates label imbalance, and it does not affect comparisons with prior binary-detection methods, whose metrics are independent of class granularity. The complete per-object mapping for all four datasets is given in Tabs. 6 to 12.

E. Evaluation Protocol

All models are evaluated under single-image inference: only the query image is available at test time, with no reference, support, or exemplar images. GenAU is fine-tuned on the MVTec-AD test split (the only MVTec split carrying anomaly masks and defect-type labels, as the train split contains normal images only) and evaluated, without retraining, on the test splits of VisA, MPDD, and Real-IAD; MVTec thus serves purely as the source domain and is disjoint from all evaluation targets, so no test-time information leaks into the reported numbers. For Real-IAD we use the single-view setting.

Unified inspection prompt. For binary detection and segmentation, the instruction names the object category and asks whether the image contains an anomaly, requesting its segmentation. The model generates a textual answer immediately followed by the two segmentation tokens, e.g. {defect} [SEG_defect] [SEG_normal] for an anomalous image and a statement of normality followed by the same tokens for a normal one; both [SEG_defect] and [SEG_normal] are *always* emitted, and we extract their final-layer hidden states as language-grounded anchors.

Product-conditioned multi-type detection. For zero-shot multi-type detection, the instruction is conditioned on the product type: it lists the candidate defect types of the *target object* (its coarse classes under the taxonomy above) and asks the model to select one. A deterministic parser maps the generated response to a multi-type label over the target-domain defect vocabulary. We report weighted Precision, Recall, and F1 to account for the strong class imbalance across defect categories.

Table 6. Defect taxonomy for the MVTec-AD dataset (Part I).

Product	Original Defect Types	Mapped Defect Types
Bottle	Broken Large Broken Small Contamination	Broken Broken Contamination
Cable	Bent Wire Cable Swap Combined Cut Inner Insulation Cut Outer Insulation Missing Cable Missing Wire Poke Insulation	Bent Misplaced Combination of Defects Cut Cut Missing Missing Poke
Capsule	Crack Faulty Imprint Poke Scratch Squeeze	Crack Scratch Crack Scratch Deformed
Carpet	Color Cut Hole Metal Contamination Thread	Color Tear Hole Contamination Contamination
Hazelnut	Crack Cut Hole Print	Crack Cut Hole Color
Grid	Bent Broken Glue Metal Contamination Thread	Bent Broken Contamination Contamination Contamination
Leather	Color Cut Fold Glue Poke	Color Cut Fold Contamination Poke
Metal Nut	Bent Color Flip Scratch	Bent Color Misplaced Scratch
Pill	Color Combined Contamination Crack Faulty Imprint Pill Type Scratch	Color Combination of Defects Contamination Crack Scratch Color Scratch
Screw	Manipulated Front Scratch Head Scratch Neck Thread Side Thread Top	Bent Head / Broken Tip Damaged Damaged Damaged Damaged

F. Additional Ablations

Table 13 ablates, on MVTec-AD→VisA, four training choices relative to our default GenAU-7B: the text-to-segmentation loss weight λ , the number of intermediate

Table 7. Defect taxonomy for the MVTec-AD dataset (Part II).

Product	Original Defect Types	Mapped Defect Types
Tile	Crack Glue Strip Gray Stroke Oil Rough	Crack Contamination Color Contamination Scratch
Toothbrush	Defective	Bent / Contamination / Missing
Transistor	Bent Lead Cut Lead Damaged Case Misplaced	Bent Broken Damaged Misplaced
Wood	Color Combined Hole Liquid Scratch	Color Combination of Defects Hole Contamination Scratch
Zipper	Broken Teeth Combined Fabric Border Fabric Interior Rough Split Teeth Squeezed Teeth	Broken Combination of Defects Tear Tear Contamination Deformed Deformed

Table 8. Defect taxonomy for the VisA dataset (Part I).

Product	Original Defect Types	Mapped Defect Types
Candle	Chunk of Wax Missing Damaged Corner of Packaging Different Colour Spot Extra Wax in the Candle Foreign Particals on the Candle Wax Melded out of the Candle Weird Candle Wick Combined	Hole Damaged Color Contamination Color Melded Weird Wick Combination of Defects
Capsules	Bubble Discolor Scratch Leak Misshape Combined	Bubble Color Scratch Contamination Deformed Combination of Defects
Cashew	Burnt Corner or Edge Breakage Different Colour Spot Middle Breakage Same Colour Spot Small Holes Small Scratches Stuck Together Combined	Color Broken Color Broken Color Hole Scratch Misplaced Combination of Defects
Chewinggum	Chunk of Gum Missing Corner Missing Scratches Similar Colour Spot Small Cracks Combined	Broken Broken Scratch Color Crack Combination of Defects
Fryum	Burnt Corner or Edge Breakage Different Colour Spot Fryum Stuck Together Middle Breakage Similar Colour Spot Small Scratches Combined	Color Broken Color Misplaced Broken Color Scratch Combination of Defects

vision-encoder stages m supplying the segmentation readout, whether the cross-modal projection to the LLM is trainable,

Table 9. Defect taxonomy for the VisA dataset (Part II).

Product	Original Defect Types	Mapped Defect Types
Macaroni1	Chip Around Edge and Corner	Broken
	Different Colour Spot	Color
	Similar Colour Spot	Color
	Small Cracks	Crack
	Middle Breakage	Hole
Macaroni2	Small Scratches	Scratch
	Combined	Combination of Defects
	Breakage down the Middle	Hole
	Color Spot Similar to the Object	Color
	Different Color Spot	Color
pcb1	Small Chip Around Edge	Broken
	Small Cracks	Crack
	Small Scratches	Scratches
	Combined	Combination of Defects
	Bent	Bent
pcb2	Melt	Contamination
	Missing	Missing
	Scratch	Scratch
	Combined	Combination of Defects
	Bent	Bent
pcb3	Melt	Contamination
	Missing	Missing
	Scratch	Scratch
	Combined	Combination of Defects
	Bent	Bent
pcb4	Melt	Contamination
	Missing	Missing
	Scratch	Scratch
	Combined	Combination of Defects
	Burnt	Contamination
Pipe Fryum	Scratch	Scratch
	Damage	Damaged
	Dirt	Contamination
	Extra	Contamination
	Missing	Missing
Pipe Fryum	Wrong Place	Contamination
	Combined	Combination of Defects
	Burnt	Color
	Corner and Edge Breakage	Broken
	Different Colour Spot	Color
Pipe Fryum	Similar Colour Spot	Color
	Small Scratches	Scratch
	Stuck Together	Misplaced
	Small Cracks	Crack
	Combined	Combination of Defects

Table 10. Defect taxonomy for the MPDD dataset.

Product	Original Defects Types	Mapped Defect Types
Bracket Black	Hole Scratch	Hole Scratch
Bracket Brown	Bend and Parts Mismatch Parts Mismatch	Bent and Misplaced Misplaced
Bracket White	Defective Painting Scratches	Contamination Scratch
Connector	Parts Mismatch	Missing
Metal Plate	Major Rust Total Rust Scratch	Color Color Scratch
Tubes	Anomalous	Deformed

and whether the vision encoder itself is unfrozen. Each row changes a single factor; the shaded default row corresponds to the GenAU-7B configuration of Table 1.

Raising the text-to-segmentation weight to $\lambda = 5$ trades

Table 11. Defect taxonomy for the Real-IAD dataset (Part I).

Product	Original Defect Types	Mapped Defect Types
Audiojack	Contamination Missing Parts Deformation Scratch	Color Broken Bent Scratch
Bottle Cap	Contamination Missing Parts Scratch Pit	Color Broken Scratch Hole
Button Battery	Scratch Abrasion Contamination Pit	Scratch Abrasion Color Color
End Cap	Damage Missing Parts Contamination Scratch	Broken Broken Color Scratch
Eraser	Contamination Scratch Pit Missing Parts	Color Scratch Hole Broken
Fire Hood	Pit Contamination Missing Parts Scratch	Hole Color Broken Scratch
Mint	Missing Parts Foreign Objects Contamination	Broken Contamination Contamination
Mounts	Missing Parts Contamination Pit	Broken Color Hole
PCB	Missing Parts Scratch Foreign Objects Contamination	Missing Scratch Contamination Contamination
Phone Battery	Damage Pit Scratch Contamination	Broken Hole Scratch Contamination
Plastic Nut	Pit Scratch Contamination Damage	Hole Scratch Contamination Broken
Plastic Plug	Missing Parts Scratch Pit Contamination	Broken Scratch Hole Contamination
Porcelain Doll	Scratch Abrasion Contamination	Scratch Abrasion Color

a small pixel-AUROC gain for lower image-level detection (image-AUROC $87.6 \rightarrow 87.0$), so we keep the balanced $\lambda = 1$. Reducing the segmentation readout to $m = 3$ intermediate stages costs 4.1 points of pixel-AUPRO ($88.2 \rightarrow 84.1$) and about a point of image-AUROC, confirming that the multi-stage read-out is load-bearing for localization. Making the cross-modal projection trainable is close to neutral on the pixel metrics but lowers image-AUROC by 1.5 points; with only the MVTec-AD test split available for fine-tuning, the added capacity yields no gain, so we keep the projection frozen. Finally, unfreezing the vision encoder is markedly harmful, collapsing pixel-AUPRO to 80.6 and image-AUROC to 73.5 — far below every other configuration — as the encoder over-fits the small fine-tuning set and

Table 12. Defect taxonomy for the Real-IAD dataset (Part II).

Product	Original Defect Types	Mapped Defect Types
Regulator	Contamination Missing Parts Scratch Pit	Color Broken Scratch Hole
Rolled Strip Base	Pit Missing Parts Contamination	Hole Broken Color
SIM Card Set	Scratch Abrasion Contamination	Scratch Scratch Contamination
Switch	Missing Parts Contamination Scratch	Broken Contamination Scratch
Tape	Scratch Missing Parts Damage Contamination	Scratch Broken Broken Color
Terminalblock	Pit Missing Parts Contamination	Hole Broken Color
Toothbrush	Missing Parts Contamination Abrasion	Broken Contamination Deformed
Toy	Scratch Contamination Missing Parts Pit	Scratch Color Broken Hole
Toy Brick	Contamination Pit Missing Parts Scratch	Color Hole Broken Scratch
Transistor1	Missing Parts Deformation Contamination	Broken Bent Contamination
U Block	Missing Parts Scratch Abrasion Contamination	Broken Scratch Scratch Color
USB	Scratch Deformation Contamination Missing Parts	Scratch Bent Color Broken
USB Adaptor	Contamination Scratch Abrasion Pit	Color Scratch Scratch Broken
Vcpill	Contamination Scratch Missing Parts Pit	Color Scratch Broken Broken
Wooden Beads	Scratch Contamination Pit Missing Parts	Scratch Color Hole Broken
Woodstick	Contamination Scratch Pit Missing Parts	Color Scratch Hole Broken
Zipper	Missing Parts Damage Deformation Contamination	Broken Broken Deformed Color

forgets its general visual features; freezing it is therefore essential.

Table 13. Ablation of single training factors on MVTec-AD→VisA. The shaded row is our default GenAU-7B ($m=4$, $\lambda=1$, projection and vision encoder frozen, matching Table 1); each subsequent row changes one factor. All metrics in %.

	Pixel		Image	
	AUROC	AUPRO	AUROC	AP
GenAU-7B (default)	94.7	88.2	87.6	89.9
$\lambda = 5$	95.7	88.5	87.0	89.5
$m = 3$ stages	94.1	84.1	86.5	88.9
projection trainable	94.9	88.4	86.1	88.3
vision encoder unfrozen	94.2	80.6	73.5	77.6

G. Formal Task Definitions

We give the full definitions of the three tasks summarized in Section 3.

Binary anomaly detection under distribution shift. Let $\mathcal{D}_{\text{train}} = \{(\mathbf{x}_i, y_i)\}_{i=1}^{N_1}$ and $\mathcal{D}_{\text{target}} = \{(\mathbf{x}_i, y_i)\}_{i=N_1+1}^{N_1+N_2}$ be two image-label datasets drawn from different input distributions $\mathcal{P}(\mathcal{X}), \mathcal{P}(\mathcal{X}')$: $\forall i \in \{1, \dots, N_1\}, \mathbf{x}_i \sim \mathcal{P}(\mathcal{X})$, and $\forall i \in \{N_1 + 1, \dots, N_1 + N_2\}, \mathbf{x}_i \sim \mathcal{P}(\mathcal{X}')$, where $\mathcal{P}(\mathcal{X}) \not\sim \mathcal{P}(\mathcal{X}')$. Each image $\mathbf{x} \in \mathbb{R}^{H \times W}$ is labeled with $y \in \{0, 1\}$ indicating anomaly presence. A binary detector $\hat{f}(\cdot)$ is trained solely on $\mathcal{D}_{\text{train}}$; at test time it is optionally adapted to $\hat{f}'(\cdot)$ using auxiliary target-domain metadata such as a product description. For each $\mathbf{x} \in \mathcal{D}_{\text{target}}$, the detector classifies it as normal or anomalous.

Binary anomaly segmentation under distribution shift. With $\mathcal{D}_{\text{train}}$ and $\mathcal{D}_{\text{target}}$ as above and $\mathcal{P}(\mathcal{X}) \not\sim \mathcal{P}(\mathcal{X}')$, each image $\mathbf{x} \in \mathbb{R}^{H \times W}$ is paired with a binary mask $\mathbf{y} \in \{0, 1\}^{H \times W}$ indicating the presence of anomalies at each pixel. The segmentation model $\hat{f}(\cdot)$ is trained solely on $\mathcal{D}_{\text{train}}$ and optionally adapted to $\hat{f}'(\cdot)$ with target-domain metadata. For each pixel of $\mathbf{x} \in \mathcal{D}_{\text{target}}$, it classifies the pixel as normal or anomalous.

Zero-shot multi-type anomaly detection. Let $\mathcal{D}_{\text{train}} = \{(\mathbf{x}_i, \mathbf{y}_i)\}_{i=1}^{N_1}$ and $\mathcal{D}_{\text{target}} = \{(\mathbf{x}_i, \mathbf{y}'_i)\}_{i=N_1+1}^{N_1+N_2}$, with inputs from $\mathcal{P}(\mathcal{X}) \not\sim \mathcal{P}(\mathcal{X}')$. Each training image carries $\mathbf{y} \in \{0, 1\}^{K_1+1}$, whose entries index one normal class and K_1 defect types $\{d_1, \dots, d_{K_1}\}$; each target image carries $\mathbf{y}' \in \{0, 1\}^{K_2+1}$ over one normal class and K_2 defect types. Writing $C_{\text{train}} = \{d_1, \dots, d_{K_1}\}$ and $C_{\text{target}} = \{d'_1, \dots, d'_{K_2}\}$, we have $C_{\text{train}} \cap C_{\text{target}} \neq \emptyset$ and $C_{\text{target}} \setminus C_{\text{train}} \neq \emptyset$: the target dataset mixes defect types previously seen during training with novel types never seen by the model.

H. Extended Related Work

This expands the related-work overview of the main text.

CLIP-based prompt adaptation for anomaly detection and segmentation. Recent advances in industrial anomaly detection/segmentation have largely built upon CLIP due to its strong zero-shot transfer ability, although CLIP was not originally designed for industrial inspection. A major line of work adapts CLIP to industrial AD through normal/abnormal prompts, learnable prompt tokens, or improved visual-text alignment. WinCLIP [14] introduces normal and abnormal textual prompts together with window-based feature aggregation for zero-shot anomaly detection. AnomalyCLIP [35] learns object-agnostic prompts to capture generic semantics of normality and abnormality, while PromptAD [20] improves state discrimination by adding learnable prefix and suffix tokens. AdaCLIP [4] further combines static and dynamic learnable prompts for adaptive inference across object categories. Beyond prompt learning, CLIP-based methods have been extended to localization and segmentation by improving patch-level alignment or incorporating external modules. APRIL-GAN [6], AnoCLIP [8], and SimCLIP [7] enhance cross-modal alignment for pixel-level anomaly mapping, while CLIP-SAM [18] and FiLo [11] combine CLIP with external segmentation or grounding models, and MultiADS [27] introduces defect-aware textual supervision for multi-type anomaly detection. Other approaches, such as MuSc [19], MAEDAY [28], and Aota et al. [1], rely on patch comparison, feature uniformity, or reconstruction difficulty. Despite their effectiveness, these methods largely depend on CLIP-style embedding comparison, external localization modules, or non-generative anomaly scoring, making them less suited for unified defect reasoning and analysis.

Autoregressive VLMs for anomaly detection and reasoning. Autoregressive VLMs provide a different paradigm for anomaly understanding by enabling open-ended visual reasoning and instruction-following interaction. Instead of comparing an image embedding with a fixed set of CLIP prompts, they can generate textual descriptions, answer inspection questions, and reason over defect attributes in natural language. AnomalyGPT [10] is an early effort: it introduces an instruction-following VLM for industrial anomaly reasoning and lets users query the model about abnormal regions, but it relies on an external CLIP-based anomaly map combined with the input image and provided to the language model, so the VLM mainly serves as a reasoning interface on top of a separately generated map. More recently, Anomaly-OV [30] specializes multimodal large language models for zero-shot anomaly detection and defect reasoning via Anomaly-Instruct-125k, a large-scale visual instruction-tuning dataset for anomaly-centric understand-

ing; however, it mainly targets image-level detection and explanatory reasoning, while pixel-level segmentation is not explicitly grounded in the autoregressive decoding process.

I. Detailed Evaluation Metrics

We adopt standard metrics for each task. For image-level anomaly detection, we report the Area Under the Receiver Operating Characteristic Curve (AUROC) and Average Precision (AP). For segmentation, we report the pixel-level AUROC and the Area Under the Per-Region Overlap (AUPRO). For multi-type anomaly detection, we use weighted Precision, Recall, and F1-score to account for the strong class imbalance across defect categories. For defect reasoning, we follow the VisA-D&R protocol [30] and report a GPT-Score in which GPT-4o rates each response on a 1–10 scale, separately for low-level (perception) and complex (causal-reasoning) questions.

J. Qualitative Results

In this section, we provide additional visualizations of anomaly segmentation results together with example text responses generated by the model. We present eight samples from diverse products, including tubes (Fig. 5) from MPDD, capsules (Fig. 6) and pipe fryum (Fig. 7) from VisA, and mounts (Fig. 8) and rolled strip base (Fig. 9) from Real-IAD.

For the tubes, the model precisely identifies the deformed section and preserves clean boundaries, introducing almost no spurious activations elsewhere in the images. A similar pattern holds for the capsules, where the model distinguishes among different defect manifestations, correctly localizing internal bubbles, subtle surface scratches, and areas showing signs of leakage. For the pipe fryum, the model maintains high confidence across several defect types, producing focused masks for color specks, fine scratches, and fractured edges, and doing so consistently across varying shapes and orientations. On the Real-IAD mounts, the model is able to localize defects but introduces substantial prediction noise. It also occasionally assigns elevated similarity scores to background regions, even when those regions are uniform black and contain no structural cues. For the rolled strip base, the model effectively captures the primary defect, although the anomaly map exhibits considerable background noise and incorrectly attributes medium similarity scores to structural features such as the central diagonal ribs, despite these regions being non-defective.

In Fig. 10, we show examples of how the model classifies defects across different products together with the corresponding segmentation masks. For the cashew sample, it correctly notes the presence of a dark region on the surface, corresponding to a *color* defect. For the pipe fryum, it identifies that several pieces are touching and classifies the issue as *misplaced*. For the PCB, it detects the *bent* defect by rec-

ognizing the curved pins. Combined with the segmentation masks, these textual explanations provide detailed and actionable information that can support process optimization.

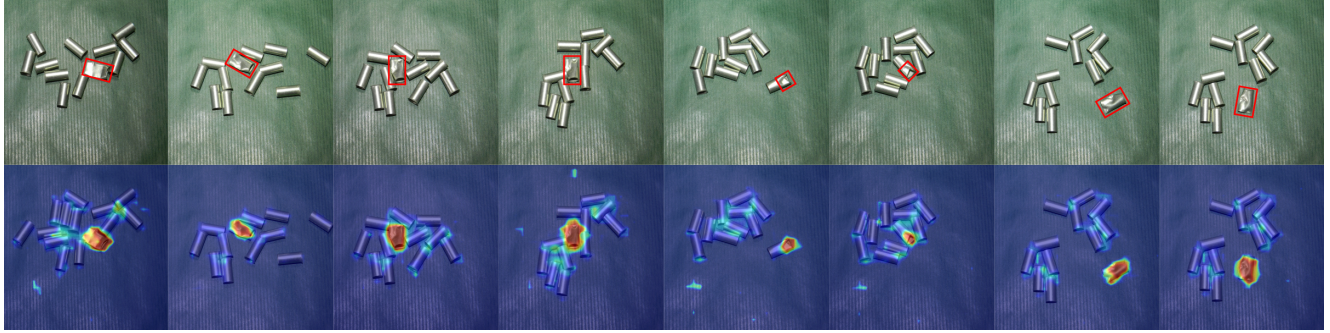


Figure 5. This visualization showcases the tube product from the MPDD dataset. The first row represents the input with the anomaly highlighted. The second row presents the segmentation results from our model.

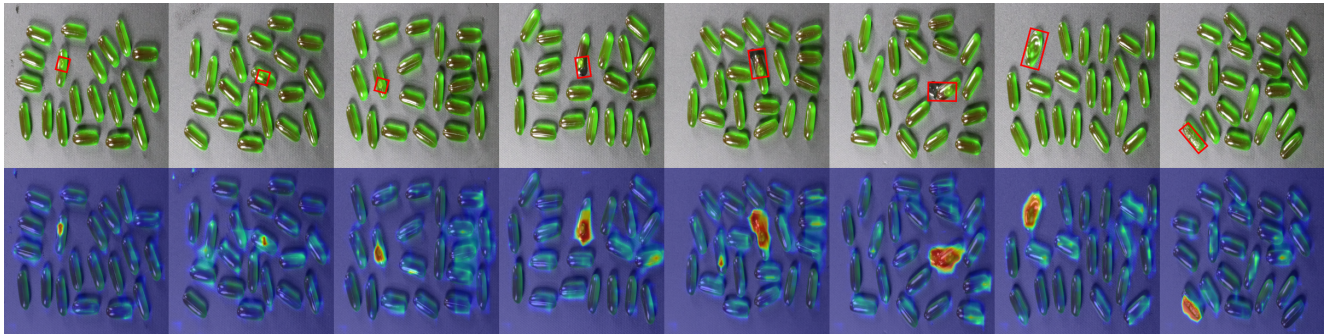


Figure 6. This visualization showcases the capsule product from the VisA dataset. The first row represents the input with the anomaly highlighted. The second row presents the segmentation results from our model.

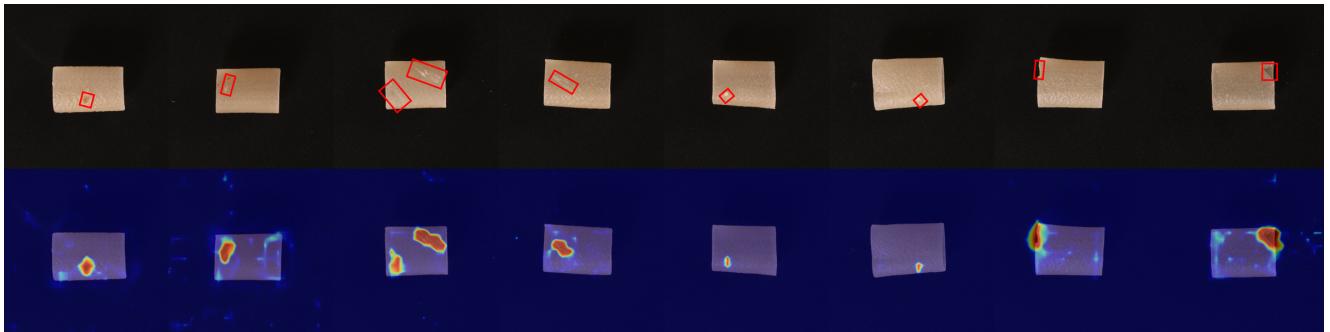


Figure 7. This visualization showcases the pipe fryum product from the VisA dataset. The first row represents the input with the anomaly highlighted. The second row presents the segmentation results from our model.

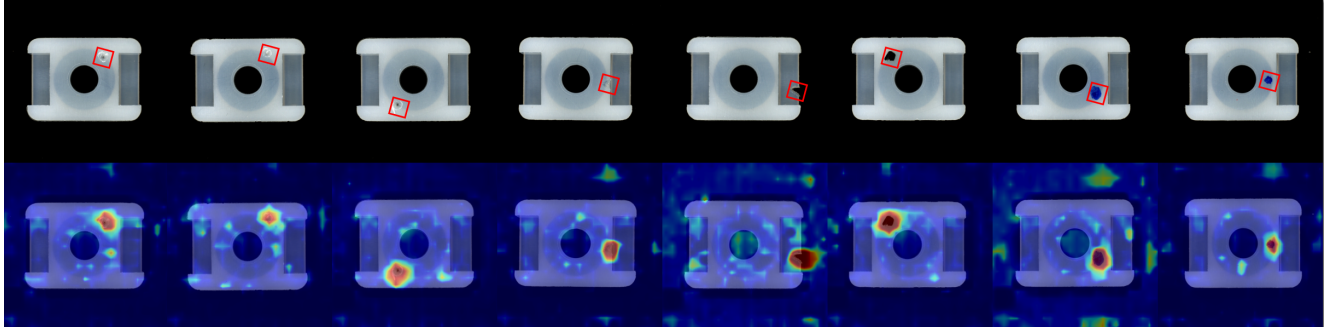


Figure 8. This visualization showcases the mount product from the Real-IAD dataset. The first row represents the input with the anomaly highlighted. The second row presents the segmentation results from our model.

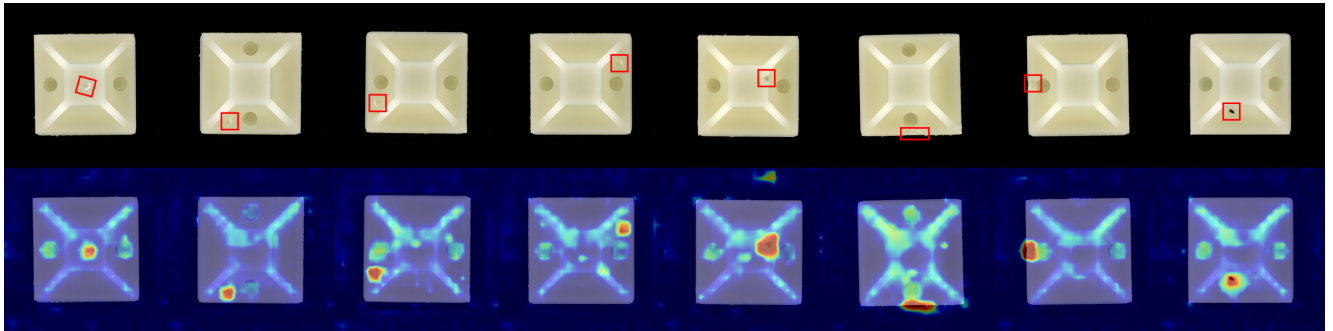


Figure 9. This visualization showcases the rolled strip base product from the Real-IAD dataset. The first row represents the input with the anomaly highlighted. The second row presents the segmentation results from our model.

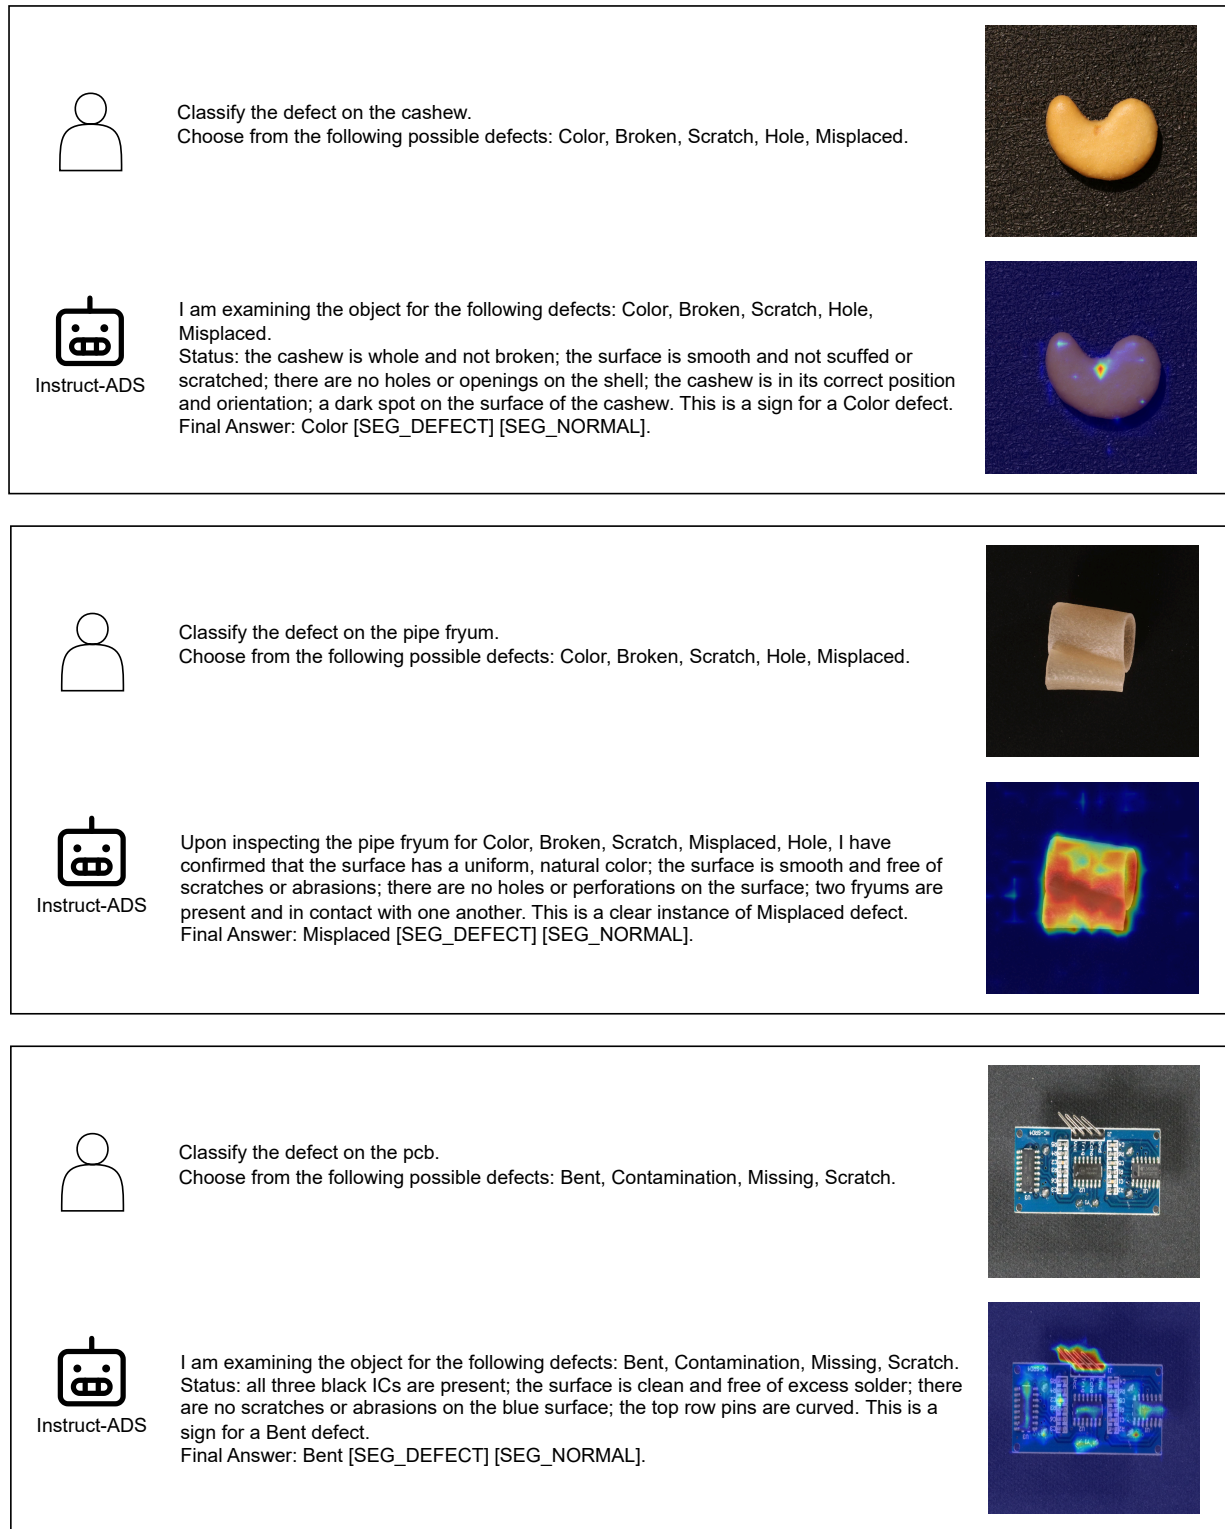


Figure 10. This visualization showcases the abilities of GenAU. Given the input prompt and the image, the model reasons over the possible defects, identifies the correct one and outputs a segmentation mask.